

CNC1 Pin Assignment Connector : JST XHD12	
pin #	description
12	no connection
11	OSD Select UP
10	OSD Select Down
9	OSD Plus/Right
8	OSD Minus/Left
7	OSD Menu
6	Ground
5	Backlight Brightness
	VR pin B
4	Backlight Brightness
	VR pin WIP
3	Backlight Brightness
	VR pin A
2	Power Switch B
1	Power Switch A

CNC2 Pin assignment Connector : Hirose DF13-9F	
pin #	description
9	Ground
8	Adjust Down/Decrease/Left
7	Adjust Up/Increase/Right
6	Select Down
5	Select Up
4	Ground
3	No connection
2	No connection
1	Power On/Off




Jumper setting :
 JP1: SWAP DEC/INC SWITCH
 1-2,3-4 closed : NORMAL
 1-3,2-4 closed : SWAPPED

JP2 : SWAP SEL UP/DN SWITCH
 1-2,3-4 closed : NORMAL
 1-3,2-4 closed : SWAPPED

JP3 : SWAP BRIGHTNESS INC/DEC SWITCH
 1-2,3-4 closed : NORMAL
 1-3,2-4 closed : SWAPPED

JP5 : 1-2 closed : Disable On/Off power button control
 Open : Enable On/Off power button control(Default)

  JP6 : 1-2 closed : Default power on (JP5 set open)
 3-4 closed: Default power off (JP5 set open)

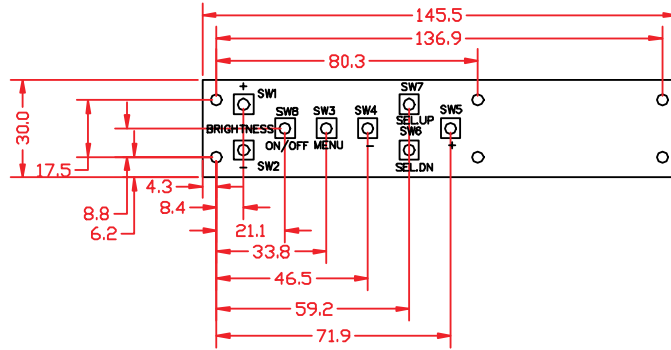

To OSD
 Switch Mount
 CNC1



OSD Cable:
 P/N:420680260 (12/12WAY), 150mm

Other options:
 P/N:426120400 (12/12WAY), 300mm
 P/N:426120410 (12/12WAY), 610mm

To LCD
 Interface
 Controller



Title: Digital Switch Mount (10K)	Date: 31. 8. 2004
NOTE: All dimensions are in mm	Kit 60109 OSD GUIDE