



### *iSensor*® Demo/Evaluation Tips for the ADIS1636x



Mark Looney iSensor Application Engineer February 19, 2009




### *i***Sensor**<sup>®</sup> *The Simple Solution for Sensor Integration* Evaluation Tool Overview

#### Interface Connector for those that need to integrate this on a new PCB 1. The ADIS1636xBMLZ use the FTMH-112-03 series of connectors from Samtec. www.samtec.com/FTMH The evaluation tools use the CLM-112-02-LM-D-A connector from Samtec Acquire mating connector from Samtec, not ADI. www.samtec.com/samples Alternate mating connector: www.samtec.com/MLE 2. Evaluation/Interface Board (ADIS1636x/PCBZ) for simpler connection to an existing processor/system PCB. These boards provide a simple connector translation from the 1mm pitch on the ADIS1636xBMLZ products to a 2mm pitch, which is easier to use in common prototyping environments such as hand-soldering and ribbon cabling. NOTE: PCB not sold separately. Part numbers for ordering: ADIS16365/PCBZ Shown Here ADIS16360/PCBZ, ADIS16364/PCBZ, ADIS16365/PCBZ Evaluation System (ADISUSBZ) for those that prefer a simple PC interface 3. This system provides a simple USB interface, along with software for simple data collection and evaluating most of the ADIS1636x functions and performance. Supports approximately 150-200SPS sample rate. CAUTION: This system DOES NOT provide an appropriate framework for developing a system around the ADIS1636xBMLZ. NO source code or code development support is ADISUSBZ & ADIS16365BMLZ Shown Here included with this kit. (Sold separately)

Part number for ordering: ADISUSBZ



## *i***Sensor**<sup>®</sup> *The Simple Solution for Sensor Integration* Hooking up to the ADIS1636x/PCBZ

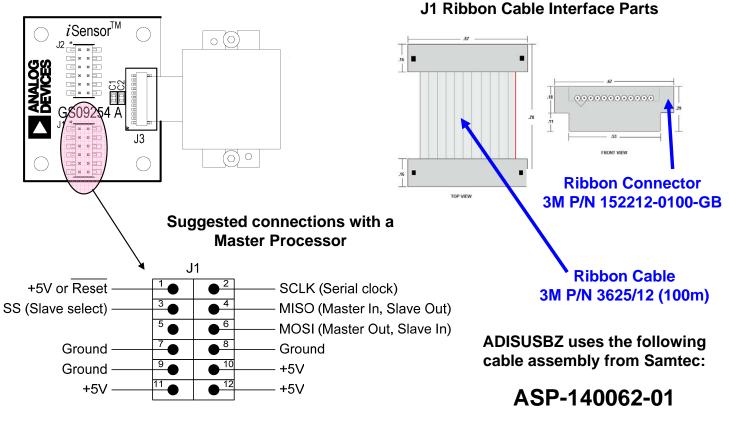



## *i***Sensor**<sup>®</sup> *The Simple Solution for Sensor Integration* ADISUSBZ-based Evaluation


All ADIS1636x parts use the ADIS16350 evaluation software package.


1. Download 350ES.zip into a temporary directory and unpack its contents. http://www.analog.com/static/imported-files/eval\_boards/350ES.zip

OR GO TO:


<u>www.analog.com/isensor-evaluation</u>, then click on EVALUATION SOFTWARE DOWNLOADS then click on 350ES.zip option

2. Double-click on "setup.exe"

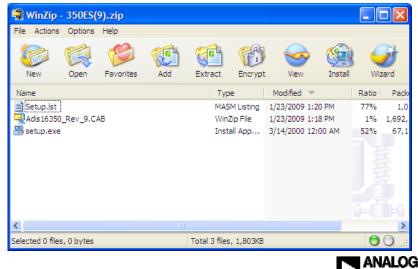

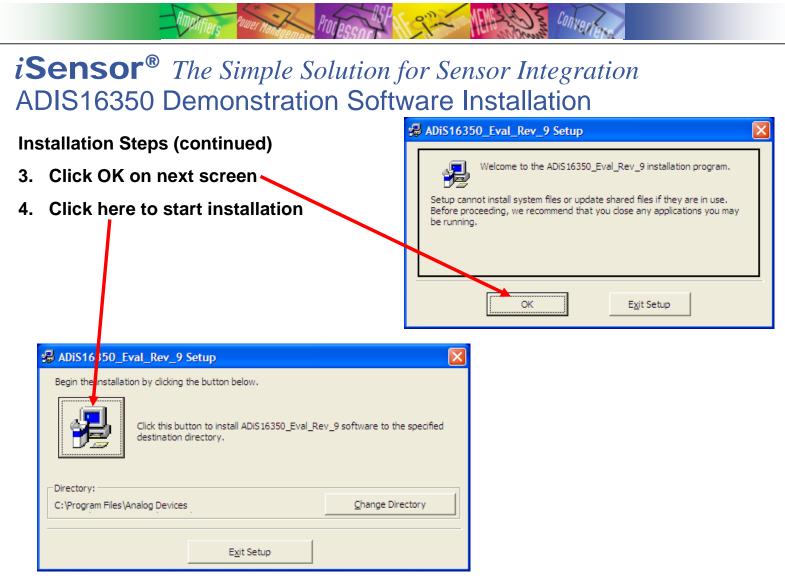



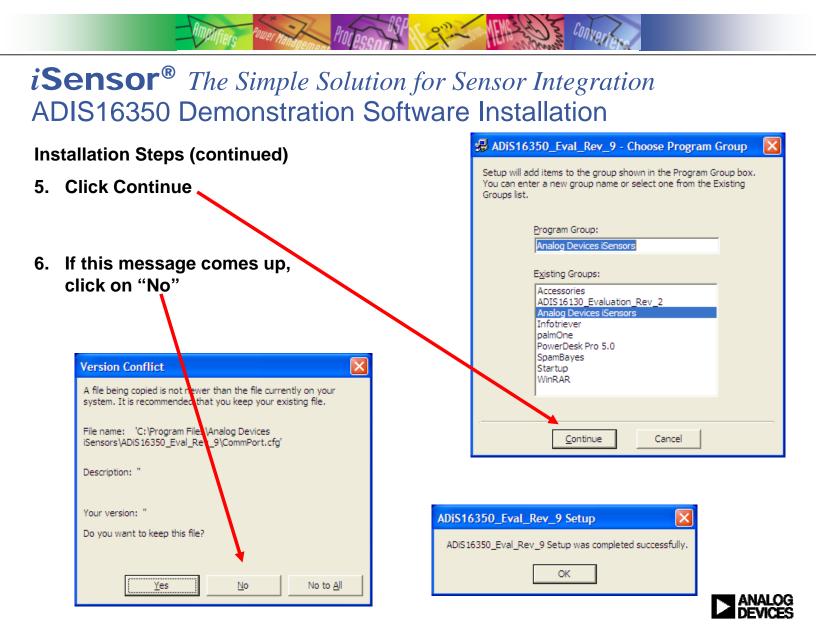

## *i***Sensor**<sup>®</sup> *The Simple Solution for Sensor Integration* ADIS16350 Demonstration Software Installation


Procession

### Installation Steps (continued)

- 7. Open the newly created directory and double-click onto "giveio.exe"
- 8. Click "Install," then " IAgree"

C:\Program Files	\Analog Dev	ices iSensors\ADiS16350val_Re	ev_9			
Visual basic runtimes (SP2) installation	rites Tools					<i>N</i>
	12 🔎	Search 🕞 Folders 🛄 -				
Welcome to the INF-Tool Setup demo program which will install 2 files in the <windows>\INF-Test directory on your computer. Install</windows>		evices iSensors\ADiS1/350_Eval_Rev_9		-		🕶 🔁 Go
	5 🛞	Name      Adis16350_Rev_9.exe	Size 312 KB	Type Application	Date Modified 1/14/2009 1:36 PM	
Please close any programs you have running, ther click "Install" to continue with the Setup program.		CommPort.cfg	1 KB	Microsoft Office Ou	1/14/2009 1:07 PM	
	1		201 KB 82 KB	Application Extension Application	1/9/2001 12:45 PM 10/2/2001 11:46 AM	
Don't forget to read the helpfile for details about the enourmous		ST6UNST.000		000 File	2/11/2009 1:50 PM	
License agreement	×	STEUNST.LOG	4 KB	Text Document	1/27/2009 8:38 AM	
[Name of your application] Author : [YOUR NAME] Version #.# from mm/dd/yyyy WWWeb : Your Website email : Your email Note : for each package, you may select an individual Licence template via the "Options" window of Step #8. END-USER LICENSE AGREEMENT/FOR THIS SOFTWARE Important - read carefully:	•					
To continue with this installation, you mus agree to all terms of this license agreement						
		1.1 KB		81.1 KB	😼 My Compute	r a
l agree Cancel				onino		
		-				VICES

Conver

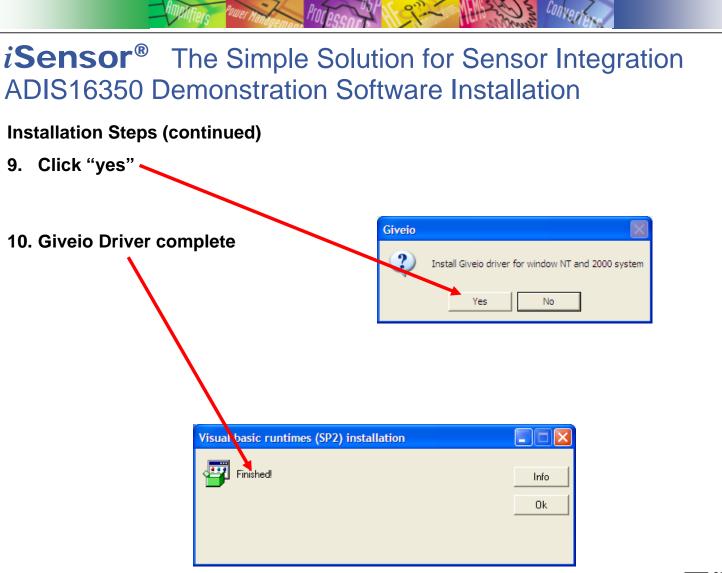



### *iSensor*<sup>®</sup> *The Simple Solution for Sensor Integration* ADIS1636x Installation on ADISUSBZ

**Installation Steps (continued)** 

#### 11. Install ADIS1636xBMLZ on ADISUSBZ

- 1. Remove ribbon cable & (1) 2mm screw
- 2. Place ADIS1636xBMLZ using silk on ADISUSBZ
- 3. Slide ADIS1636xBMLZ onto screw head. Screw may need loosening
- 4. Secure ADIS1636xBMLZ using 2 M6x2mm pan head screws (provided) between two tabs
- 5. Align ADIS1636xBMLZ connector over J4 on ADISUSBZ and press it down to make connection
- 6. Change JP1 from "+3.3V" option to "+5V" option


#### 12. Plug in USB cable

#### CAUTION


DO NOT PULL ON THE ADIS1636x BODY TO BREAK THE CONNECTION WITH THE MATING CONNECTOR. WHEN DISCONNECTING, BREAK THE CONNECTION BY USING A SMALL SLOTTED SCREWDRIVER TO PRY THE CONNECTOR UP BEFORE REMOVING SCREWS

The flex circuit can break when mishandled and in most cases, repair is impossible. ADI does not offer repair or replacement service for broken flex and encourages appropriate care when handling the flex.



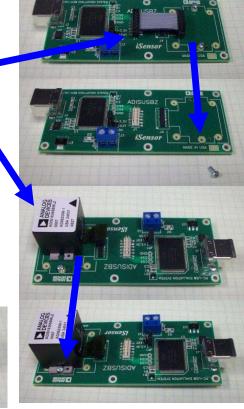




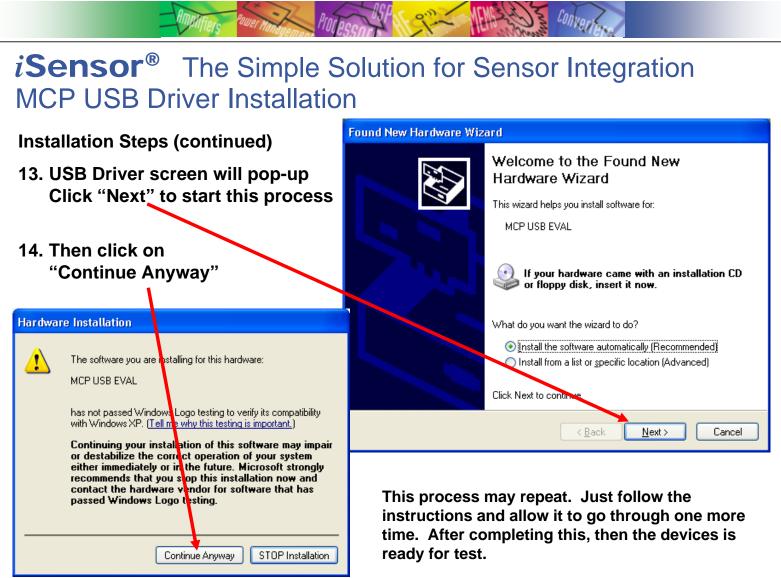



## *i***Sensor**<sup>®</sup> *The Simple Solution for Sensor Integration* ADIS16350 Software Tips

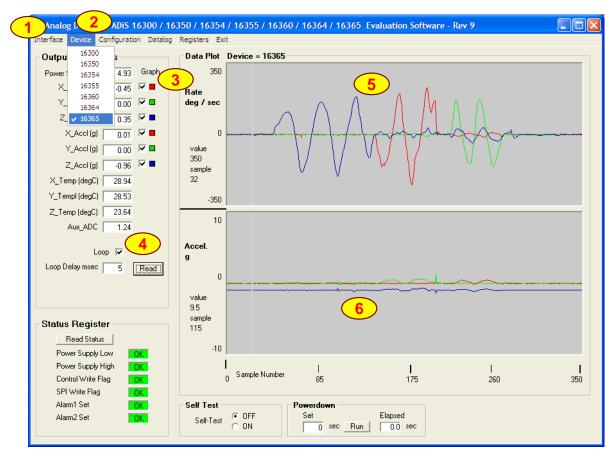


- 1. Click on "Interface" and select USB, then OK when the pop-up window shows the USB device is connected.
- 2. Click on device to select part number for device under test
- 3. Select which sensor outputs to monitor on the graph.
- 4. Start on-screen log
- 5. Use the ADISUSBZ edges to confine rotation to one axis and compare it with the axis labels on the part (see white lines near flex exit from body)
- 6. Lay sensor flat on table, then turn it upside down to see change in z-axis accelerometer output (upside down response not shown in graph here)



## *iSensor*<sup>®</sup> *The Simple Solution for Sensor Integration* ADIS16350 Demonstration Tips – Look at each axis

LONVA

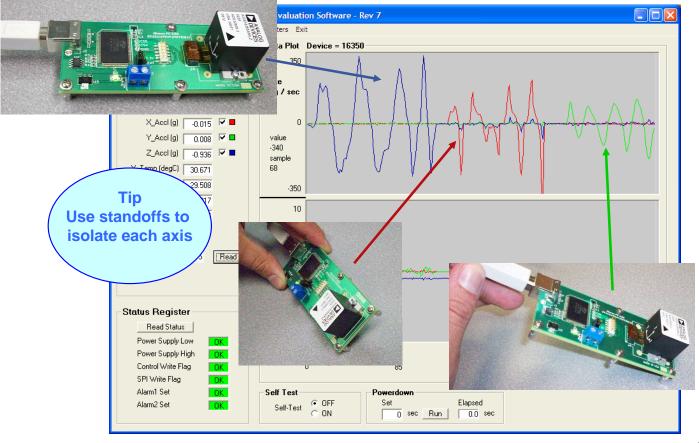



## *iSensor® The Simple Solution for Sensor Integration* ADIS16350 Evaluation Software, Calibration Menu Features

PINCAC

Calibration	1			X		
Automatic Features						
Restore Factory Cali	ibration		Run			
Precision Auto Null			Run	3		
Auto Null			Run			
Manual Calibration	Adjustmo	<u>ent</u>		Register		
Gyroscopes				Contents		
X-Axis Offset	0.43956	deg / sec	Update	0x18		
Y-Axis Offset	0.07326	deg / sec	Update	0x4		
Z-Axis Offset	0.21978	deg / sec	Update	0xC		
Accelerometers						
X-Axis Offset	0	g	Update	0x0		
Y-Axis Offset	0	g	Update	0x0		
Z-Axis Offset	0	g	Update	0x0		
Close Window Flash Memory Register Update						

- 1. From the main menu, click on Configuration, then on Calibration to reach this menu.
- 2. Use Auto Null Run button to do a quick offset calibration.
- 3. Use Precision Auto Null to execute this option inside the ADIS1636x, which takes a 30-second average to produce these numbers. Keep the device still and away from vibration and thermal variation during this 30 second period.
- 4. Use the Flash Memory Register Update to store settings in nonvolatile flash.
- 5. Use the Restore Factory Calibration to return all of these factors to zero.



### *iSensor*<sup>®</sup> *The Simple Solution for Sensor Integration* ADIS16350 Evaluation Software, Operation Menu Features

Pintar

Operational Control			×		
Sample Rate	SMPL_PRD Contents 0x1	Update			
Measurement Range and Digital Filtering					
Select Gyro Range	<ul> <li>320 deg/sec</li> <li>160 deg/</li> </ul>	/sec 🕜 80 deg/sec 2			
32 Taps	SENS/AVG Contents x405				
Auxilliary Digital I/O Configuration					
<u>Configure as a genera</u>	purpose I/O line				
Digital I/O Line 0:	🖲 Input 🔿 Output S	Set Line O Level: 💿 High 🔿	Low		
Digital I/O Line 1:	Input C Output F	Read Line 1 Level: 💿 High 🛛 🔿	Low		
<u>Configure as a data re</u>	dy line				
Select I/O line	⊙ DI/00 ○ DI/01 0	Output Polarity 💿 High 🔿	Low		
Enable	● ON C OFF				
Auxilliary D/A Converter Output					
0.0 Volts	AUX_DAC Contents 0x0	Update			
	Close Window	Flash Memory Register Update			

- 1. From the main menu, click on Configuration, then on Calibration to reach this menu.
- 2. Bias stability performance is typically best when using the maximum sample rate.

CONVER

- 3. Use the on-board Bartlett Window Filter to reduce noise. Enter number of taps (power of 2 steps sizes), then click on update. Since the ADISUSBZ supports sample rates of 150-200SPS, start with at least 8 taps.
- 4. Digital and analog I/O channel configuration options.
- 5. Use the Flash Memory Register Update to store settings in nonvolatile flash.



# *iSensor*<sup>®</sup> *The Simple Solution for Sensor Integration* ADIS16350 Evaluation Software, Data log Menu

PIOLACCO

Datalog Control	
FILE SETUP Samples per File 4096	DATA SELECTION
Sample Delay msec 0 Files per Session 1	🔽 X Gyro 📿
	🔽 Y Gyro
FILE INFORMATION	🔽 Z Gyro
Directory C:\Program Files\Analog Devic	I × Accel
File Name DATALOG	V Accel
File Number 1.csv	Z Accel
	☐ × Temperature
3	Temperature
Start Datalog	🔲 Z Temperature
	🔲 Aux Adc

1. Set the total number of samples.

CONVER

- 2. Set the inertial sensor channels to monitor.
- 3. When the data log is in process, a message will appear in this location until the data collection process has completed.





### CONTACTS: APPLICATIONS ENGINEER:

• MARKETING:

Mark Looney <u>mark.looney@analog.com</u> 1-336-605-4139 Bob Scannell <u>bob.scannell@analog.com</u> 1-336-605-4031

### MORE INFORMATION ON ISENSOR EVALATION TOOLS:

www.analog.com/isensor-evaluation

