


STB FRONT PANEL QUICK-START GUIDE


- 1** Connect the USB cable to the P4 USB connector on the STB Front Panel board.




- 2** Connect the USB cable to a PC's USB port.

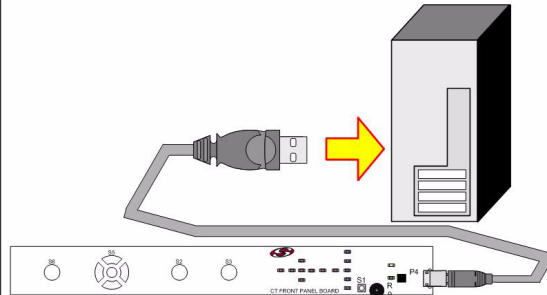


- 3** Wait for enumeration to complete. Watch for the LED labeled PWR to turn on.

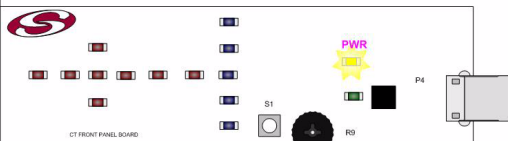

- 4** Move a hand in close proximity to the board. This causes the array of blue LEDs to light up as the hand approaches. Adjust proximity sensitivity by rotating the potentiometer R9.

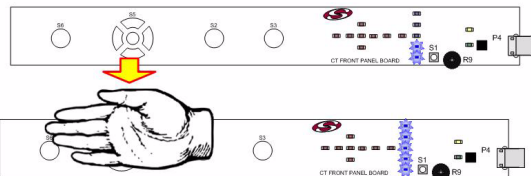

- 5** Press the Sx capacitive sensing buttons on the board. Each will light a corresponding red LED when firmware senses a finger's presence.

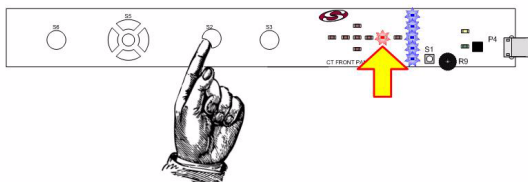

- 6** Read the STB Front Panel User's Guide for more information. Documentation and software are available at:
<https://www.silabs.com/FrontPanel>

