# 

# **Multifunction Digital Timer**

# H5CR

1/16 DIN Timer with Easy-to-Use Functions

- Nine field-selectable output modes accommodate a wide variety of applications
- All parameters set by scrollthrough menus accessed from the front panel
- Field-selectable time ranges from 0.001 second to 9999 hours
- High-visibility alphanumeric LCD display has 8 mm high characters and built-in backlight
- Precision control possible to 0.001 second
- Four levels of key protection provided
- 10-year battery back-up
- Selectable elapsed time (UP) and time remaining (DOWN) display
- Short body model H5CR-S measures just 64 mm (2.52 inches) deep

# Ordering Information \_\_\_\_\_

# ■ TIMERS

Add the supply voltage to the part number when you order. For example, H5CR-B-AC100-240.

Timing fu	nctions	9 selectable, including ON-delay, repeat cycle, OFF-delay, and one-shot					
Contact t	уре	SPDT relay			Solid-state open collector		
Product t	уре	Economy	Standard	Short body	Economy	Standard	Short body
Unit depth		78 mm	100 mm	64 mm	78 mm	100 mm	64 mm
		(3.07 in)	(3.94 in)	(2.52 in)	(3.07 in)	(3.94 in)	(2.52 in)
Panel mo	ounting hardware	Not provided	Provided	Provided	Not provided	Provided	Provided
Supply	AC	24 V or 100 to	240 V; 50/60 Hz	—	24 V or 100 to 240 V; 50/60 Hz —		_
voltage	DC	12 to 24 V —		12 to 24 V	12 to 24 V	—	12 to 24 V
Part	Backlit display	— H5CR-B		H5CR-S	—	H5CR-BS	H5CR-SS
number	Unlit display	H5CR-L	—	—	H5CR-LS	—	_





# ACCESSORIES

Description		Part number		
Soft cover with two mour	Y92A-48F1			
Shock prevention termin	Y92A-48T			
Sockets	8-pin, bottom surface or track mounting, top screw terminals	P2CF-08		
	8-pin, bottom surface or track mounting, top screw terminals, finger safe terminal			
	conforms to VDE0106/P100	P2CF-08-E		
	8-pin, back mounting, for use with Y92F-30 mounting adapter, bottom screw terminals	P3G-08		
	8-pin, terminal cover for P3G sockets, conforms to VDE0106/P100	Y92A-48G		
Panel mounting adapter	ing adapter Fits behind panel, ideal for side-by-side installation. Use P3GD-D sockets			
NEMA 4 cover	EMA 4 cover Waterproof front cover			
Mounting track	DIN rail, 50 cm (1.64 ft) length; 7.3 mm thick	PFP-50N		
	DIN rail, 1 m (3.28 ft) length; 7.3 mm thick	PFP-100N		
	PFP-100N2			
End plate	End plate			
Spacer		PFP-S		

# RANGE AND OPERATION MODE SELECTION

Range selection	Time unit	Maximum setting
s	0.001 second	9.999 seconds
s	0.01 second	99.99 seconds
s	0.1 second	999.9 seconds
s	1 second	9999 seconds
min s	1 second	99 minutes 59 seconds
min	0.1 minute	999.9 minutes
min	1 minute	9999 minutes
hr min	1 minute	99 hours 59 minutes
hr	0.1 hour	999.9 hours
hr	1 hour	9999 hours

Mode	Operation	Output type
А	ON-delay	Sustained or
A-1	Sustained start signal ON-delay	one-shot*
A-2	Power ON-delay	
A-3	Power ON-delay/non-power resettable	
В	Repeat cycle	
B-1	Repeat cycle/non-power resettable	
D	OFF-delay	Sustained
Е	One-shot	
F	Cumulative signal ON-delay	

\*One-shot time, seven choices selectable: 0.1 sec, 0.5 sec, 1 sec, 5 sec, 10 sec, 15 sec, 20 sec

# Specifications \_\_\_\_\_

Part number		H5CR-L	H5CR-B□	H5CR-S□	
Classification		Economy type	Standard type	Short body type	
Supply AC voltage		100 to 240 VAC, 50/60 Hz, 24 VAC, 50/60 Hz			
	DC	12 to 24 VDC, 20% max. permissible ripple	_	12 to 24 VDC, 20% max. permissible ripple	
Operating voltage	je	85% to 110% of rated voltag	85% to 110% of rated voltage		
Power	AC	3 VA at 60 Hz, 240 VAC		—	
consumption	DC	1 W at 24 VDC	_	2 W at 24 VDC	

Specifications table continued on next page.


# **SPECIFICATIONS** continued

Part number			H5CR-L	H5CR-B□	H5CR-S□				
Inputs	Types av	ailable	Reset and start signal	Reset, gate, start signal, and	key protect				
	Signal,	Туре	No-voltage input						
	reset	ON impedance	1 kΩ max. (Approx. 2 mA when $0\Omega$ )						
	and gate	Residual voltage	2 V max. in ON state						
		OFF impedance	100 kΩ minimum						
		Pulse width	1 ms or 20 ms selectable for i 20 ms for gate	reset and signal					
	Key	Туре	No-voltage input						
	protect	ON impedance	100 kΩ max. (Approx. 2 mA when $0\Omega$ )						
		Residual voltage	1 V max. in ON state						
		OFF impedance	100 kΩ minimum						
		Response time	1 second						
Control	Туре	Time limit	SPDT relay output or NPN op	en collector transistor output (	H5CR-❑S)				
output		Instantaneous	_		,				
	Relay	Max. load	5 A, 250 VAC resistive load (r	p.f. = 1)					
	,	Min. load	10 mA, 5 VDC						
	Solid-	Max. load	100 mA, 30 VDC						
	state	Residual voltage	2 V max., 1 V typical						
Repeat a		Power start	$\pm 0.01\%, \pm 0.05$ second max.						
Ropouru	oouraby	Signal start	±0.005%, ±0.03 second max.	(rate for set value)					
Setting e	rror	Signal Start	±0.003 %, ±0.03 second max.						
Resetting			Power reset (A, A-1, A-2, B, D and E modes)						
Resetting	system		External, manual, automatic resets (may be internal depending on A-1, B, B-1, D and E operation modes)						
Resetting	time	Power reset	0.5 second minimum (A, A-1, A-2, B, D and E modes)						
Indicators	5		4-digit LCD alphanumeric display without backlighting 8 mm (0.32 in) H present value, 4 mm (0.16 in) H 						
Memory	function		Retains preset values for 10 years at 25° C (77° F)						
Materials			Plastic case						
Mounting	l		Panel or surface; Y92F-30 mounting bracket not included	Panel, Y92F-30 mounting bracket included					
Connecti	ons		8-pin round socket	Screw terminals					
Weight			105 g (3.7 oz.)	160 g (5.6 oz.)	120 g (4.2 oz.)				
Approval	s		UL/CSA/SEV/CE						
Operating	g ambient t	emperature	-10° to 55°C (14° to 131°F) with no icing						
Humidity			35% to 85% RH						
Vibration	Mechanic	al durability	10 to 55 Hz with 0.75 mm single amplitude in 3 directions						
	Malfunctio	on durability	10 to 55 Hz with 0.5 mm single amplitude in 3 directions						
Shock	Mechanic	al durability	30 G each in three directions						
Malfunction durability		on durability	10 G each in three directions						
Variation due to voltage change			Included in "Repeat accuracy" specification						
Variation due to temperature change			Included in "Repeat accuracy" specification						
	n resistanc		100 M $\Omega$ min. at 500 VDC between current-carrying terminal and exposed non-current- carrying metal parts, and between non-continuous contacts.						
Dielectric strength			2,000 VAC, 50/60 Hz for 1 minute between current-carrying terminal and exposed non-current-carrying metal parts for 100 to 240 VAC type						
			1,000 VAC for both 24 VAC and 12 to 24 VDC types						
Service life Mechanical			10 million operations minimur						
(SPDT relay) Electrical			100,000 operations minimum						


H5CR

# Timing Charts.

The gate input is not included in the H5CR-LD.

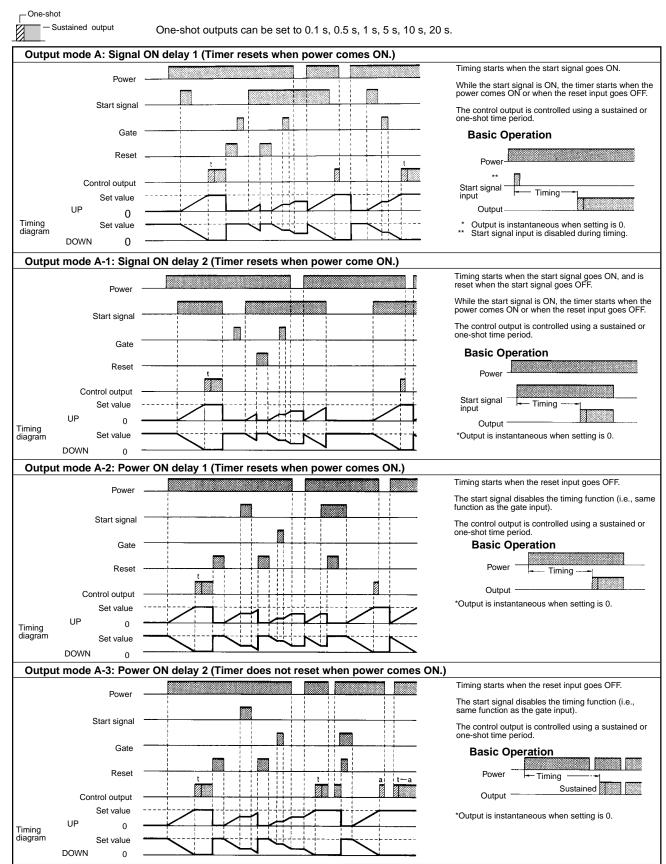



#### H5CR \_\_\_\_

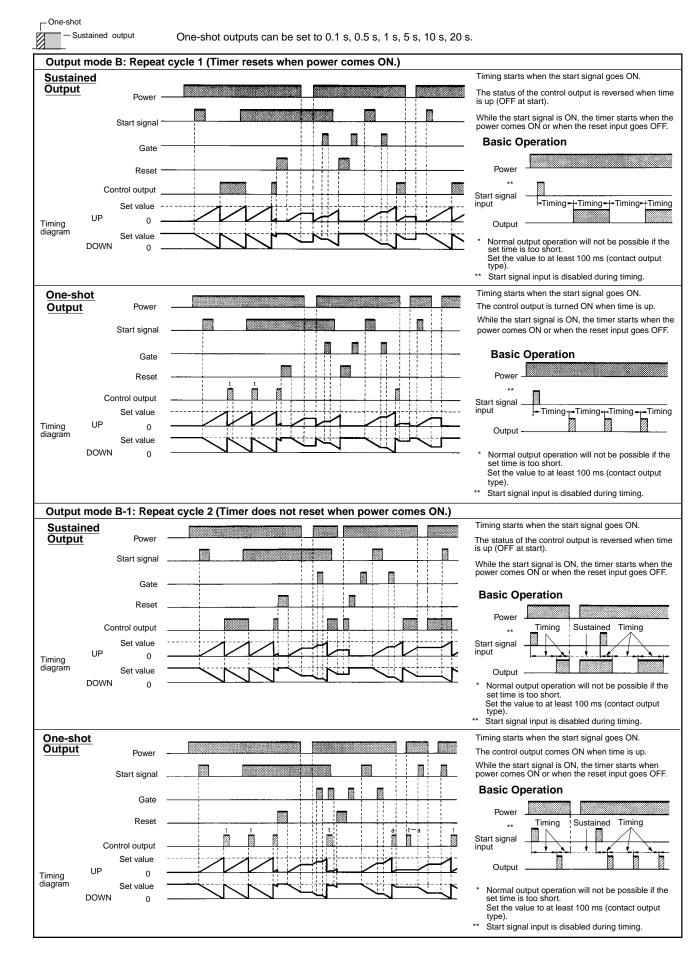


#### H5CR
 
#### The gate input is not included in the H5CR-LD.

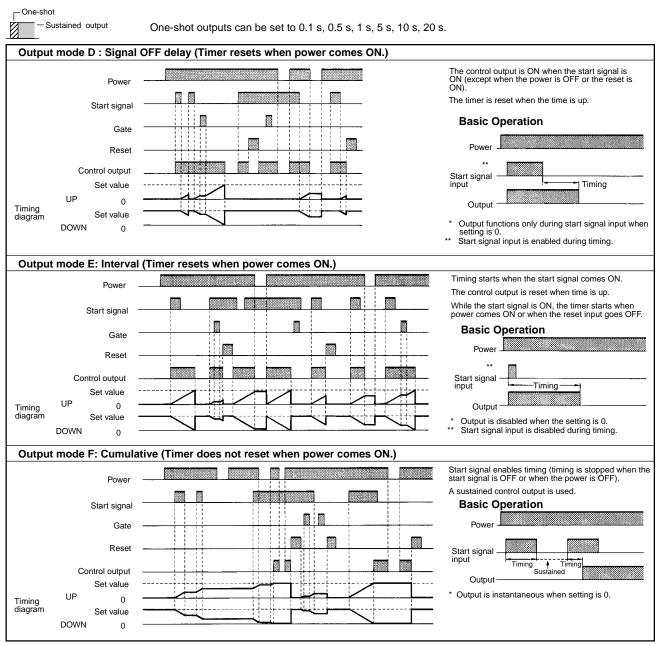



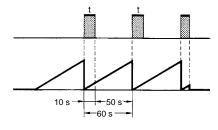

6

(0.24)

6 (0.24)

ſ


IIIIIKM

# Dimensions \_


Unit: mm (inch)

#### ■ TIMERS


Economy Models H5CR-L, H5CR-LS

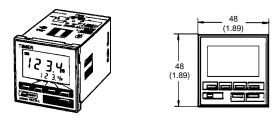





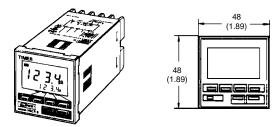

Short Body Models H5CR-S, H5CR-SS

 

 

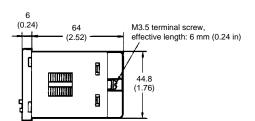

84.0 (3.31)

63.7

100

(3.94)

(2.51) 0.7 (0.03)

Π

٥

14.3

(0.56)

44.8 (1.76)

44.8

(1.76)


M3.5 terminal screw,

effective length: 6 mm (0.24 in)

# ■ ACCESSORIES

#### Y92F-30 Panel Mounting Adaptor


The diagram below shows the adapter on an H5CR-L timer. The mounting depths for H5CR-B and H5CR-S are the same as shown in *Timer Dimensions*.

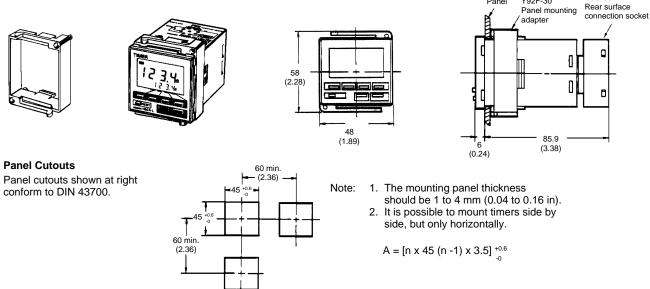

# P2CF-08 Track Mounting/Front Connecting Sockets



H5CR =

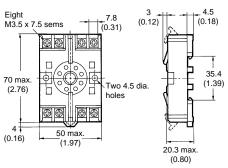

Terminal Arrangement/ Internal Connections (Top View)




Surface Mounting Holes

Two, 4.5 dia. or two M4 socket mounting holes




# P2CF-08E Finger Safe Terminal Type

Conforming to VDE0106/P100

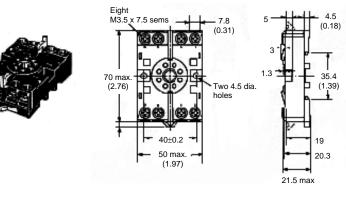


### P3G-08 Back Connecting Socket

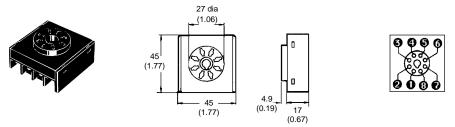

# Y92A-48G Finger Safe Terminal for P3G(A)

Conforming to VDE0106/P100




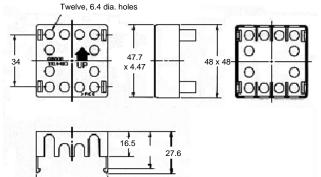


# H5CR =

#### Y92A-48F1 Soft plastic cover

 Two mounting clips help the soft plastic cover Y92A-48F1 fit snugly over the front of the timer to protect against dirt and water. Timer settings can be changed when the cover is on. The cover is intended for use in areas where unusual service conditions do not exist.




#### PFP-100N, PFP-50N Mounting Track

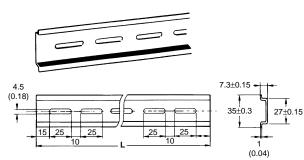


L: Length


1 m	PFP-100N
50 cm	PFP-50N
1 m	PFP-100N2

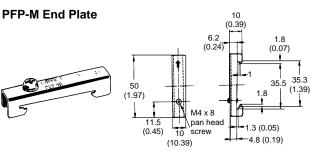


#### Y92A-48T Terminal cover

 The terminal cover protects wiring connections on the Standard and Short Body models.

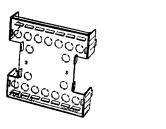




#### **PFP-100N2 Mounting Track**

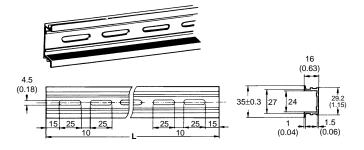


**PFP-S Spacer** 



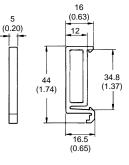

# Connections \_\_\_\_


# ■ TERMINAL ARRANGEMENT

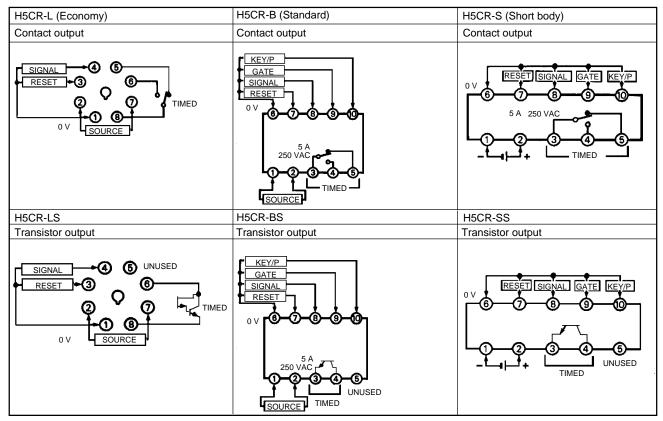

Note: Do not connect unused terminals.

# ■ INPUTS

The inputs of the H5CR are no-voltage (short circuit or open) inputs.

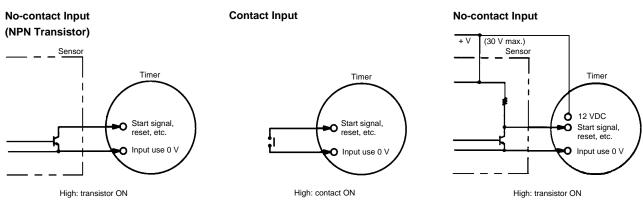


#### **No-voltage Input Signal Levels**

No-contact input	<ol> <li>High level Transistor ON Residual voltage: 2 V max. Impedance when ON: 1 kΩ max.</li> </ol>
	2. Low level Transistor OFF Impedance when OFF: 100 kΩ min.
Contact input	Use contacts which can adequately switch 2 mA at 5 V.

Part	Input te	Input terminal numbers			Power supply terminals		Output terminal numbers					
number								Conta	act		Solid-s	state
	Reset	Start	Gate	Key Protect	COM	AC (common), DC-	AC (hot), DC+	COM	NO	NC	COM	LOAD
H5CR-B	7	8	9	10	6	1	2	3	4	5	3	4
H5CR-S												
H5CR-L	3	4	—	—	1	2	7	8	6	5	8	6

# Operation.

# ■ NOMENCLATURE

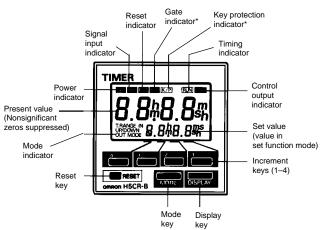

\* Key protection indicator and gate indicator are not included in the H5CR-L.

#### ■ KEY OPERATIONS

Key name	Operation
Increment keys (1-4)	Used to change the corresponding digit of the set value. Used to change data in the set mode.
Display key	Switches to the present value display.
Mode key	Switches from run mode to set mode. Changes items in the set mode.
Reset key	Resets timing and outputs.

# ■ FACTORY SETTINGS

The following table shows the timer settings when it is shipped. Change the settings as necessary to suit the system before operation. Settings and the display receive power from the internal battery and are, therefore, unaffected by external power interruptions. With the initial settings, there will be no output even if the power supply is connected. External inputs and outputs cannot be used without a power supply.


Model	H5CR-B (Standard)/H5CR-S (Short body)	H5CR-L (Economy)		
Time range	S			
Present value	0.00 s			
Presets	0.00 s			
UP/DOWN mode	UP			
Output mode	A: Signal ON-delay (1)			
Output time	Hold			
Input signal time	20 ms			
Key protect level	KP-1 —			

# ■ INPUT/OUTPUT FUNCTIONS

Inputs	Start signal	Stops timing in A-2 and A-3 (power ON-delay) modes. Starts timing in other modes.
	Reset	Resets present value (to zero in UP mode, to preset in DOWN mode). Control inputs are not accepted while reset input is ON. Reset indicator lit while reset input is ON.
	Gate	Inhibits timer operation.
	Key protect	Makes keys inoperative according to key protect level. Key protected indicator lit while key protect input is ON. Effective when protect terminals are shorted. Effective if power supply is turned off.
Outputs	Control output (OUT)	Outputs made according to designated output mode when corresponding preset is reached.

### OPERATIONAL OVERVIEW

The flowchart below shows operation common to all H5CR models. Refer to the Setting Item Table for details on the operation of specific modes.

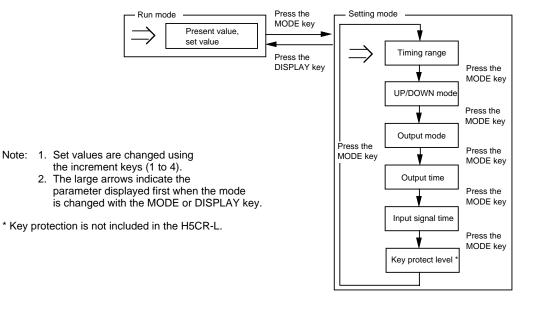

# ■ SETTING ITEM TABLE

Mode	Setting item	Description	Setting procedure Sequence when changing a digit using the increment keys (1 to 4).	
Run mode	Set value	Compared to the present value. Determines the timing of the control output according to the output mode.		
Setting mode	Time range	Determines the timing range.	Change the timing range with the increment keys (1 to 4).	
	UP/DOWN mode	Selects the display that shows elapsed time (UP) or time remaining (DOWN).	Select UP/DOWN with the increment keys (1 to 4). (UP) U - d (DOWN)	
	Output mode	Determines the control output type. (Refer to the present value vs. output diagrams on pages 5 to 8.)	Sequence when changing the mode using the increment keys (1 to 4).	
		diagrams on pages 5 to 6.		
	Output time	Determines the duration of the control output. Will be displayed when the output mode is A, A-1, A-2, A-3, B, or B-1. Will not be displayed in output modes D, E, or F.	Change the output time with the increment keys (1 to 4). $H_{\overline{0}L} d_{4}$ $H_{\overline{0}L} d_{4}$ $H_{\overline{0}L} d_{5} + H_{\overline{0}} + H_{$	
	Input signal time	Changes the duration of the control and reset input signals.	Change the duration with increment keys (1 to 4).	
			(1 ms) / ←→ 2[] (20 ms)	
	Key protect level	Locks certain keys to prevent accidental operation. The key protection level, kP-1 to kP-4, determines which keys are locked when the key protection input is ON. The locked keys are crossed out in the diagram at right.	Sequence when changing the key protect level using the increment keys (1 to 4). $ k P - l \rightarrow k P - 2 \rightarrow k P - 3 \rightarrow k P - 4 $ $ KP - 1 > \qquad KP - 2 \rightarrow k P - 3 \rightarrow k P - 4 $ $ KP - 1 > \qquad KP - 2 \rightarrow k P - 3 \rightarrow k P - 4 $ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ $ KP - 3 > \qquad KP - 4 >$ KP - 4 >	

Note:1. Changes made in setting mode become effective when run mode is entered.2. The time range setting appears first when setting mode is entered.


# EXAMPLES

#### **Run Mode**

#### Changing the Set Value

To change the set value from 3 hr 5 min to 4 hr 5 min, press the 3 key so that the number 4 appears in the hour's place.

- Pressing keys 1 through 4 increments the corresponding column by 1.
- The columns can be changed in any order, but the output will be turned ON if the set value is less than the present value.
- Nonsignificant zeros are suppressed on the set value display.

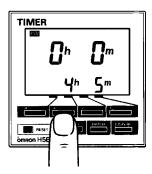


Note: Read *Changing Set Values* in the *Precautions* section before changing the timer set value during operation.

#### Setting Mode


#### **Changing Settings in the Set Mode**

1. Press the MODE key to switch from run mode to set mode.


- The timer will continue operation according to existing settings when switched from run mode to set mode during operation.
- The MODE key will be locked if the key protection function is enabled.
- Settings changed in the set mode do not take effect until run mode is entered. Because the operating conditions will change once this occurs, always use the RESET key or a reset input to reset operation.
- Press the MODE key to scroll successively through the items that can be set.

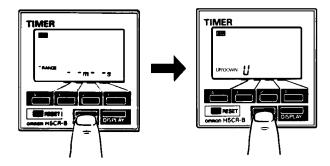

- 3. To change the selected item,
  - Press the MODE key until the desired item appears.

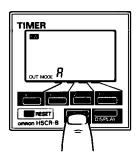

• Change the item setting by pressing keys 1 through 4. (Press the DISPLAY key to switch back from set mode to run mode.)

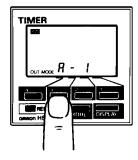

# Precautions

H5CR =

# POWER SUPPLIES

- The input circuit is not isolated from the power supply circuit. The internal circuit might be damaged by a surrounding AC circuit, so use an isolated AC power supply with equipment connected to the input circuit.
- If power is interrupted for less than 10 ms, operation will continue normally. If power is interrupted for 10 to 500 ms, operation will be inconsistent, and timing may stop or reset, depending on the mode.
- · Connect the power supply voltage through a relay or switch in such a way that the voltage reaches a fixed value immediately.
- Depending on switching frequency, current surges may degrade relay contacts; relays with a capacity greater than 10 A are recommended.

### ■ INPUT AND OUTPUT

- · Do not use external sources to increase the voltage of input signals (control signal, reset, gate, and key protection).
- · Be sure that the load of the control output (contact, transistor) is less than the maximum values indicated in the specifications. If the output load exceeds the recommended value, the life span of the contact output type will be shortened dramatically, and the transistor of the transistor output type will be damaged.
- · The transistor output is opto-isolated from the internal circuitry, so either NPN or PNP transistors can be used.

### SELF-DIAGNOSTIC FUNCTION

The following displays will appear if an error occurs. The present value and output enter the same status as after pressing the RESET key.

Display	Error	Output status	Correction	Set
E	CPU	OFF	Press RESET key	No change
E2	Memory			Set at the factory

### CHANGING SET VALUES

- The timer set value can be changed while the timer is operating, so a high value can be set temporarily to inactivate the timer, or a low value can be set to activate the timer more quickly. If the set value is changed accidentally during operation, the timed output might be activated. Therefore, turn the key protection input ON unless the set value is being changed.
- To avoid changing the output when changing the set value, it is recommended to begin changing the set value by entering a large number in the higher digit.

#### OPERATING ENVIRONMENT

- When using the timer in an area with much electrical noise, separate the timer, wiring, and the equipment which generates the input signals as far as possible from the noise sources. It is also recommended to shield the input signal wiring to prevent electrical interference.
- Organic solvents (such as paint thinner), as well as very acidic or basic solutions, might damage the outer casing of the timer.

### MAXIMUM VOLTAGE TEST

When the timer is installed in a control box and tests are conducted which may damage the timer's internal circuitry (for example, a test measuring the maximum voltage difference between the control circuit and metal components), remove the timer from the control box or short circuit the terminals.

### CAUTION -

This product contains a lithium battery. Lithium batteries explode if incinerated. Dispose of the digital timer as a combustible item.

NOTE: DIMENSIONS ARE SHOWN IN MILLIMETERS. To convert millimeters to inches divide by 25.4.



Schaumburg, IL 60173 1-800-55-OMRON

Cat. No. GC TMCN1

3/02

### **OMRON ON-LINE**

Global - http://www.omron.com USA - http://www.omron.com/oei Canada - http://www.omron.com/oci

Specifications subject to change without notice.

# **OMRON CANADA, INC.**

885 Milner Avenue Scarborough, Ontario M1B 5V8 416-286-6465

Printed in the U.S.A.