


Hand Crimp Tool Operating Instruction And Specifications Sheet Order No. 64001-0900 Eng. No. RHT 7050 (Replaces 19285-0053)

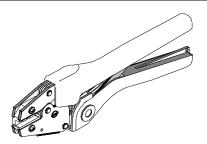

FEATURES

- A full cycle ratcheting hand tool ensures complete crimps
- Long handles for comfortable crimping with reduced crimping force
- A precision user-friendly terminal locator wire stop holds terminals in the proper crimping position

SCOPE

Nylon closed end connectors 12-22 AWG

Testing

Mechanical

The tensile test, or pull test, is a means of evaluating the mechanical properties of the crimped connections. The following charts show the UL specifications for various wire sizes. The tensile strength is shown in pounds and indicates the minimum acceptable force to break or separate terminal from the conductor.

Wire Size (AWG)	UL – 486 C
22	8
20	10
18	10
16	15
14	25
12	35

* UL – 486 C – Closed end connectors and Wire Nuts.

The following is a partial list of the product part numbers and their specifications that this tool is designed to run. We will be adding to this list and an up to date copy is available on <u>www.molex.com</u>


Terminal No.	Terminal	Wire Size		Wire Combinations		
Terminar No.	Eng No. (REF)	AWG	mm ²	wire Compinations		
19160-0009	NC-2212	12 - 22	(3.30-0.35)	See Chart 1		
19160-0010	NC-2212-L	12 - 22	(3.30-0.35)	See Chart 1		
19160-0011	NC-2212-BA	12 - 22	(3.30-0.35)	See Chart 1		

OPERATION

Wire Preparation

Pre-twisted wire not required for OEM applications. For Solid Wire strip leads to 3/8 of an inch. Insert into connector and crimp (OEM only).

 For stranded wire strip leads to approximately 3/4 of an inch. Twist the wire combination even and tight. Trim stripped pre-twisted area to 3/8 of an inch and insert into connector and crimp. For more information follow the Quality Crimping Handbook.



<u>CHART 1</u>

Wire Combinations for Nylon- Insulated Closed End Connectors Part No. 191600009 (NC-2212)							
Wire Type	_	Wire Gauge (AWG)					
wire type	14	16	18	20	22	Rating	
Stranded or Solid	1	1				UL & CSA	
Stranded or Solid	1		1			UL & CSA	
Stranded or Solid	1		2			UL & CSA	
Stranded or Solid	1		1	1		UL & CSA	
Stranded or Solid	1		1	2		UL & CSA	
Stranded or Solid	1		1		1	UL & CSA	
Stranded or Solid	1		1		2	UL & CSA	
Stranded or Solid	1		1		3	UL & CSA	
Stranded or Solid	1			1		UL & CSA	
Stranded or Solid	1			2		UL & CSA	
Stranded or Solid	1			3		UL & CSA	
Stranded or Solid	1				1	UL & CSA	
Stranded or Solid	1				2	CSA	
Stranded or Solid	1				3	CSA	
Stranded or Solid	1				4	CSA	
Stranded or Solid	1		1	1	1	CSA	
Stranded or Solid		3				UL & CSA	
Stranded or Solid		2				UL & CSA	
Stranded or Solid		2	1			UL & CSA	
Stranded only		2	2			UL & CSA	
Stranded or Solid		2		1		UL & CSA	
Stranded or Solid		2		2		UL & CSA	
Stranded or Solid		2			1	UL & CSA	
Stranded or Solid		2			2	UL & CSA	
Stranded or Solid		2			3	UL & CSA	
Stranded or Solid	1	2	1	1		UL & CSA	
Stranded or Solid	1	2	1	Ì	1	UL & CSA	
Stranded or Solid		2		1	1	UL & CSA	
Stranded or Solid		1		1	2	UL & CSA	
Stranded or Solid	1	1	1	İ		UL & CSA	
Stranded or Solid	ĺ	1	1	İ		UL & CSA	
Stranded or Solid	ĺ	1	2	İ		UL & CSA	
Stranded or Solid		1	3	ĺ		UL & CSA	

Wire Type		91600009 (NC-2212) Wire Gauge (AWG)			Rating	
	14	16	18	20	22	
Stranded or Solid		1		1		UL & CS
Stranded or Solid		1		2		UL & CS
Stranded or Solid		1		3		UL & CS
Stranded or Solid		1		4		UL & CS
Stranded or Solid		1			1	UL & CS
Stranded or Solid		1			2	UL & CS
Stranded or Solid		1			3	UL & CS
Stranded or Solid		1			4	UL & CS
Stranded or Solid		1			5	UL & CS
Stranded or Solid		1	2	1		UL & CS
Stranded or Solid		1	2		1	UL & CS
Stranded or Solid		1	2		2	UL & CS
Stranded or Solid	Ī		1	1	1	UL & CS
Stranded or Solid			1	2	1	UL & CS
Stranded or Solid			1	1	2	UL & CS
Stranded Only	İ		5	Ì		UL only
Stranded or Solid	1	1	4	İ		UL & CS
Stranded or Solid	İ	1	4	1		UL & CS
Stranded or Solid	İ –	1	4		1	UL & CS
Stranded or Solid	† T	1	3			UL & CS
Stranded or Solid	1		3	1		UL & CS
Stranded or Solid	İ		3	2		UL & CS
Stranded or Solid	İ		3		1	UL & CS
Stranded or Solid			3		2	UL & CS
Stranded or Solid	1		3		3	UL & CS
Stranded or Solid	1		3	1	1	UL & CS
Stranded or Solid	Ī		2		-	UL & CS
Stranded or Solid			2	1		UL & CS
Stranded or Solid	Ī		2	2		UL & CS
Stranded or Solid			2	3		UL & CS
Stranded or Solid			2		1	UL & CS
Stranded or Solid			2		2	UL & CS
Stranded or Solid			2		3	UL & CS
Stranded or Solid	Ì		2	1	1	UL & CS
Stranded or Solid			2	2	1	UL & CS
Stranded or Solid			2	3	1	UL & CS
Stranded or Solid			2	1	2	UL & CS
Stranded or Solid			2	1	3	UL & CS
Stranded or Solid	1	-	1	1		UL & CS
Stranded or Solid	1	1	1	2		UL & CS
Stranded or Solid	†		1	3		UL & CS
Stranded or Solid	1	+	1	4		UL & CS
Stranded or Solid	1	+	1	5		UL & CS
Stranded or Solid	+		1		1	UL & CS
Stranded or Solid			1		2	UL & CS
Stranded or Solid	+		1		2	UL & CS
Stranded or Solid			1		3	UL & CS
Stranded or Solid			1		4 5	UL & CS
Stranded or Solid			1	1	5 1	UL & CS
Stranded or Solid			1	2	1	UL & CS
Stranded or Solid	+		1	2	1	UL & CS
Stranded or Solid Stranded or Solid			1	3	1	UL & CS
Stranded or Solid	─		1		1	UL & CS
				1		
Stranded or Solid	+		1	1	3	UL & CS
Stranded or Solid	+		1	1	4	UL & CS
Stranded or Solid			1	2	2	UL & CS
Stranded or Solid	<u> </u>		1	2	3	UL & CS
Stranded or Solid	<u> </u>		1	3	2	UL & CS
Stranded or Solid	1			6		UL & CS UL & CS

Doc No. 64001-0900 Revision: D Release Date: 10-09-02 Revision Date: 05-11-05

UNCONTROLLED COPY

Page 2 of 7

Wire Combinations for Nylon- Insulated Closed End Connectors Part No. 191600009 (NC-2212)							
Wire Tune		Wire Gauge (AWG)					
Wire Type	14	16	18	20	22	Rating	
Stranded or Solid				5	1	UL & CSA	
Stranded or Solid				4		UL & CSA	
Stranded or Solid				4	1	UL & CSA	
Stranded or Solid				4	2	UL & CSA	
Stranded or Solid				3		UL & CSA	
Stranded or Solid				3	1	UL & CSA	
Stranded or Solid				3	2	UL & CSA	
Stranded or Solid				3	3	UL & CSA	
Stranded or Solid	Í			2		UL & CSA	
Stranded or Solid	Í			2	1	UL & CSA	
Stranded or Solid				2	2	UL & CSA	
Stranded or Solid				2	3	UL & CSA	

Wire Combinations for Nylon- Insulated Closed End Connectors Part No. 191600009 (NC-2212)							
Wire Type		Wire Gauge (AWG) Rating					
	14	16	18	20	22	_	
Stranded or Solid				2	4	UL & CSA	
Stranded or Solid				1	1	UL & CSA	
Stranded or Solid				1	2	UL & CSA	
Stranded or Solid				1	3	UL & CSA	
Stranded or Solid				1	4	UL & CSA	
Stranded or Solid				1	5	UL & CSA	
Stranded or Solid					6	UL & CSA	
Stranded or Solid					5	UL & CSA	
Stranded or Solid					4	UL & CSA	
Stranded or Solid					3	UL & CSA	
Stranded or Solid					2	UL & CSA	

θ

JAWS SLIGHTLY CLOSED

CONNECTOR

Figure 2


PRE-TWISTED WIRE

Crimping Terminals

Open the tool by first closing the jaws sufficiently for the ratchet mechanism to release.

- Hold hand tool with the locator facing up. Insert the closed end connector in the correct slot (12-22). Make sure that the shoulder of the connector is resting on the locator plate (See Figure 1).
- Close the hand tool jaws until the connector is held snug in place. Load the connector with the desired wire combination (See Figure 2 and 3). Complete the crimp by closing the hand tool handles until they release.

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

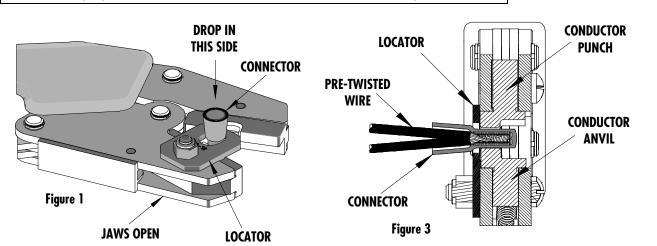

3. Remove the crimp and inspect for proper crimp location, and check for insulation closure. Molex offers a Crimp Inspection Handbook for closed barrel industrial product. See our website or contact your sales engineer.


Note: Whenever crimping without the locator, make sure the seam of the terminal is oriented up or down in the tool if using unbrazed product, as this will provide higher pull force values.

Release Date: 10-09-02 Revision Date: 05-11-05

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture and other contaminants with a clean brush, or soft, lint-free cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively. The 64001-0900 (RHT-7050) was engineered for durability, but like any fine piece of equipment it needs cleaning and lubrication for a maximum service life of trouble-free

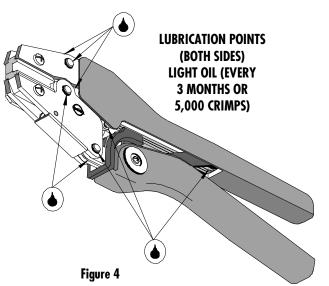

crimping. A light oil, such as 30 weight automotive oil used at the oil points shown in Figure 4, every 5,000 crimps or 3 months will significantly enhance the tool life and ensure a stable calibration.

4. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.


Miscrimps or Jams

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by pressing the ratchet release lever (See Figure 5).

How To Adjust Tool Preload (See Figure 5)

It may be necessary over the life of the tool to adjust tool handle preload force. Listed below are the steps required to adjust the crimping force of the hand tool to obtain proper crimp conditions:

- 1. Remove the screw and plastic cover washer. Note the setting wheel position.
- 2. Lift the setting wheel off the axle. Turn the eccentric axle with a screwdriver.
- 3. Turning the eccentric axle counter-clockwise (CCW) will increase handle force.
- 4. Replace the setting wheel to the axle, aligning the nearest notch in the setting wheel to the dowel pin.
- 5. Replace the plastic cover washer and screw.
- 6. Check the crimp specifications after tool handle preload force is adjusted.

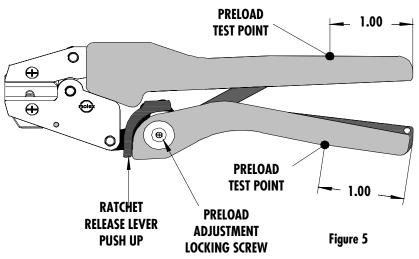



Release Date: 10-09-02 Revision Date: 05-11-05

UNCONTROLLED COPY

Tool Calibration

 A Certificate of Calibration (see last page) was supplied with the tool. To recalibrate this tool, pin gauge measurements should be taken in each conductor nest and compared to this chart. The tool should be lubricated prior to recalibration to ensure consistent measurements. Handle preload is factory set to 25-45 LBS. See How to Adjust Tool Preload (See Figure 5) to recalibrate.

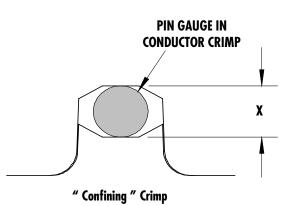



Warranty


This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of **30 days**. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

Hand held crimping tools are intended for low volume, prototyping, or repair requirements only.

Caution: Repetitive use of this tool should be avoided.

PARTS LIST

ltem	Order No	Description	Quantity					
	64001-0900	Hand Crimp Tool	(Fig. 6)					
1	64000-0076	Repair Kit (Springs, Pins and E-Rings)	1					
2	63810-0000	Handle	1					
3	64001-0975	Locator Assembly	1					
4	64001-0970	Tooling Kit	1					
	Tooling Kit Only							
5	64001-0901	Conductor Punch	1					
6	64001-0902	Conductor Anvil	1					

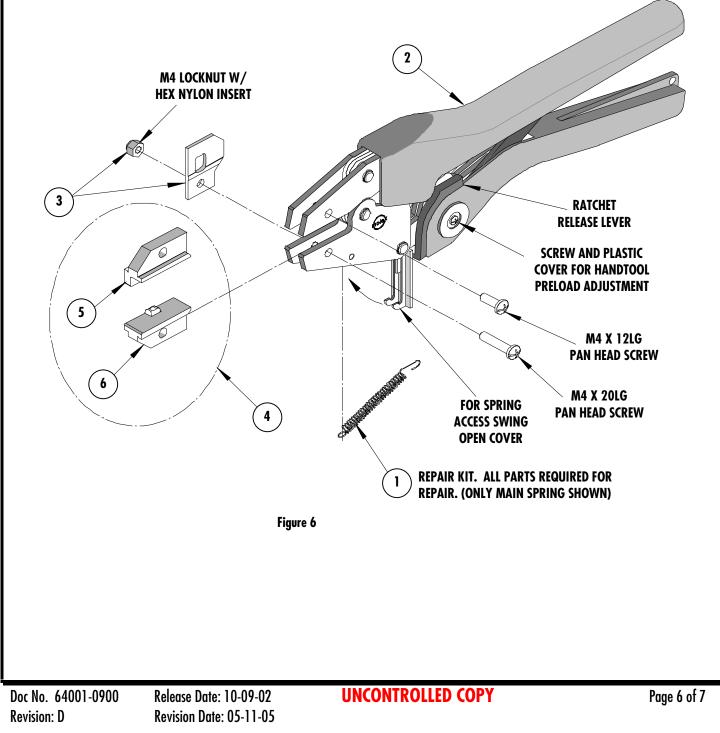

Downloaded from Elcodis.com electronic components distributor

		molex®		
	C	ertificate of Calibration	9.00	
Tool Order Numb	per		·	
Tool Eng. Numbe	r			
Tool Revision				
Serial Number				
Date of Manufac	ture			
		Handle Load Range at 1 inch	from the Tips =	
			Actual =	
Pin Gage of Conc	luctor Nest/Nests or Slug heigh	nt if the nest is the "F" Crimp style.		
Dura Carlada	N // 1	A		
-		Actual =		
		Actual =		
Range Conductor	Nest # 3 =	Actual =		
Technician		_		
Date of Calibration	on	_		
	d be done every 5,000 cycles a ubricated during this operation			
	Mol	ex Application Tooling Group 1150 E. Diehl Road Naperville, IL 60563 Tel: (630) 969-4550 Fax: (630) 505-0049		
Doc No. 64001-0900 Revision: D	Release Date: 10-09-02 Revision Date: 05-11-05	UNCONTROLLED C	ОРҮ	Page 7 of 7