

Fusion Advanced Development Kit

User's Guide

Actel Corporation, Mountain View, CA 94043

© 2009 Actel Corporation. All rights reserved.

Printed in the United States of America

Part Number: 50200173-1

Release: August 2009

No part of this document may be copied or reproduced in any form or by any means without prior written consent of Actel.

Actel makes no warranties with respect to this documentation and disclaims any implied warranties of merchantability or fitness for a particular purpose. Information in this document is subject to change without notice. Actel assumes no responsibility for any errors that may appear in this document.

This document contains confidential proprietary information that is not to be disclosed to any unauthorized person without prior written consent of Actel Corporation.

Trademarks

Actel, IGLOO, Actel Fusion, ProASIC, Libero, Pigeon Point and the associated logos are trademarks or registered trademarks of Actel Corporation. All other trademarks and service marks are the property of their respective owners.

Table of Contents

	Introduction	5
	Kit Contents	6
	Fusion Advanced Development Kit Web Resources	6
	Mixed-Signal Power Manager Demonstration	6
	Board Description	8
1	Installation and Settings	11
	Software Installation	11
	Hardware Installation	11
	Jumper and Switch Settings	11
	Testing the Hardware	14
2	Hardware Components	15
	FPGA Description and Connections	15
	Power Sources	16
	Mixed-Signal Power Management	17
	Board Components for Power Management	18
	Components Descriptions and Connections	22
	Low-Cost Programming Stick	40
A	Pin List	43
B	FADK Board Stack-Up	51
C	Manufacturing Test	55
	M1AFS-ADV-DEV-KIT Board Testing Procedures	55
	Installing the M1AFS-ADV-DEV-KIT Board USB Serial Driver	55
	Hooking up the Board and Programming Stick	55
	Hooking Up the Board and Ethernet Cable	56
	Programming the Board	57
	Setting Up the Test Terminal	60
	Running the M1AFS-ADV-DEV-KIT Board Test	66
	M1AFS-ADV-DEV-KIT Board Failures	87
D	Product Support	89
	Actel Customer Technical Support Center	89
	Actel Technical Support	89
	Website	89
	Contacting the Customer Technical Support Center	89
	Index	91

Introduction

The RoHS-compliant Fusion Advanced Development Kit (FADK) helps designers in developing applications that involve one or more of the following:

- Power sequencing
- System management
- Embedded ARM[®] Cortex[™]-M1-based systems

The board also provides a standard 40-pin mixed-signal header for interfacing to the analog pins. This provides access for plugging in a daughter board with mixed-signal interface.

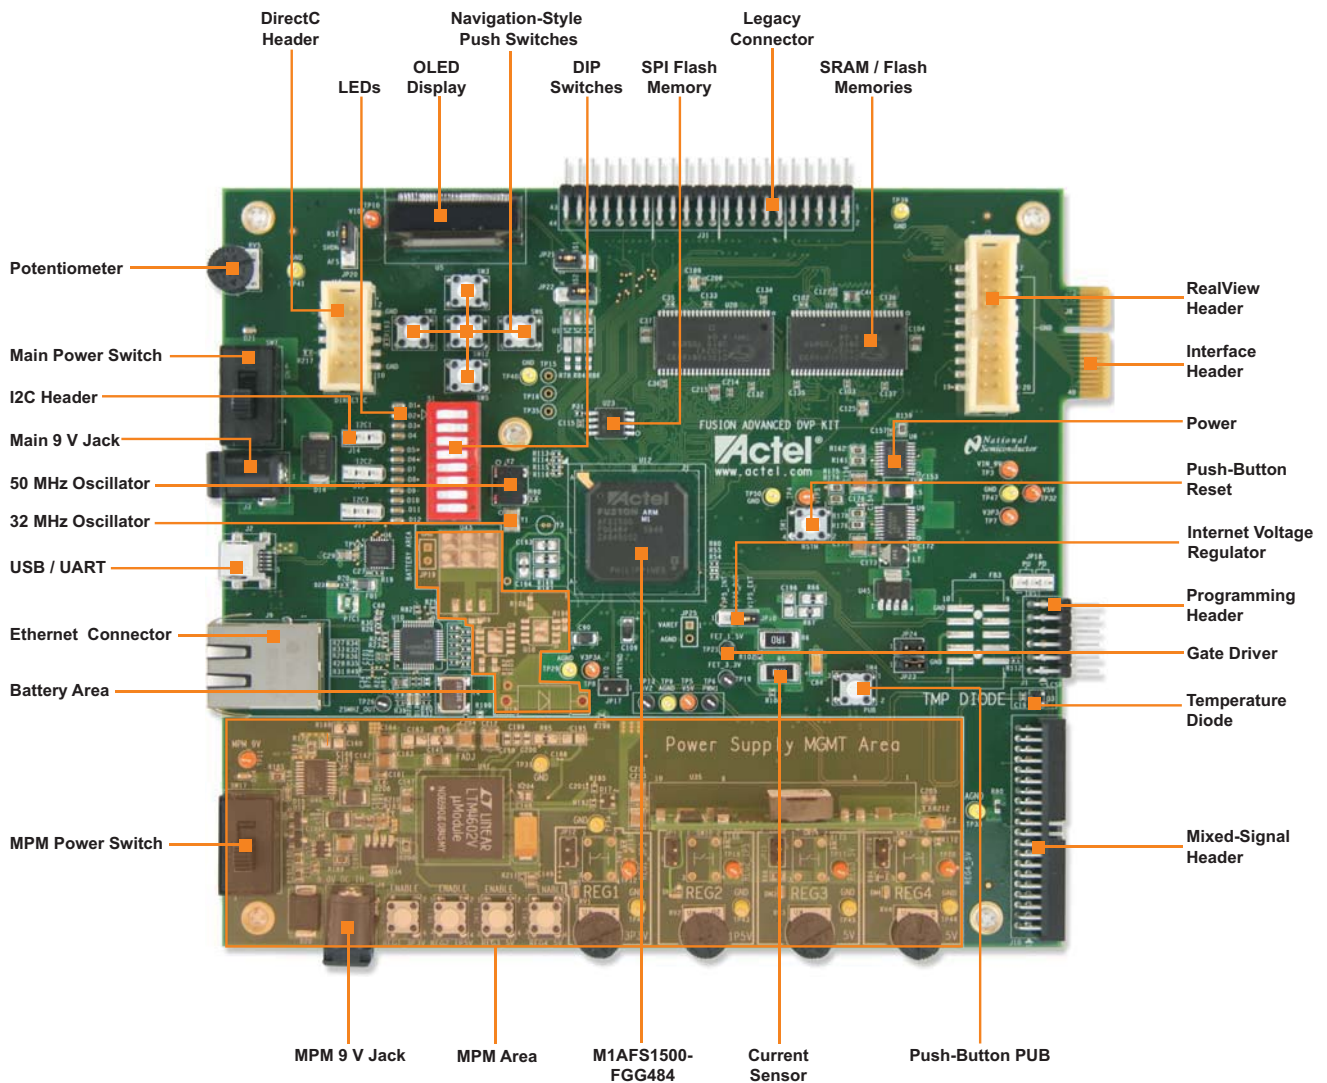


Figure 1 · Fusion Advanced Development Kit

Kit Contents

Table 1 lists the contents of the Fusion Advanced Development Kit.

Table 1 · Fusion Embedded Development Kit Contents

Quantity	Description
1	Fusion Advanced Development Kit board with ARM Cortex-M1-enabled M1AFS1500-FGG484
1	FlashPro3-compatible low-cost programming stick (LCPS)
2	Mini universal serial bus (USB) cables
1	Quickstart card

*Note: M1FAS-ADV-DEV-KIT does not include power supplies, so for this kit you must also order two of the 9V POWER PACKS.
M1AFS-ADV-DEV-KIT-PWR includes the two power packs.*

Fusion Advanced Development Kit Web Resources

For further kit information, including user's guides, tutorials, and full design examples, refer to the Fusion Advanced Development Kit page: www.actel.com/products/hardware/devkits_boards/fusion_adv.aspx.

Resources include:

- Actel Libero® Integrated Design Environment (IDE) v8.5 User's Guide
- FlashPro v8.5 User's Guide
- Mixed-Signal Power Manager User's Guide
- ARM Cortex-M1 Embedded Processor Hardware Development Tutorial
- ARM Cortex-M1 Embedded Processor Software Development Tutorial
- Core8051s Embedded Processor Hardware Development Tutorial
- Core8051s Embedded Processor Software Development Tutorial

Mixed-Signal Power Manager Demonstration

The Mixed-Signal Power Manager demonstrator is a reference design targeted to the Fusion Advanced Development Kit that delivers superior power monitoring, power sequencing, and threshold control of up to 16 power regulators. Users can configure power management sequencing, levels, or thresholds using an easy-to-use standalone graphical user interface (GUI) tool, which also enables the user to program the MPM design into the Fusion device. Designers using MPM will be able to replace discrete power management devices, add more flexibility by leveraging Fusion's reprogrammable flash FPGA technology, and reduce total parts count at the board level. MPM will deliver highly-configurable, integrated power management using one high-reliability low-power flash-based Fusion mixed-signal FPGA. The MPM user's guide and zip file are available from the Fusion Advanced Development Kit page..

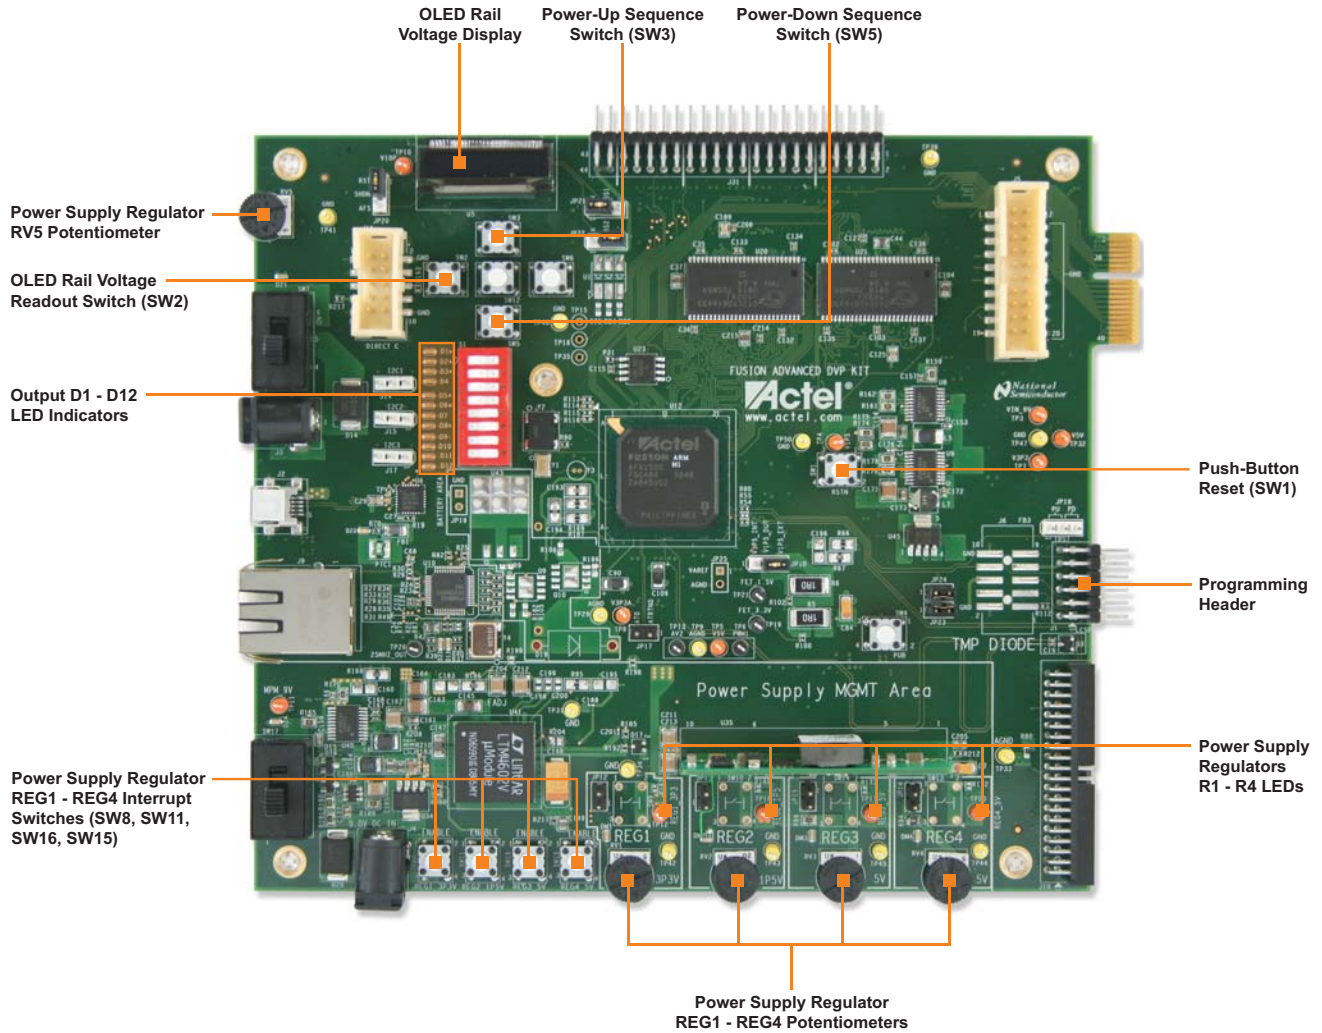


Figure 2 · Fusion Advanced Development Kit Board for Mixed-Signal Power Manager

Board Description

The Fusion Advanced Development Kit board provides a low-cost board for the system management platform, using the Fusion FPGA's advanced features, such as mixed-signal analog and embedded processor.

The board also provides a mixed-signal power management (MPM) circuitry that can be used for sequencing and management. You can use the MPM for power management as it is done in application-specific standard products (ASSPs). The MPM tool enables you to configure each of the available voltage channels, without the need to explore details of the FPGA part on the board.

The evaluation board supports a Cortex-M1 embedded processor on a Fusion device in the FGG484 package. To enable embedded system management the evaluation board includes the following:

- Ethernet and USB-to-UART interface for communication with the Fusion FPGA
- SRAM, parallel flash, and SPI flash
- I2C interface, organic light-emitting diode (OLED)
- Temperature diode, potentiometer, and pulse-width modulation (PWM) circuit
- Mixed-signal header for several daughter boards to be attached for extended mixed-signal applications

The board includes a programming stick header so the LCPS can be attached to the board for programming.

[Table 2](#) describes the Fusion Advanced Development Kit board components.

Table 2 · Fusion Advanced Development Kit Board Components

Name	Description
M1AFS1500-FGG484	Actel Fusion mixed-signal FPGA
PWM CIRCUIT	PWM circuit
POT CIRCUIT	Potentiometer connected to the analog pin of the Fusion device
CURRENT SENSING	Two circuits for 1.5 V and 3.3 V current monitoring
TEMP MONITOR DIODE	External temperature diode connected to the Fusion device
GATE DRIVER	Two external p-channel MOSFET
OSC-50	50 MHz clock oscillator
OSC-32	32.768 KHz off-chip crystal oscillator
PUSH-BUTTON RESET	System reset with Schmitt trigger
LEDS	12-RED (4 more in production boards)
DIPSWITCH	8 signals
PUSHSWITCH	7 signals
I2C HEADER	3 ports for I2C interface
OLED DISPLAY	Organic LED display, 96×16 pixels
INTERFACE CONNECTOR	38-pin finger header
RVI HEADER	RealView interface header for M1 debugging
ETHERNET	10/100 interface
USB/UART	USB/UART adapter chip and connector
BATTERY (not populated)	On-board battery slot for charging

Table 2 · Fusion Advanced Development Kit Board Components (continued)

Name	Description
SRAM	4 MB (2 × 1M × 16) Cypress® CY7C1061DV33-10ZSXI
FLASH	64 Mbit parallel flash memory (2 × 1M × 16) Numonyx® JS28F640J3D-75
SPI FLASH	SPI-based flash device 2 MB Atmel® AT45DB161D-SU
PROG HDR	DirectC programming header
MIXED_CONN40	Mixed-signal header
LC_JTAG	Low-cost programming stick

Table 3 describes the Mixed-Signal Power Manager board components.

Table 3 · Mixed-Signal Power Manager Board Components

Component	Description
MPM_REG1_3P3	3.3 V regulated supply, National® LM3100MH
MPM_REG2_1P5	1.5 V regulated supply, National LP38693-ADJ
MPM_REG3_5V	5 V regulated supply 1, Lineage Power® ATA010A0X43
MPM_REG4_5V	5 V regulated supply 2, Linear Technology® LTM 4602
RV1, RV2, RV3, RV4	POT to vary the voltage o/p of the regulator
SW8, SW11, SW15, SW16	Switch to enable/disable MPM voltage regulators

Installation and Settings

Software Installation

Download and install the latest release of Libero IDE from the Actel website and register for your free Gold license. For instructions on how to install Libero IDE and SoftConsole, refer to the *Libero IDE Installation and Licensing Guide*, available on the Actel website: www.actel.com/documents/install_ug.pdf.

Hardware Installation

The FlashPro3 programmer is built into the low-cost programming stick (LCPS) and plugs directly into the FADK board. The USB 2.0 high-speed cable plugs into the LCPS to allow the M1AFS1500 device to be programmed.

Jumper and Switch Settings

Recommended default jumper settings are defined in [Table 1-1](#) and [Table 1-2](#) on page 12. Connect the jumpers with the default settings to enable the pre-programmed demonstration design to function correctly.

Table 1-1 · Fusion Advanced Development Kit Jumper Settings

Jumper	Function	Default Setting
JP10	Jumper to select either 1.5 V external regulator or Fusion 1.5 V internal regulator. Pin 1–2 = 1.5 V internal Pin 3–2 = 1.5 V external	Pin 3–2
JP17	Analog temperature out (AT0) to analog temperature return (ATRNT0)	Header to external temperature monitor diode
JP18	Jumper to select TRST High or Low. Pin 1–2 = High (V3P3_AFS) Pin 2–3 = Low (GND)	Pin 2–3
JP20	Power sequencing for 10 V rail 1–2: Use a reset chip to provide 100 ms delay on the 10 V rail 2–3: Use Fusion gate drivers to provide 100 ms delay on the 10 V rail	Pin 1–2
JP21	OLED_BS1 1–2: V3P3 2–3: GND	Pin 1–2
JP22	OLED_BS1 1–2: V3P3 2–3: GND	Pin 2–3
JP23	V _{JTAG} to V3P3_AFS	Pin 1–2
JP24	V _{PUMP} to V3P3_AFS	Pin 1–2

Table 1-2 · Mixed-Signal Power Manager Jumper Settings

Jumper	Function	Default Setting
JP12	Jumper from FB (feedback voltage) pin of 3.3 V regulator to Fusion for voltage trimming	Closed
JP13	Jumper from ADJ (adjust voltage) pin of 1.5 V regulator to Fusion for voltage trimming	Closed
JP14	Jumper from Voset (voltage) pin of 5 V DC-DC regulator to Fusion for voltage trimming	Closed
JP15	Jumper from Trim (voltage) pin of 5 V DC-DC convertor output to Fusion for voltage trimming	Closed

Table 1-3 and Table 1-4 describe the Fusion Development Kit and Mixed-Signal Power Manager push-button switches.

Table 1-3 · Fusion Advanced Development Kit Push-Button Switches

Push-Button Switch	Comment
SW1	System reset for DUT
SW4	Push-button switch for PUB. This negative active switch is connected to the PUB pin, which is a digital input to the Fusion FPGA. PUB is the connection for the external momentary switch used to turn on the 1.5 V voltage regulator 3.
SW7	Switch ON 9 V DC into Fusion supply regulators
SW2	Test and navigation switch
SW3	Test and navigation switch
SW5	Test and navigation switch
SW6	Test and navigation switch
SW12	Test and navigation switch

Table 1-4 · Mixed-Signal Power Manager Push-Button Switches

Push-Button Switch	Comment
SW17	Switch ON 9 V DC into MPM
SW8	Push-button to disable 3.3 V supply regulator
SW11	Push-button to disable 1.5 V supply regulator
SW16	Push-button to disable 5 V supply regulator
SW15	Push-button to disable 5 V supply regulator

CAUTION: The push-buttons SW8, SW11, SW15, and SW16 ground the enable pin of the corresponding regulator, thereby injecting failure in the power subsystem. However, this enable pin is also connected to the pin on the Fusion FPGA (MPM_REG1_EN, MPM_REG2_EN, MPM_REG3_EN, MPM_REG4_EN). The FPGA would be damaged if it were driven High on the enable line and grounded at the same time. To avoid this, Actel recommends that the FPGA pin driving these enable pins is set to Low or tristate.

Table 1-5 and Table 1-6 describe the Fusion Advanced Development Kit and Mixed-Signal Power Manager test points.

Table 1-5 · Fusion Advanced Development Kit Test Points

Test Point	Comment
TP3	9 V input
TP4	1.5 V supply rail
TP7	3.3 V supply rail
TP8	3.3 V supply AFS
TP10	10 V rail for OLED
TP19	3.3 V voltage and current sensing circuit
TP21	1.5 V voltage and current sending circuit
TP39, TP40, TP41, TP47, TP50	GND
TP29, T33	Analog ground
TP32	5 V supply
TP5	5 V supply
TP6	PWM1
TP9	AGND
TP13	AV2

Note: Test points TP13 (AV), TP9 (AGND), TP5 (V5V), and TP6 (PWM1) provide the capability of hooking up any external Power Regulator Evaluation Board with an input voltage of 5 V. The Fusion FPGA can be used for voltage monitoring and trimming on this board.

Table 1-6 · Mixed-Signal Power Manager Test Points

Test Point	Comment
TP11	9 V supply for MPM
TP12	3.3 V supply (regulated supply 1)
TP18	1.5 V supply (regulated supply 2)
TP17	5 V supply (regulated supply 3)
TP20	5 V supply (regulated supply 4)
TP31, TP34, TP42, TP 43, TP 44, TP45	MPM GND

Testing the Hardware

If the board is shipped directly from Actel, it contains a test program that determines whether the board works properly.

If while using the board you suspect that the board is damaged, you can rerun the “[Manufacturing Test](#)” on page 55 to verify the key components of the board functionality .

Hardware Components

FPGA Description and Connections

The Fusion Advanced Development Kit board is populated with an M1-enabled Fusion M1AFS1500 FPGA. The key features of the M1AFS1500 device are listed below:

- High-performance reprogrammable flash technology
- Embedded flash memory
- Integrated A/D converter (ADC) and Analog Quad
- On-chip clocking resources
- Low power consumption
- In-system programming (ISP) and security
- Advanced digital I/Os
- SRAMs and FIFOs

Table 2-1 describes the key features of the M1AFS1500 device.

Table 2-1 · M1AFS1500 Key Features

Feature	Description
System Gates	1,500,000
Tiles (D-flip-flop)	3,840
Secure (AES) ISP	Yes
PLLs	2
Global Routing Resources	18
Total Flash Memory Bits	8 M (2-Mbit blocks x 4)
FlashROM Bits	1 k
RAM Blocks (4,608 bits)	60
RAM kbits	270
Analog Quads	10
Analog Input Channels	30
Gate Driver Outputs	10
I/O Banks (+JTAG)	5
Maximum Digital I/Os	252
Analog I/Os	40

For additional information about Fusion, refer to the *Fusion Datasheet* and *Fusion FPGA Fabric User's Guide*.

I/O Pins Connection on M1AFS1500-FGG484

The M1AFS1500-FGG484 pin list is provided in the "Pin List" on page 43.

Fusion FPGA Advanced Microprocessor

Actel offers several microprocessor and microcontroller solutions for developers, all of which are tightly integrated with Actel Libero IDE, optimized for Actel FPGA architecture, and supplied with a complete toolset for code compile and debug.

The Fusion Advanced Development Kit board contains a Fusion M1AFS1500 FPGA device, which is Cortex-M1-enabled. Cortex-M1 is the first ARM processor developed specifically for implementation in FPGAs. In addition to Cortex M1, this Fusion FPGA can be programmed with Core8051(s) or CoreABC.

A few components are populated on the Embedded Development Kit board for basic Cortex-M1 development. These components include SRAM, SPI-based flash, ethernet interface, USB-to-UART bridge, OLED, EEPROM, and I2C interfaces. To integrate these components into a complete solution, Actel supplies a full range of subsystem IP cores: memory controllers, timers, mailbox, serial interface controllers, and others. These subsystem IP can connect to the embedded processor via the advanced microcontroller bus architecture (AMBA) bus.

Refer to Actel's IP catalog for additional information on available IPs for Fusion M1-enabled embedded processors: www.actel.com/products/ip/default.aspx.

Power Sources

There are two separate external 9 V power supply bricks: one for the Fusion FPGA part of the board and other for the MPM part of the circuitry. If you are not using MPM, you will need only one 9 V power supply brick.

Fusion FPGA Power Sources

Three voltage rails (10 V, 3.3 V, and 1.5 V) are provided on the board through the 24 V tolerant regulators:

- A single regulator, National 3102MH (3.3 V, 1.25 A), supplies both analog and digital 3.3 V going to the Fusion device. Sufficient isolation is provided through low-pass filter and layout to prevent noise from the digital domain interfering on the analog domain.
- National LM3100 MH (1.5 V, 500 mA) supplies the 1.5 V rails.
- National LM27313 boost converter supplies 10 V, 100 mA typical, for driving OLEDs.

Note: The 10 V supply for the OLED must have power sequencing for maintaining a 100 ms delay between 3.3 V and 10 V, where 3.3 V powers up first. This can be achieved through jumper JP20 by using a National reset circuitry (LM 3722), or using M1AFS gate drivers to do the power-up sequencing.

Note: This board is not designed to power up external daughter boards. Actel recommends to run a detailed power analysis when designing for daughter boards which require to be powered up from the main board.

MPM Power Sources

This part of the circuit uses 4 voltage supply regulators:

- LDO regulator 1.5 V
- Switching regulator 3.3 V
- DC-DC regulators 5 V
- DC-DC regulators 5 V

All the regulators are supplied by one external 9 V brick.

Note: The Fusion Advanced Development Kit needs two external power supplies (9 V) for board operation; one for the Fusion device and one for the regulators in the MPM circuitry. Since MPM is using the Fusion device to monitor the multiple power rails coming out of regulators, you cannot use the same 9 V power supply to power-up the Fusion design and supply power to the input of the regulators that it is monitoring.

Mixed-Signal Power Management

This part of the circuitry consists of four sets of regulated power supplies running from a 9 V supply:

- National LDO regulator, 1.5 V
- National switching regulator, 3.3 V
- Linear DC-DC regulator, 5 V
- Artesyn DC-DC regulator, 5 V

The MPM tool can be used for these tasks:

- Monitoring voltage for all rails
- Sequencing different power rails for power-up and power-down
- Trimming and margining voltage rails in a closed loop
- Sweeping the output voltage (POT circuit to change resistor on feedback voltage)
- Inducing failures by disabling the enable input of the regulator (push-button to GND enable)

Power sequencing is done by sequentially asserting or deasserting channel enable pins for power-up and power-down, respectively, and monitoring the associated channel voltage. All Enable pins to the regulator are active High.

Note: For more information about the MPM circuit functionality and a design example for the MPM GUI, refer *Mixed-Signal Power Management Quickstart Guide*: www.actel.com/documents/MixedSignal_Power_Manager_QS.pdf.

Board Components for Power Management

3.3 V Power Supply, MPM_REG1_3P3, National LM3100MH

This regulated switching mode power supply can deliver up to 1.5 A of output current with regulated output voltage from 0.8 to 5.0 VDC, over a wide range of input voltage ($V_{IN} = 4.5\text{--}36\text{ VDC}$). Different output voltages can be set by changing the value of feedback voltage on the feedback pin (FB) using a resistor feedback divider.

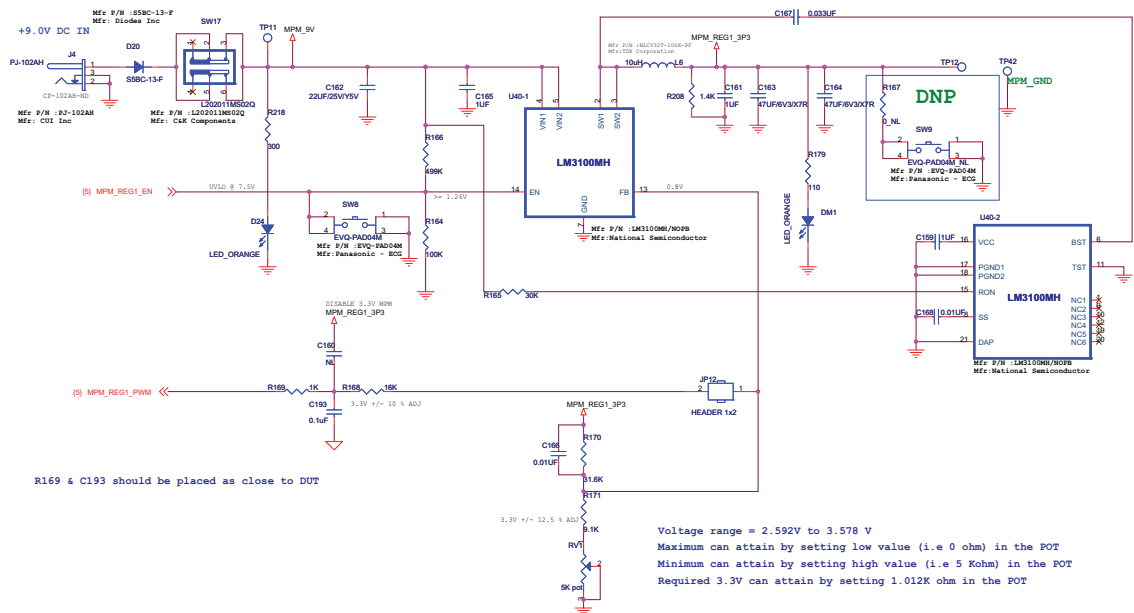


Figure 2-1 · MPM Switching Power Supply, 3.3 V

1.5 V Power Supply, MPM_REG2_1P5, National LP38693-ADJ

This is a low drop-out voltage regulator (250 mV at 500 mA with 5 V o/p) with output voltage ranging from 1.25 V to 9 V. The input has a wide range from 2.7 V to 10 V. The output voltage can be set by controlling the voltage feedback input to ADJ. Pulling the enable pin down to a logic low will turn the part off.

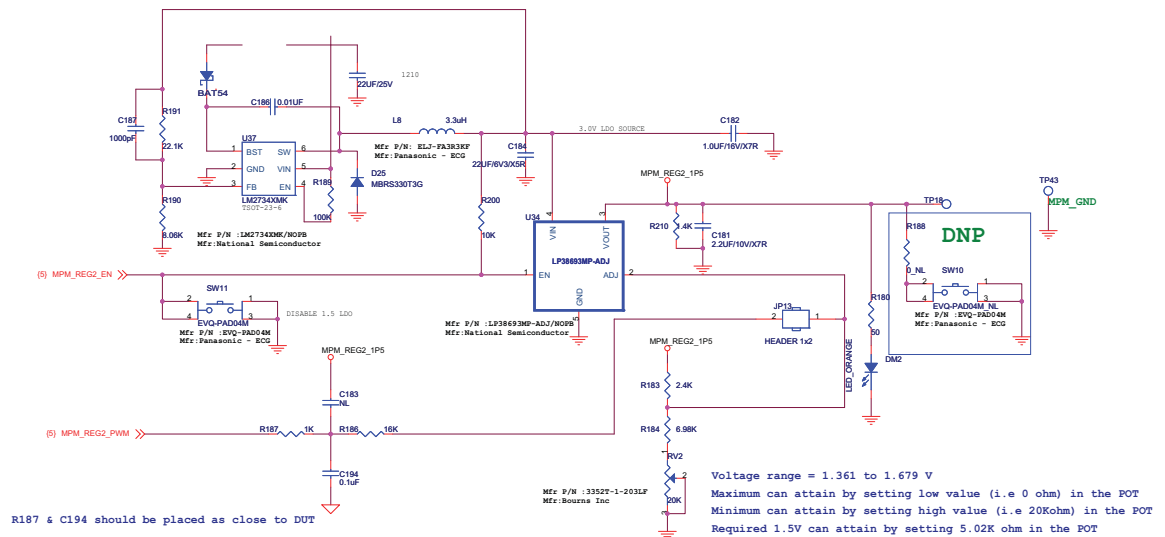


Figure 2-2 · MPM Low Drop-Out Power Supply, 1.5 V

5 V Power Supply 1, MPM_REG3_5V, Lineage Power ATA010A0X43

The 12 V single in-line package (SIP) power module can deliver up to 10 A of output current with regulated output voltage from 0.75 to 5.0 VDC, over a wide range of input voltage ($V_{IN} = 8.3\text{--}14\text{ VDC}$). The output voltage can be controlled using an external resistor between the TRIM and the GROUND pins of the module.

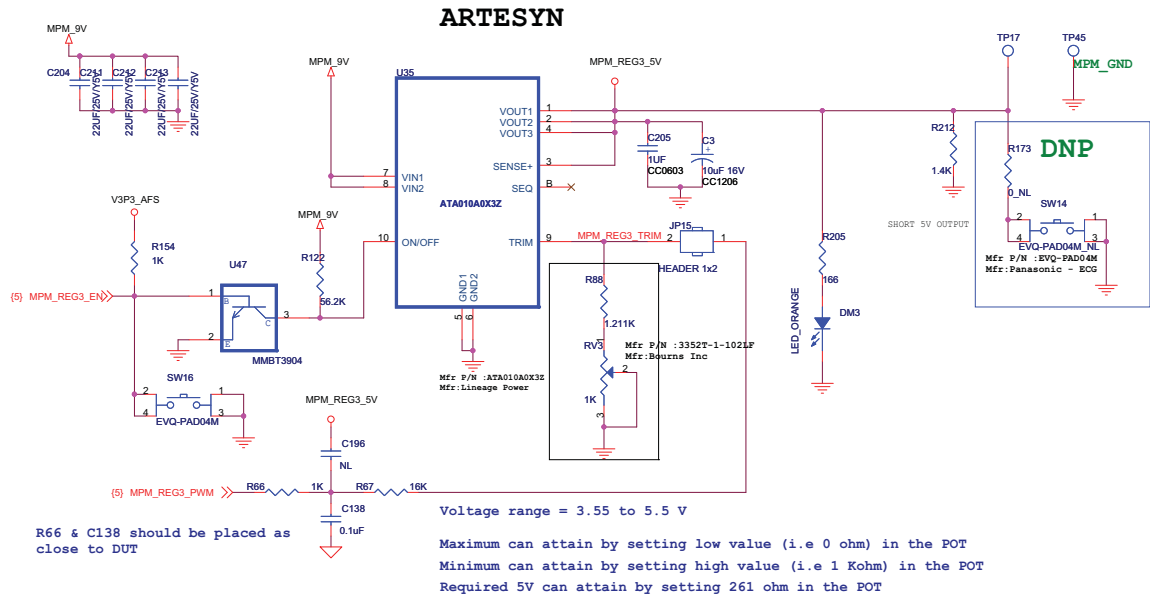


Figure 2-3 · MPM DC-DC Power Supply, 5 V

Components Descriptions and Connections

PWM Circuit

The PWM RC circuit (Figure 2-6) can be used with CorePWM instantiated in the FPGA fabric to generate various voltages waveforms. These voltage waveforms can be displayed on the OLED or used via the mixed-signal header. In addition, one PWM RC circuit source is routed to the AV input pin of an analog quad. This AV pin can be used to monitor the generated voltage with high accuracy, depending on the ADC resolution configured in the FPGA.

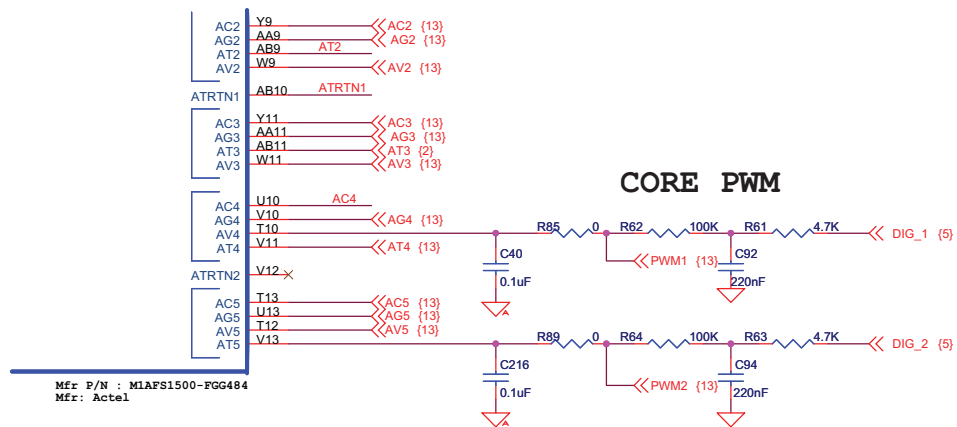


Figure 2-6 · PWM Circuit Schematic

Potentiometer Circuit

A potentiometer circuit (Figure 2-7) is provided on the Fusion Advanced Development Kit to sweep voltage. The potentiometer circuit is connected to the AC input pin, which can be used to monitor voltage. One common application is to adjust the potentiometer and measure the voltage on the AC pin.

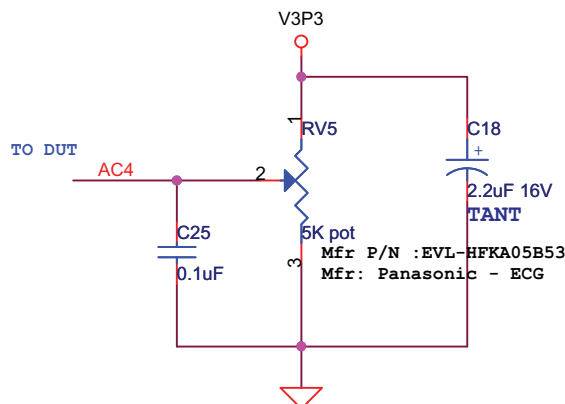


Figure 2-7 · Potentiometer Circuit Schematic

Current Sensing Circuit

For current monitor applications, two current sensing circuits are provided on the Fusion Advanced Development Kit board. One of the current sensing circuits is for the 3.3 V voltage rail (Figure 2-8) and the other is for the 1.5 V voltage rail (Figure 2-9) of the Fusion FPGA.

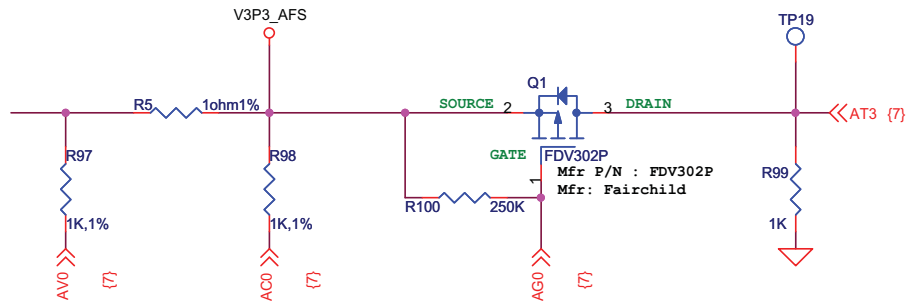


Figure 2-8 · Current Sensing Schematic (3.3 V)

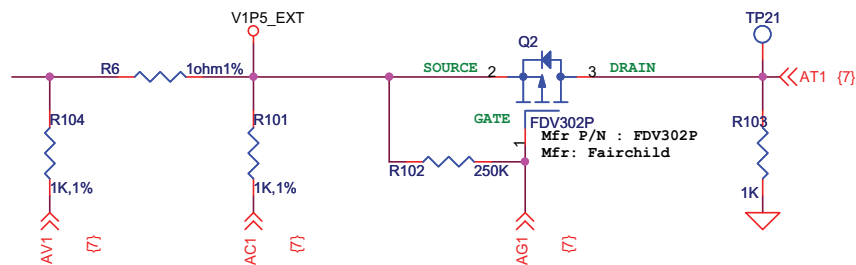


Figure 2-9 · Current Sensing Schematic (1.5 V)

Temperature Monitor Diode

One external temperature diode (Figure 2-10) on the Fusion Advanced Development Kit board is available for temperature measurement. This temperature diode is routed to the analog temperature (AT) and AT return (ATRTN) input pins of the temperature monitor block.

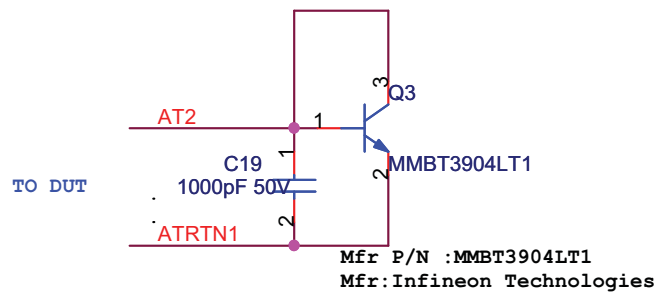


Figure 2-10 · Temperature Diode Schematic

MOSFET for the Gate Driver Block

Two external p-channel MOSFETs are populated on the board, connected to the AG pins of the Fusion Analog Quad. One MOSFET is connected on the 3.3 V voltage rail (Figure 2-11) and the other is on the 1.5 V voltage rail of the Fusion FPGA (Figure 2-12 on page 24). The output of these MOSFETs goes to the AT pads, which can be set to monitor voltage. These MOSFETs can be used for a variety of voltage sequencing applications.

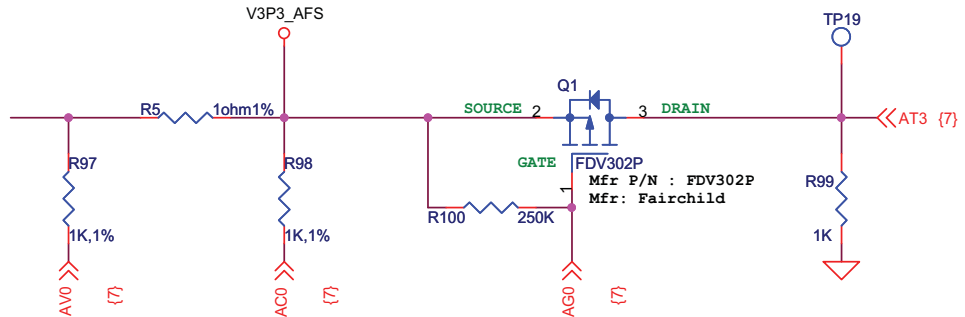


Figure 2-11 · MOSFET Schematic (3.3 V)

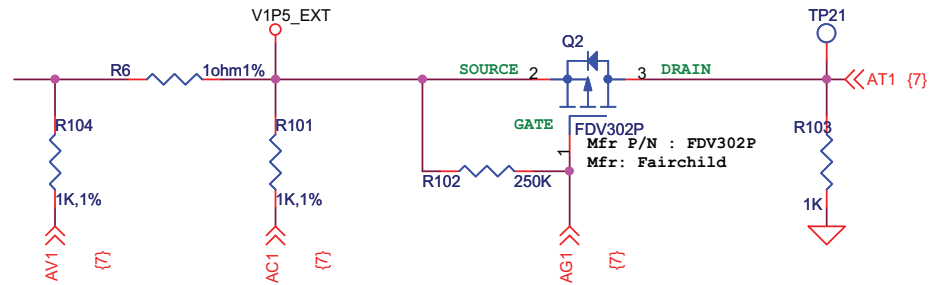


Figure 2-12 · MOSFET Schematic (1.5 V)

Clock Oscillator

A 50 MHz clock oscillator with 50 ppm is available on the board (Figure 2-13). This clock oscillator is connected to the FPGA to provide a system or reference clock. An on-chip Fusion PLL can be configured and instantiated in the FPGA to generate a wide range of high-precision clock frequencies.

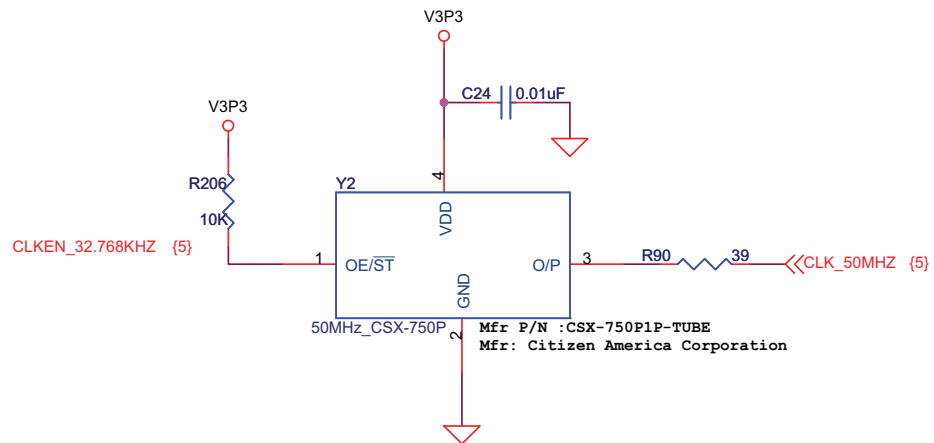


Figure 2-13 · Clock Oscillator Schematic

Crystal Oscillator

A 32.768 KHz off-chip crystal oscillator with 50 ppm is populated on the board. The off-chip crystal oscillator is connected to the digital XTAL1 and XTAL2 (on-chip crystal oscillator) inputs of the Fusion FPGA. The on-chip crystal oscillator circuit works with the low frequency the off-chip crystal to generate a high-precision clock. It has an accuracy of 100 ppm (0.01%) and is capable of providing system clocks for Fusion peripherals and other system clock networks, both on-chip and off-chip. When combined with the Fusion on-chip CCC/PLL blocks, a wide range of clock frequencies can be created to support various design requirements. In addition, a Fusion programmable real-time counter (RTC), clocked by the on-chip crystal oscillator, provides power sequencing and voltage regulator control. Refer to the *Fusion FPGA Fabric User's Guide* for additional details on these clocking resources.

A sample clocking option utilizing the on- and off-chip crystal oscillator for a Fusion FPGA is shown in [Figure 2-14](#).

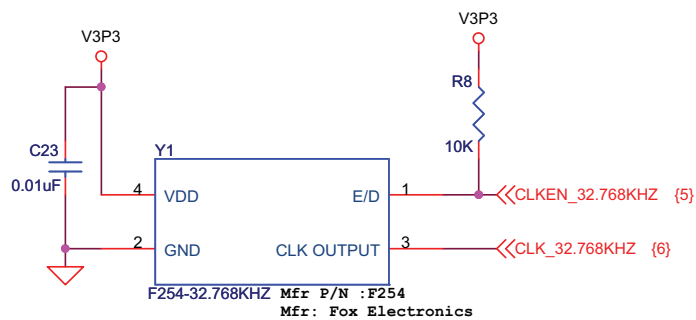


Figure 2-14 · Fusion Clock Options

[Figure 2-15](#) shows the schematic for the 25 MHz off-chip crystal oscillator.

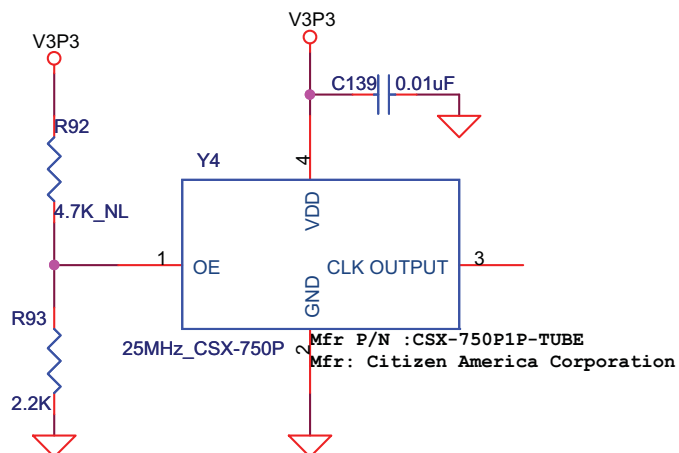


Figure 2-15 · 25 MHz Off-Chip Crystal Oscillator Schematic

Push-Button System Reset

A push-button system reset switch with a Schmitt trigger is provided on the board (Figure 2-16). The Schmitt trigger reduces noise on the system reset push-button.

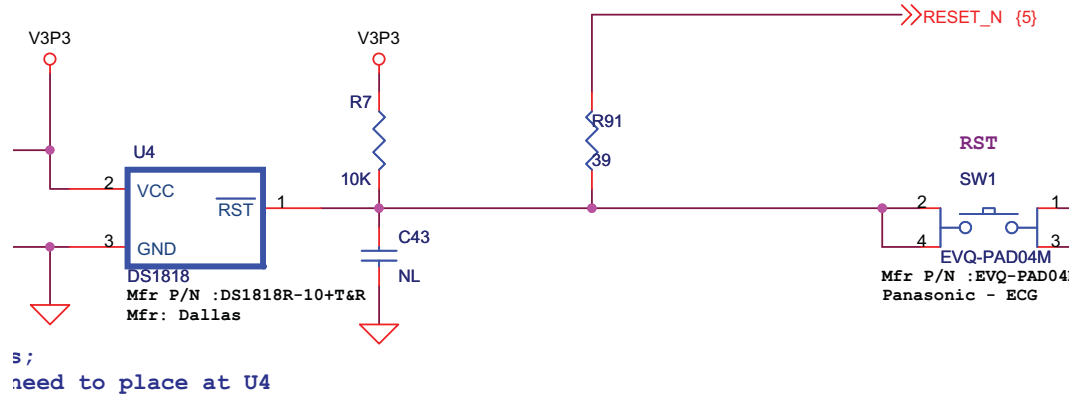


Figure 2-16 · Push-Button System Reset Schematic

Push-Button Switches and User LEDs

Push-button switches and user LEDs can also be used for debug and for various applications, such as gaming ((Figure 2-17 and Figure 2-18).

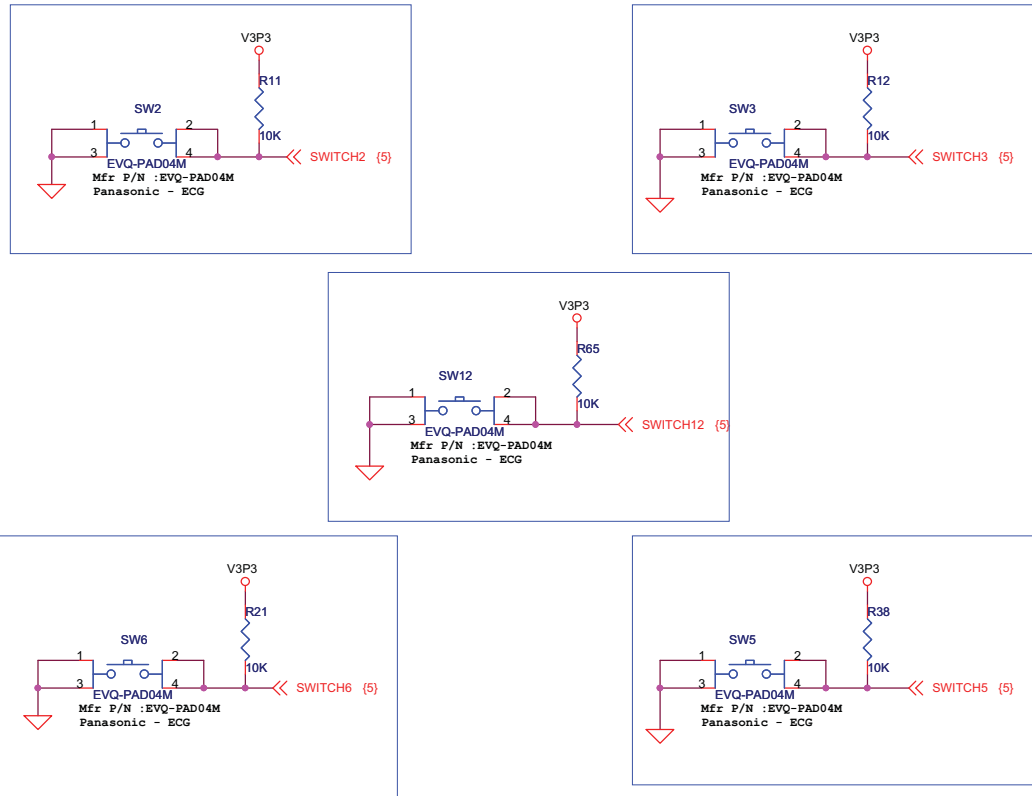


Figure 2-17 · Test and Navigation Switches

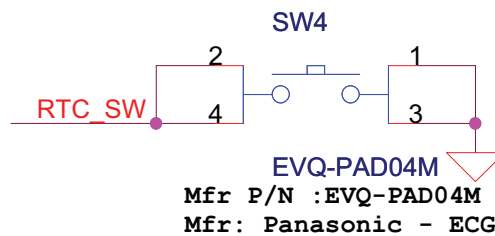


Figure 2-18 · Push-Button Switch for PUB

The FADK also contains a 8-position DIP switch bank (Figure 2-19) and a 12-LED module (Figure 2-20 on page 29) for general purpose use. All signals are connected to the FPGA. The LEDs and switches are active High and the switches have 10-K pull-down resistors. You can also utilize any unused debug pins available.

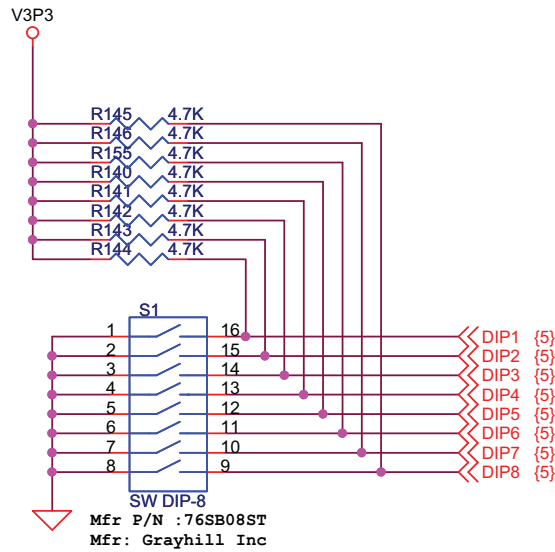


Figure 2-19 · DIP Switch Schematic

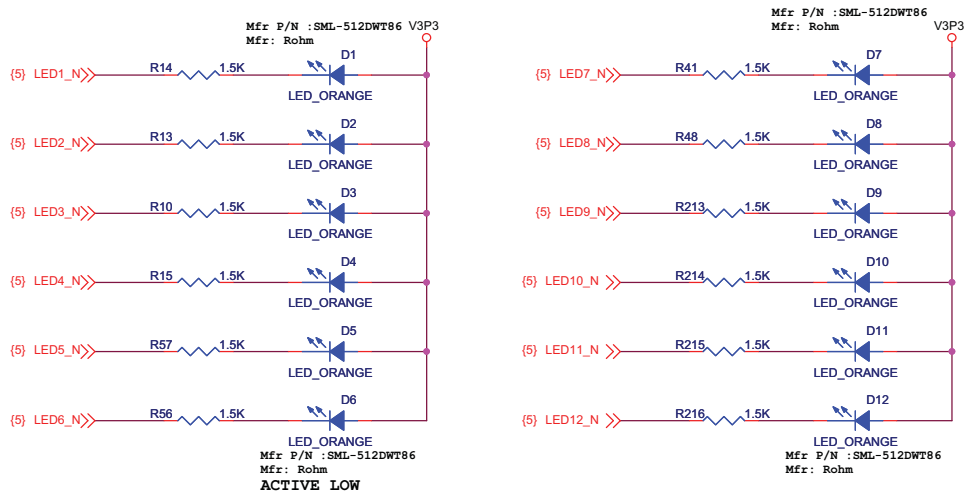


Figure 2-20 · LEDs Schematic

I2C Interface

Three inter-integrated circuit (I2C) headers with pull-up resistors—J14, J15, and J17 (Figure 2-21)—are provided on-board to showcase the I2C capabilities of this development kit. These standard I2C interface signals are directly connected to the Fusion FPGA and can extend the capabilities of this embedded system.

Any standard I2C controller can be implemented or instantiated in the Fusion FPGA to allow communication with the I2C interface. In addition, the Actel IP catalog includes various programmable I2C controllers, specifically CoreI2C, with an APB interface that can be instantiated in the FPGA design with a Cortex-M1 embedded processor. The CoreI2C controller supports both Master and Slave modes with configurable parameters for various applications. The board is populated with an OLED display with I2C interfaces so you can evaluate the ability of the M1-enabled Fusion advanced system to communicate with an I2C device on this development kit.

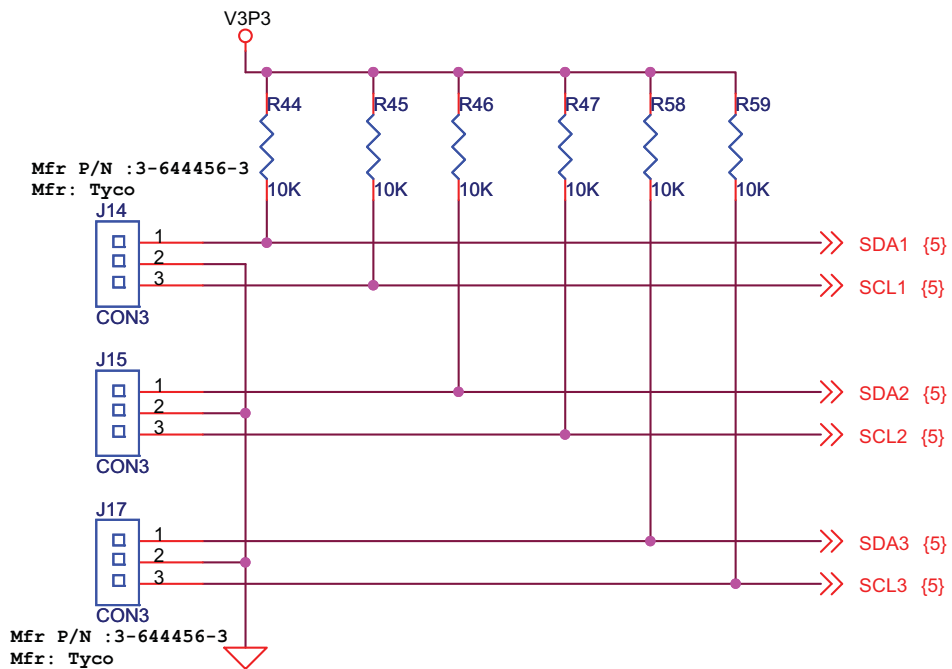


Figure 2-21 · I2C Interface Schematic

OLED Display

A 96×16-pixel low-power OLED is available on the board for display. This low-power device, BLUE OLED, requires 3.3 V and 10 V power supplies. By default, the OLED supports the I2C, but it can also support an SPI Interface.

Table 2-2 shows the configuration table for the I2C and the SPI interfaces. The OLED displays sharp gaming images or text. For example, the Fusion FPGA RTC current time or time between two events can be displayed on the OLED.

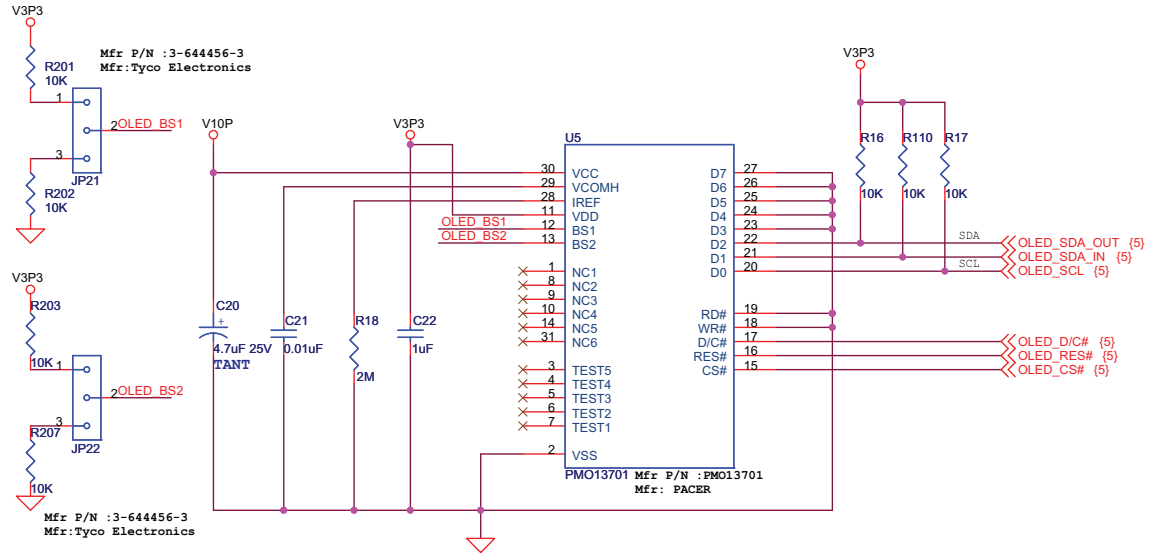


Figure 2-22 · OLED Display Schematic

The default connection for JP21 and JP22 is 1–2.

Table 2-2 · OLED Configuration Table

	I2C Interface	SPI Interface
BS1	1	0
BS2	0	0

Interface Connector

A standard interface connector on the board can be used to extend this development kit to connect with additional daughter cards, some of which are developed by partners and third party vendors (Figure 2-23). The interface possibilities are numerous, such as flash and SRAM memory interfaces, keyboard (HMI) interfaces, LCD interfaces, and motor control interfaces.

CAUTION: I/Os on this connector are shared between this connector and the 44-pin legacy connector. Only one daughter board can be connected at a time.

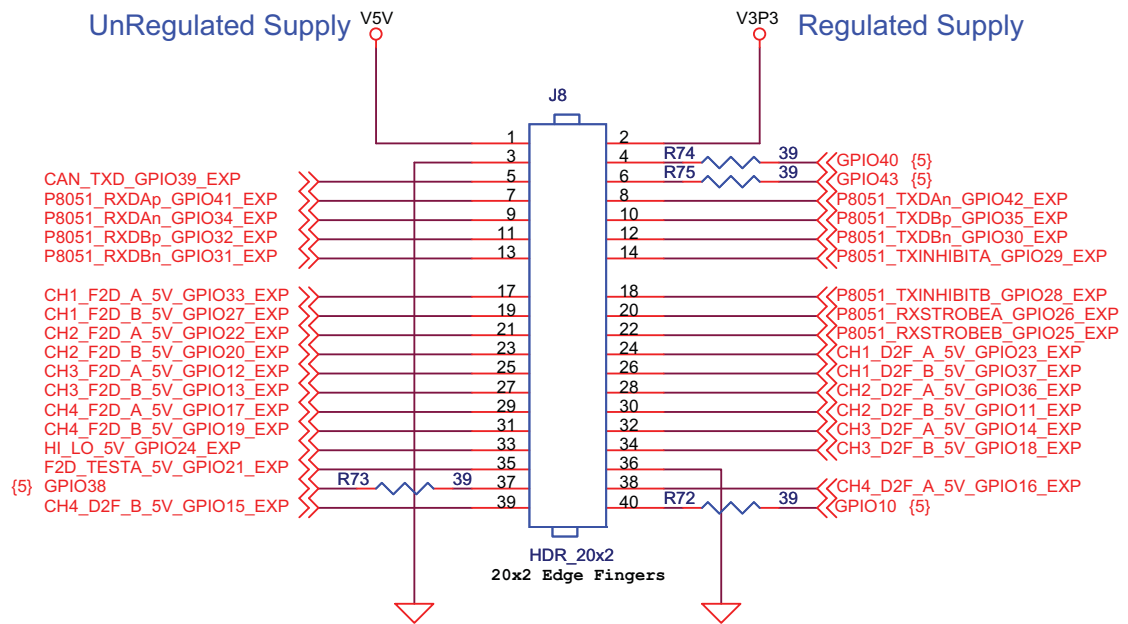


Figure 2-23 · Interface Connector Schematic

Note: Mating Connector – Mating Connector Part Number: MEC1-120-02-F-S-EM2 (Manufacturer: Samtec)
Pin No:15 & 16 Should be NC For Mating Connector Polarized Pins

LAYOUT NOTE: R72, R73, R74, R75 SHOULD BE PLACED NEAR THE DUT

Note: To design new interfaces on this connector, run a complete power analysis of your design to check for the available power budget.

RealView Header

One 10×2 RealView Header is provided on the board for debugging (Figure 2-24). This header allows RealView software development tools to easily debug or configure the embedded Cortex-M1 processor during board bring-up.

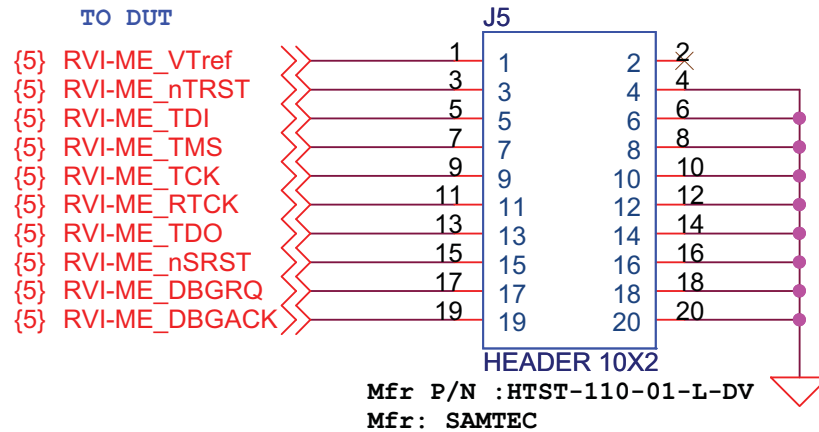


Figure 2-24 · RealView Header Schematic

Ethernet Interface

One Ethernet interface, configured for MII Full Duplex mode, and a low-power 10/100 Mbps single-port Ethernet physical layer transceiver (U10) are provided on-board (Figure 2-26 on page 34). The Ethernet physical layer features integrated sub-layers to support both 10BASE-T and 100BASE-TX Ethernet protocols. These sub-layers ensure compatibility and interoperability with many other standards-based Ethernet solutions.

Two LEDs are populated on the board for this ethernet interface. One is for speed and the other is for activity.

The Ethernet RJ45 interface and physical layer, along with an Ethernet Media Access Controller (MAC) that can be programmed onto the M1-enabled Fusion FPGA, serves many purposes. For example, this interface can be used to access the Fusion FPGA to monitor the ADC data over a network (Figure 2-25). The embedded system memory and control registers can be accessed and processed remotely to support system management. The Actel IP catalog includes a Core10100 Ethernet MAC with Host Controller.

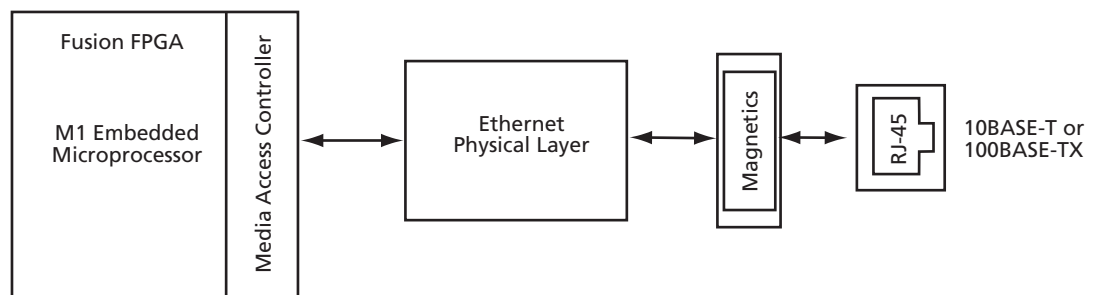


Figure 2-25 · Typical Application

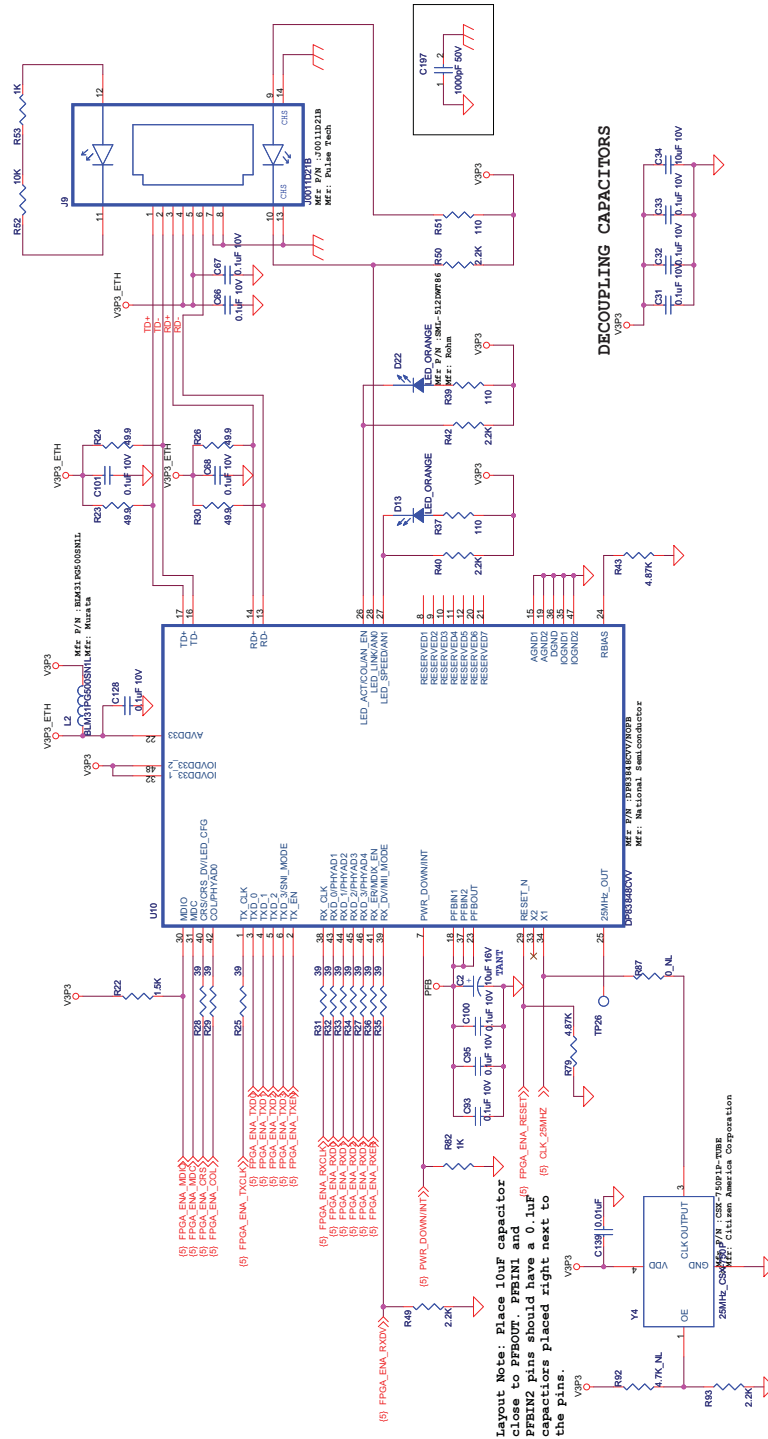


Figure 2-26 · Ethernet Interface Schematic

USB-to-UART Interface

Included on the evaluation board is a USB-to-UART interface with ESD protection (Figure 2-27). This interface includes an integrated USB-to-UART bridge controller (U6) to provide a standard UART connection with the Fusion FPGA. Any standard UART controller can be implemented in the Fusion FPGA to allow access with this interface. In addition, the Actel IP catalog includes various UART controllers, specifically CoreUARTapb, with an AMBA APB interface that can be instantiated in the FPGA with a Cortex-M1 embedded processor. The programmable CoreUARTapb controller supports both asynchronous and synchronous modes with configurable parameters for various applications.

One application of the USB-to-UART interface is to allow HyperTerminal on a PC to communicate with the Fusion FPGA. HyperTerminal is a serial communications application program that can be installed in the Windows® operating system. A basic HyperTerminal program is usually distributed with Windows. With a USB driver properly installed, and the correct COM port and communication settings selected, you can use the HyperTerminal program to communicate with a design running on the Fusion FPGA device.

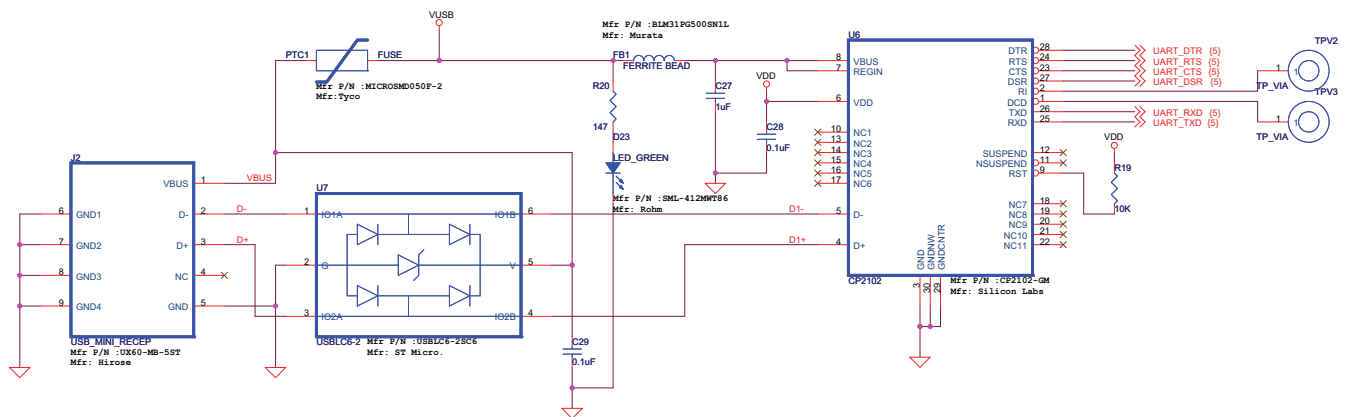


Figure 2-27 · USB-to-UART Interface Schematic

SRAM Components

Two SRAM components are provided on this M1-embedded Fusion Advanced Development Kit board, totaling 4 MBytes of memory (Figure 2-28). Each SRAM has a 16-bit data bus interface, resulting in a 32-bit data bus. In addition to the embedded Flash memory in the Fusion FPGA, these on-board SRAMs extend the memory space of the system and can be easily accessed by an embedded processor, such as Cortex-M1.

In an embedded processor system, these on-board SRAM can be accessed by a standard memory controller, such as CoreMemCtrl (available from Actel's IP catalog).

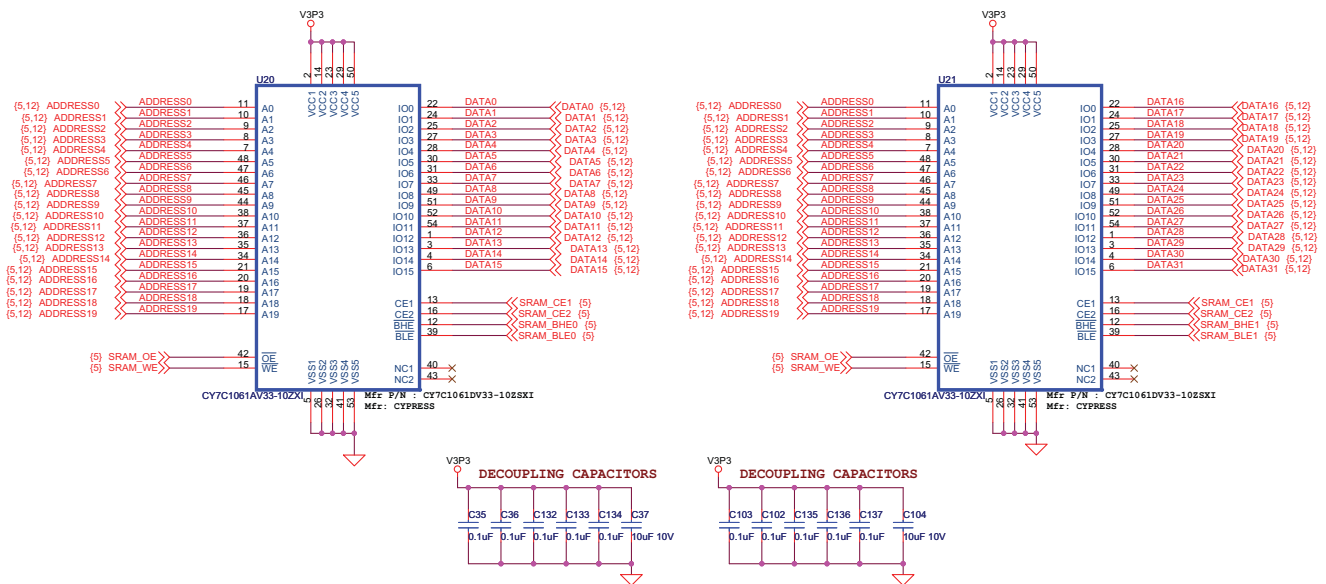


Figure 2-28 · SRAM Components Schematic

SPI Flash

One 2-MByte flash memory with SPI interface is available on the board and can be used by an embedded CoreABC or a Cortex-M1 embedded microprocessor to access additional memory off-chip (Figure 2-29). The flash interface, serial peripheral interface (SPI), is a synchronous serial data link standard. In an embedded microprocessor system, CoreSPI (available from Actel's IP catalog) can be instantiated to communicate with the SPI flash. Some advantages of the SPI interface are full duplex communication and higher throughput than I2C.

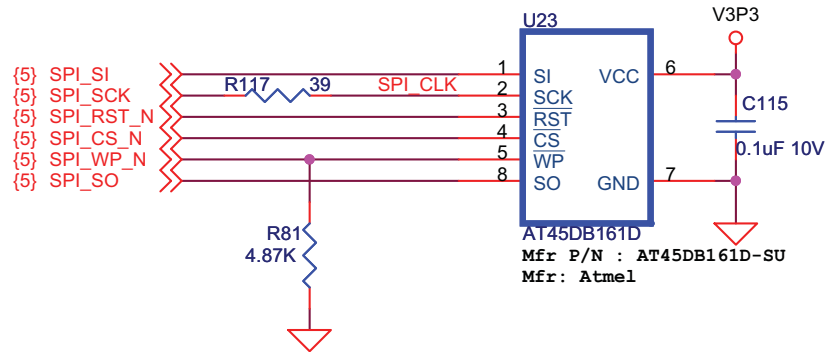


Figure 2-29 · SPI Flash Schematic

Parallel Flash

Two 32-MByte parallel flash memories are available on the board, totaling 64 MBytes of parallel flash memory. Each flash has a 16-bit data bus, resulting in a 32-bit data bus (Figure 2-30).

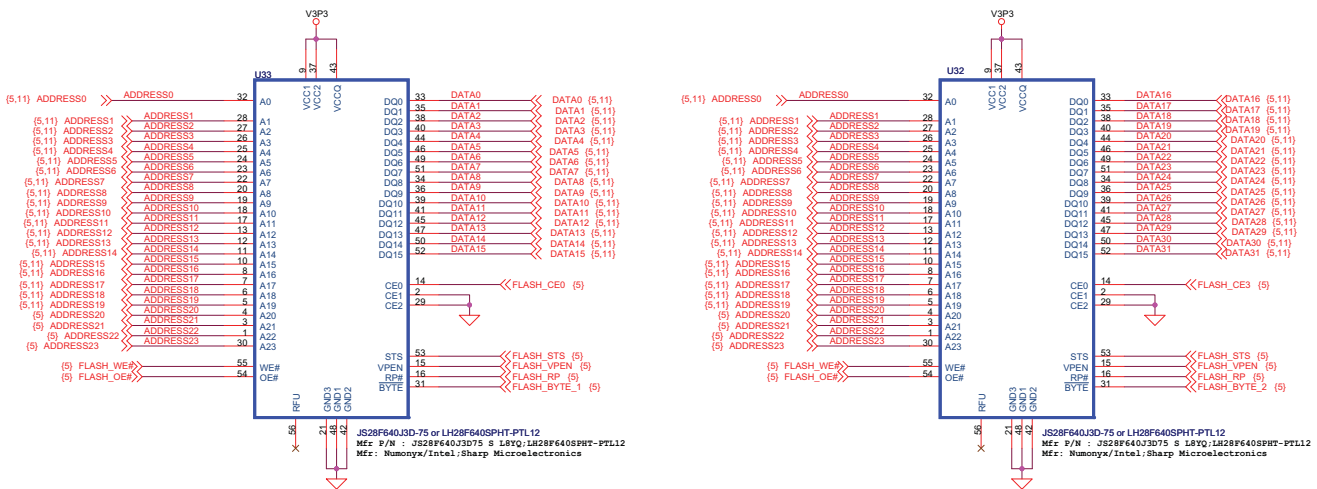


Figure 2-30 · Parallel Flash Components Schematic

DirectC Programming

There is not a ProASIC3-based FlashPro3 connector on the board; instead a standard FlashPro3 10-pin connector is provided (Figure 2-32). This interfaces with 5 GPIOs and follows same pinout as FlashPro3. This can be used to program an Actel FPGA on another board (Figure 2-31). Table 2-3 shows the configuration details for the target board.

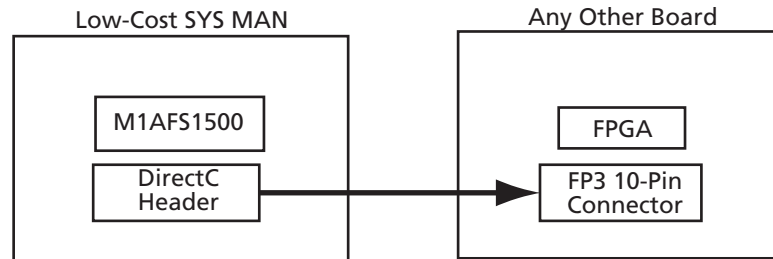


Figure 2-31 · DirectC Programming of Another Board

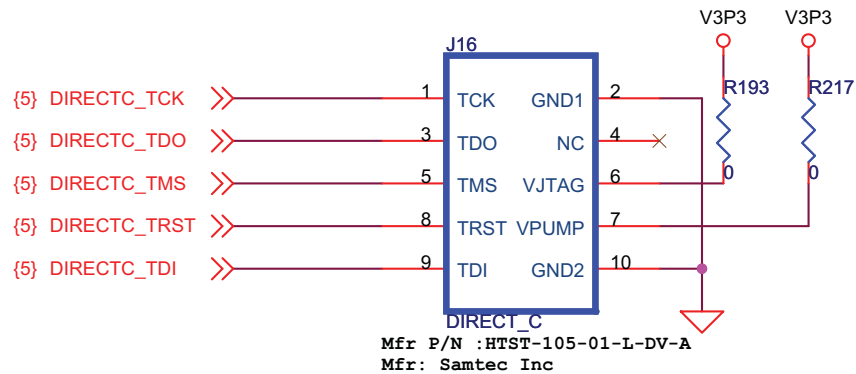


Figure 2-32 · DirectC Header Schematic

Table 2-3 · VPUMP/VJTAG Configuration on Target Board

VPUMP/VJTAG Configuration	R193	R217
Connected to 3.3 V	Do not populate	Do not populate
Not connected (powers through FP3)	Populate	Populate

Mixed-Signal Header

A range of Fusion mixed-signal pins, particularly the analog AV, AC, AG, and AT pins of the Analog Quad and GPIO I/O pins, is available on the mixed-signal header on this board (Figure 2-33.) This header can be used by various daughter boards to access the Fusion analog pins to demonstrate various applications, such as motor control, touch screen, and voltage trimming.

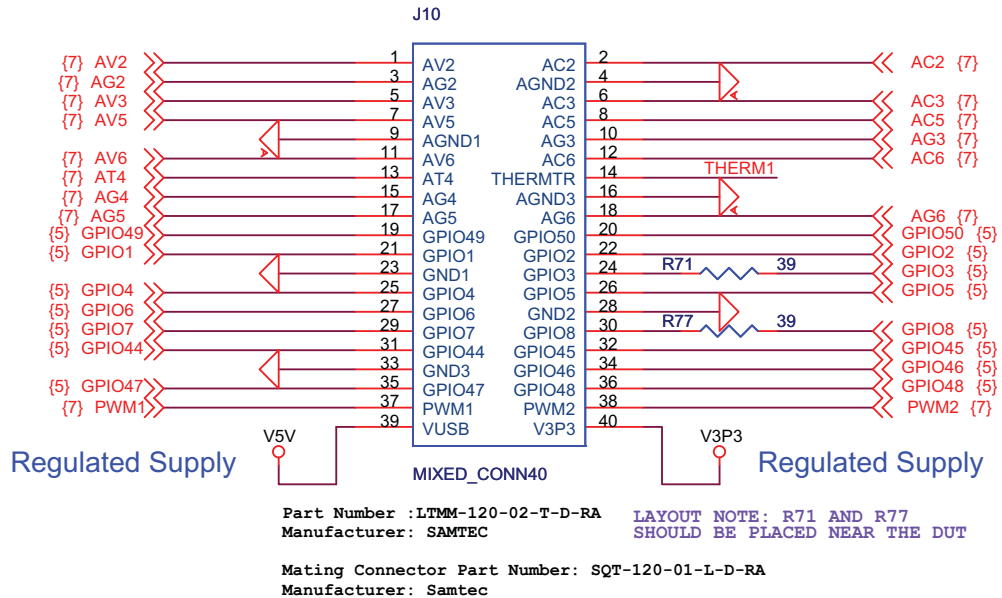


Figure 2-33 · Mixed-Signal Header Schematic

Note: To design new interfaces on this connector, run a complete power analysis of your design to check for the available power budget.

A thermistor circuit is available to use with the mixed-signal header for temperature monitor applications (Figure 2-34).

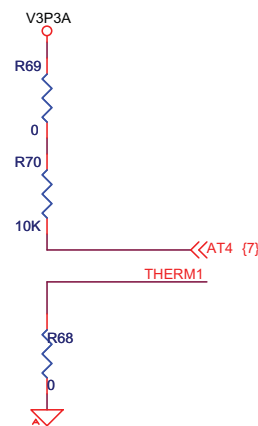


Figure 2-34 · Thermistor Schematic

Low-Cost Programming Stick

The Fusion Advanced Development Kit board can be programmed using the low-cost programming stick (LCPS). The LCPS is a special version of the FlashPro3 programming circuitry that is compatible with FlashPro3 and the generic FlashPro programming software (Figure 2-35).



Note: The LCPS supplied with this kit is intended for use with the Fusion Advanced Development Kit. An LCPS supplied for other kits, although electrically and functionally equivalent, may not connect seamlessly with the Fusion Advanced Development Kit board.

Figure 2-35 · Low-Cost Programming Stick

The LCPS, like this Fusion Advanced Development Kit board, is RoHS-compliant and is completely lead (Pb) free. To use the LCPS with the FlashPro software, select the FlashPro3 from the list of programmer types. The LCPS behaves exactly as if it were a regular encased FlashPro3 programmer. The 12-pin female connector socket is designed to interface to the 12-pin right-angle male header on the Fusion Advanced Development Kit board.

You do not need to have the LCPS connected to the Fusion Advanced Development Kit board to operate once the FPGA has been programmed. The Fusion Advanced Development Kit board requires the LCPS connected only during programming.

The LCPS programs the FPGA through the JTAG pins. Fusion devices have a separate bank for the dedicated JTAG pins. The JTAG pins can be run at any voltage from 1.5 V to 3.3 V (nominal). V_{CC} must also be powered for the JTAG state machine to operate, even if the device is in bypass mode; V_{JTAG} alone is insufficient. Both V_{JTAG} and V_{CC} to the Fusion part must be supplied to allow JTAG signals to transition the Fusion device. Isolating the JTAG power supply in a separate I/O bank gives greater flexibility with supply selection and simplifies power supply and PCB design. If the JTAG interface is neither used nor planned for use, the V_{JTAG} pin together with the TRST pin could be tied to GND.

The JTAG Header schematic is shown in Figure 2-36.

LC JTAG HEADER

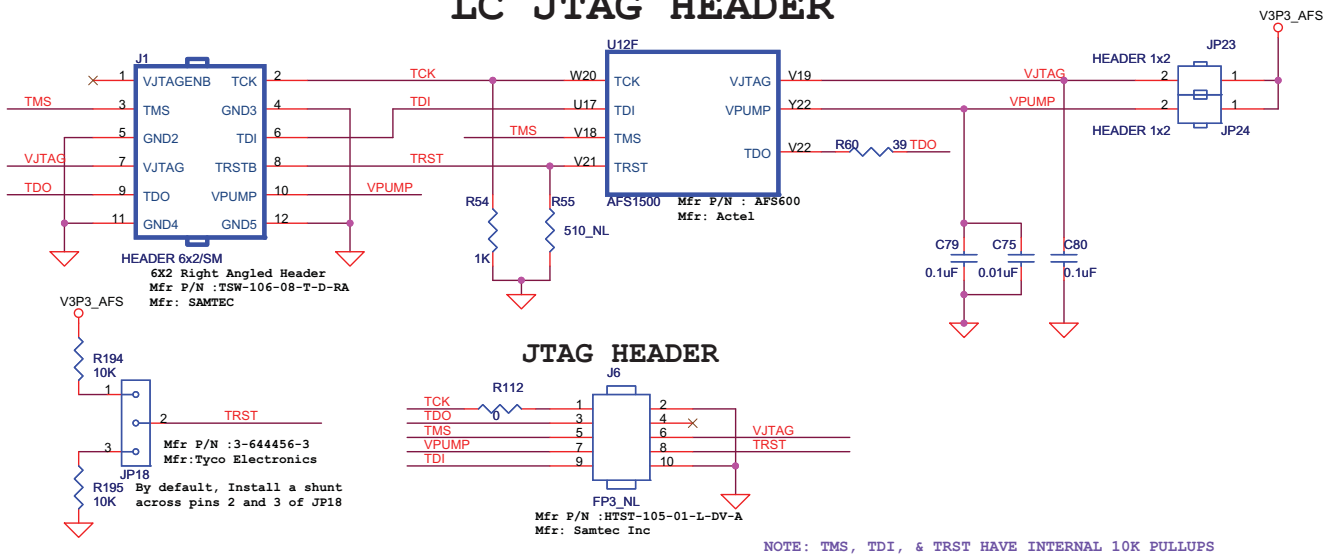


Figure 2-36 · JTAG Header Schematic for LCPS Connection

Pin List

Table A-1 lists the Fusion M1AFS1500 pin list and I/O pins connections.

Table A-1 · FPGA Pin List

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
E19	IO49PDB2V0	ADDRESS0
E22	GBC2/IO46PDB2V0	ADDRESS1
F20	IO50PDB2V0	ADDRESS2
F21	IO50NDB2V0	ADDRESS3
F22	IO51PDB2V0	ADDRESS4
B18	GBA1/IO42PDB1V2	ADDRESS5
B17	GBC1/IO40PDB1V2	ADDRESS6
C16	IO37NDB1V2	ADDRESS7
B15	IO31PDB1V1	ADDRESS8
B14	IO31NDB1V1	ADDRESS9
C22	GBB2/IO45PDB2V0	ADDRESS10
C21	IO48PSB2V0	ADDRESS11
A18	GBA0/IO42NDB1V2	ADDRESS12
A17	GBC0/IO40NDB1V2	ADDRESS13
A16	IO35PDB1V2	ADDRESS14
B12	IO26NDB1V0	ADDRESS15
A12	IO26PDB1V0	ADDRESS16
A13	IO27NDB1V1	ADDRESS17
A14	IO27PDB1V1	ADDRESS18
A15	IO35NDB1V2	ADDRESS19
C14	IO29PDB1V1	ADDRESS20
C13	IO29NDB1V1	ADDRESS21
D12	IO23PDB1V0	ADDRESS22
J7	IO111PDB4V0	ADDRESS23
D19	IO47PPB2V0	DATA0
D17	GBB1/IO41PDB1V2	DATA1
D16	IO37PDB1V2	DATA2
G17	IO53PDB2V0	DATA3
G16	IO38PPB1V2	DATA4
E15	IO36NPB1V2	DATA5

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
D14	IO34NDB1V1	DATA6
F14	IO30PDB1V1	DATA7
E18	IO47NPB2V0	DATA8
C17	GBB0/IO41NDB1V2	DATA9
F17	IO38NPB1V2	DATA10
F16	IO36PPB1V2	DATA11
D15	IO34PDB1V1	DATA12
G14	IO28PDB1V1	DATA13
E14	IO32PPB1V1	DATA14
F13	IO30NDB1V1	DATA15
M21	GCB0/IO63NDB2V0	DATA16
M18	IO69NDB2V0	DATA17
L19	GCA1/IO64PDB2V0	DATA18
L22	GCC1/IO62PDB2V0	DATA19
K20	IO61NDB2V0	DATA20
J21	IO55PSB2V0	DATA21
K22	IO56NDB2V0	DATA22
H21	IO54NDB2V0	DATA23
M22	GCB1/IO63PDB2V0	DATA24
M19	GCA0/IO64NDB2V0	DATA25
L21	GCC0/IO62NDB2V0	DATA26
K19	IO68NPB2V0	DATA27
J22	IO56PDB2V0	DATA28
J20	GCC2/IO61PDB2V0	DATA29
H22	IO54PDB2V0	DATA30
G22	IO51NDB2V0	DATA31
J2	IO113NDB4V0	LED1_N
J3	GFB2/IO109PDB4V0	LED2_N
J4	GFA2/IO110PDB4V0	LED3_N
M7	GFB0/IO106NDB4V0	LED4_N
K4	IO110NDB4V0	LED5_N
L5	GFC1/IO107PDB4V0	LED6_N

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
L7	GFB1/IO106PDB4V0	LED7_N
M5	GFC0/IO107NDB4V0	LED8_N
H1	IO115NDB4V0	LED9_N
G19	IO52PDB2V0	LED10_N
M16	IO70NDB2V0	LED11_N
W19	IO68PPB2V0	LED12_N
D3	IO123NDB4V0	DIRECTC_TDI
H5	IO114PDB4V0	10K to GND
B3	GAA0/IO01NDB0V0	CAN_RXD
A3	GAA1/IO01PDB0V0	CAN_TXD_GPIO39
D6	GAC0/IO03NDB0V0	CH1_D2F_A_5V_GPIO23
C6	IO05NDB0V1	CH1_D2F_B_5V_GPIO37
D8	IO10NDB0V1	CH1_F2D_A_5V_GPIO33
B8	IO09NDB0V1	CH1_F2D_B_5V_GPIO27
B6	IO04PDB0V0	CH2_D2F_A_5V_GPIO36
A6	IO07NDB0V1	CH2_D2F_B_5V_GPIO11
A8	IO09PDB0V1	CH2_F2D_A_5V_GPIO22
G9	IO06NDB0V1	CH2_F2D_B_5V_GPIO20
D7	GAC1/IO03PDB0V0	CH3_D2F_A_5V_GPIO14
C7	IO05PDB0V1	CH3_D2F_B_5V_GPIO18
E9	IO08PDB0V1	CH3_F2D_A_5V_GPIO12
F9	IO12NDB0V1	CH3_F2D_B_5V_GPIO13
A7	IO07PDB0V1	CH4_D2F_A_5V_GPIO16
E8	IO08NDB0V1	CH4_D2F_B_5V_GPIO15
C9	IO11NDB0V1	CH4_F2D_A_5V_GPIO17
A9	IO13NDB0V2	CH4_F2D_B_5V_GPIO19
J16	GCB2/IO60PDB2V0	CLK_50MHZ
G1	IO115PDB4V0	CLKEN_32.768KHZ
K6	IO104NDB4V0	DIG_1
K7	IO111NDB4V0	DIG_2
R2	IO102NDB4V0	DIP1
P1	GFA1/IO105PDB4V0	DIP2

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
P2	GFA0/IO105NDB4V0	DIP3
L1	IO108NDB4V0	DIP4
K1	GFC2/IO108PDB4V0	DIP5
R1	IO102PDB4V0	DIP6
N3	IO101PDB4V0	DIP7
K3	IO109NDB4V0	DIP8
C4	IO00PDB0V0	DIRECTC_TCK
C3	IO00NDB0V0	DIRECTC_TDO
D5	GAA2/IO125PDB4V0	DIRECTC_TMS
D4	GAC2/IO123PDB4V0	DIRECTC_TRST
W5	IO86NDB4V0	Ethernet CLK
C10	IO14PDB0V2	F2D_TESTA_5V_GPIO21
D22	IO45NDB2V0	F2D_TESTB_5V
F19	IO49NDB2V0	FLASH_BYTE_1
L18	IO69PDB2V0	FLASH_BYTE_2
K17	IO58PDB2V0	FLASH_CE0
L16	IO70PDB2V0	FLASH_CE3
G13	IO28NDB1V1	FLASH_OE#
H17	IO53NDB2V0	FLASH_RP
D13	IO32NPB1V1	FLASH_STS
J17	IO58NDB2V0	FLASH_VPEN
E12	IO22PDB1V0	FLASH_WE#
AB3	IO94NSB4V0	FPGA_ENA_COL
Y2	IO87NDB4V0	FPGA_ENA_CRS
W1	IO93PDB4V0	FPGA_ENA_MDC
R4	IO91PDB4V0	FPGA_ENA_MDIO
P5	IO96NDB4V0	FPGA_ENA_RESET
Y4	IO85NDB4V0	FPGA_ENA_RXCLK
W4	GEB2/IO86PDB4V0	FPGA_ENA_RXD0
W3	IO93NDB4V0	FPGA_ENA_RXD1
V4	GEA1/IO88PDB4V0	FPGA_ENA_RXD2
V2	GEB0/IO89NDB4V0	FPGA_ENA_RXD3

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
Y3	GEA2/IO85PDB4V0	FPGA_ENA_RXDV
Y1	GEC2/IO87PDB4V0	FPGA_ENA_RXER
V1	GEB1/IO89PDB4V0	FPGA_ENA_TXCLK
U3	GEC1/IO90PDB4V0	FPGA_ENA_TXD0
U2	IO98NDB4V0	FPGA_ENA_TXD1
U1	IO98PDB4V0	FPGA_ENA_TXD2
T4	IO95NDB4V0	FPGA_ENA_TXD3
U4	GEC0/IO90NDB4V0	FPGA_ENA_TXEN
U19	IO84NDB2V0	GPIO1
C20	GBA2/IO44PDB2V0	GPIO10
R17	IO74NDB2V0	GPIO2
T17	IO74PDB2V0	GPIO3
A20	IO43PDB1V2	GPIO38
U20	GDC2/IO84PDB2V0	GPIO4
D20	IO44NDB2V0	GPIO40
A19	IO43NDB1V2	GPIO43
T22	GDC1/IO79PDB2V0	GPIO44
T19	IO82NDB2V0	GPIO45
T20	GDA2/IO82PDB2V0	GPIO46
R22	IO75PDB2V0	GPIO47
R21	IO75NDB2V0	GPIO48
W22	IO76PPB2V0	GPIO49
R18	GDA0/IO81NDB2V0	GPIO5
T16	IO77PPB2V0	GPIO50
U21	IO77NPB2V0	GPIO6
U22	GDC0/IO79NDB2V0	GPIO7
R19	GDB0/IO80NDB2V0	GPIO8
F10	IO12PDB0V1	HI_LO_5V_GPIO24
R6	IO92PDB4V0	MPM_REG1_EN
P6	IO99NDB4V0	MPM_REG1_PWM
R5	IO91NDB4V0	MPM_REG2_EN
V5	GEA0/IO88NDB4V0	MPM_REG2_PWM

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
T1	IO100PPB4V0	MPM_REG3_EN
AB20	IO76NPB2V0	MPM_REG3_PWM
P7	IO97NDB4V0	MPM_REG4_EN
N7	IO97PDB4V0	MPM_REG4_PWM
A5	GAB1/IO02PDB0V0	OLED_CS#
G11	IO16NDB0V2	OLED_D/C#
G4	IO116PDB4V0	OLED_RES#
G3	IO116NDB4V0	OLED_SCL
F2	IO118PDB4V0	OLED_SDA_IN
F1	IO118NDB4V0	OLED_SDA_OUT
G12	IO16PDB0V2	P8051_RXDAn_GPIO34
A4	GAB0/IO02NDB0V0	P8051_RXDAp_GPIO41
D11	IO23NDB1V0	P8051_RXDBn_GPIO31
A11	IO24PDB1V0	P8051_RXDBp_GPIO32
B9	IO11PDB0V1	P8051_RXSTROBEA_GPIO26
D9	IO10PDB0V1	P8051_RXSTROBEB_GPIO25
B11	IO24NDB1V0	P8051_TXDAn_GPIO42
B5	IO04NDB0V0	P8051_TXDAp
A10	IO13PDB0V2	P8051_TXDBn_GPIO30
E11	IO22NDB1V0	P8051_TXDBp_GPIO35
D10	IO14NDB0V2	P8051_TXINHIBITA_GPIO29
G10	IO06PDB0V1	P8051_TXINHIBITB_GPIO28
T3	IO95PDB4V0	PWR_DOWN/INT
H19	GCA2/IO59PDB2V0	RESET_N
P16	IO83NDB2V0	RVI-ME_DBGACK
P17	IO78NDB2V0	RVI-ME_DBGRQ
P18	GDA1/IO81PDB2V0	RVI-ME_nSRST
P21	IO73PDB2V0	RVI-ME_nTRST
N16	GDB2/IO83PDB2V0	RVI-ME_RTCK
N17	IO78PDB2V0	RVI-ME_TCK
P20	IO73NDB2V0	RVI-ME_TDI
P19	GDB1/IO80PDB2V0	RVI-ME_TDO

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
N19	IO72NDB2V0	RVI-ME_TMS
P22	IO71NDB2V0	RVI-ME_VTref
J5	IO112NPB4V0	SCL1
T6	IO92NDB4V0	SCL2
H6	IO117NDB4V0	SCL3
J6	IO104PDB4V0	SDA1
N6	IO99PDB4V0	SDA2
G6	IO117PDB4V0	SDA3
F3	IO119NSB4V0	SPI_CS_N
D1	IO121NDB4V0	SPI_RST_N
E2	IO120PDB4V0	SPI_SCK
E1	IO120NDB4V0	SPI_SI
C2	IO122PSB4V0	SPI_SO
C1	IO121PDB4V0	SPI_WP_N
G20	IO52NDB2V0	SRAM_BHE0
N22	IO71PDB2V0	SRAM_BHE1
J18	IO57NDB2V0	SRAM_BLE0
N20	IO72PDB2V0	SRAM_BLE1
J19	IO59NDB2V0	SRAM_CE1
H18	IO57PDB2V0	SRAM_CE2
K16	IO60NDB2V0	SRAM_OE
E21	IO46NDB2V0	SRAM_WE
E4	GAB2/IO124PDB4V0	SWITCH12
H4	IO114NDB4V0	SWITCH2
H2	IO113PDB4V0	SWITCH3
E5	IO125NDB4V0	SWITCH5
F4	IO124NDB4V0	SWITCH6
J1	IO112PPB4V0	UART_CTS
P4	IO96PDB4V0	UART_DSR
P3	IO101NDB4V0	UART_DTR
N4	IO100NPB4V0	UART_RTS

Table A-1 · FPGA Pin List (continued)

M1AFS1500 Pin Number	M1AFS1500 Pin Name	Board Signal Name
M1	IO103PDB4V0	UART_RXD
N1	IO103NDB4V0	UART_TXD

FADK Board Stack-Up

The Fusion Advanced Development Kit board is built on a 10-layer printed circuit board (PCB). The top and bottom silkscreens are provided in [Figure B-1 on page 52](#) and [Figure B-2 on page 53](#). Full PCB design layout is provided in the Fusion Advanced Development Kit page. To view the PCB design layout files, you can use Allegro Free Physical Viewer, which can be downloaded from the Cadence website Allegro Download page:

www.cadence.com/products/pcb/Pages/Downloads.aspx.

The layers are arranged in the following order:

- Layer 1: Top signal ([Figure B-1 on page 52](#))
- Layer 2: GND1
- Layer 3: Sig1
- Layer 4: GND2
- Layer 5: PWR 1
- Layer 6: PWR 2
- Layer 7: GND3
- Layer 8: Signal 2
- Layer 9: GND 4
- Layer 10: Bottom signal ([Figure B-2 on page 53](#))

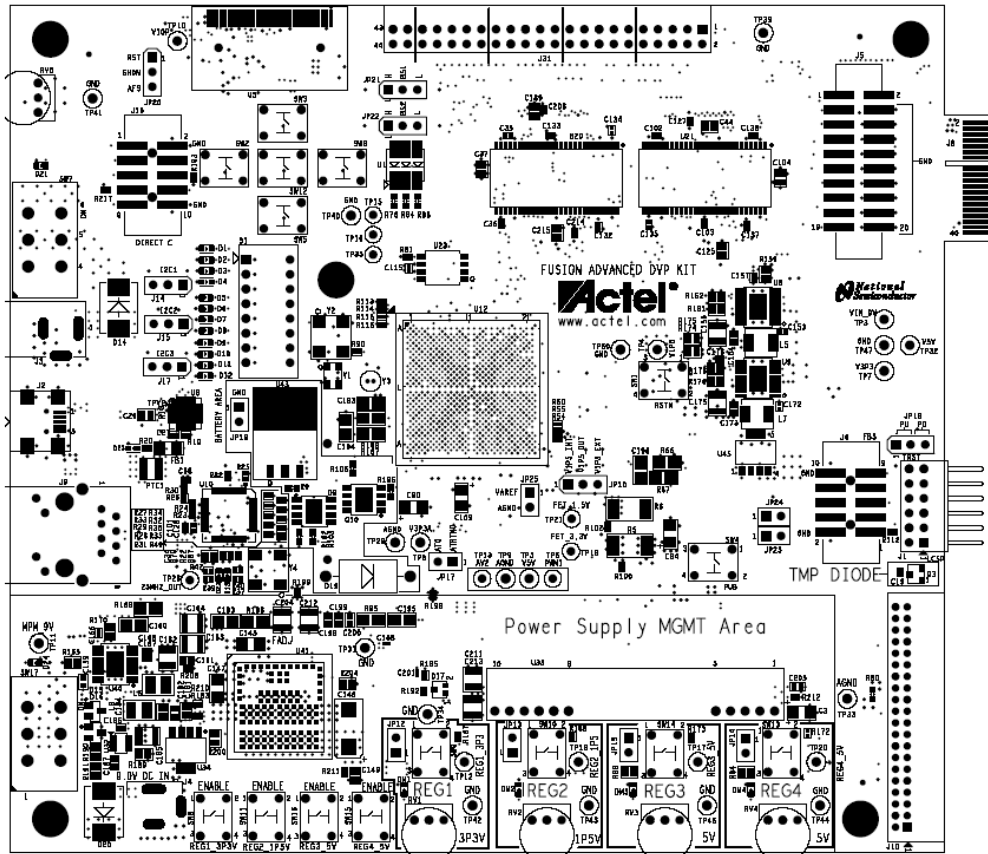


Figure B-1 · Layer 1, Top Silkscreen

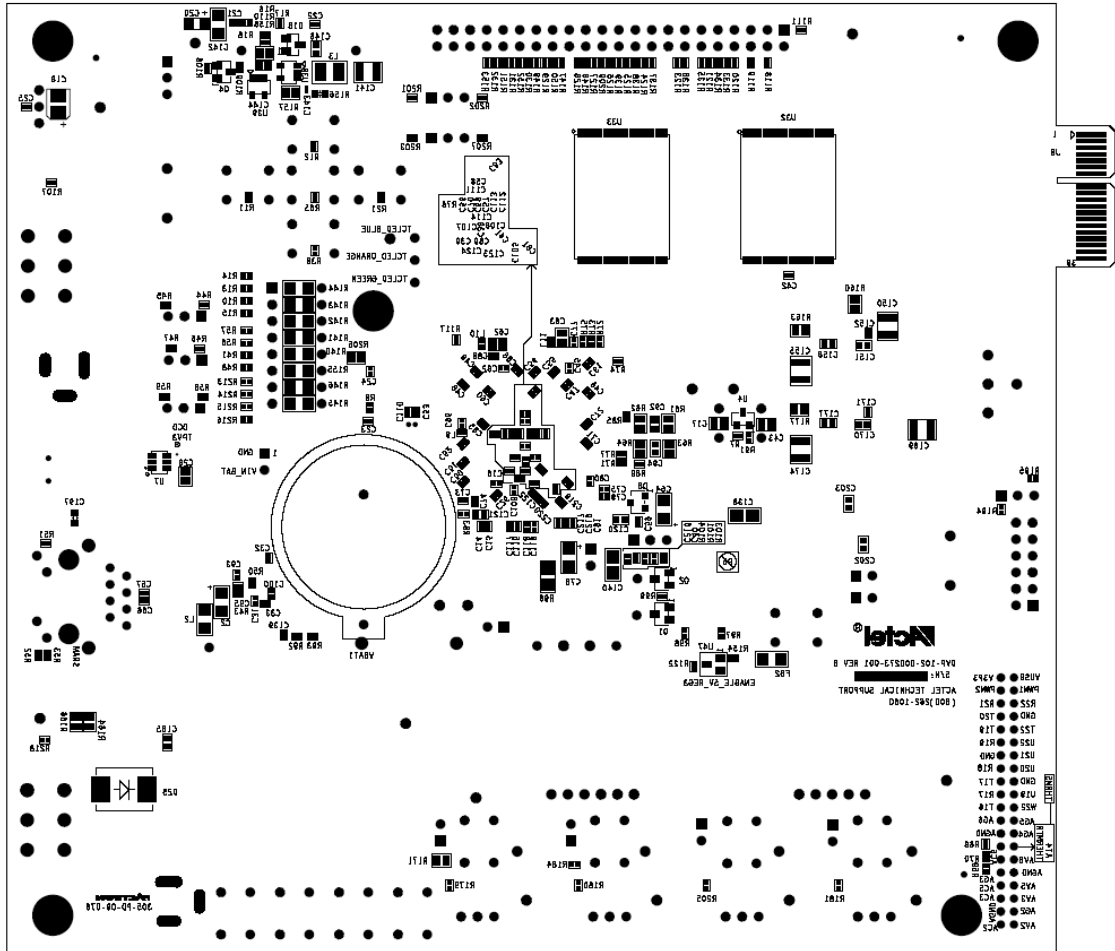


Figure B-2 · Layer 10, Bottom Silkscreen

Manufacturing Test

M1AFS-ADV-DEV-KIT Board Testing Procedures

This chapter defines and describes the specific M1AFS-ADV-DEV-KIT board testing procedures.

Instructions for running the ACTEL M1AFS-ADV-DEV-KIT Board Tests are detailed. The steps needed to set up the test environment are also outlined. Associated files for this procedure can be downloaded from the Actel website: www.actel.com/download/rsc/?f=M1AFS_ADV_DEV_KIT_DF.

Installing the M1AFS-ADV-DEV-KIT Board USB Serial Driver

1. Use WinZip to extract all files stored in the CP210x_Drivers.zip archive.
2. Double-click on the file named CP210x_Drivers.exe.
3. Choose the **Install** option in the Install Wizard and select **Yes** for the licensing agreement.
4. Restart the computer on which the driver was installed. After restart, the driver can be used to communicate with the M1AFS-ADV-DEV-KIT board.

Hooking up the Board and Programming Stick

1. Connect the Actel M1AFS-ADV-DEV-KIT board to the Actel programming stick. Connect the J1 pins on the M1AFS-ADV-DEV-KIT board to the programmer, as shown in [Figure C-1](#).

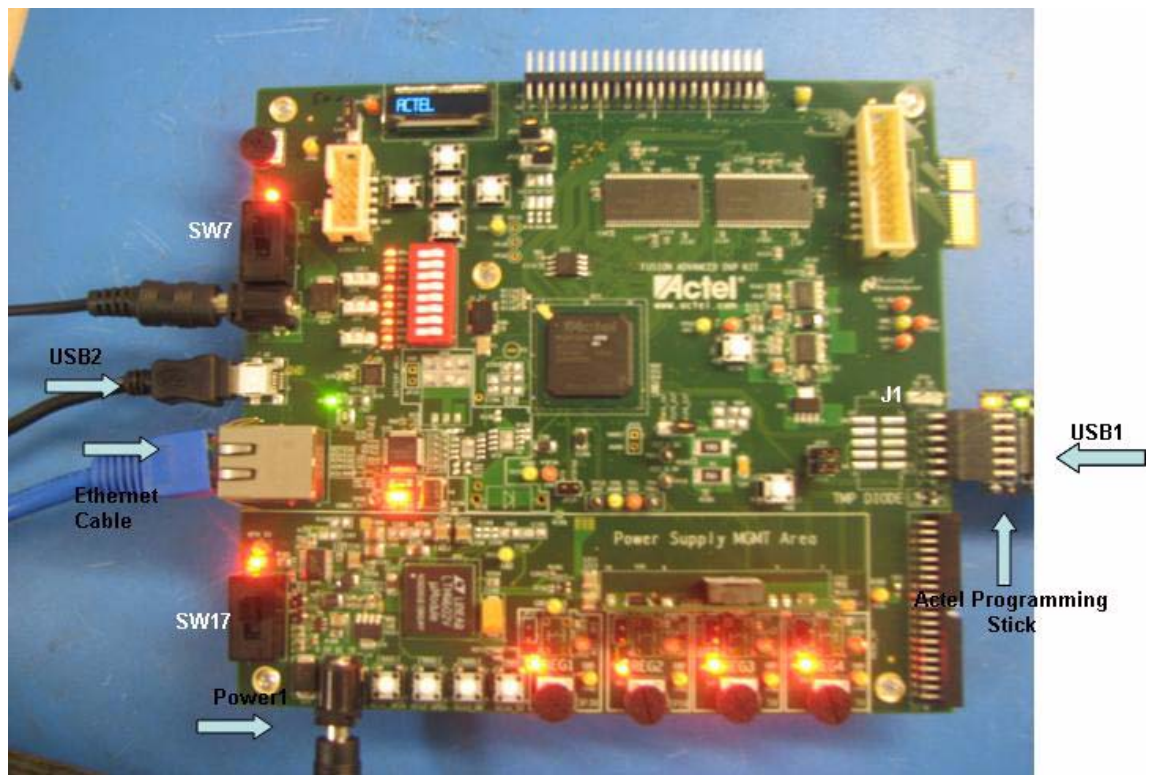


Figure C-1 · Connect J1 Pins on M1AFS-ADV-DEV-KIT Board

2. Connect one end of USB mini B cables to the USB connections on the M1AFS-ADV-DEV-KIT board and the Actel programming stick. These connections are labeled USB 1 and USB 2 in [Figure C-1 on page 55](#).
3. Connect the USB cables to the PC you will use for testing.
4. Connect one end of a 9 V power supply to power input, Power1, on the M1AFS-ADV-DEV-KIT board, as seen in [Figure C-1 on page 55](#). Connect the end of another supply to input Power2. Plug both supplies into an electrical outlet.
5. When push-button SW15 is pressed after power-up, LED DM4 should light up.
6. Flip on power switch SW7 on the board. LEDs labeled D5 and D21 should light up. The LED labeled D3 on the programming stick should also be lighted.
7. Flip on power switch SW17 on the board. LEDs labeled DM1, DM2, DM3, and DM4 should light up.

Hooking Up the Board and Ethernet Cable

Connect an Ethernet cable from the local area network to J9, the M1AFS-ADV-DEV-KIT Ethernet jack.

Note: For the board Ethernet test to pass, the local network must be running a DHCP server that assigns an IP address to the web server on the board. Network firewalls must not block the board web server.

Programming the Board

1. Open the FlashPro programming software.
2. Create a new programming project (Figure C-2).

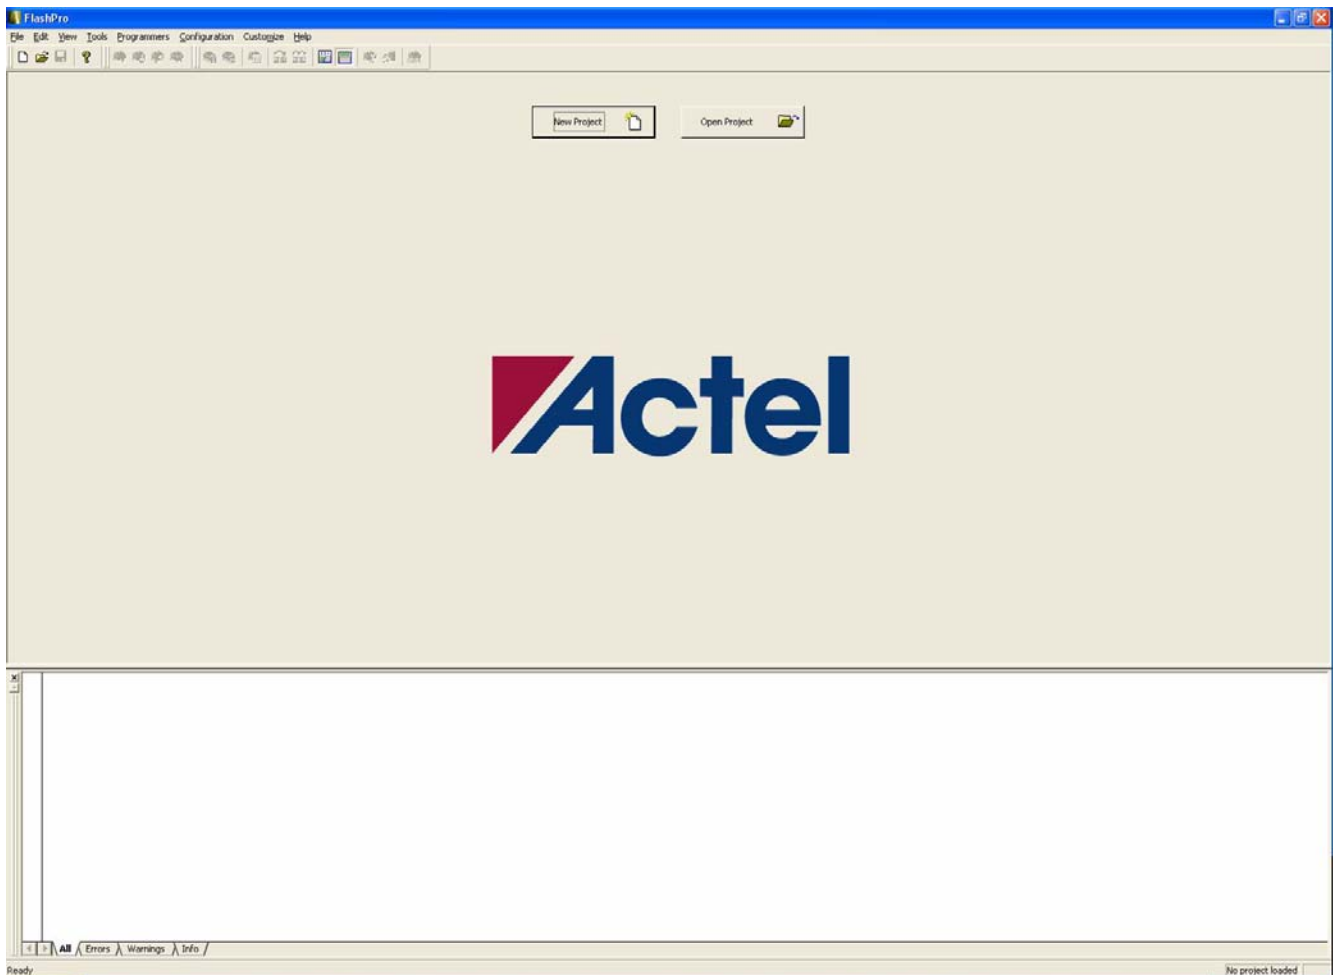


Figure C-2 · New Project

3. Select the option **Single Device** when choosing the programming mode (Figure C-3).

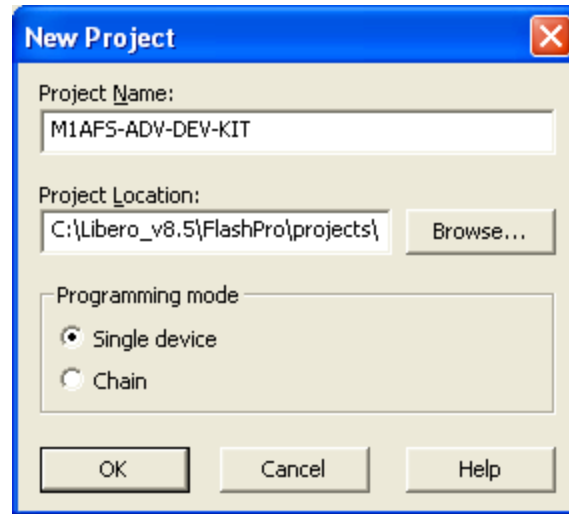


Figure C-3 · Select Single Device

4. Click on the **Configure Device** button. This opens the Load Programming File window.

5. Browse the PC file system to find the M1AFS-ADV-DEV-KIT.stp programming file. Click **Open** to select the M1AFS-ADV-DEV-KIT.stp file (Figure C-4).

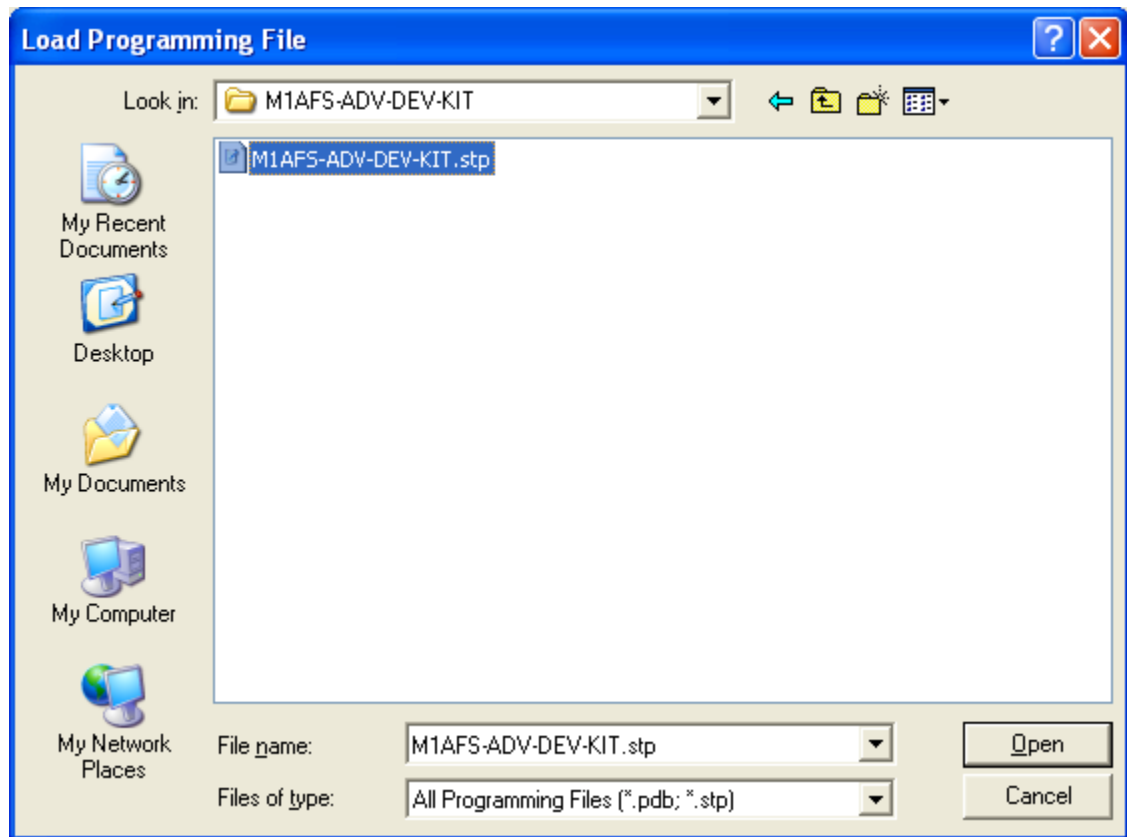


Figure C-4 · Load Programming File

6. Click the **Program** button to program the M1AFS-ADV-DEV-KIT board.

Setting Up the Test Terminal

1. Open the Windows start menu. Select **All > Programs > Accessories > Communications** and select the **HyperTerminal** program. This opens HyperTerminal (Figure C-5).

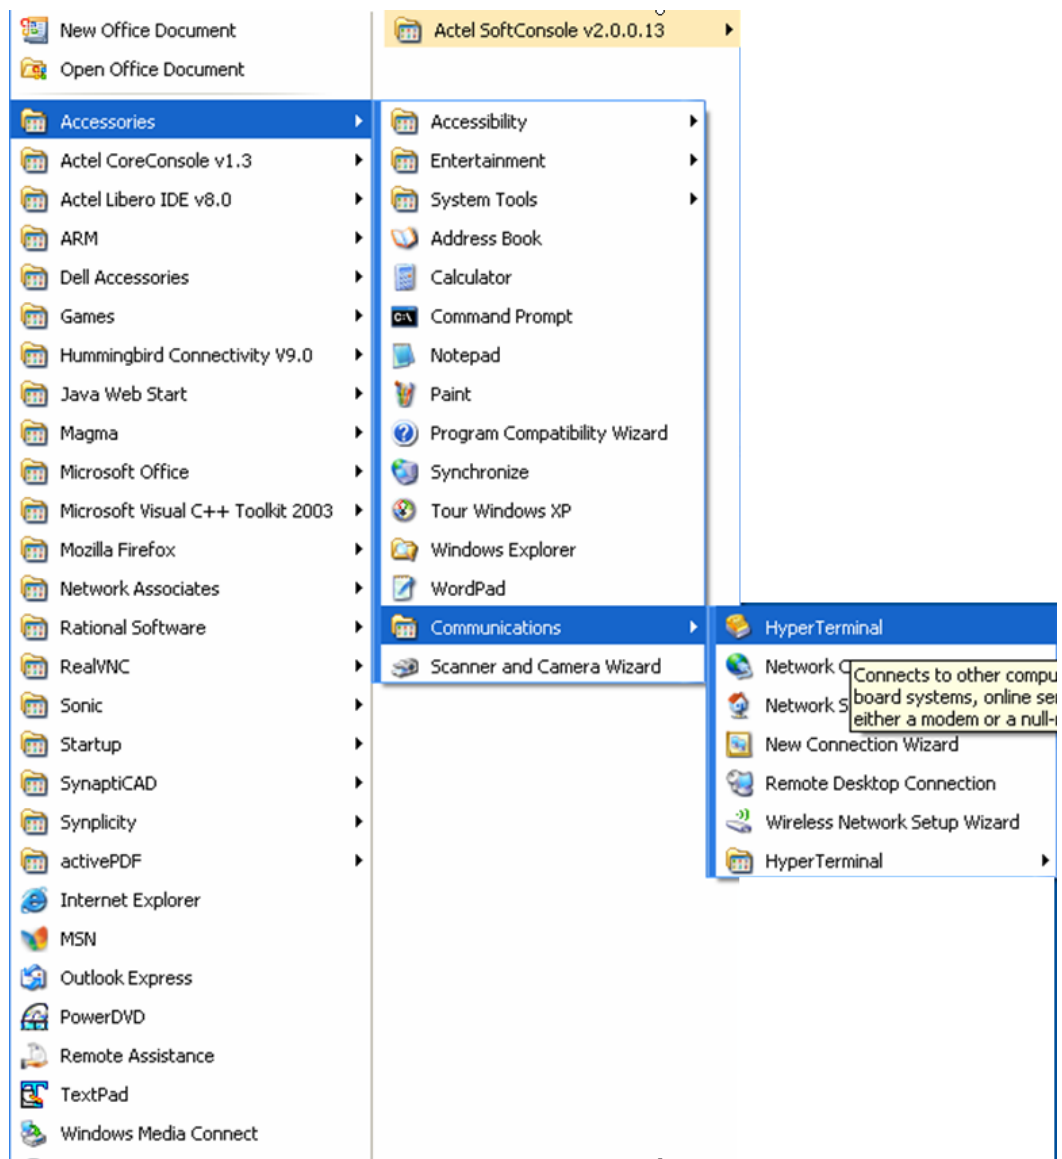


Figure C-5 · Select HyperTerminal

2. The **Connection Description** window will open (Figure C-6). Type in **M1AFS-ADV-DEV-KIT** as the name of the new HyperTerminal session and click the **OK** button.



Figure C-6 · Connection Description Window

3. The Connect To window will open. Select the COM3 serial connection (Figure C-7).

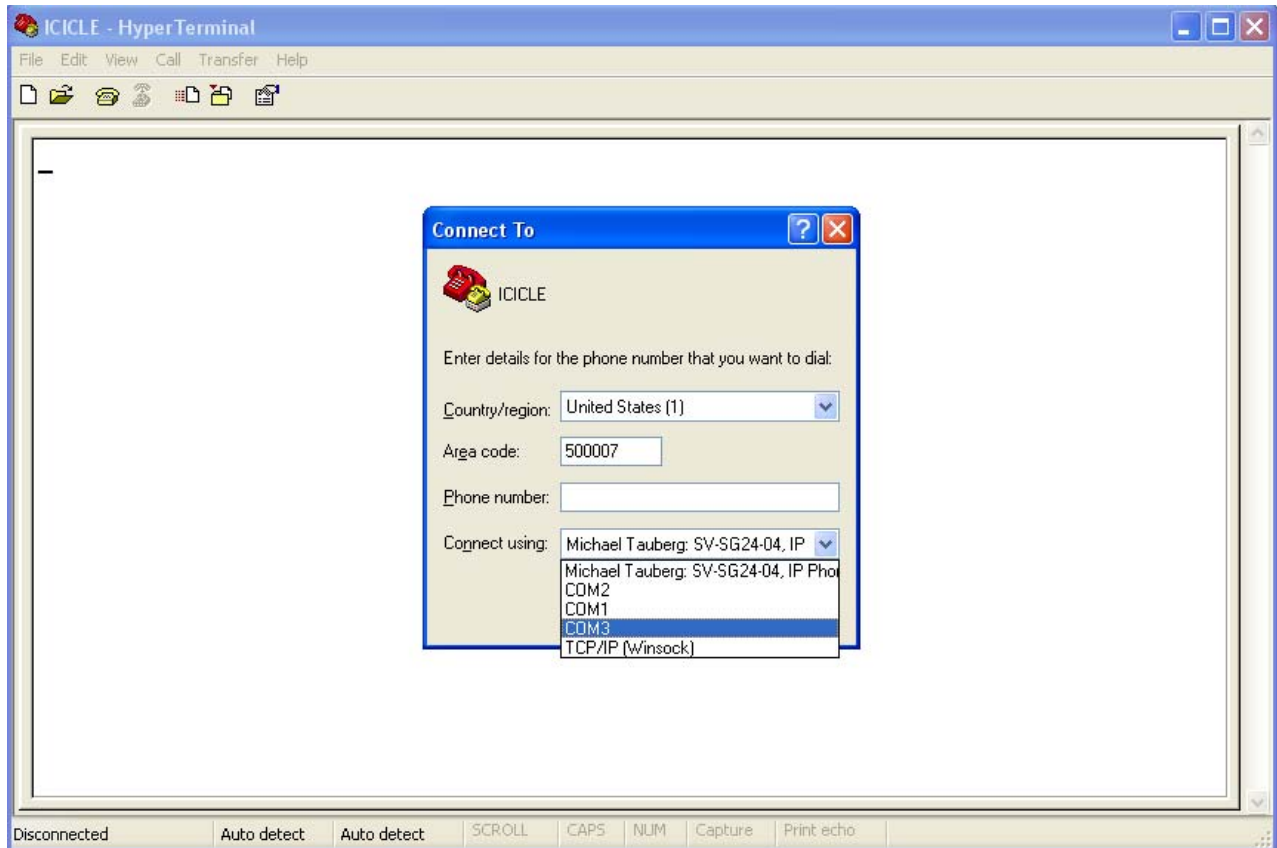


Figure C-7 · Select COM3 Serial Connection

- The COM3 Properties window appears (Figure C-8). Select the following settings:
 - Bits per second = 19200
 - Data bits = 8
 - Parity = None
 - Stop bits = 1
 - Flow Control = None

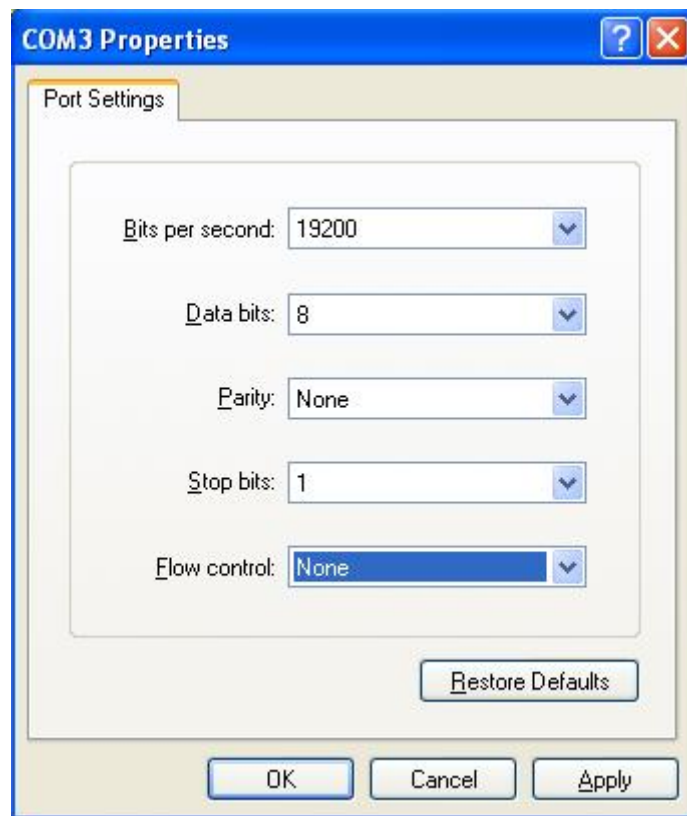


Figure C-8 · COM3 Properties Window

Click the OK button to keep the settings.

5. Select File >Properties in the HyperTerminal window. Choose the Settings tab (Figure C-9).

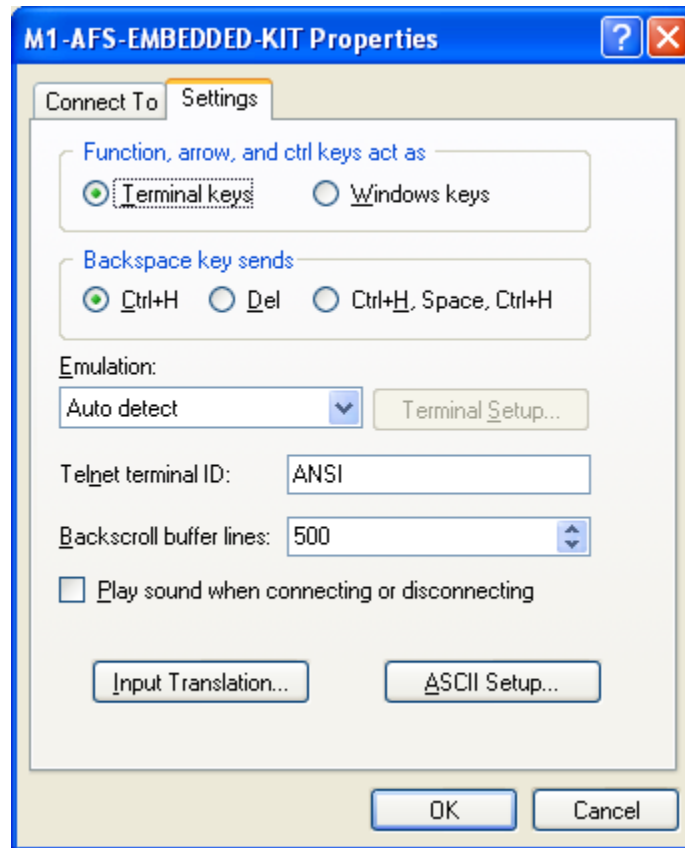


Figure C-9 · HyperTerminal Settings Tab

- Click the **ASCII Setup** button. Select the check box labeled **Append line feeds to incoming line ends** (Figure C-10).

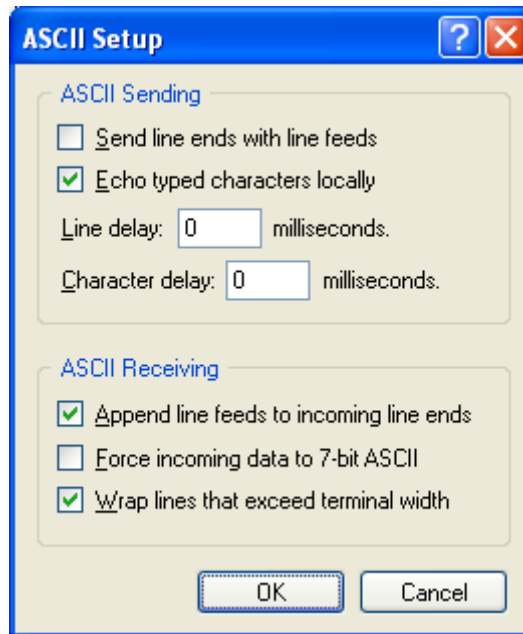



Figure C-10 · ASCII Setup

Running the M1AFS-ADV-DEV-KIT Board Test

Note: If the testing environment is not set up correctly, the M1AFS-ADV-DEV-KIT board test will not be possible. Make sure to complete “Installing the M1AFS-ADV-DEV-KIT Board USB Serial Driver” on page 55 through “Programming the Board” on page 57 correctly before beginning testing.

Procedure

1. Press the button labeled SW1 on the M1AFS-ADV-DEV-KIT board to start the test program.
2. The menu shown in [Figure C-11](#) appears on the terminal.

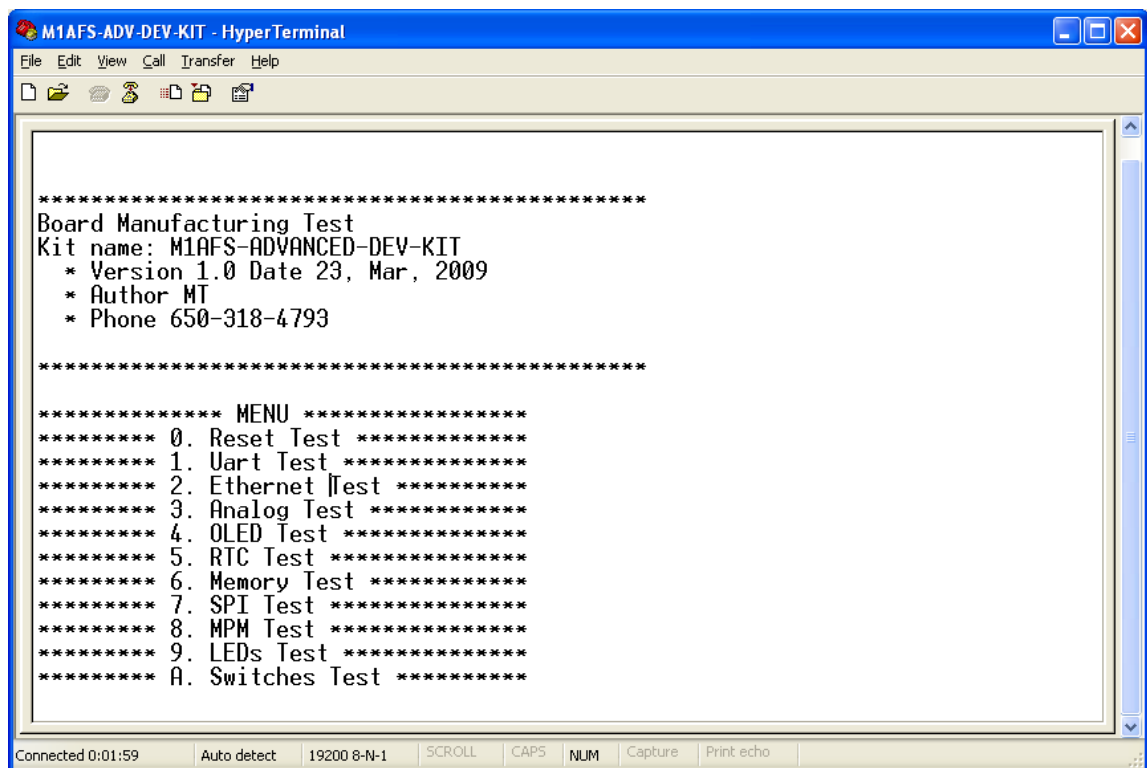

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
Board Manufacturing Test
Kit name: M1AFS-ADVANCED-DEV-KIT
* Version 1.0 Date 23, Mar, 2009
* Author MT
* Phone 650-318-4793

*****

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****


Connected 0:01:59 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-11 · HyperTerminal Menu

If this message does not appear, try pressing button SW1 again. If the above message still does not appear, return to “Programming the Board” on page 57 and check to see that the terminal has been set up correctly.

3. Enter 0 into the terminal to begin the Reset Test.

- The message shown in Figure C-12 should be displayed.

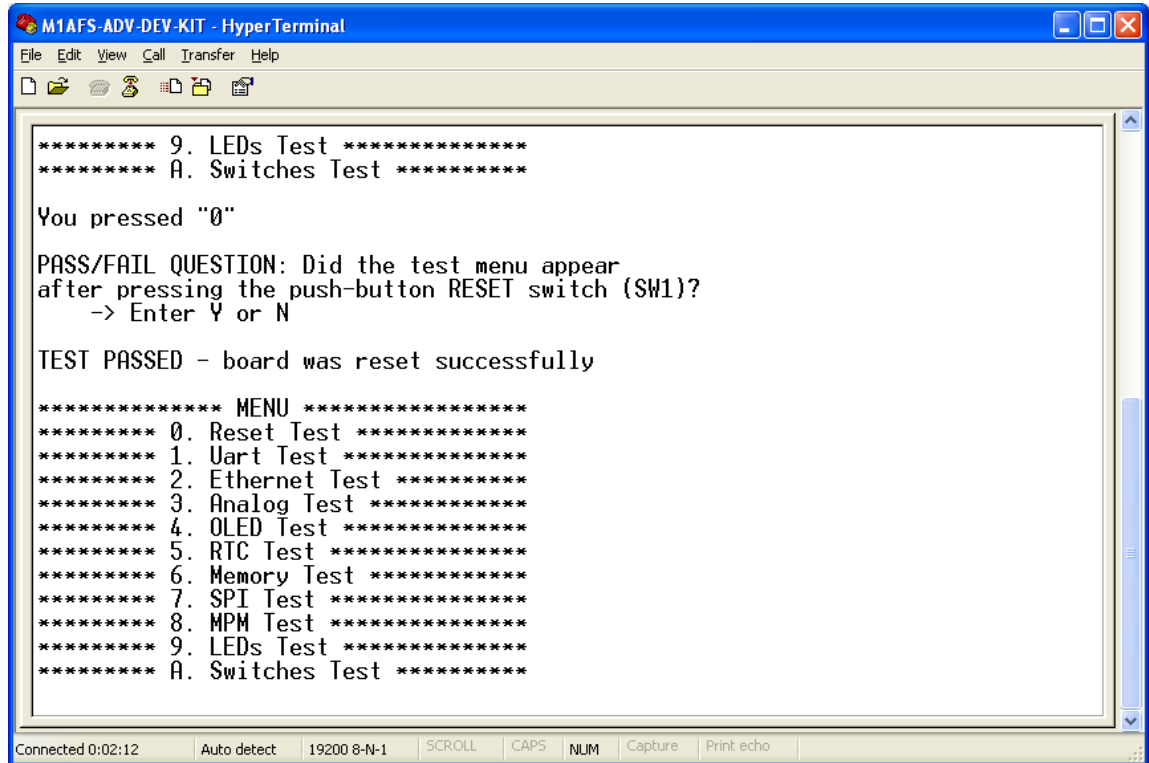

```
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "0"

PASS/FAIL QUESTION: Did the test menu appear
after pressing the push-button RESET switch (SW1)?
-> Enter Y or N


TEST PASSED - board was reset successfully

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****
```

Figure C-12 · Reset Test Passed

If the menu appears correctly, enter the character Y into the terminal.

5. Enter 1 into the terminal to begin the UART test. Type the character Y into the terminal. The screen shown in Figure C-13 should appear.

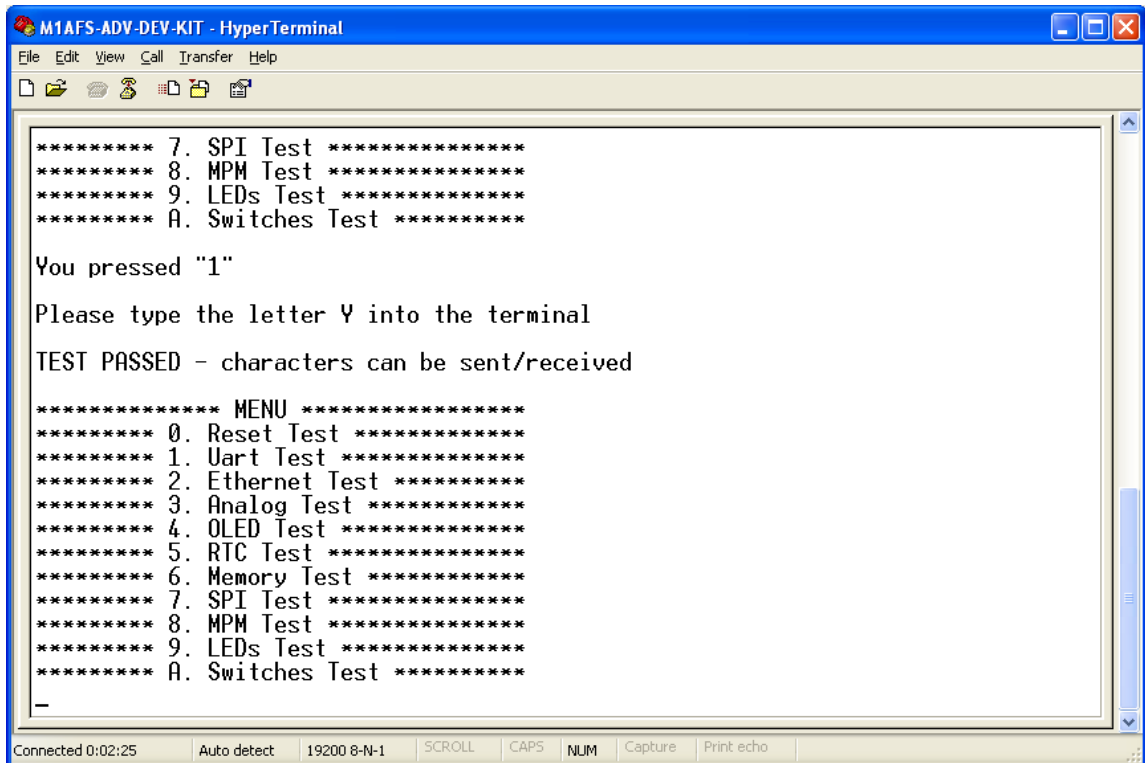

The screenshot shows a HyperTerminal window titled "M1AFS-ADV-DEV-KIT - HyperTerminal". The window contains the following text:

```
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "1"

Please type the letter Y into the terminal

TEST PASSED - characters can be sent/received


***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

_
```

The status bar at the bottom of the window shows: Connected 0:02:25, Auto detect, 19200 8-N-1, SCROLL, CAPS, NUM, Capture, Print echo.

Figure C-13 · UART Test Passed

- Enter 2 into the terminal to begin the Ethernet Test. The screen shown in Figure C-14 should appear.

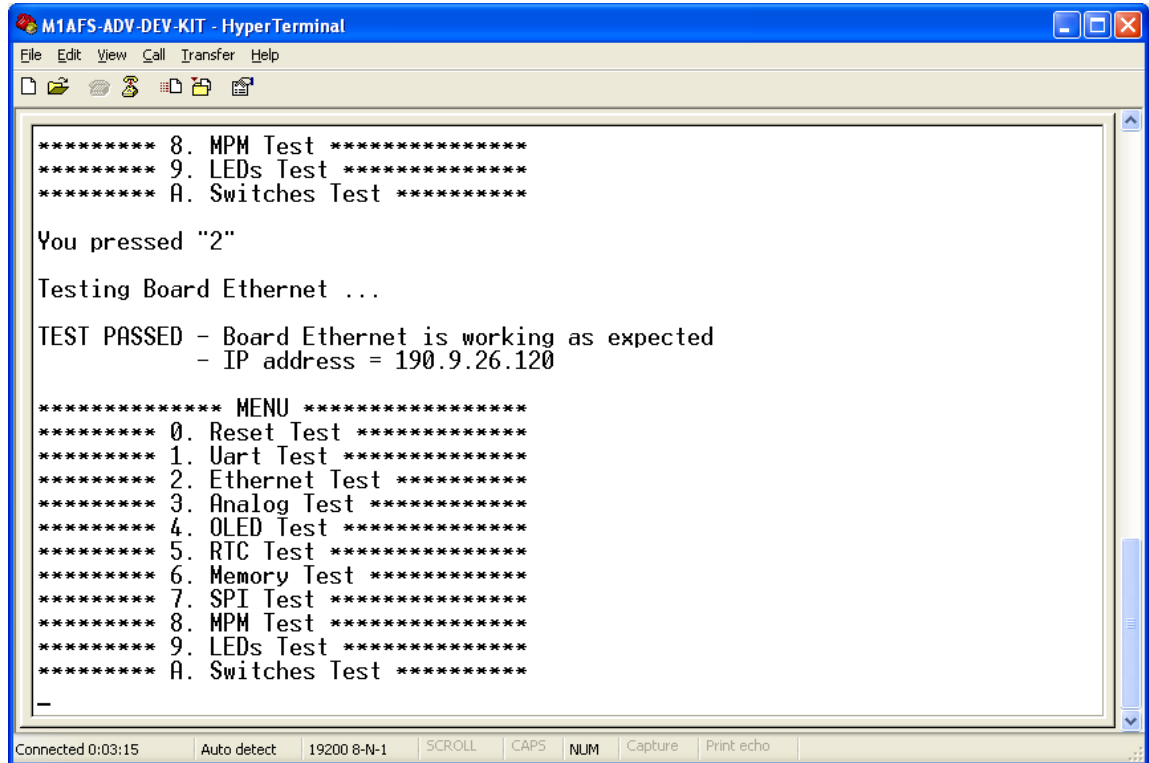

```
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "2"

Testing Board Ethernet ...

TEST PASSED - Board Ethernet is working as expected
              - IP address = 190.9.26.120

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

_

Connected 0:03:15  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure C-14 · Ethernet Test Passed

Note: The IP address field need not be the same for the test to pass.

- Enter 3 into the terminal to begin the Analog Test. The screen shown in [Figure C-15](#) should appear.

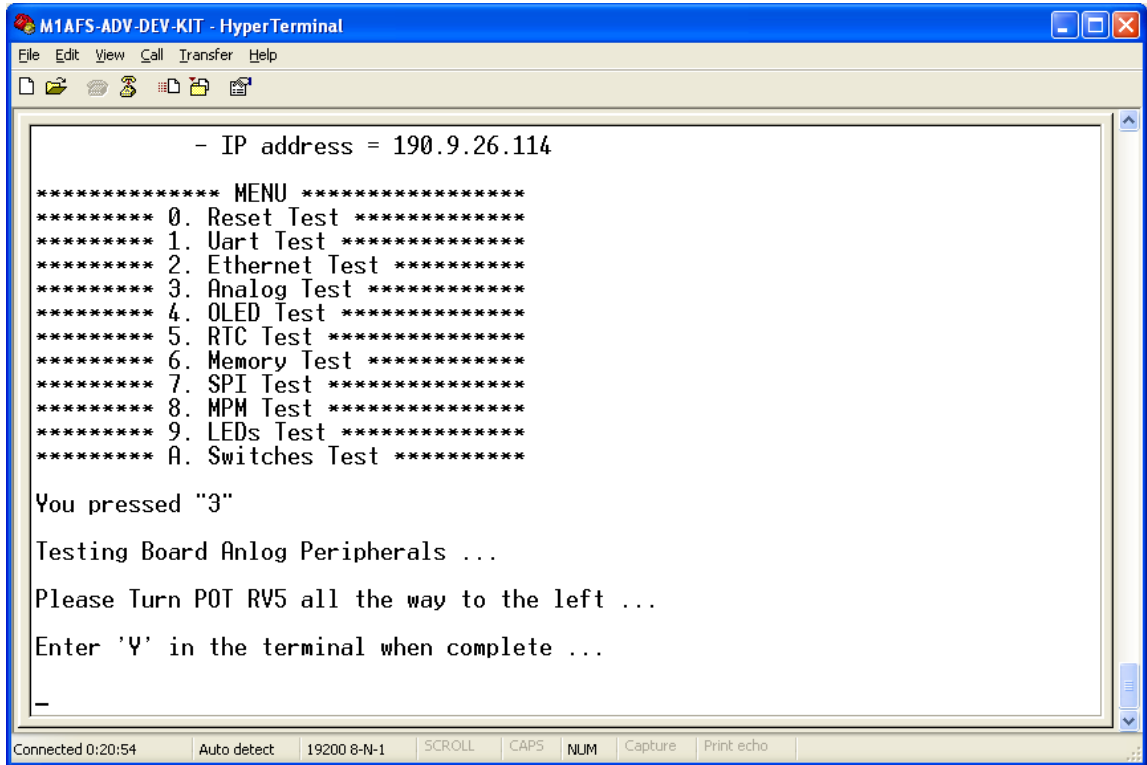


Figure C-15 · Peripherals Test

- Locate POT RV5 on the top, left hand corner of the board. Turn POT RV5 counter-clockwise all the way to the left, as shown in [Figure C-16](#).


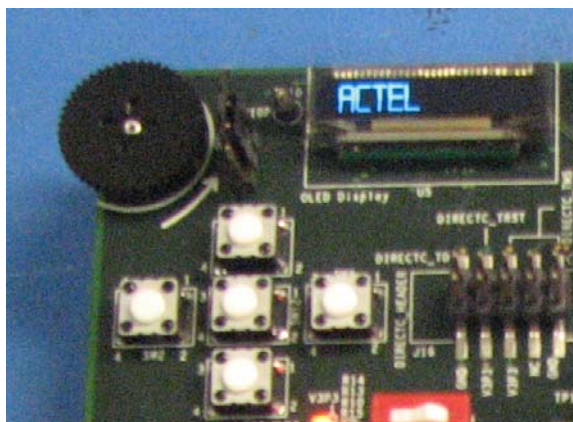


Figure C-16 · Turn POT RV5 Knob Counter-Clockwise

9. When done turning the POT, enter Y in the terminal. The screen shown in Figure C-17 should appear.

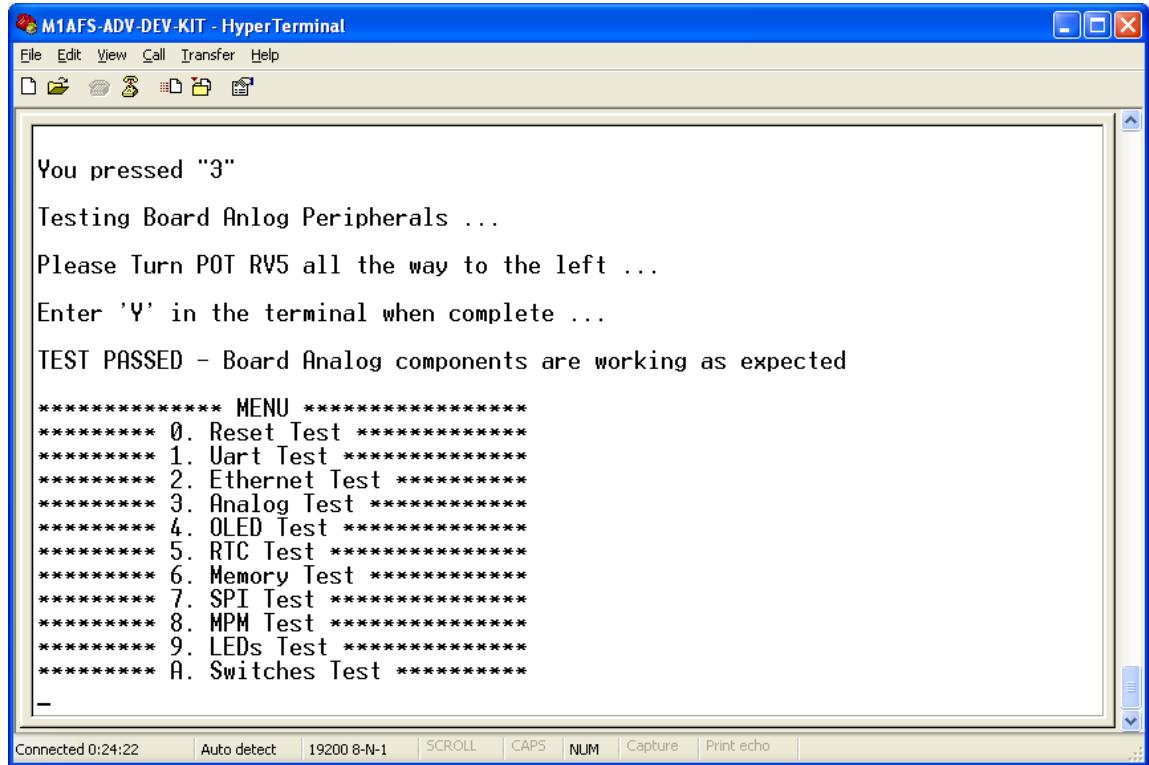


```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
You pressed "3"
Testing Board Analog Peripherals ...
Please Turn POT RV5 all the way to the left ...
Enter 'Y' in the terminal when complete ...
TEST PASSED - Board Analog components are working as expected

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

-
Connected 0:24:22 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-17 · Analog Test Passed

10. Enter 4 into the terminal to begin the OLED Test. The screen shown in Figure C-18 appears.

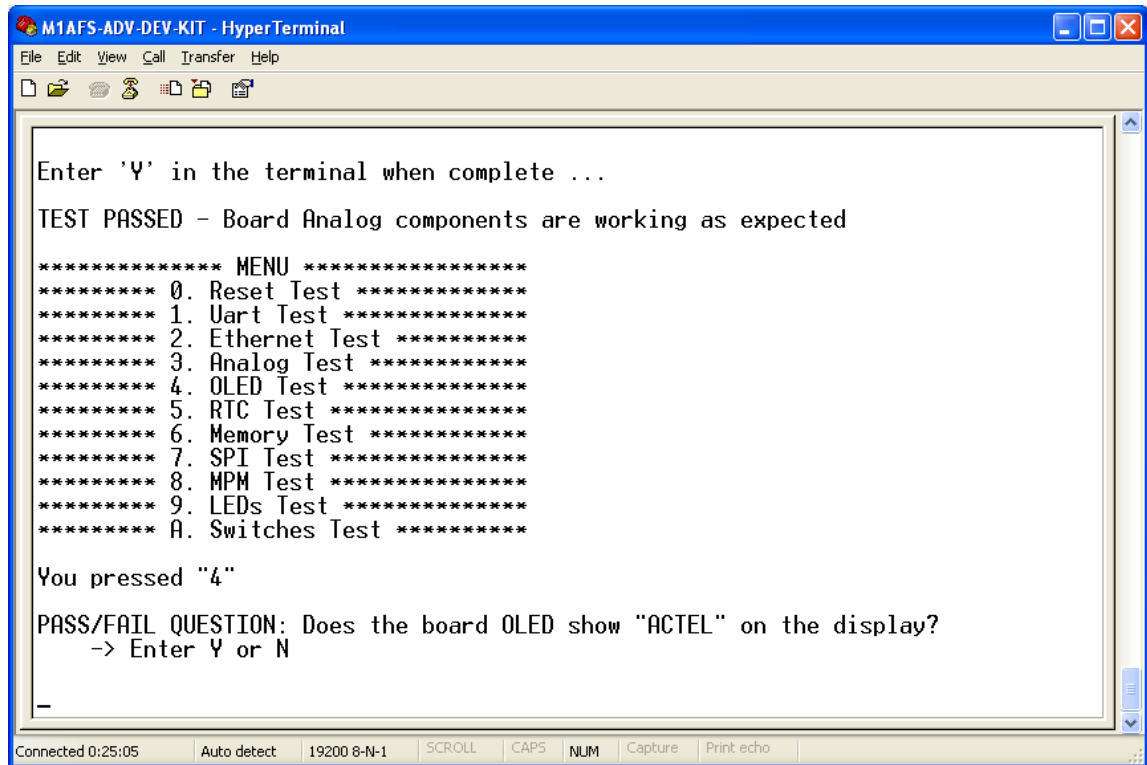

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
Enter 'Y' in the terminal when complete ...
TEST PASSED - Board Analog components are working as expected

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "4"
PASS/FAIL QUESTION: Does the board OLED show "ACTEL" on the display?
-> Enter Y or N
_

Connected 0:25:05 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-18 · OLED Test

11. Check the board OLED display. If the Characters “ACTEL” are displayed in the OLED, enter Y in the terminal; otherwise, enter N. If Y was entered, the screen shown in [Figure C-19](#) will be displayed.


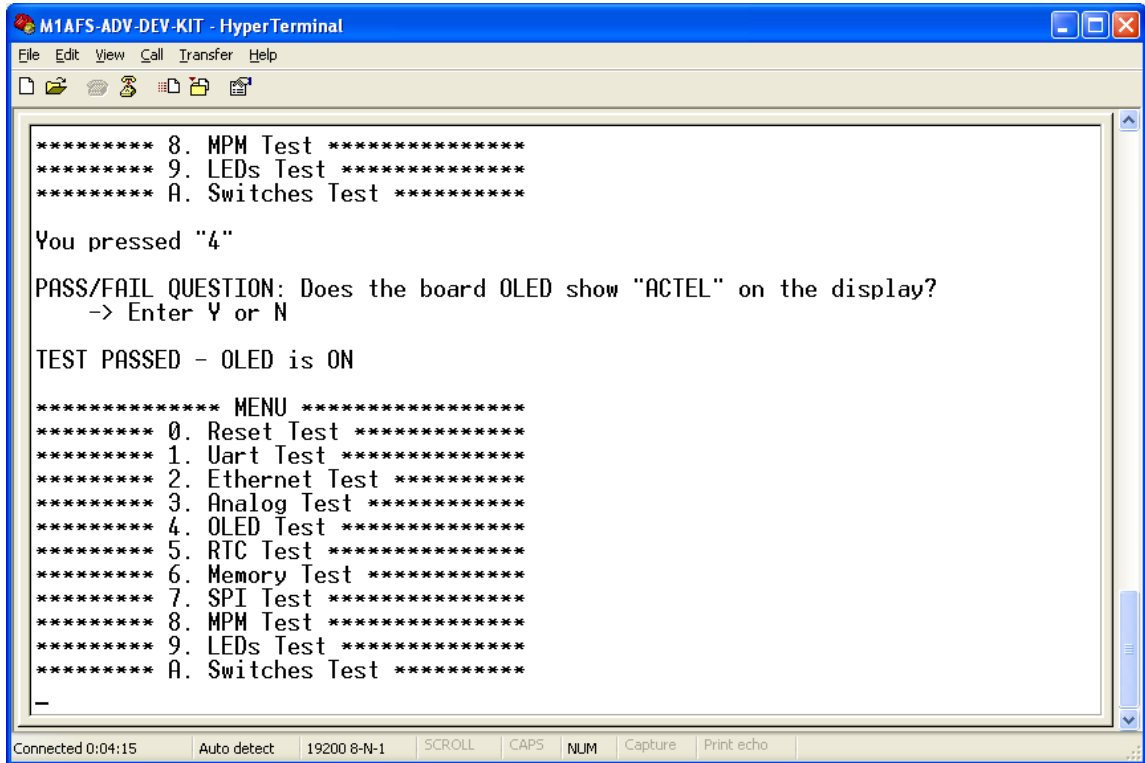


Figure C-19 · OLED Test Passed

- Enter 5 into the terminal to begin the RTC Test. After a few seconds, the screen shown in Figure C-20 should appear.

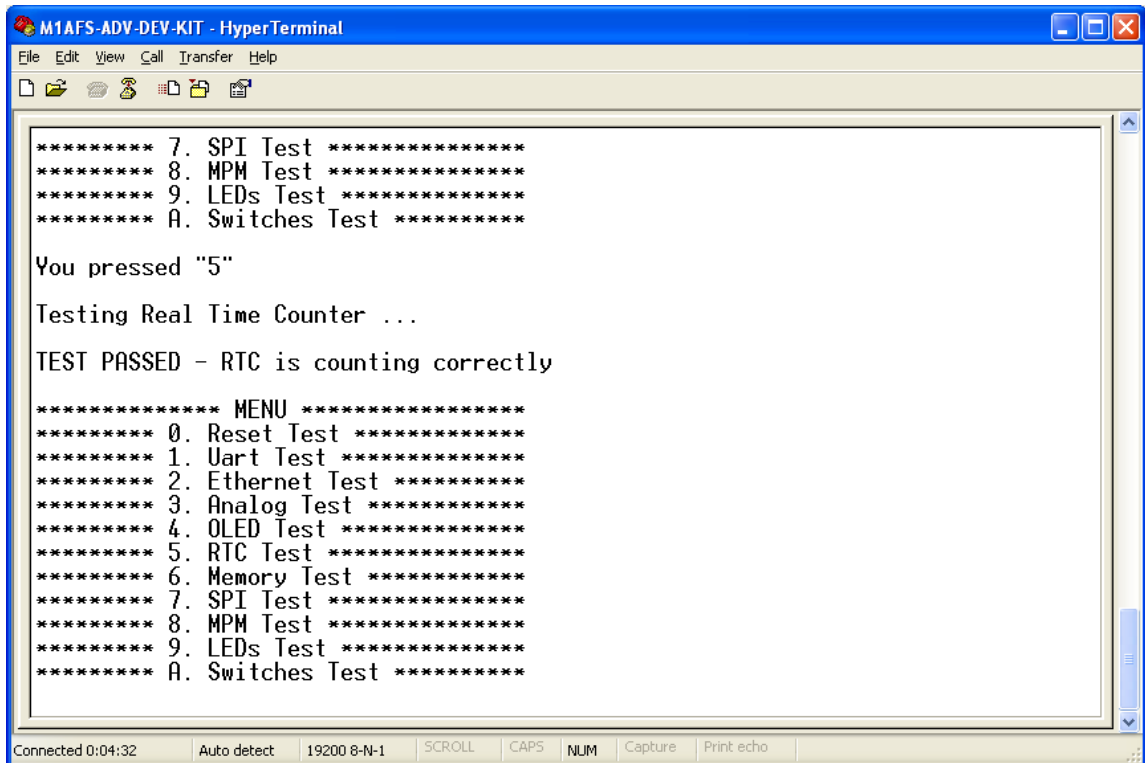

The screenshot shows a HyperTerminal window titled "M1AFS-ADV-DEV-KIT - HyperTerminal". The window contains the following text:

```
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "5"

Testing Real Time Counter ...


TEST PASSED - RTC is counting correctly

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****
```

The status bar at the bottom of the window shows: Connected 0:04:32, Auto detect, 19200 8-N-1, SCROLL, CAPS, NUM, Capture, Print echo.

Figure C-20 · RTC Test Passed

- Enter 6 into the terminal to begin the Memory Test. After several seconds, the screen shown in Figure C-21 should appear.

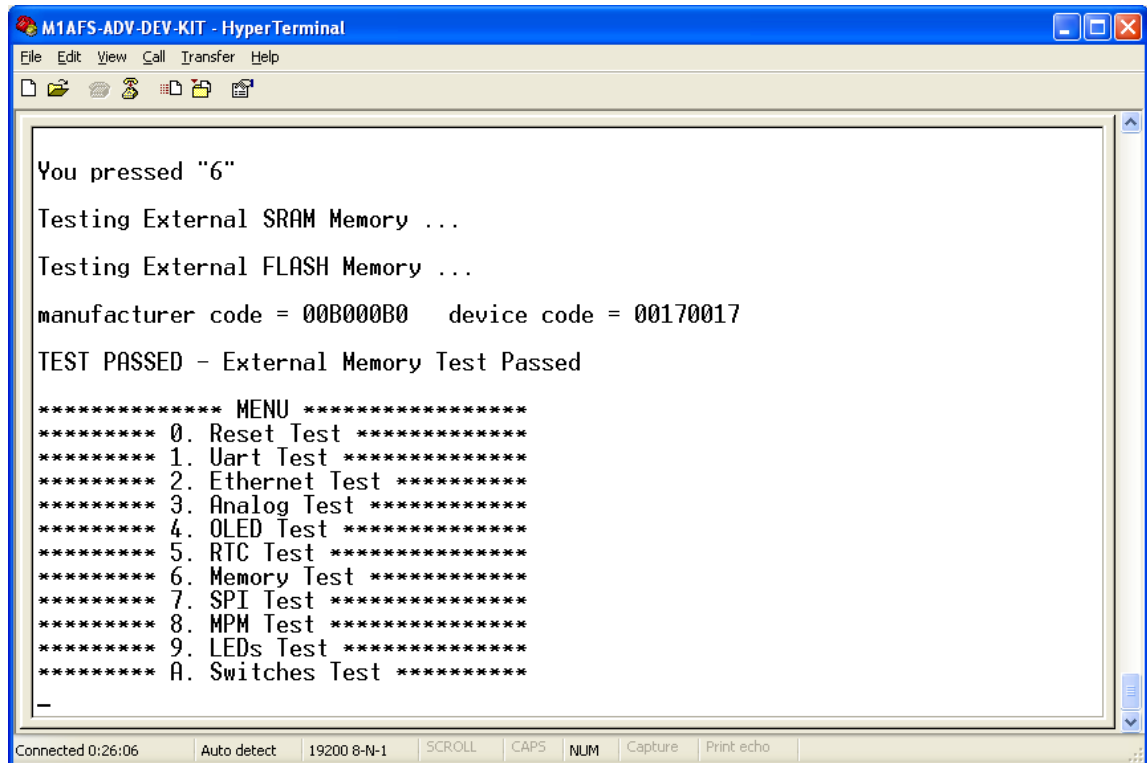

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
You pressed "6"
Testing External SRAM Memory ...
Testing External FLASH Memory ...
manufacturer code = 00B000B0 device code = 00170017
TEST PASSED - External Memory Test Passed

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

-
Connected 0:26:06 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-21 · Memory Test Passed

- Enter 7 into the terminal to begin the SPI Test. The screen shown in Figure C-22 will appear.

```

M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
Manufacturer ID: x1F
Device ID: x26
Writing Address 0 ...
Reading Address 0 ...
TEST PASSED - SPI flash can be read/written
***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****
Connected 0:26:40 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
  
```

Figure C-22 · SPI Test Passed

- Remove jumpers JP12, JP13, JP14, and JP15 from the board, as shown in Figure C-23. Place the jumpers next to the board.

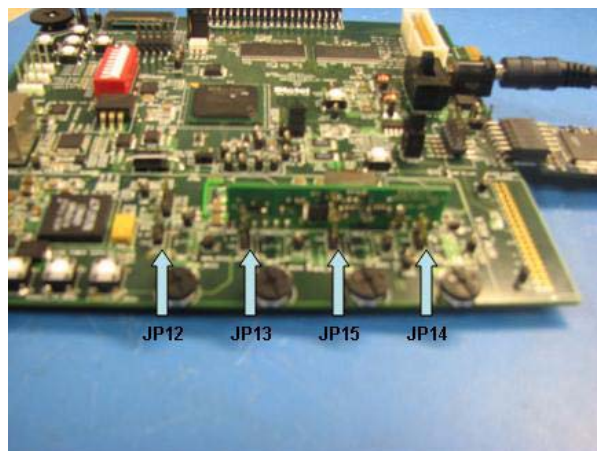


Figure C-23 · Remove Jumpers J12 – J15

16. Enter 8 into the terminal to begin the MPM Test. The screen shown in Figure C-24 will appear.

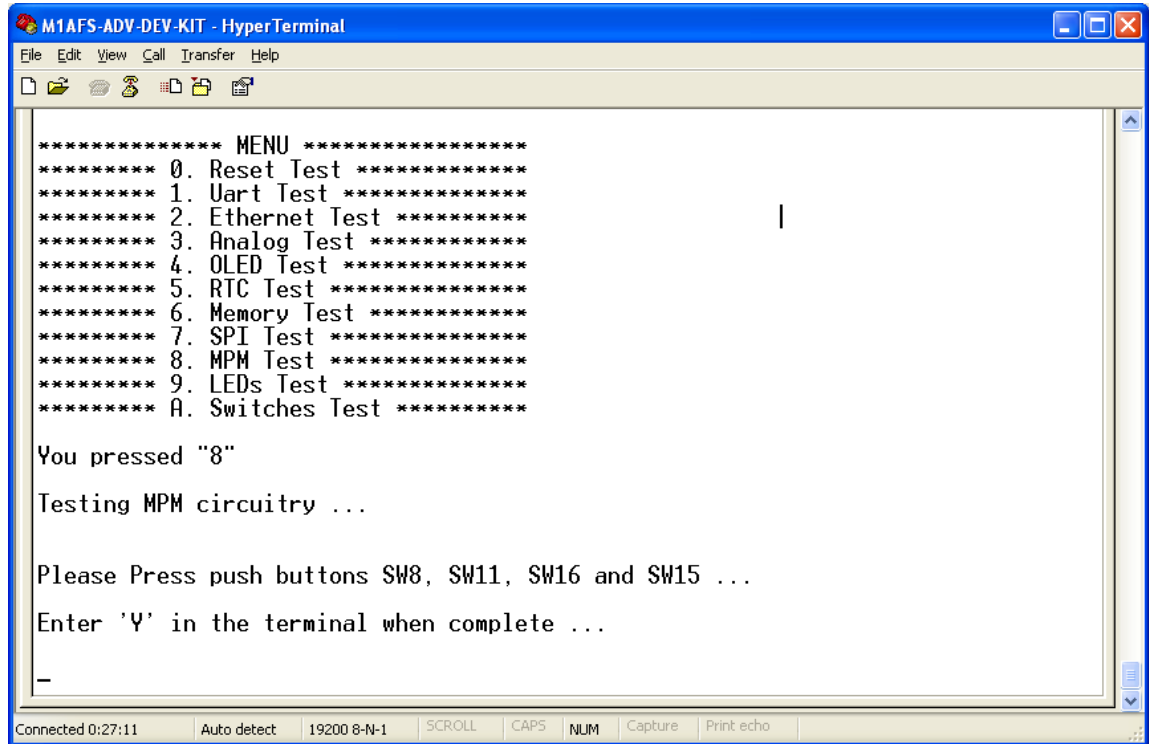


Figure C-24 · MPM Test – Push-Buttons

17. Press push-buttons SW8, SW11, SW16, and SW15, as shown in Figure C-25.


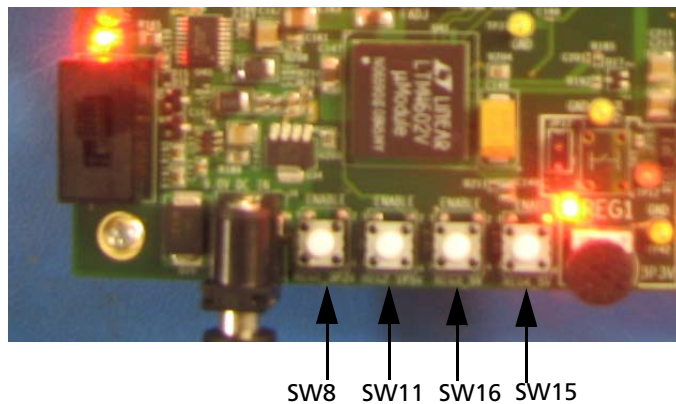


Figure C-25 · Press Push-Buttons SW8, SW11, SW16, and SW15

18. Enter Y in the terminal when complete. The screen shown in [Figure C-26](#) should appear.

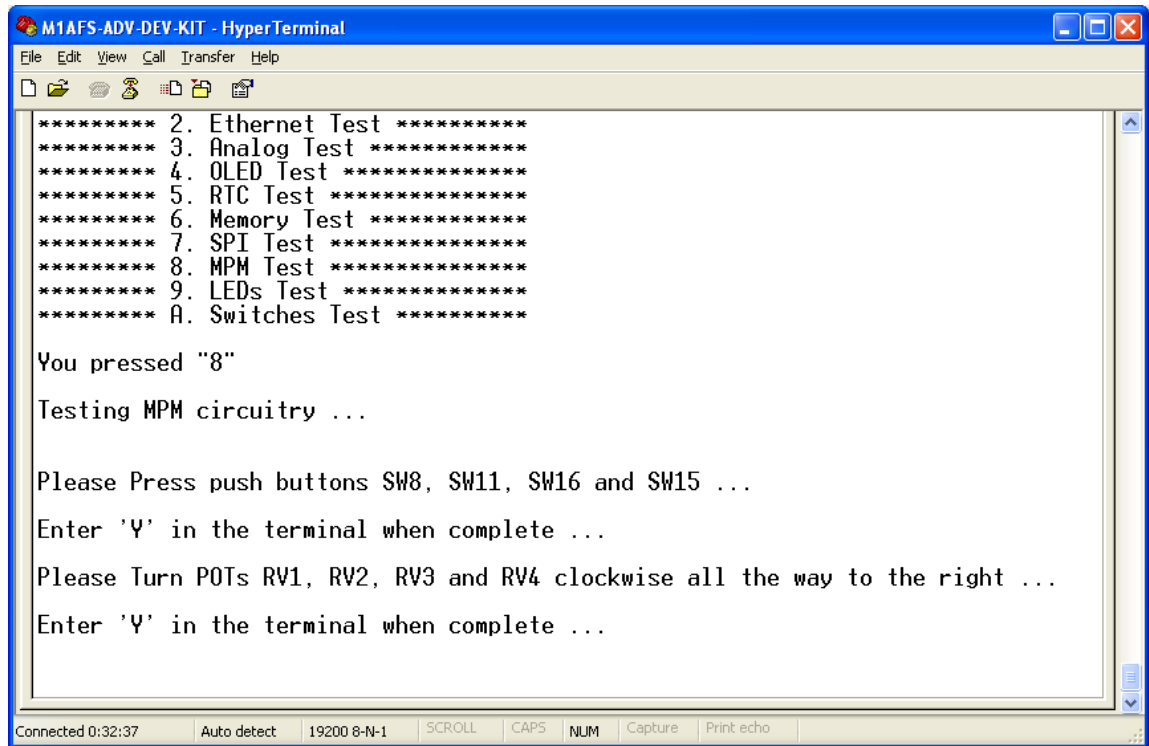

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "8"
Testing MPM circuitry ...

Please Press push buttons SW8, SW11, SW16 and SW15 ...
Enter 'Y' in the terminal when complete ...

Please Turn POTs RV1, RV2, RV3 and RV4 clockwise all the way to the right ...
Enter 'Y' in the terminal when complete ...

Connected 0:32:37  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure C-26 · MPM Test – POTs

19. Turn POTs labeled RV1, RV2, RV3, and RV4 clockwise all the way to the right, as shown in [Figure C-27](#).

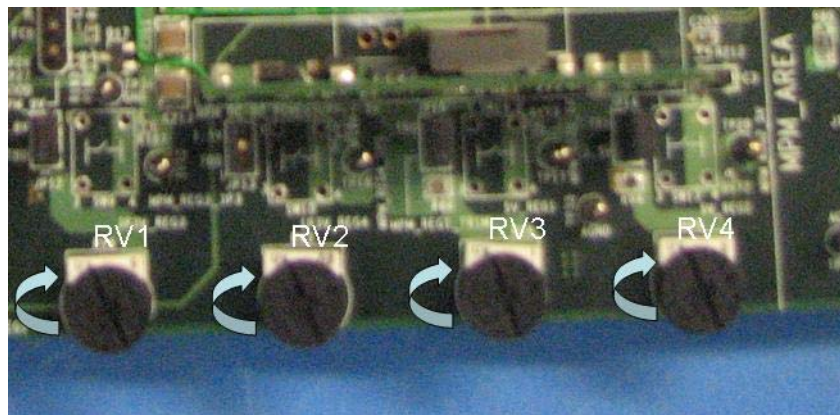


Figure C-27 · Turn POTs RV1 – RV4 Clockwise

20. Enter Y in the terminal when done turning the POTs. The terminal screen shown in [Figure C-28](#) should appear.

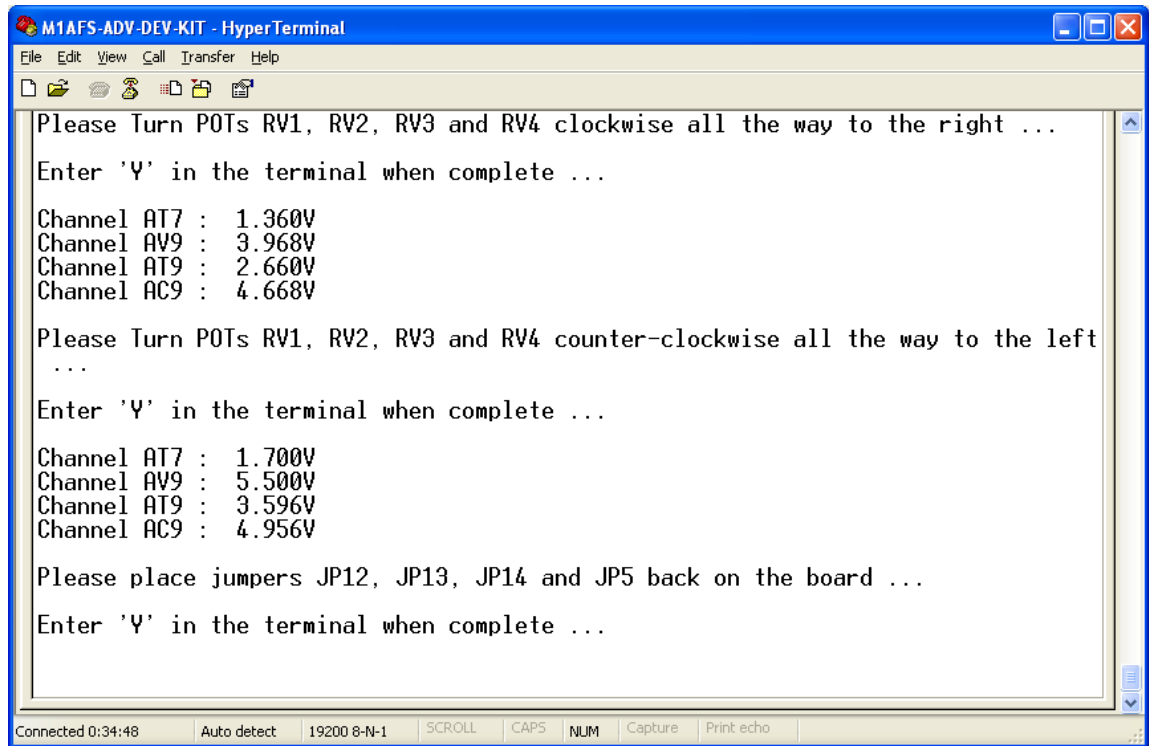


Figure C-28 · MPM Test – Replace Jumpers

The voltages measured on the MPM rails will be printed out. They should be in the following range:

- Channel AT7: 1.2 V – 1.4 V
- Channel AV9: 3.8 V – 4.1 V
- Channel AT9: 2.5 V – 2.8 V
- Channel AC9: 4.4 V – 4.7 V

21. Turn POTs labeled RV1, RV2, RV3, and RV4 counter-clockwise all the way to the left, as shown in [Figure C-29](#).


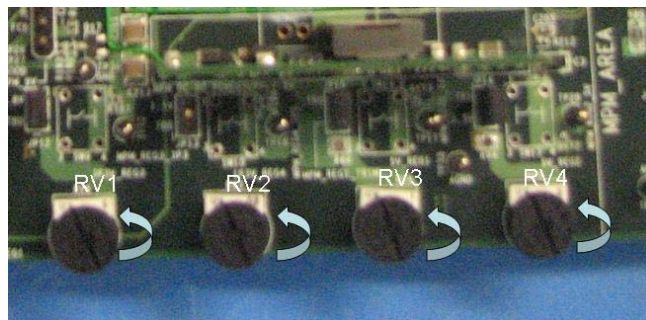


Figure C-29 · Turn POTs RV1 – RV4 Counter-Clockwise

22. Enter Y in the terminal when done turning POTs. The terminal screen shown in Figure C-30 should appear.

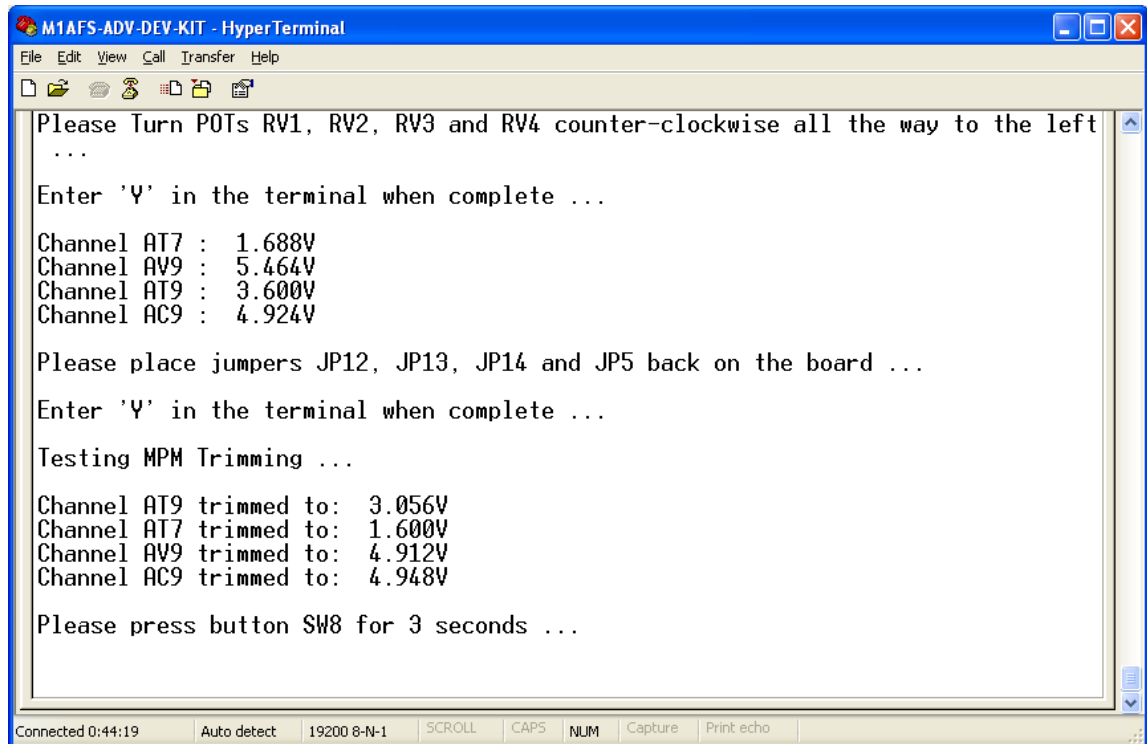

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
Please Turn POTs RV1, RV2, RV3 and RV4 counter-clockwise all the way to the left
...
Enter 'Y' in the terminal when complete ...
Channel AT7 : 1.688V
Channel AV9 : 5.464V
Channel AT9 : 3.600V
Channel AC9 : 4.924V
Please place jumpers JP12, JP13, JP14 and JP5 back on the board ...
Enter 'Y' in the terminal when complete ...
Testing MPM Trimming ...
Channel AT9 trimmed to: 3.056V
Channel AT7 trimmed to: 1.600V
Channel AV9 trimmed to: 4.912V
Channel AC9 trimmed to: 4.948V
Please press button SW8 for 3 seconds ...
Connected 0:44:19 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-30 · MPM Test – Trimming

23. Press and hold push-button SW8 for 2 seconds. The screen shown in Figure C-31 should appear.

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
Channel AV9 : 4.000V
Channel AT9 : 2.784V
Channel AC9 : 4.120V

Please Turn POTs RV3, RV4, RV5 and RV6 counter-clockwise all the way to the left
...
Enter 'Y' in the terminal when complete ...

Channel AT7 : 1.360V
Channel AV9 : 4.012V
Channel AT9 : 2.804V
Channel AC9 : 4.104V

Please place jumpers JP12, JP13, JP14 and JP5 back on the board ...
Enter 'Y' in the terminal when complete ...
Testing MPM Trimming ...

Please press button SW8 for 2 seconds ...


Please press button SW11 for 2 seconds ...

Connected 0:32:58 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-31 · MPM Test – Trimming, Continued

24. Repeat for the other push-buttons.

When complete, the screen shown in Figure C-32 should appear.

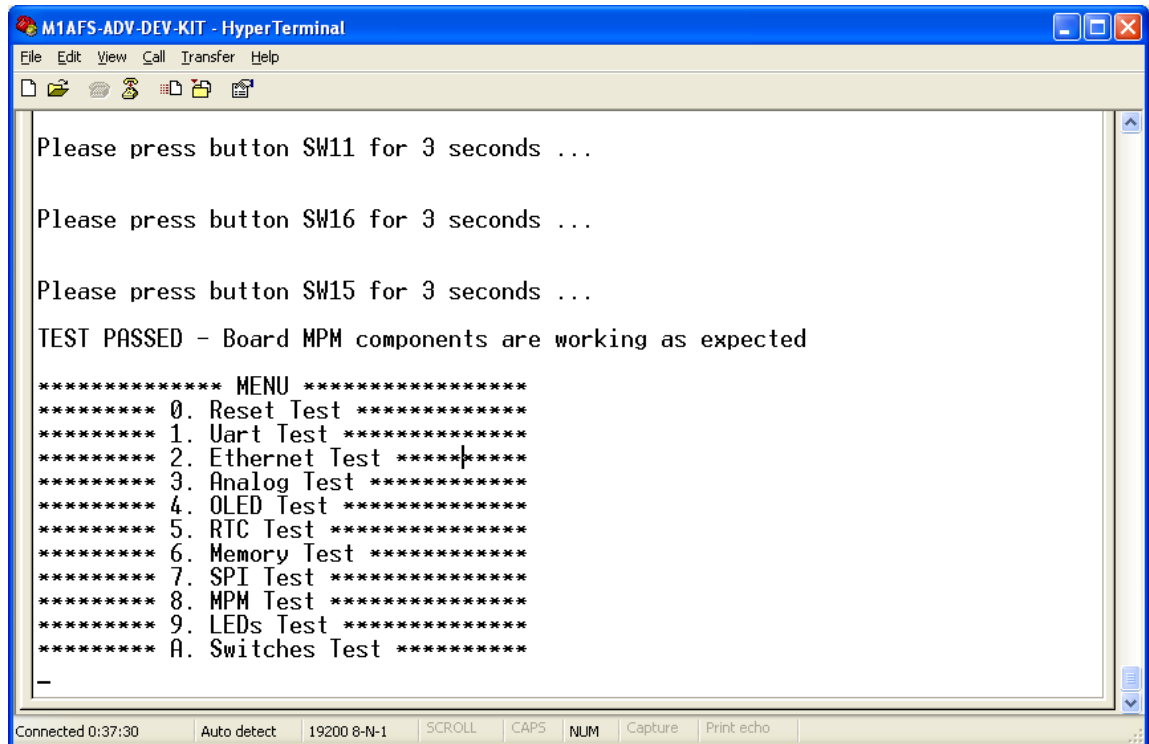

The screenshot shows a HyperTerminal window titled "M1AFS-ADV-DEV-KIT - HyperTerminal". The window contains the following text:

```
Please press button SW11 for 3 seconds ...  
Please press button SW16 for 3 seconds ...  
Please press button SW15 for 3 seconds ...  
TEST PASSED - Board MPM components are working as expected  
  
***** MENU *****  
***** 0. Reset Test *****  
***** 1. Uart Test *****  
***** 2. Ethernet Test *****  
***** 3. Analog Test *****  
***** 4. OLED Test *****  
***** 5. RTC Test *****  
***** 6. Memory Test *****  
***** 7. SPI Test *****  
***** 8. MPM Test *****  
***** 9. LEDs Test *****  
***** A. Switches Test *****  
-  
  
Connected 0:37:30   Auto detect   19200 8-N-1   SCROLL   CAPS   NUM   Capture   Print echo
```

Figure C-32 · MPM Test Passed

25. Enter 9 into the terminal to begin the LEDs Test. The screen shown in Figure C-33 will appear.

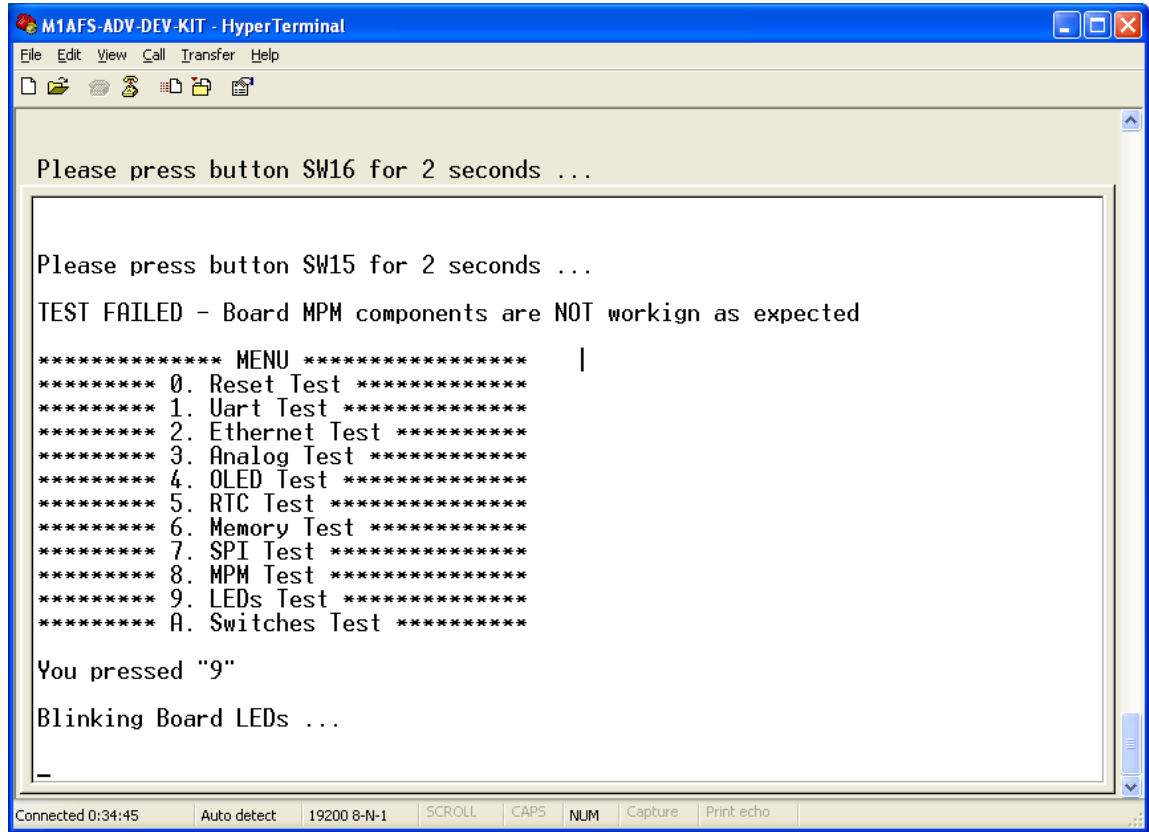


Figure C-33 · LEDs Test

Board LEDs labeled D1, D2, D3, D4, D7, D9, D10, and D11 will blink on and off, as shown in Figure C-34.


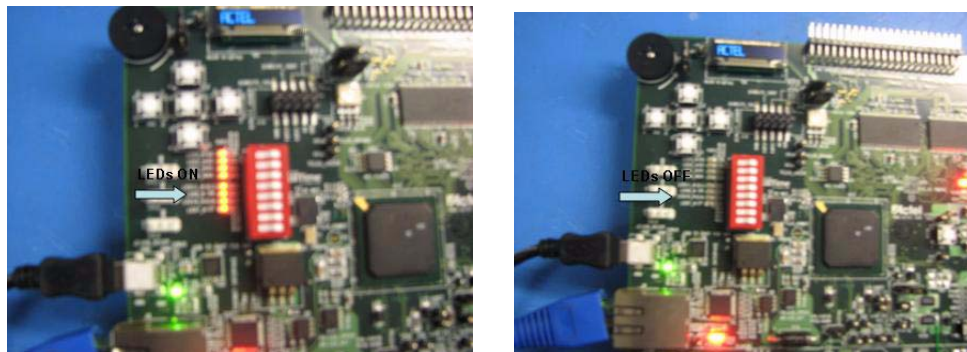


Figure C-34 · LEDs On (left) and LEDs Off (right)

26. If you do observe the LEDs blinking, enter Y in the terminal. Otherwise enter N. If Y was entered, the screen shown in Figure C-35 will be displayed.

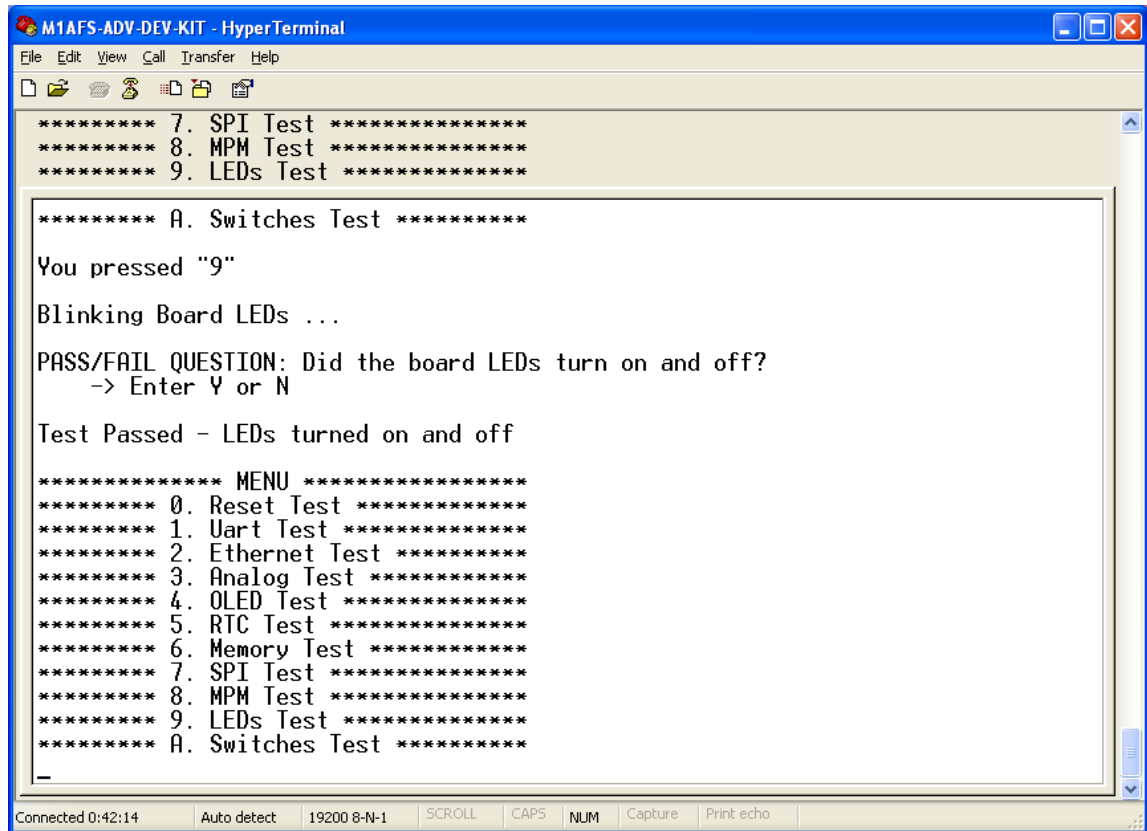

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****

***** A. Switches Test *****

You pressed "9"

Blinking Board LEDs ...

PASS/FAIL QUESTION: Did the board LEDs turn on and off?
-> Enter Y or N


Test Passed - LEDs turned on and off

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

Connected 0:42:14 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-35 · LEDs Test Passed

27. Enter A into the terminal to begin the Switches Test. The screen shown in Figure C-36 will appear.

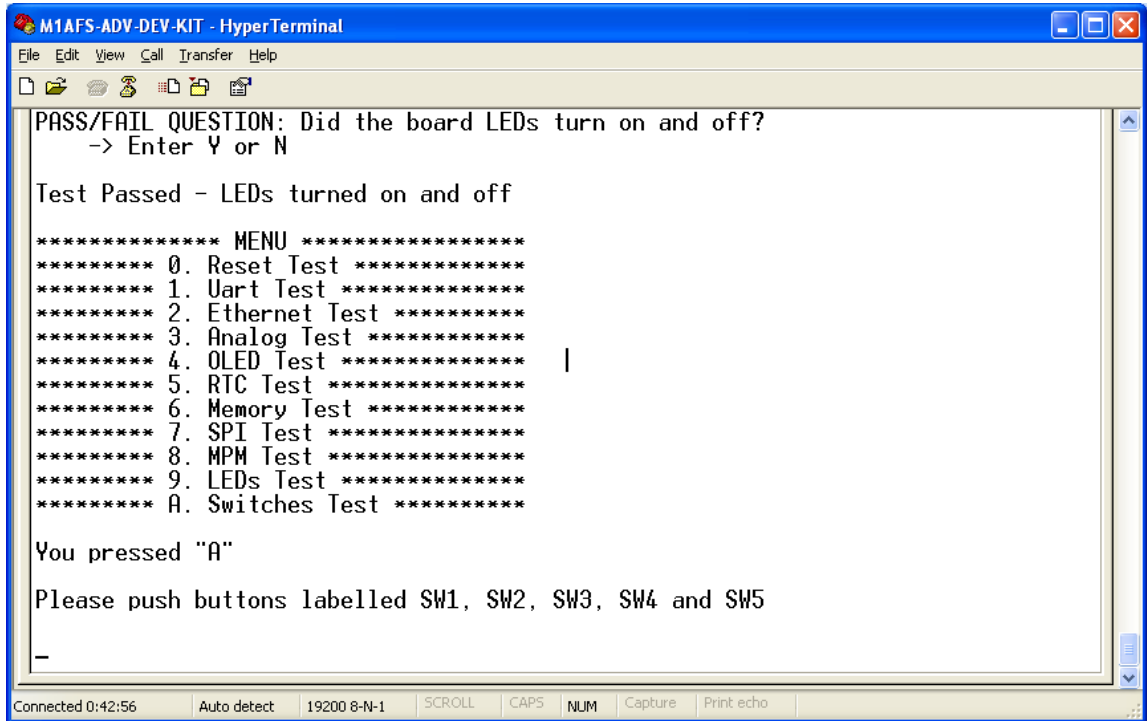

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
PASS/FAIL QUESTION: Did the board LEDs turn on and off?
-> Enter Y or N

Test Passed - LEDs turned on and off

***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****

You pressed "A"

Please push buttons labelled SW1, SW2, SW3, SW4 and SW5

-

Connected 0:42:56 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-36 · Begin Switches Test

28. Press switches on the board labeled SW1, SW2, SW3, SW4, and SW5. After all switches have been pressed, the screen shown in [Figure C-37](#) should be displayed.

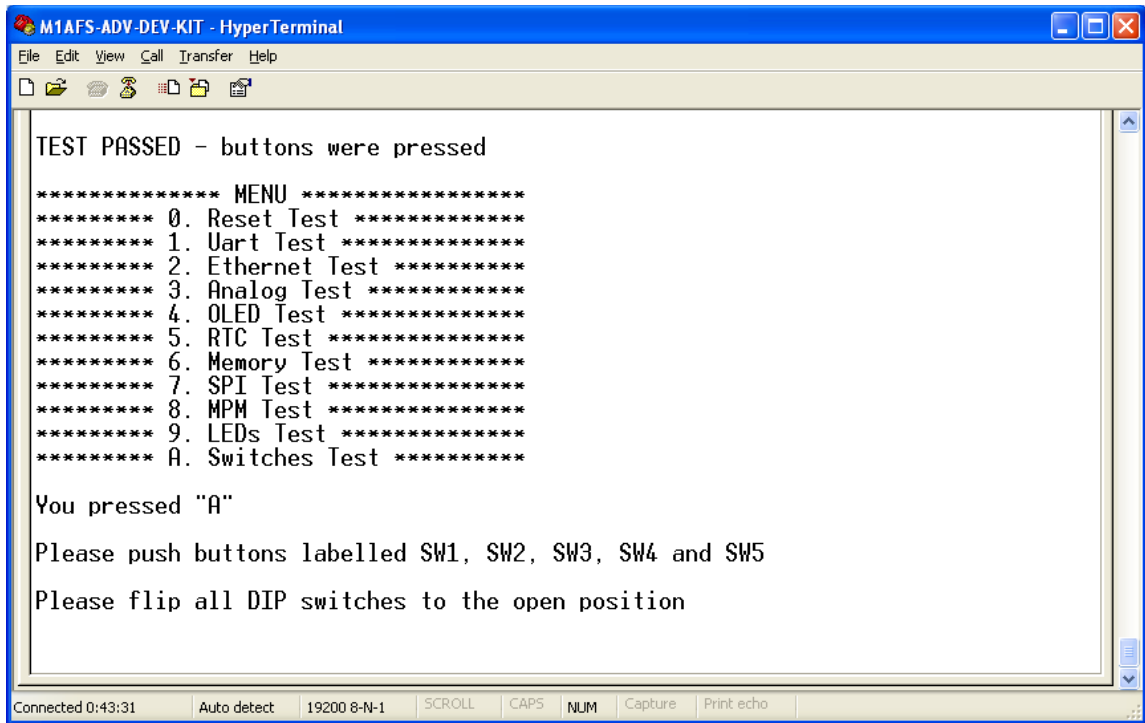


Figure C-37 · Switches Test – DIP Switches

29. Flip all DIP switches on the board to the OPEN position, as shown in [Figure C-38](#).


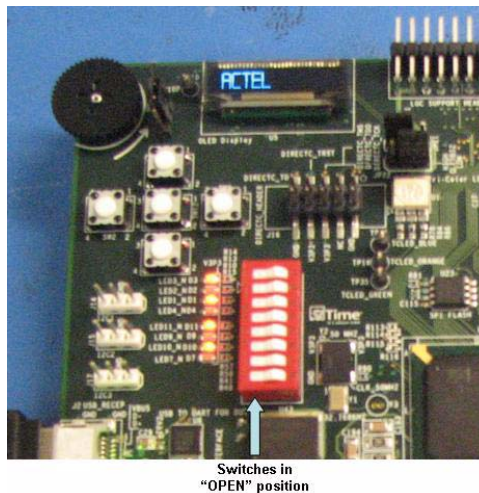


Figure C-38 · DIP Switches Open

The screen shown in [Figure C-39](#) should appear after the switches have been flipped.

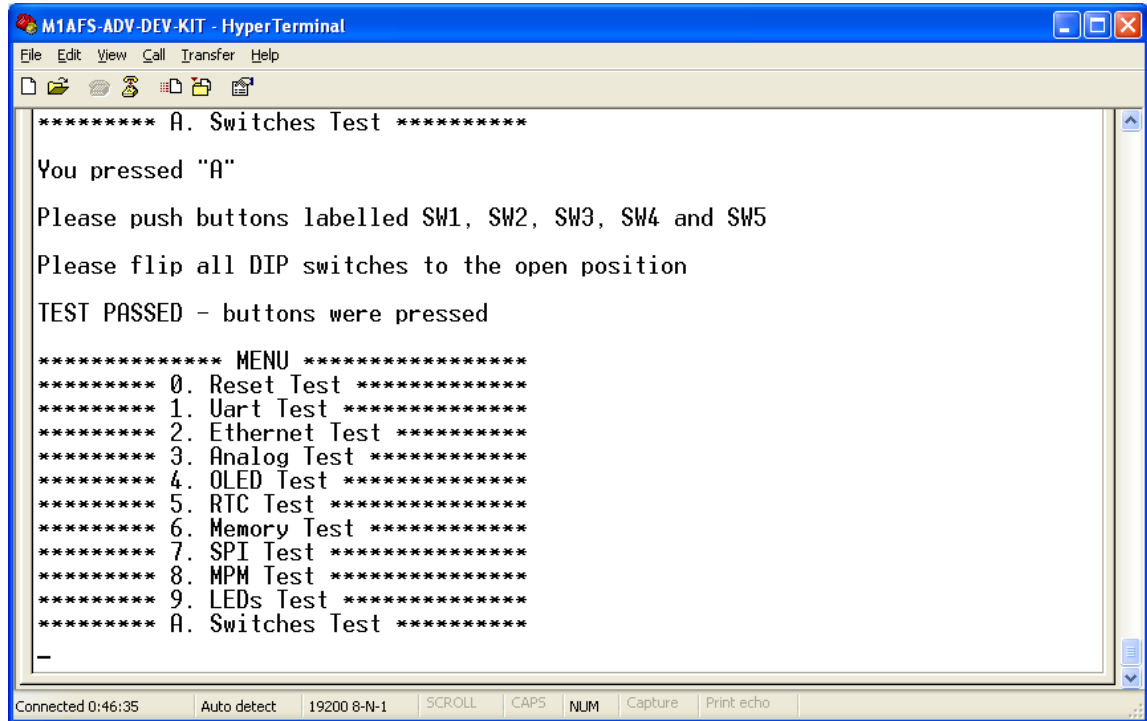

```
M1AFS-ADV-DEV-KIT - HyperTerminal
File Edit View Call Transfer Help
***** A. Switches Test *****
You pressed "A"
Please push buttons labelled SW1, SW2, SW3, SW4 and SW5
Please flip all DIP switches to the open position
TEST PASSED - buttons were pressed
***** MENU *****
***** 0. Reset Test *****
***** 1. Uart Test *****
***** 2. Ethernet Test *****
***** 3. Analog Test *****
***** 4. OLED Test *****
***** 5. RTC Test *****
***** 6. Memory Test *****
***** 7. SPI Test *****
***** 8. MPM Test *****
***** 9. LEDs Test *****
***** A. Switches Test *****
-
Connected 0:46:35 Auto detect 19200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-39 · Switches Test Passed

M1AFS-ADV-DEV-KIT Board Failures

All Tests outlined in [“Running the M1AFS-ADV-DEV-KIT Board Test” on page 66](#) should result in the words “TEST PASSED” being printed on the terminal. If this does not happen, or the words “TEST FAILED” are printed, the test has failed.

If the M1AFS-ADV-DEV-KIT board fails any of the tests outlined in [“Running the M1AFS-ADV-DEV-KIT Board Test” on page 66](#), the board being tested is not functional. Put this non-functional board in an area separate from the boards which have passed testing and those which are yet to be tested. Keep these nonfunctional M1AFS-ADV-DEV-KIT boards for further investigation.

Product Support

Actel backs its products with various support services including Customer Service, a Customer Technical Support Center, a web site, an FTP site, electronic mail, and worldwide sales offices. This appendix contains information about contacting Actel and using these support services.

Customer Service

Contact Customer Service for non-technical product support, such as product pricing, product upgrades, update information, order status, and authorization.

From Northeast and North Central U.S.A., call **650.318.4480**

From Southeast and Southwest U.S.A., call **650.318.4480**

From South Central U.S.A., call **650.318.4434**

From Northwest U.S.A., call **650.318.4434**

From Canada, call **650.318.4480**

From Europe, call **650.318.4252** or **+44 (0) 1276 401 500**

From Japan, call **650.318.4743**

From the rest of the world, call **650.318.4743**

Fax, from anywhere in the world **650.318.8044**

Actel Customer Technical Support Center

Actel staffs its Customer Technical Support Center with highly skilled engineers who can help answer your hardware, software, and design questions. The Customer Technical Support Center spends a great deal of time creating application notes and answers to FAQs. So, before you contact us, please visit our online resources. It is very likely we have already answered your questions.

Actel Technical Support

Visit the [Actel Customer Support website \(www.actel.com/support/search/default.aspx\)](http://www.actel.com/support/search/default.aspx) for more information and support. Many answers available on the searchable web resource include diagrams, illustrations, and links to other resources on the Actel web site.

Website

You can browse a variety of technical and non-technical information on Actel's [home page](http://www.actel.com), at www.actel.com.

Contacting the Customer Technical Support Center

Highly skilled engineers staff the Technical Support Center from 7:00 A.M. to 6:00 P.M., Pacific Time, Monday through Friday. Several ways of contacting the Center follow:

Email

You can communicate your technical questions to our email address and receive answers back by email, fax, or phone. Also, if you have design problems, you can email your design files to receive assistance. We constantly monitor the email account throughout the day. When sending your request to us, please be sure to include your full name, company name, and your contact information for efficient processing of your request.

The technical support email address is tech@actel.com.

Phone

Our Technical Support Center answers all calls. The center retrieves information, such as your name, company name, phone number and your question, and then issues a case number. The Center then forwards the information to a queue where the first available application engineer receives the data and returns your call. The phone hours are from 7:00 A.M. to 6:00 P.M., Pacific Time, Monday through Friday. The Technical Support numbers are:

650.318.4460

800.262.1060

Customers needing assistance outside the US time zones can either contact technical support via email (tech@actel.com) or contact a local sales office. [Sales office listings](#) can be found at www.actel.com/company/contact/default.aspx.

Index

A

Actel
 electronic mail 89
 telephone 90
 web-based technical support 89
 website 89

B

battery charging 21
board description 8

C

clock oscillator 25
components
 descriptions and connections 22
connections 15
contacting Actel
 customer service 89
 electronic mail 89
 telephone 90
 web-based technical support 89
contents, kit 6
crystal oscillator 26
current sensing circuit 23
customer service 89

D

DIP switch schematic 29
DirectC programming 38

E

ethernet interface 33

F

FADK
 board stack up 51
 push-button switches 12
 test points 13
FPGA
 connections 15
 description 15
FPGA pin list 43
Fusion Advanced Development Kit
 board components 8
Fusion advanced microprocessor 16

G

gate driver block 24

H

hardware components 15
hardware installation 11

I

I/O pin connections 15
I2C interface 30
I2C interface schematic 30
installation of hardware 11
installation of software 11
interface connector 32
interface connector schematic 32

J

JTAG header 41
jumper settings 11

K

kit contents 6

L

LCPS 40
 photograph 40
LEDs 28
LEDs schematic 29
low-cost programming stick (LCPS) 40

M

M1AFS1500
 key features 15
mixed-signal header 39
MOSFET 24
MPM 17
 board components 9, 18
 push-button switches 12
 test points 14

N

navigation switches 28

O

OLED display 31

OLED display schematic 31

P

parallel flash 37
 pin list 43
 potentiometer circuit 22
 power management, mixed-signal 17
 power sources 16
 power supply
 1.5 V 19
 3.3 V 18
 5 V 20, 21
 product support 89–90
 customer service 89
 electronic mail 89
 technical support 89
 telephone 90
 website 89
 push-button switch
 PUB 28
 push-button switches 28
 push-button switches, settings 12
 push-button system reset 27
 PWM circuit 22

R

RealView header 33
 reset
 push-button system reset 27
 resources 6

S

schematic
 25 MHz off-chip crystal oscillator 26
 battery charging and discharging circuit 21
 clock oscillator 25
 current sensing (1.5 V) 23
 current sensing (3.3 V) 23
 DIP switch 29
 DirectC header 38
 ethernet interface 34
 Fusion clock options 26
 I2C interface 30
 interface connector 32

JTAG header for LCPS connection 41
 LEDs 29
 mixed-signal header 39
 MOSFET (1.5 V) 24
 MOSFET (3.3 V) 24
 MPM DC-DC power supply 2, 5 V 21
 MPM DC-DC power supply 5 V 20
 MPM low drop out power supply, 1.5 V 19
 MPM switching power supply, 3.3 V 18
 OLED display 31
 parallel flash components 37
 potentiometer circuit 22
 push-button switch for PUB 28
 push-button system reset 27
 PWM circuit 22
 RealView header 33
 SPI flash 37
 SRAM components 37
 temperature diode 23
 test and navigation switches 28
 thermistor 39
 USB-to_UART interface 35
 settings
 jumper 11
 push-button switches 12
 switch 11
 software installation 11
 SPI flash 37
 SRAM components 36
 switch settings 11

T

technical support 89
 temperature monitor diode 23
 test and navigation switches 28
 test points 13

U

USB-to-UART interface 35
 user LEDs 28

W

web-based technical support 89



Actel is the leader in low-power and mixed-signal FPGAs and offers the most comprehensive portfolio of system and power management solutions. Power Matters. Learn more at www.actel.com.

Actel Corporation • 2061 Stierlin Court • Mountain View, CA 94043 • USA

Phone 650.318.4200 • Fax 650.318.4600 • Customer Service: 650.318.1010 • Customer Applications Center: 800.262.1060

Actel Europe Ltd. • River Court, Meadows Business Park • Station Approach, Blackwater • Camberley Surrey GU17 9AB • United Kingdom

Phone +44 (0) 1276 609 300 • Fax +44 (0) 1276 607 540

Actel Japan • EXOS Ebisu Building 4F • 1-24-14 Ebisu Shibuya-ku • Tokyo 150 • Japan

Phone +81.03.3445.7671 • Fax +81.03.3445.7668 • <http://ljp.actel.com>

Actel Hong Kong • Room 2107, China Resources Building • 26 Harbour Road • Wanchai • Hong Kong

Phone +852 2185 6460 • Fax +852 2185 6488 • www.actel.com.cn

50200173-1/8.09