


## BJ Jumper bar (cont.)

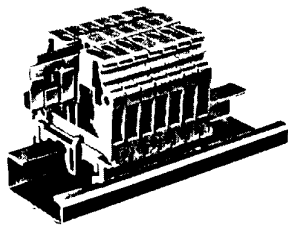


**BJA6** Jumper bar for alternated jumping

This accessory permits the interconnection of consecutive or non-consecutive blocks

For this, detach the studs manually where connection is not required. The use of two bars permits alternated jumping.

A captive screw is mounted on each stud. This jumper bar is delivered with a protective cover snapped onto the top of the block, assuring protection against touch.

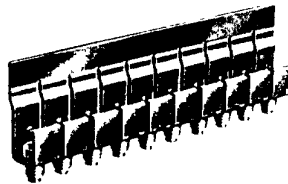

**BJA6** 116 541.12

**Note .**  
At each extremity of the jumpers the assembly must be insulated. For this, use either a closed block or a circuit separator SC.

**BJDP** Universal jumper bar

This accessory permits the interconnection of two consecutive blocks with different spacing. It is composed of


- 2 posts
- 2 screws
- 2 washers
- 1 connector plate



			IV	IV	8	Spacing of block B
		V	IV	IV	10	
	III	III	III	III	12	
II	I	I	I	I	16	
12	10	8	6,5	6		
Spacing of block A						

Kit n° I	<b>BJDP1</b>	<b>174 771.02</b>
Kit n° II	<b>BJDP2</b>	<b>174 772.03</b>
Kit n° III	<b>BJDP3</b>	<b>174 773.04</b>
Kit n° IV	<b>BJDP4</b>	<b>174 781.25</b>
Kit n° V	<b>BJDP5</b>	<b>174 782.26</b>

- Note .**
- spacing of block 6 corresponds to M 4/6 and its derivatives
  - spacing of block 6,5 corresponds to M 4/6,5 and its derivatives
  - spacing of block 8 corresponds to M 6/8 and its derivatives
  - spacing of block 10 corresponds to M 10/10 and its derivatives
  - spacing of block 12 corresponds to M 16/12 and its derivatives
  - spacing of block 16 corresponds to M 35/16 and its derivatives

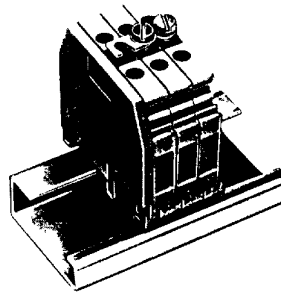

**BJP** Pivoting jumper bar

This accessory is for connecting or disconnecting two consecutive blocks, open or closed. The use of a third non-connected block is recommended, to allow for a "rest" position of the rotating jumper link. We recommend the use of a circuit separator in order to preserve the insulation. The BJP is mounted in the center of the terminal blocks, the connector bars of which are tapped for receiving the inter-connection accessories.




## EL Connector plate

This accessory is used for connecting electrically two assembled interconnections with 6 mm 238" spacing, 8 mm 315" spacing or 6 mm 238" and 8 mm 315" spacing



**EL6** 173 627.21

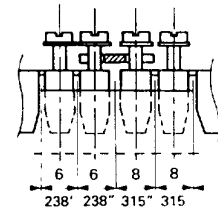

H