
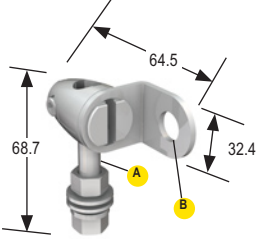 
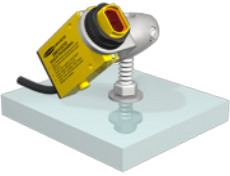 
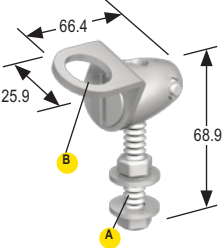 
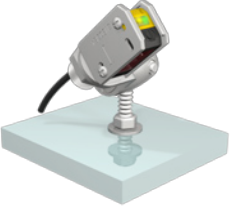 
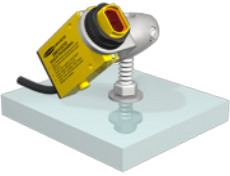 
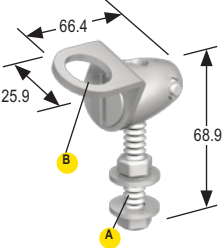 
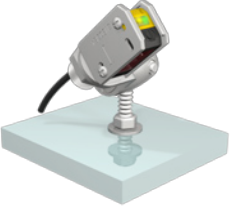 
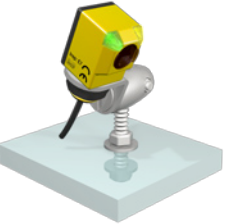 
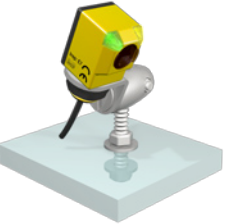 


Mounting Brackets

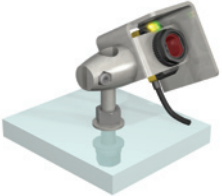 
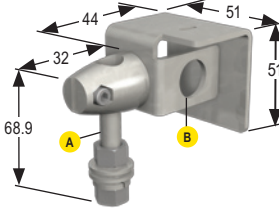 

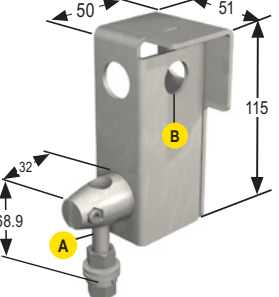 
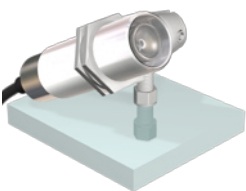 
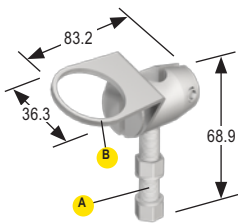 
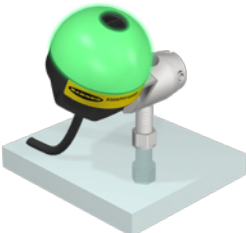 
Model		Used With	Features	Dimensions (all measurements in mm)									
SMB12FA (3/8 - 16 x 2" bolt)	Barrel Mount 	<ul style="list-style-type: none"> • M12 • MINI-BEAM[®]2 	<ul style="list-style-type: none"> • Swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • 12 mm sensor mounting hole 	 <p>A = Bolt thread by model Hole size: B = ø 12.1</p>									
	SMB12FAM10 (M10 - 1.5 x 50 bolt)					SMB18FA (3/8 - 16 x 2" bolt)	Barrel Mount 	<ul style="list-style-type: none"> • QS18 • MINI-BEAM • S18/M18/T18 • S18U • QS18U • Q45UR M18C2 • Q45UR S18C2 • T18U • T-GAGE M18T • EZ-LIGHT M18 • EZ-LIGHT T18 	<ul style="list-style-type: none"> • Swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • 18 mm sensor mounting hole 	 <p>A = Bolt thread by model Hole size: B = ø 18.1</p>	Bracket-to-Bracket 	<ul style="list-style-type: none"> • SMBQS18A • SMBQS18Y • SMBQS18YL • SMB4050YL 	SMB18FAM10 (M10 - 1.5 x 50 bolt)
SMB18FA (3/8 - 16 x 2" bolt)	Barrel Mount 	<ul style="list-style-type: none"> • QS18 • MINI-BEAM • S18/M18/T18 • S18U • QS18U • Q45UR M18C2 • Q45UR S18C2 • T18U • T-GAGE M18T • EZ-LIGHT M18 • EZ-LIGHT T18 	<ul style="list-style-type: none"> • Swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • 18 mm sensor mounting hole 	 <p>A = Bolt thread by model Hole size: B = ø 18.1</p>									
	Bracket-to-Bracket 				<ul style="list-style-type: none"> • SMBQS18A • SMBQS18Y • SMBQS18YL • SMB4050YL 	SMB18FAM10 (M10 - 1.5 x 50 bolt)	Base Mount 	<ul style="list-style-type: none"> • Q25 • QS18 Universal Voltage 					
SMB18FAM10 (M10 - 1.5 x 50 bolt)	Base Mount 	<ul style="list-style-type: none"> • Q25 • QS18 Universal Voltage 											

⚠ WARNING . . . Not To Be Used for Personnel Protection

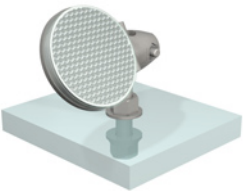 
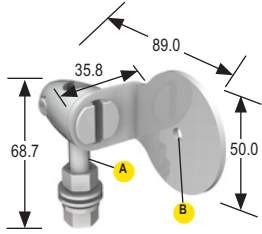 
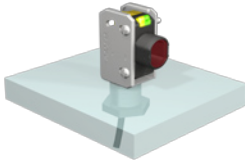 
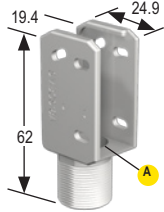 
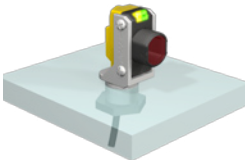 
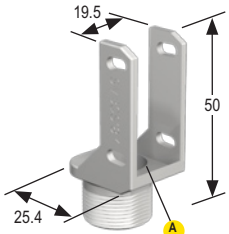 

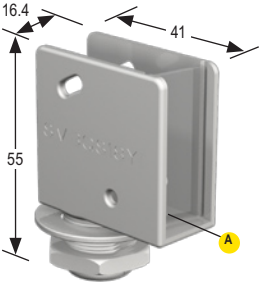 
Never use these products as sensing devices for personnel protection. Doing so could lead to serious injury or death.

These sensors do NOT include the self-checking redundant circuitry necessary to allow their use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition. Consult your current Banner Safety Products catalog for safety products which meet OSHA, ANSI and IEC standards for personnel protection.

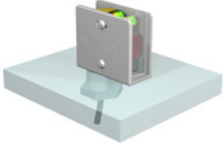 
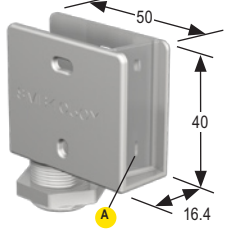 

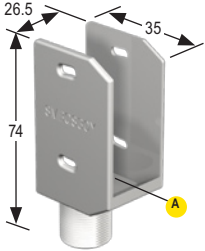 
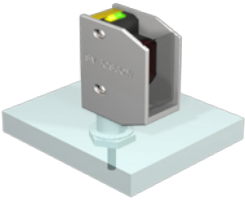 
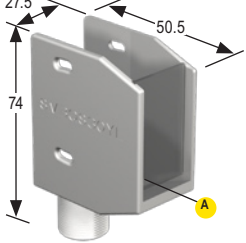 
Accessory Mounting Brackets

<p>SMB18AFA (3/8 - 16 x 2" bolt)</p>	<p>Barrel Mount</p> 	<ul style="list-style-type: none"> • T18 • QS18 	<ul style="list-style-type: none"> • Protective, swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • Mounting hole for 18 mm sensors 	 <p>• A = Bolt thread by model Hole size: B = \varnothing 18.1</p>
<p>SMB18AFAM10 (M10 - 1.5 x 50 bolt)</p>				
<p>SMB18ATFA (3/8 - 16 x 2" bolt)</p>		<ul style="list-style-type: none"> • QS18 (AC/DC Models) 	<ul style="list-style-type: none"> • Protective, swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • Mounting hole for 18 mm sensors 	 <p>• A = Bolt thread by model Hole size: B = \varnothing 18.1</p>
<p>SMB18ATFAM10 (M10 - 1.5 x 50 bolt)</p>				
<p>SMB30FA (3/8 - 16 x 2" bolt)</p>	<p>Barrel Mount</p> 	<ul style="list-style-type: none"> • QS30 • SM30/SMI30 • S30 • T30 • T30U • EZ-LIGHT T30 		 <p>• A = Bolt thread by model Hole size: B = \varnothing 30.1</p>
	<p>Base Mount</p>		<ul style="list-style-type: none"> • Swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • 30 mm sensor mounting hole 	
<p>SMB30FAM10 (M10 - 1.5 x 50 bolt)</p>		<ul style="list-style-type: none"> • Q40 • Q45 • Q45U • Q45UR • QT50U • OMNI-BEAM • OTB/LTB • VTB • STB • K50 • QT50R • EZ-LIGHT K50L 		

Accessory Mounting Brackets

<p>SMB50RFA (3/8 - 16 x 2" bolt)</p>	<p>Round Reflector Mount</p> 	<ul style="list-style-type: none"> • BRT-35DM • BRT-50D • BRT-42D • BRT-34T 	<ul style="list-style-type: none"> • Swivel bracket with tilt and pan movement for precision adjustment • Easy sensor mounting to extruded rail T-slots • Metric and inch size bolts available • 50 mm diameter plate for mounting a round reflector 	 <p>● A = Bolt thread by model ● Hole size: ● B = \varnothing 5.4</p>
<p>SMB50RFAM10 (M10 - 1.5 x 50 bolt)</p>				
<p>SMBQS18A</p>	<p>Side Mount</p> 	<ul style="list-style-type: none"> • QS18 (DC only) • QS18U • QS18AF 	<ul style="list-style-type: none"> • Wrap-around, die-cast protection bracket • Base fits 18 mm hole • Metal hex nut, lock washer and grommet included 	 <p>Hole size: ● A = \varnothing 15,3</p>
<p>SMBQS18Y</p>	<p>Side Mount</p> 	<ul style="list-style-type: none"> • QS18 (DC only) • QS18U 	<ul style="list-style-type: none"> • Die-cast bracket for 18 mm holes • Metal hex nut and lock washer included • Allows $\pm 8^\circ$ tilt adjustment for cabled sensors 	 <p>Hole size: ● A = \varnothing 15.3</p>
<p>SMBQS18YL</p>	<p>Side Mount</p> 	<ul style="list-style-type: none"> • QS18AF 	<ul style="list-style-type: none"> • Heavy-duty die-cast bracket for industrial protection • M18 vertical mount option • Nut and lock washer included • Replaceable window (QS18LAF250 only) 	 <p>Hole size: ● A = \varnothing 15.3</p>

Accessory Mounting Brackets

<p>SMB4050YL</p>	<p>Base Mount</p> 	<ul style="list-style-type: none"> • QS18 (DC only) (except QS18AF) 	<ul style="list-style-type: none"> • Heavy-duty die-cast bracket designed for industrial protection • M18 vertical mount option • Nut and lock washer included • Replaceable window for use with some sensor models • See datasheet 140733 for compatibility information 	 <p>Hole size: A = ø 15.3</p>
<p>SMBQS30Y</p>	<p>Side Mount</p> 	<ul style="list-style-type: none"> • QS30 (DC only) 	<ul style="list-style-type: none"> • Wrap-around die-cast bracket • M18 vertical mount option • ± 8° tilt adjustment with cabled units • Nut and lock washer included 	 <p>Hole size: A = ø 15.3</p>
<p>SMBQS30YL</p>	<p>Side Mount</p> 	<ul style="list-style-type: none"> • QS30 (DC only) 	<ul style="list-style-type: none"> • Heavy-duty die-cast bracket designed for industrial protection • M18 vertical mount option • Replaceable window • Nut and lock washer included 	 <p>Hole size: A = ø 15.3</p>

For additional mounting options, see applicable product datasheets



WARRANTY: Banner Engineering Corp. warrants its products to be free from defects for one year. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture found to be defective at the time it is returned to the factory during the warranty period. This warranty does not cover damage or liability for the improper application of Banner products. This warranty is in lieu of any other warranty either expressed or implied.

P/N 143737 rev. B

Banner Engineering Corp., 9714 Tenth Ave. No., Minneapolis, MN USA 55441 • Phone: 763.544.3164 • www.bannerengineering.com • Email: sensors@bannerengineering.com