Digital Fiber Amplifier

## E3X-DA-N




\* UL-listed including UL991 tests/evaluations Applicable standard: UL3121-1 Standards for additional tests/evaluations for applications: UL991, SEMI S2-0200

#### **Features**

# Reducing power line wiring meaning space is saved. New design for easier maintenance. Industry First Patent pending

The connector type that uses the wire-saving connector supplies power to the single-conductor slave connectors via the three-conductor master connector. Hence, the following three has been made possible.

- 1. Wiring is much simpler.
- Relay connectors are not required meaning that space is used more efficiently and costs are reduced.
- Simple inventory control because of no differentiation between master and slave in the amplifier section.

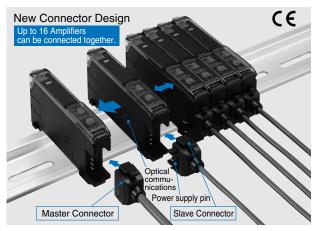


## Super digital display by use of the Auto Power Control (APC) circuit Industry First


The incident level of LEDs used in sensors is prone to deteriorate with time and as a result, detection becomes unstable.

Using the APC (auto power control) circuit for the first time as the fiber sensor, the E3X-DA-N series has no digital value variations, realizing severe detection.

This makes the E3X-DA-N ideal for applications where a high degree of sensitivity is required, such as detecting crystal glass.

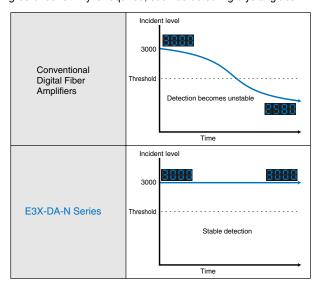

#### Power consumption reduced by 70%.

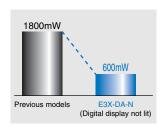

Power consumption has been reduced up to about 70% from 1800 mW to 600 mW. (If the digital display is off)



#### The digital display can be changed to full-OFF or Dark-ON during RUN. Eco mode

Power consumption can be reduced by setting the display to Full-OFF/Dark-ON in applications where the digital display is rarely looked at during RUN.

(Can be set at the Mobile Console only)

## Beeper-sized, new-generation Mobile Console unleashing the power of the ultimate fiber amplifier

Remote setting/adjustment function

## Setting/teaching/fine adjustment can be made at the fiber front-end.

The Mobile Console has enabled setting and teaching at the fiber front-end, which could only be made at the amplifier. You can perform major adjustments while looking at the work position, etc.



#### Simultaneous turning possible using group teaching.

While teaching had to be performed for each Amplifier separately, it can now be performed for several Amplifiers at once using the Mobile Console.



#### Differences in incident light avoided by group zero-reset

The incident levels of several amplifiers can be batchreset to zero by the group zero-reset. This feature is useful for reducing differences between the amplifiers.




### Incident level and threshold can be displayed simultaneously.



Sensor head flashing during Amplifier operation Alternatively, the amplifier channel can be displayed.

If the amplifier being operated is away from the sensor head, the sensor head can be flashed or the amplifier channel can be displayed.



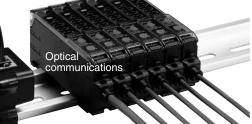

## Ordering Information

## Amplifier units Prewired

Item	Shape	Control output	Model			
item	Shape	Control output	NPN output	PNP output		
Standard models		ON/OFF output	E3X-DA11-N	E3X-DA41-N		
Monitor-output models		·ON/OFF output ·Monitor output	E3X-DA21-N	E3X-DA51-N		
Mark-detecting models (Blue LED)			E3X-DAB11-N	E3X-DAB41-N		
Mark-detecting models (Green LED)			E3X-DAG11-N	E3X-DAG41-N		
Infrared models	6 24		E3X-DAH11-N	E3X-DAH41-N		
Differential output type			E3X-DA11D			
Water-resistant models		ON/OFF output	E3X-DA11V	E3X-DA41V		
Twin-output models			E3X-DA11TW	E3X-DA41TW		

#### Connector type

Item	Chana	Shape Applicable Connector			Model		
item	Snape	(order separately)		Control output	NPN output	PNP output	
Standard models		Master	E3X-CN11	ON/OFF output	E3X-DA6	E3X-DA8	
Standard models		Slave	E3X-CN12	ON/OFF output	L3X-DA0	L3X-DA6	
Monitor-output models		Master	E3X-CN21	·ON/OFF output	E3X-DA7	E3X-DA9	
Monitor-output models		Slave	E3X-CN22	·Monitor-output	ESX-DA7	E3X-DA9	
Mark-detecting models		Master	E3X-CN11		E3X-DAB6	EQV DADO	
(Blue LED)		Slave	E3X-CN12		E3X-DAB0	E3X-DAB8	
Mark-detecting models		Master	E3X-CN11	-	E3X-DAG6	E3X-DAG8	
(Green LED)		Slave	E3X-CN12		E3X-DAG6	E3X-DAG6	
Infrared models		Master	E3X-CN11		E3X-DAH6	E3X-DAH8	
mirared models		Slave	E3X-CN12		E3X-DANO	LOX-DAI IO	
Differential output type		Master	E3X-CN11		50V D 40D		
Differential output type		Slave	E3X-CN12	ON/OFF output	E3X-DA6D		
Water-resistant models (M8 Connector)		XS3F-M421-40□-A XS3F-M422-40□-A		- Griver r surpur	E3X-DA14V	E3X-DA44V	
Twin-output models		Master	E3X-CN21		E3X-DA6TW	E3X-DA8TW	
Twin-output models		Slave	E3X-CN22		LONDAGIW	LON DAOT W	

E3X-DA-N A-421

#### Amplifier units Connectors (Order Separately) Note: Stickers for Connectors are included as accessories.

L	Item	Shape	Cable length	No. of conductors	Model
	Master			3	E3X-CN11
	connector	2 m	4	E3X-CN21	
	Slave con-		2 111	1	E3X-CN12
	nector		2	E3X-CN22	

#### Sensor I/O Connectors (Order separately)

Size	Cable type	Shape		Ca	ble length	Model	
		Straight		2 m		XS3F-M421-402-A	
M8	Standard cable	connector	ctor	5 m	4 conductors	XS3F-M421-405-A	
IVIO	Standard Cable	L-shaped				2 m	4 conductors
		connector		5 m		XS3F-M422-405-A	

#### Mobile Console (Order Separately)

Shape	Model	Remarks	
	(Set form) E3X-MC11	Mobile Console with head, cable and AC adapter provided as accessories. Power supply provided by chargeable battery	
	E3X-MC11-C1	Mobile Console	
	E3X-MC11-H1	Head	
	E39-Z12-1	Cable (1.5 m)	

In general, amplifier units and connectors are sold separately. Refer to the following tables for order placement.

amplifier units						
Туре	NPN	PNP				
Standard models	E3X-DA6	E3X-DA8				
Morle datastina modela	E3X-DAB6	E3X-DAB8				
Mark-detecting models	E3X-DAG6	E3X-DAG8				
Infrared models	E3X-DAH6	E3X-DAH8				
Differential output	E3X-DA6D					
Monitor-output models	E3X-DA7	E3X-DA9				
Twin-output models	E3X-DA6TW	E3X-DA8TW				

Applicable Connector (order separately)					
Master connector	Slave connector				
E3X-CN11	E3X-CN12				
E3X-CN21	E3X-CN22				

When using 5 sets

amplifier units (5 Units)

1 Master Connector + 4 Slave Connectors

## Rating/Performance

## Amplifier units Prewired

		Туре	Standard models	Monitor-out- put models	Mark-detec	ting models	Infrared models	Water-resis- tant models	Twin-output models
	Model	NPN output	E3X-DA11-N	E3X-DA21-N	E3X-DAB11-N	E3X-DAG11-N	E3X-DAH11-N	E3X-DA11V	E3X-DA11TW
Item		PNP output	E3X-DA41-N	E3X-DA51-N	E3X-DAB41-N	E3X-DAG41-N	E3X-DAH41-N	E3X-DA41V	E3X-DA41TW
Light so (wave le			Red LED (660	nm)	Blue LED (470 nm)	Green LED (525 nm)	Infrared LED (870 nm)	Red LED (660	nm)
Powers	supply vo	oltage	12 to 24 VDC :	±10%, ripple (p-	p) : 10% max.				
Power	consump	tion	mode: Power of	onsumption 72	60 mW max. (po 0 mW max. (pov ion 600 mW ma	ver consumption	n 30 mA max. a	t supply voltage	24 V) Digital
Con-	ON/OF	F output			oltage NPN/PN -ON/Dark-ON, s			or output type (c	lepends on the
trol output	Monitor	output		1 to 5 VDC, load 10 k min.					
Protecti	ive circui	ts	Reverse polari 10 amplifiers)	ty protection, ou	tput short-circui	t protection, mu	tual interference	prevention (po	ssible for up to
	Super-h	•	0.25 ms for operation and reset respectively or					0.5 ms for operation and reset respectively	
Re- spons e time	Standard mode: Operation/reset: 1 ms each					2 ms for operation and reset respectively			
	Super-le tance m	•	4 ms for operation and reset respectively						7 ms for operation and reset respectively
Sensitiv	vity settin	ıg	Teaching or ma	anual method					1
	Timer fu	unctions			0: 1 ms increme ay, ON delay or		ns: 5 ms increme	ents), when the	Mobile Control
		tic pow-	Fiber-optic curi	ent digital con-				Fiber-optic cur control	rent digital
_	Zero res	set	Yes (negative	ndication possi	ble)				
Func- tions	Initial re	set		nditions initializ	ed)				
	Monitor	focus	Upper and lower limit values of output range can be set per digital value of 100						
Operation indicator (orange), 7-segment digital incident level display (red), 7-segment digital incident level percent display (red), incident level & threshold value double-bar display (green, red), 7-segment digital threshold value display (red)									
Display	timing		Normal/peak h	old/bottom hold	selectable				
Display	direction	1	Normal/reverse	e selectable					
Optical axis adjustment function Yes (hyper flashing emission function)									
Ambient lighting Incandescent lamp: 10,000 lux max. Sunlight 20,000 lux max.									
Ambien	nt temper	ature			nplifiers: -25 to - °C Storage: -30				°C, Groups of
Ambien	nt humidit	ty			% RH (with no c				

	Туре		Standard models	Monitor-out- put models	Mark-detec	Mark-detecting models		Water-resis- tant models	Twin-output models
	Model	NPN output	E3X-DA11-N	E3X-DA21-N	E3X-DAB11-N	E3X-DAG11-N	E3X-DAH11-N	E3X-DA11V	E3X-DA11TW
Item		PNP output	E3X-DA41-N	E3X-DA51-N	E3X-DAB41-N	E3X-DAG41-N	E3X-DAH41-N	E3X-DA41V	E3X-DA41TW
Insulation	on resista	ance	20 M min. at	500 VDC					
Dielectr	ric streng	th	1,000 VAC at 5	60/60 Hz for 1 m	ninute				
Vibratio	n resista	nce	10 to 55 Hz, 1.	5 mm double ar	nplitude for 2 ho	ours each in X,	Y, and Z direction	ns	
Shock r	resistanc	е	Destruction: 50	0 m/s2 for 3 tim	nes each in X, Y	, and Z direction	าร		
Degree	Degree of protection IEC 60529 IP50 (with Protective Cover attached) IP66 (with protective cover at-					IEC 60529 IP66 (with protective cover at- tached)	IEC 60529 IP50 (with protective cover attached)		
Connec	ction met	hod	Prewired mode	ls (standard ler	igth: 2 m)				
Weight	(Packed	state)	Approx. 100 g Approx. 110 g A					Approx. 100 g	
Mate-	Case		PBT (polybutylene terephthalate)						
rial	Cover		Polycarbonate Polyethersul-fone						Polyethersul- fone
Access	ories		Instruction mar	nual					

#### Connector type

#### Specifications that differ from those of the prewired type

	Туре	Standard models	Monitor-out- put models	Mark-detec	ting models	Infrared models	Water-resis- tant models (See note.)	Twin-out- put models
Model	NPN output	E3X-DA6	E3X-DA7	E3X-DAB6	E3X-DAG6	E3X-DAH6	E3X-DA14V	E3X-DA6TW
Item	PNP output	E3X-DA8	E3X-DA9	E3X-DAB8	E3X-DAG8	E3X-DAH8	E3X-DA44V	E3X-DA8TW
Connection method Connector type						M8 connector	Connector	
Weight (Packed state) Approx. 55 g						65 g	Approx. 55 g	

<sup>\*</sup> For waterproof type only, voltage resistance is 500 VAC 50/60 Hz 1 min

#### **Amplifier unit Connectors**

Item	Model	E3X-CN11/21/22 E3X-CN12				
Rated cu	rrent	2.5 A				
Rated vo	ltage	50 V				
Contact r	resistance	20 m max. (20 mVDC max., 100 mA max.) [By connection with amplifier unit and connection with adjacent connector (except conductor resistance of cable)]				
No. of ins	sertions	50 times (By connection with amplifier unit and connection with adjacent connector)				
Material	Housing	PBT (polybutylene terephthalate)				
Contacts Phosphor bronze/gold-plated nickel						
Weight (Packed state)		Approx. 55 g	Approx. 25 g			

#### Mobile Console

Item Model	E3X-MC11					
Supply voltage	Charged with AC adapter					
Connection method	Connected via adapter					
Weight (packed state)	Approx. 580 g (Console only: 120 g)					

For details of the Mobile Console, refer to the instruction manual attached to the product.

### Digital Fiber Amplifier

\* Differential output digital fiber amplifier (E3X-DA11D/E3X-DA6D)

Applicable fiber unit characteristic

(Through-beam model)

	Sensing distance (mm) (Values in parentheses: When using the E39-F1 lens unit)						
Sensitivity switching		HIGH		LOW		Standard object (mm) *1	
11 steps can be set	1	2	3-11	1	2	3-11	Minimum sensing object *2 (Opaque object) de-
Re- Fiber type sponse time	270 or 570 s	0.5 or 1 ms	1 to 200 ms or 2 to 400 ms	270 or 570 s	0.5 or 1 ms	1 to 200 ms or 2 to 400 ms	fault
E32-ET11R	240 (1680)	280 (1960)	370 (2590)	140(980)	180(1260)	240 (1680)	1 mm dia. (0.01
E32-ET21R	50	60	80	30	40	50	mm dia.)
E32-T16WR	580	690	910	350	450	580	(0.3 mm dia.)*3
E32-T16PR	380	450	600	230	290	380	(0.2 mm dia.)

#### (Reflective model)

		Sensing distance (mm)*1						
Sensitivity switching		HIGH LOW		Standard object (mm) *2				
11 steps c	an be set	1	2	3-11	1	2	3-11	Minimum sensing object *3 (Opaque object) de-
Fiber type spo	Re- onse me	270 or 570 s	0.5 or 1 ms	1 to 200 ms or 2 to 400 ms	270 or 570 s	0.5 or 1 ms	1 to 200 ms or 2 to 400 ms	fault
E32-ED11R		80	90	120	45	60	80	150 x 150 (0.01 mm dia.)
E32-ED21R		13	15	20	7	10	13	25 x 25 (0.01 mm dia.)

<sup>\*1.</sup> The sensing object is operating.
\*2. Value applied when the response time is set to 3-11. The value can be detected if the temperature varies within the operating ambient temperature. (Value when the sensing object is operating)
\*3. The digital value is 1000 and the value can be detected in each detection area.
Refer to the E3X-DA-N for the note of the fiber unit.

<sup>\*1.</sup> Sensing distance indicates values for white paper.
\*2. The sensing object is operating.
\*3. Value applied when the response time is set to 3-11. The value can be detected if the temperature varies within the operating ambient temperature. (Value when the sensing object is operating)

Note: Refer to E3X-DA-N for the note of the fiber unit.


#### Differences from E3X-DA-N amplifier unit

		Differential output type (edge detection type)			
	Item	Prewiring type	amplifier units with Connectors		
Item	NPN output	E3X-DA11D	E3X-DA6D		
Power consumption		Power consumption 960 mW max. (at power supply voltage 24 V, power consumption 40 mA max.)			
Con- trol out- put	ON/OFF output	Load current 50 mA (residual voltage NPN/PNP: 1 V max. each) Open collector output type L.ON (ON at ed detection)/D.ON (OFF at edge detection) switch selectable			
Detec	Detection mode  One-side edge detection mode/both-side edge detection mode				
Response time One-side edge detection mode: 270/500 s/1/2/4/10/20/30/50/100 mode: 570 s/1/2/4/10/20/30/50/100/200/400 ms selectable		5			
	Timer function	OFF delay timer for L.ON ON delay timer for D.ON 0 to 5 s (1 to 20 ms: 1 ms increments, 20 to 20 ms: 5 ms increments, 200 ms to 1 s: 100 ms, 1 to 5 s: 1 s increments)			
	APC	Yes			
Func	Zero reset	Yes (negative indication)			
tions	Initial reset	Yes (setting conditions initialized)			
	Sensitivity yes (HIGH/LOW)				
Teaching level One-point teaching level 1 to 50% variable (1% increments)			ents)		
Indicator lamp Operation indicator (orange), 7-segment incident level play (red)		, , , ,	display (red), 7-segment digital edge detection level dis-		

For the outline drawings and other details, refer to the instruction manuals attached to the products.

#### **Output Circuit Diagram**

#### NPN output

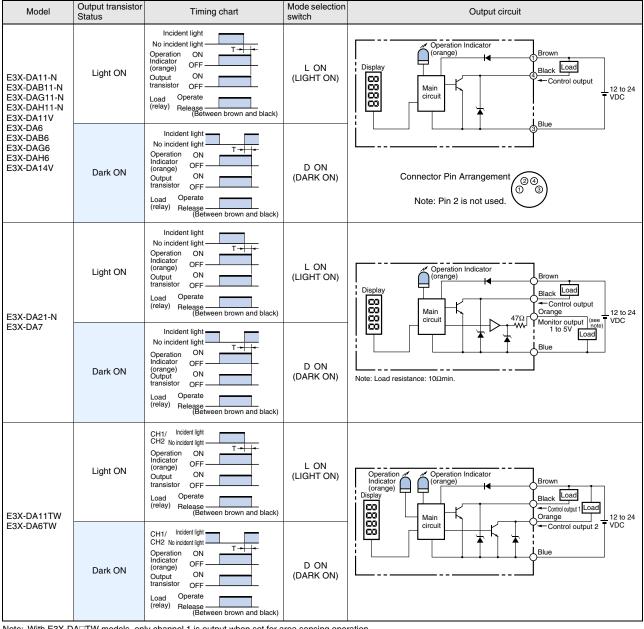


Note: With E3X-DA TW models, only channel 1 is output when set for area sensing operation.

- L ON The range between the CH1 and CH2 thresholds turns ON
- D ON The range between the CH1 and CH2 thresholds turns OFF (CH2 is always OFF)

A-427 E3X-DA-N


#### PNP output

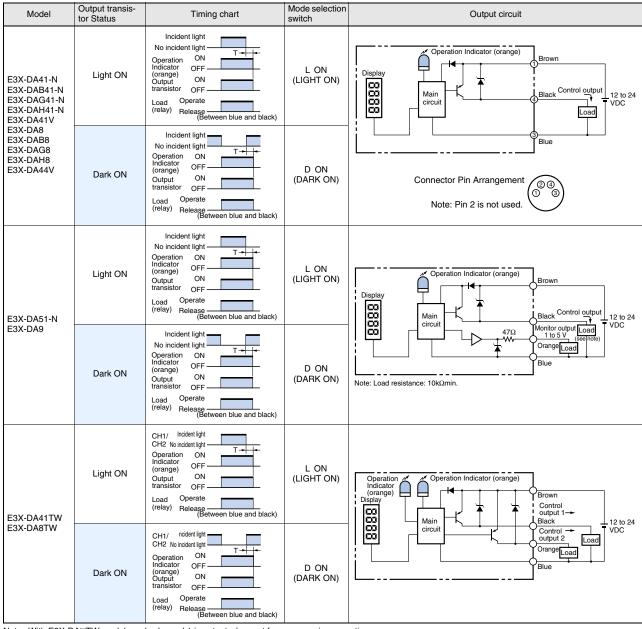

Note: With E3X-DA TW models, only channel 1 is output when set for area sensing operation.

- L ON The range between the CH1 and CH2 thresholds turns ON
- D ON The range between the CH1 and CH2 thresholds turns OFF (CH2 is always OFF)

#### Connectors (Sensor I/O Connectors)

 


Class	Wire, outer jacket color	Connector pin No.	Application
	Brown	1	Power sup- ply (+V)
For DC	White	2	-
10100	Blue	3	Power sup- ply (0 V)
	Black	4	Output

Note: Pin 2 is open.

#### Characteristic data (default)


#### Hysteresis vs. sensing distance

#### Reflective model E32-D11L

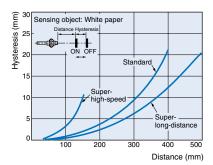


### Repeated accuracy vs. sensing distance

#### Reflective model E32-DC200

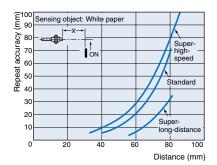


#### Monitor output vs. distance (In standard mode)

#### Through-beam E32-TC200

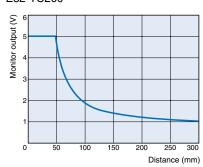


#### Reflective model E32-DC200

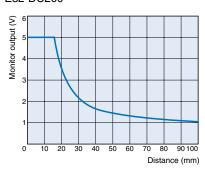

#### Connection
 
#### Connection with linear sensor controller K3NX-VD2□



- \* Use this service power supply for the Sensor with reference to
- the power consumption of each Sensor.

  Note: 1. Various I/O Units are available for the K3NX. Select an
  - appropriate output type depending on the application.


    2. For details about the K3NX, refer to the K3NX Datasheet (N084) or the K3NX Operation Manual (N90).
  - 3. This wiring is for the K3NX, with DC power supply specifications and the Monitor (Analog) Sensor with DC power supply specifications. Check respective power supply specifications before wiring them.

#### Nomenclature:


#### amplifier units

Downloaded from Elcodis.com electronic components distributor


Standard, monitor-output, mark-detecting, infrared, and water-resistant models

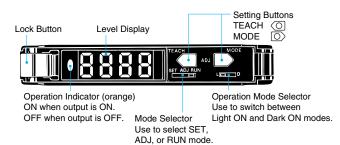



#### Twin-output models

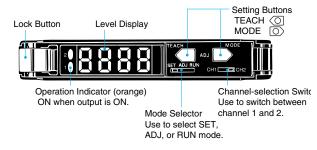


#### General

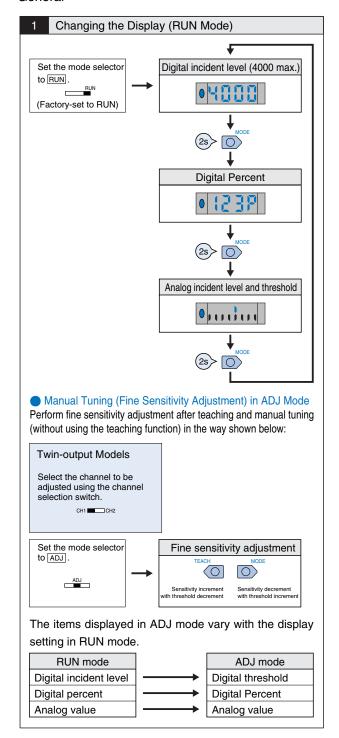


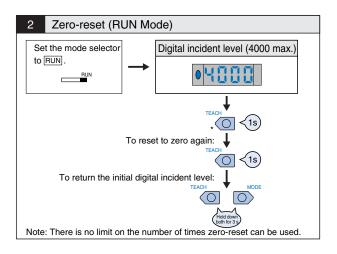

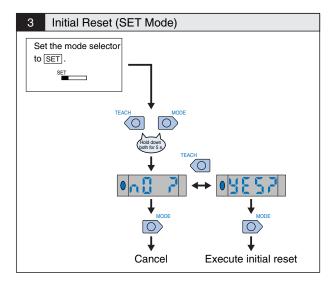

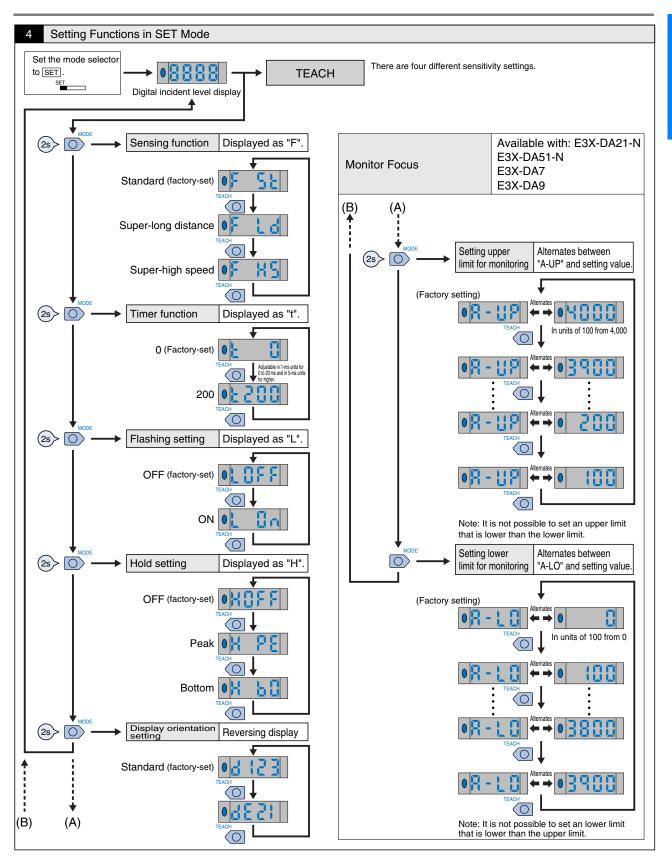

#### Twin-output models

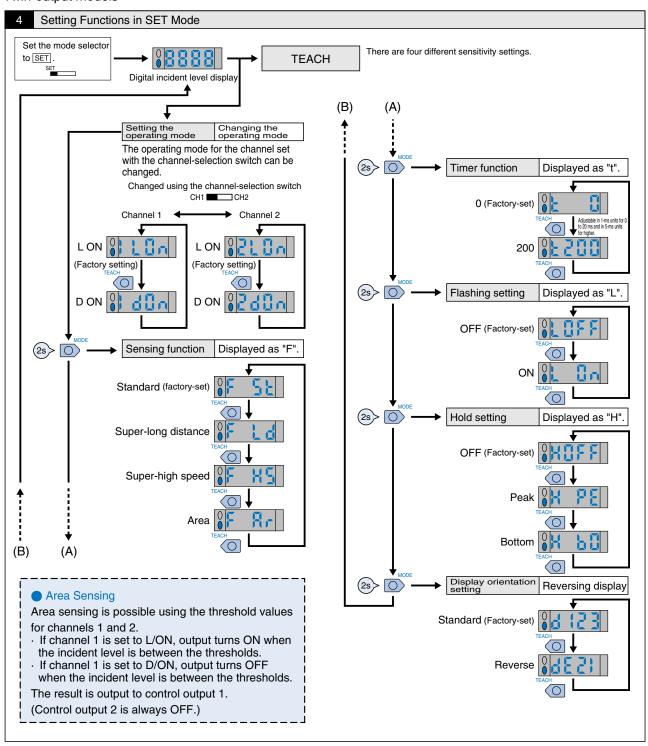

#### General

#### When teaching is performed (SET mode)

- The four types of teaching given below are available.
- Once setting is made, operation is performed in the preset status thereafter. When a teaching error occurs, the level indicators flash in red. Restart setting from the beginning.

Twin-output models only Select the channel to be adjusted using the channel selection switch. CHI CHI SET . SET \_\_\_\_\_

#### Maximum Sensitivity Setting

Proce- dure	Operation	
1	Set the mode selector to SET.	SET
2	Press the TEACH button for 3 seconds min.	TEACH 3s
3	Setting is completed when the red-lit level indicators turn to green. Then they return to the digital incident level display.	(red)
4	Set to RUN mode.	RUN

#### One-point without-object teaching

Proce- dure	Operation				
1	Set the mode selector to SET.	SET			
2	Press the SET button once (about 1 s).	TEACH 1s			
3	Setting is completed when the red level indicators are turned ON. They then return to the digital incident level display.	(red)			
4	Set to RUN mode.	RUN			
5	The threshold is automatically set with the object.	Object ON Output			

Note: If one-point teaching is not available because the difference in level is too fine, try two-point teaching.

#### **Operation Mode Selector**

Operating mod	е	Operation
Light ON	L ON	└ <b>■</b> (Factory-set)
Dark ON	D ON	D

There is no operation mode selector for twin-output models.

#### Two-point With/Without-object Teaching

Proce- dure	Operation	
1	Set the mode selector to SET.	SET
2	With the work present, press the SET button once (about 1 s).	Object TEACH 1S
3	The level indicators are lit red.	(red)
4	If no work is pending, press the SET button once (about 1 s).	TEACH (1s)
5	Setting is completed when the green indicators are turned ON. Then they return to the digital incident level display.	(green)
6	Set to RUN mode.	RUN

Note: With and without work may be in any order.

#### Pin-point teaching (for positioning)

	in-point teaching (for positioning)				
Proce- dure	Operation				
1	Set the mode selector to SET.	SET			
2	If no work is pending, press the SET button once (about 1 s).	TEACH (2)			
3	The level indicators are lit red.	(red)			
4	Place the object in the desired position, and press the TEACH button for 3 seconds min.	Object TEACH			
5	Setting is completed when the green indicators are turned ON. Then they return to the digital incident level display. (Red indicators start flashing if setting is not OK.)	(green)			
6	Set to RUN mode.	RUN			

#### Correct Use

#### Amplifier units

#### Design

#### Power ON

 
The sensor is ready to sense an object within 200 ms after turning the power ON. If the load and sensor are connected to different power supplies, always turn on the sensor power first.

#### Mounting


#### Connection/removing of amplifier units

#### (Connection)

1. Install the units one by one to the DIN rail.



 2. Slide one unit toward the other, match the clips at the front ends, and then bring them together until they "click".




#### (Removing)

Slide one unit away from the other and remove them one by one. (Do not remove the connected units together from the DIN rail.)

- Note: 1 .When the amplifier units are connected to each other, the operable ambient temperature changes depending on the number of connected amplifier units. Check "Ratings/Performance".
  - Before connecting or removing the units, always switch power off.

#### Fitting of Mobile Console head

 When fitting the Mobile Console head, a 20 mm or more clearance is needed on the left side.



#### Use of Mobile Console

For the twin output type (E3X-DA□□TW), up to 16 channels (eight E3X-DA□□TW units) can be set from the Mobile Console E3X-MC11. (Note that the operation mode and area detection cannot be set.)

#### Adjustment

#### Mutual interference prevention function

The digital display value may vary due to the light from the other sensor. In that case, low the sensitivity (raise the threshold) to stabilize detection.

#### **EEPROM Write Error**

If a write error occurs (operation indicator starts flashing) due to power-off, static electricity or other noise in the teaching mode, perform teaching again.

#### Optical communication

When connecting the amplifier units, assemble them in close contact. During operation, do not slide or dismantle the amplifier units

#### Hysteresis adjustment

 
The Mobile Console allows hysteresis adjustment, but note that the unit may not operate properly if the hysteresis setting is lower than the factory value.

#### **Amplifier Unit Connectors**


Installation

#### Connector installation

 Insert the Master or Slave Connector into the amplifier unit until it clicks into place.



 
- Link amplifier units to each other after the master and slave Connectors have been inserted.
- 3. Apply the supplied seal to the non-connecting surface of the master/slave connector.



Note: Apply seal to the grooved side.

#### **Removing Connectors**

 
- 1. Slide the slave amplifier unit (s) on which the connector must be removed from the rest of the group.
- After the amplifier unit (s) has been separated, press down the lever on the connector and remove it. (Do not attempt to remove connectors without separating them from other amplifier units first.)



#### Mounting End Plate (PFP-M)


Depending on the installation, an amplifier unit may move during operation. In this case, use an end plate.

 Before installing an end plate, remove the clip from the master amplifier unit using a nipper or similar tool.




The sensor bottom is also equipped with a clip removing mechanism.


1. Insert the clip to be removed into the slit underneath the clip on another amplifier unit.

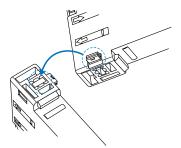

2. Remove the clip by rotating the amplifier unit.

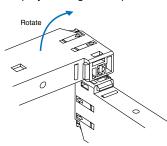

 When fitting the Mobile Console, set the end plate in the guide as shown in the following figure.




Tensile stress for connectors (including cables)


E3X-CN11, E3X-CN21, E3X-CN22: 30 N max.

E3X-CN12: 12N max.

#### **Amplifier Units**

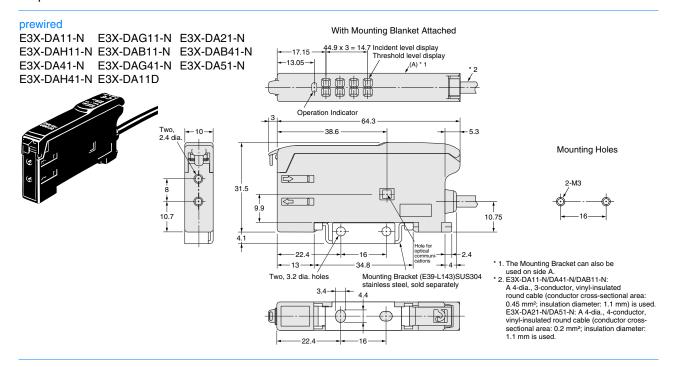

#### Amplifier units with Cables, Water-resistant Models

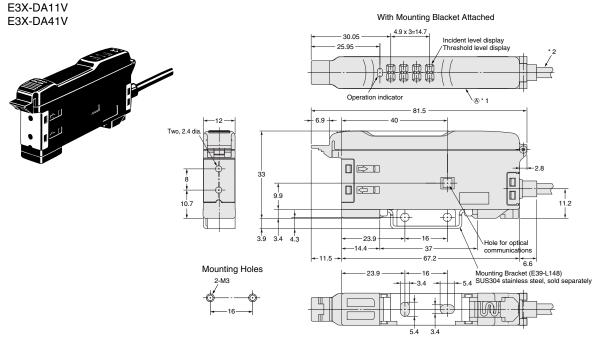



\* 1. The mounting Bracket can also be used on side A.
\* 2. 4-dia., 3-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm is used.


#### Amplifier units with Cables, Twin-output Models E3X-DA11TW
 
#### With Mounting Blanket Attached

E3X-DA41TW

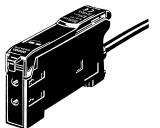




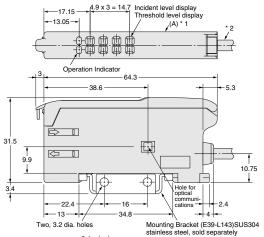

 -17.15






1. The Mounting Bracket can also be used on side A.
 2. A 4-dia., 4-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used.


#### Connector type

E3X-DA6E3X-DAG6 E3X-DA7E3X-DAH6 E3X-DA8E3X-DAB8 E3X-DA9E3X-DAG8 E3X-DAB6E3X-DAH8 E3X-DA6D




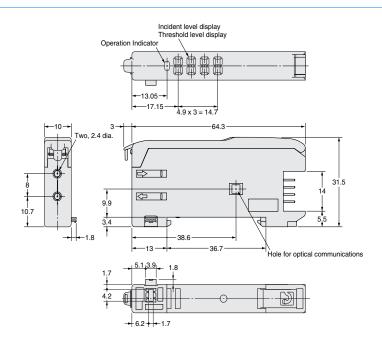


#### Dimensions with Master Connector Connected

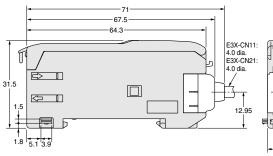

#### Dimensions with Slave Connector Connected

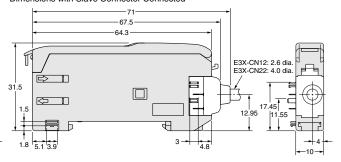


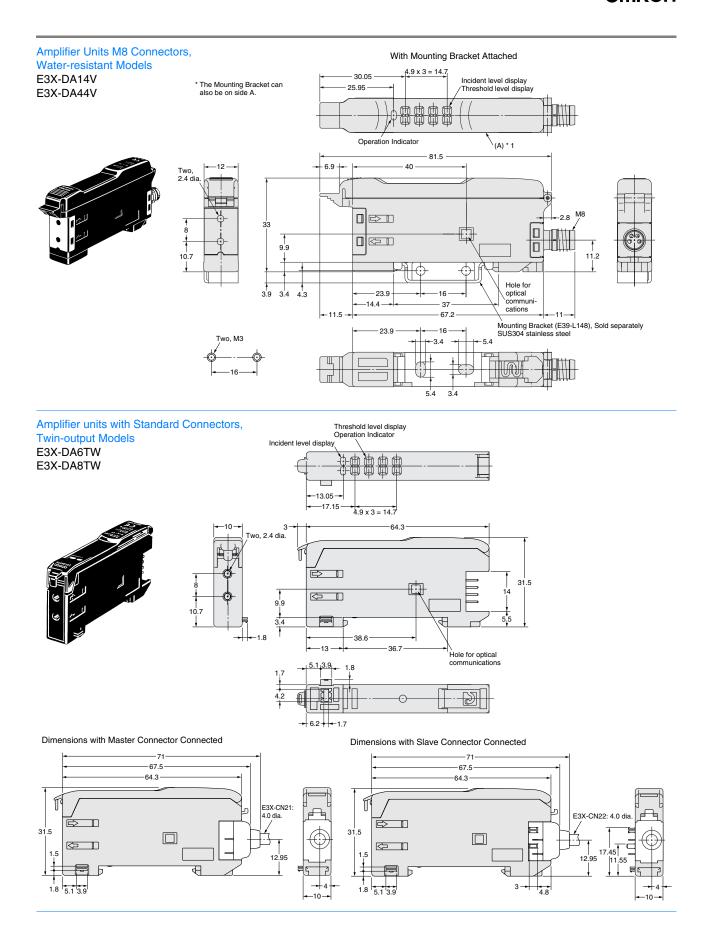


#### **Amplifier Unit Connectors**

### Master connector

 E3X-CN11 E3X-CN21




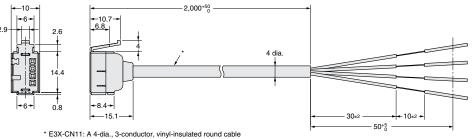

\* E3X-CN11: A 4-dia., 3-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used. E3X-CN21: A 4-dia., 4-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used.


#### Slave connector E3X-CN12 E3X-CN22



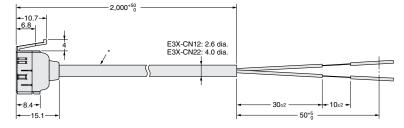

\* E3X-CN12: A 2.6-dia., single-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used. E3X-CN22: A 4-dia., 2-conductor, vinyl-insulated round cable (conductor cross-sectional area: 0.2 mm²; insulation diameter: 1.1 mm) is used.

#### Mobile Console

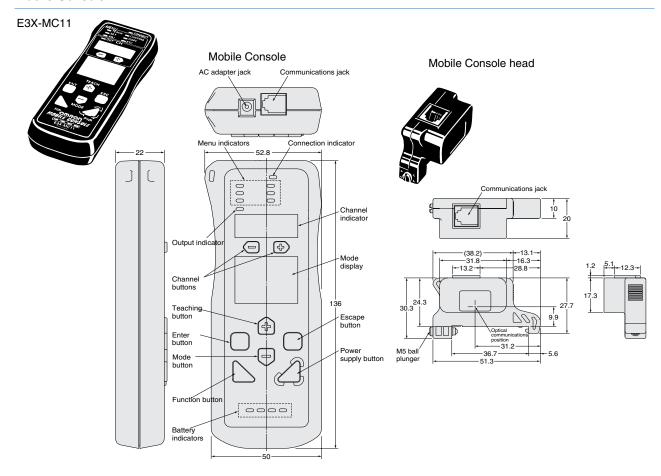

**E3X-DA-N** A-439

#### **Read and Understand This Catalog**

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments

#### **Warranty and Limitations of Liability**

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES. EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety
  equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **Disclaimers**

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased product.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### **ERRORS AND OMISSIONS**

The information in this catalog has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

#### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **COPYRIGHT AND COPY PERMISSION**

This catalog shall not be copied for sales or promotions without permission.

This catalog is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this catalog in any manner, for any other purpose. If copying or transmitting this catalog to another, please copy or transmit it in its entirety.

Cat. No. E22E-EN-01 2007.3

OMRON Corporation Industrial Automation Company

In the interest of product improvement, specifications are subject to change without notice.

http://www.ia.omron.com/