# **OPTO 22** SNAP Ethernet Brains

DATA SHEET Form 1083-070806

PAGE 1

# **SNAP Ethernet Brains**

# Features

- Direct 10/100 Megabit Fast Ethernet connection
- ITCP/IP and UDP/IP transport
- Multiple, simultaneous communication and protocol options

# Description

High-performance, flexible SNAP Ethernet brains are part of Opto 22's SNAP Ethernet systems, which let you connect to stateof-the-art Opto 22 industrial I/O hardware using a standard TCP/IP Ethernet connection.

Combined with analog, digital, and special-purpose I/O modules on a standard SNAP mounting rack, the SNAP Ethernet brain forms an I/O unit that can be used alone or as part of a distributed control system based on an Opto 22 industrial controller, such as the SNAP PAC standalone or rack-mounted programmable automation controllers.

A SNAP Ethernet system can be attached to existing Ethernet networks, making it easy to add monitoring and control where necessary. Or you can use standard Ethernet hardware to build an independent control network. You can also communicate with the system via a modem connection using Point-to-Point Protocol (PPP). A modem connection is ideal for remote locations or other places where an Ethernet network is not practical.

The SNAP Ethernet brain family includes three products:

- The **SNAP-B3000-ENET** brain is designed to remotely interface with a mix of analog, digital, and serial modules. It is Factory Mutual approved.
- The **SNAP-ENET-RTC** brain handles analog, digital, and serial signals and includes a battery-backed real-time clock.
- The **SNAP-ENET-D64** brain is a digital-only processor. (Not recommended for new development. Use a SNAP Simple brain instead; see form #1452).

Used with SNAP mounting racks and SNAP I/O<sup>®</sup> modules, SNAP Ethernet brain functions include the following:

 Digital—Input latching, on/off status, watchdog timer, and event/reactions. SNAP-B3000-ENET and SNAP-ENET-RTC brains also include high-speed counters when used with standard digital input modules, and quadrature counters when used with quadrature input modules. When used with a SNAP PAC controller and ioControl<sup>™</sup> Professional, the SNAP-B3000-ENET and SNAP-ENET-RTC brains also include on-pulse and off-



### **SNAP Ethernet Brain**

pulse measurement, time-proportional output (TPO), and pulse generation, including N pulses, continuous square waves, on-pulses, and off-pulses.

**Analog**—Thermocouple linearization (32-bit floating point for linearized values), minimum/maximum values, offset and gain, scaling, output clamping, time-proportional output, filter weight, and watchdog timer. In addition, each brain provides 16 proportional integral derivative (PID) loops for local control. When used with a SNAP PAC controller and ioControl Professional, analog ramping is also available.

SNAP-B3000-ENET and SNAP-ENET-RTC brains can also use specialpurpose SNAP modules on the same mounting rack:

- Serial communication modules—Send and receive ASCII strings to and from attached serial devices, such as chart recorders and barcode readers.
- Profibus module—Interface with PROFIBUS DP<sup>®</sup> networks, using a standard electrical interface.
- **High-density digital modules**—Work with up to 32 digital inputs or 32 digital outputs on each module, for up to 512 digital points on a 16-module rack.

See page 5 for a detailed comparison of SNAP Ethernet I/O, SNAP Simple I/O, and SNAP Ultimate I/O features.

### Part Numbers

Part	Description			
SNAP-B3000-ENET	Analog/Digital/Serial Ethernet Brain			
SNAP-ENET-D64	Digital-only Ethernet Brain (Not for new development)			
SNAP-ENET-RTC	Analog/Digital/Serial Ethernet Brain with Real-time Clock			
RTCBATT	Replacement backup battery for SNAP-ENET-RTC brain			

ve • Temecula CA 92590-3614 • www.opto22.com

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

Configuring a SNAP Ethernet system is easy using ioManager utility software. ioManager comes on a CD with the brain and is also available for free download from www.opto22.com.

#### **Communication Options**

SNAP Ethernet brains can be part of a larger control system with a SNAP PAC programmable automation controller, or you can communicate directly with them using Ethernet networking or RS-232 serial connections.

Any of the following methods—or all of them simultaneously can be used to interface with SNAP Ethernet I/O units:

- ioControl Basic or ioControl Professional—for a complete control system, the control strategy runs on a SNAP PAC programmable automation controller. ioControl Basic is included on the CD that comes with the controller; ioControl Professional is purchased separately or as part of ioProject Professional.
- **Modbus/TCP driver**—for interfacing with any third-party software or hardware that uses the Modbus/TCP protocol.
- **OptoOPCServer**<sup>™</sup>—providing OLE for Process Control (OPC) 2.0 access for OPC clients. Purchase separately or as part of the ioProject Professional software suite.
- **SNMP messaging**—for communicating with SNMP-based enterprise management software.
- **OptoMMP<sup>™</sup> Communications Toolkit**—for programming custom applications for the Ethernet brain to communicate using the OptoMMP memory-mapped protocol. The toolkit includes an ActiveX<sup>®</sup> component and a C++ class, and is on the CD that comes with the brain.
- Opto 22 FactoryFloor<sup>®</sup> 3.1 or newer and an Opto 22 M4-• series controller with a 100 Mbps Ethernet expansion card. Available separately. (Not recommended for new development; use ioProject instead.)

For more information about these communication methods and how to install and use the SNAP Ethernet brain, see Opto 22 form #1460, SNAP Ethernet-Based I/O Units User's Guide, and form #1465, OptoMMP Protocol Guide.

#### I/O Mounting Racks and Modules

SNAP Ethernet brains must be connected to the appropriate rack to avoid damage to the brain.

The analog/digital/serial SNAP-B3000-ENET and SNAP-ENET-RTC brains are connected to a SNAP B-series I/O mounting rack, which can hold either 4, 8, 12, or 16 Opto 22 SNAP I/O modules. SNAP 4channel digital modules can be placed in any of the first eight positions; analog, serial, and higher density digital modules can be placed in any position on a B-series rack. Note that these brains cannot support analog modules with more than four points.

The digital-only SNAP-ENET-D64 brain is connected to a SNAP-D64RS I/O mounting rack, which can hold up to 16 4-channel digital input and output modules. This brain can be used only with 4-channel digital modules.

#### **Other Features**

All brains offer data streaming.

SNAP Ethernet brains provide both 10- and 100-Mbps Fast Ethernet compatibility, with automatic speed negotiation and a standard RJ-45 twisted-pair connector. The brains also include a serial port for maintenance and for modem communication using point-to-point protocol (PPP).

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations. 2

N

Form 1083-070806 DATA SHEET

PAGE

# **SNAP Ethernet Brains**

## **SNAP Ethernet Brain System Architecture**

#### **Network Configuration Example**



Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

DATA SHEET Form 1083-070806 PAGE

3

# **Specifications**

Power Requirements	5.0–5.2 VDC at 1.0 A maximum (does not include module power requirements)
Operating Temperature	0 to 70 °C
Storage Temperature	-40 to 85 °C
Humidity	0–95% humidity, non-condensing
Network Interface	IEEE 802.3 network, 10Base-T and 100Base-TX
Serial Port	RS-232 (for modem connection using PPP; also for programming and maintenance)
Serial Data Rates	Default is 19,200 baud; baud rate is soft-selectable from 2400 to 115,200 baud.
Maximum Ethernet Segment Length	100 meters with Category 5 or superior UTP. For 100 Mbps at this distance, use Category 5 or superior solid UTP.
Jumpers (Internal)	Boot to kernel/boot to loader; reset to factory defaults

#### **RS-232 Serial Cable**



#### **Serial Connector Pinouts**

•	RS-232	Pin
	ТΧ	1
	RX	2
	COM	3
	RTS	4
1	CTS	5



#### **LED Descriptions**

LED	Description
ACT	Network Activity
FD	Full Duplex Mode
ERD	Ethernet—Receive Data
ETD	Ethernet—Transmit Data
10MB	Ethernet Link Detection at 10 Mbps
100MB	Ethernet Link Detection at 100 Mbps

LED	Description
RUN	Normal Operation
3VF	3 Volt Fault
5VF	5 Volt Fault
FLT	Microprocessor Fault
SRD	Serial—Receive Data
STD	Serial—Transmit Data

Form 1083-070806 DATA SHEET PAGE

4

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# **SNAP Ethernet Brains**

# **SNAP Ethernet-Based Brain Comparison Chart**

		SNAP Simple I/O	SNAP Ethernet I/O		SNAP Ultimate I/O		
	FEATURE		SNAP-B3000-ENET SNAP-ENET-RTC	SNAP-ENET-D64	SNAP-UP1-ADS	SNAP-UP1-D64	SNAP-UP1-M64
	4-channel digital	•	٠	•	•	٠	•
	High-density digital (>4 channels)	٩	•		•		•
I/O modules	2- and 4- channel analog	٠	٠		•		•
supported	8-channel analog	•			•		•
	Serial communication modules (RS-232, RS-485/422, Profibus <sup>®</sup> , Wiegand <sup>®</sup> )	٠	•		•		•
	Input latching	٢	٠	٠	•	٥	•
-	On/off status	•	٠	•	•	٠	•
	Watchdog timer <sup>1</sup>	٠	٠	٠	٠	٠	•
	High-speed counters (20 kHz) <sup>1</sup>		٠		٠		
Digital I/O points	Quadrature counters <sup>2</sup>		•		•		
	On-pulse and off-pulse measurement <sup>1,3</sup>		•		•		
	TPO (time-proportional output) <sup>3</sup>		۲		•		
	Pulse generation (N pulses, continuous square wave, on-pulse, and off-pulse) <sup>3</sup>		•		•		
	Thermocouple linearization (32-bit floating point for linearized values)	٠	•		•		•
f I	Minimum/maximum values	•	•		•		•
	Offset and gain	•	•		•		• • • • • • • •
Analog I/O	Scaling	٩	•		•		•
points	Time-proportional output	٠	٠		•		•
	Output clamping	•	٠		•		•
	Filter weight	•	٠		•		•
	Watchdog timer	٠	٠		•		•
	Ramping <sup>3</sup>		٠		•		
Serial event	s		٠		•		•
PID logic on	the brain		16 PIDs		32 PIDs	-	32 PIDs
Digital event	ts <sup>1</sup>		•	•	•	٥	•
Alarm event	e		•				

Opto 22 • 43044 Business Park Drive • Ternecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

PAGE 5

DATA SHEET

SNAP Ethernet Brains **OPTO 22** 

# Form 1083-070806 DATA SHEET

PAGE 6

2 Requires a SNAP quadrature input module (SNAP-IDC5Q)

4 Applies to SNAP-ENET-RTC, not to SNAP-B3000-ENET

1 Four-channel digital modules only; not available on high-density digital modules

3 Available when used with ioControl Professional and a SNAP PAC controller

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# **SNAP Ethernet Brains**

	SNAP Simple I/O	SNAP Ethernet I/O		SNAP Ultimate I/O			
FEATURE	SNAP-ENET-S64	SNAP-B3000-ENET SNAP-ENET-RTC	SNAP-ENET-D64	SNAP-UP1-ADS	SNAP-UP1-D64	SNAP-UP1-M64	
Timers <sup>1</sup>		٠	•	٠	•	•	
Event messages		•	•	٠	•	٠	
UDP Streaming	٠	•	•	٠	•	٠	
Email (SMTP client)		•	•	٠	•	٠	
OPC driver	٠	•	•	٠	•	•	
Data logging in the brain		•		٠		٠	
Security (IP filtering, port access)	٠	•	٠	٠	•	٠	
Realtime clock (RTC)		● 4		٠	•	•	
I/O point data mirroring		٠		٠		•	
Memory map copying		٠		٠		•	
Scratch Pad area—bits		٠	•				
Scratch Pad area—bits, floats, integers, strings				•	•	٠	
SNMP (network management of I/O & variables)		٠	•	٠	•	•	
PPP (dial-up and radio modems)		٠	•	٠	•	•	
FTP server and client				٠	•	•	
Modbus/TCP	٠	•	٠	٠	•	٠	
Ethernet network	٠	•	٠	٠	•	٠	
Serial (RS-232)				٠	•	•	
Runs ioControl strategies				٠	•	•	
ioControl compatibility (using SNAP PAC or SNAP- LCE controller or SNAP Ultimate I/O)	•	٠	•	•	•	•	
OptoControl compatibility (using Opto 22 controller with Ethernet card. Not for new development.)	•	•	•				
Mounting rack	SNAP-M racks	SNAP-B racks	SNAP- D64RS	SNAP-B racks	SNAP- D64RS	SNAP-M racks	
Number of modules per mounting rack	4, 8, 12, or 16	4, 8, 12, or 16	16	4, 8, 12, or 16	16	4, 8, 12, or 16	
Maximum number of modules allowed per I/O unit (with largest rack)	16 4-ch dig 16 HDD <sup>5</sup> 16 analog 8 serial	8 4-ch dig 16 HDD <sup>5</sup> 16 analog 8 serial	16 4-ch digital	8 4-ch dig 16 HDD <sup>5</sup> 16 analog 8 serial	16 4-ch digital	16 4-ch dig 16 HDD <sup>5</sup> 16 analog 8 serial	

Downloaded from Elcodis.com electronic components distributor

5 High-density digital

# **Dimensions: SNAP-B3000-ENET and SNAP-ENET-D64**



Form 1083-070806 DATA SHEET

PAGE 7

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# **SNAP Ethernet Brains**

# **Dimensions: SNAP-ENET-RTC**

The SNAP-ENET-RTC contains a real-time clock to time stamp messages. The backup battery for the clock is attached on the side of the brain as shown in the diagrams at right and below. For a replacement backup battery, order part number RTCBATT.

Except for the addition of the battery holder, the dimensions of the SNAP-ENET-RTC are the same as the dimensions for the other SNAP Ethernet brains, shown on the previous page.







Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2006 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

Form 1083-070806 DATA SHEET

PAGE 8