


MicroRex D11

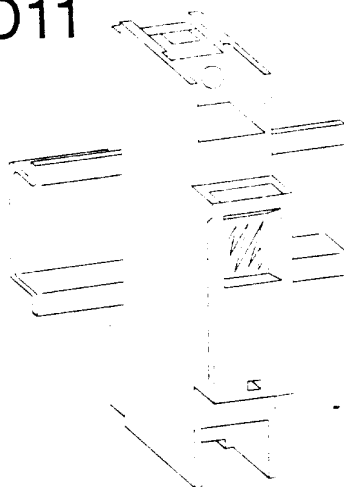


legrand®
29 07 67 03


(D)	Bedienungsanleitung	2-5
(F)	Mode d'emploi	6-9
(GB)	Operating instructions	10-13
(NL)	Gebruiksaanwijzing	14-17
(I)	Istruzioni d'impiego	18-21
(E)	Modo de empleo	22-25
(DK)	Betjeningsvejledning	26-29
(SF)	Käyttöohje	30-33
(N)	Bruksanvisning	34-37
(S)	Bruksanvisning	38-41

GB-Operating instructions

 
The MicroRex D11 is a microprocessor controlled digital time switch. Eight programs of your choice can be stored and used to control the automatic operation of your electrical equipment. Each individual weekday can have a separate program or you can have several days operating on the same „Block“ program. To program the MicroRex D11 a „picture“ is used and when this is complete the chosen times are stored in the microprocessor memory.

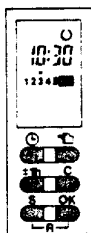

Liquid Crystal Display

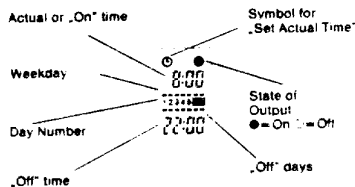

Programming Buttons

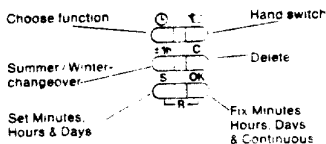

1. Starting

About 30 seconds after the mains voltage is connected the MicroRex D11 is ready to operate. Before any operations the complete memory must be reset.

2. Memory reset

(S) + (OK) press both at the same time



The Time Switch memory is completely clear.

3. Setting Actual Time

- (C)** Press once
- (S)** Press until the correct hour is shown
- (OK)** Press once
- (S)** Press until the correct minute is shown
- (OK)** Press once
- (S)** Press until the Bar is shown over the correct Day



(C) Press once at exactly the correct time



Actual Time is now set

4. Setting Switching Times

Every program has an „On“ and „Off“ time. These times may be set on one or more days.

4.1 Switching Times – Seven Day „Block“ program

- 1 Press until this Display is shown
- 2 Press to set the „On“ time Hour
- 3 Press once
- 4 Press to set the „On“ time minute
- 5 Press once
- 6 Press to set the „Off“ time Hour
- 7 Press once
- 8 Press to set the „Off“ time minute
- 9 Press once
- 10 Press until the „picture“ is complete and program is stored

4.2 Monday to Friday „Block“ program

- 1 Press until this Display is shown
- 2 Set „On“ and „Off“ times as described in 4.1

4.3 Switching on Individual Days

- 1 Press until this Display is shown
- 2 Press to set the „On“ time hour
- 3 Press once
- 4 Press to set the „On“ time minute
- 5 Press once
- 6 Press to set the „On“ time Day
- 7 Press once

- | | |
|----------------------------------|------------------|
| 8 Press to set further „On“ Days | only if required |
| 9 Press once | |
| 10 „On“ time is set | |

- 1 Press to set „Off“ time hour
- 2 Press once
- 3 Press to set „Off“ time minute
- 4 Press once

- 5 Press until the chosen „Off“ day is shown
- 6 otherwise use 3 and 4 to choose other days
- 7 Press once
- 8 Program „picture“ is complete

5. Check Switching Times

- 1 Press once
- 2 Press several times until correct „picture“ is shown

- 1 Press until the Actual time is shown

6. Delete Switching Times

- 1 Press several times until correct „picture“ is shown
- 2 Press to Delete program and set a new program or –
- 3 Press until the Actual Time is shown

7. On and Off Manual Operation

- 1 Press to give desired function
- 2 Display ● = On
- 3 Display ○ = Off

12

The Time Switch will follow the next „On“ or „Off“ program

8. Continuous Switching

The switch condition Must first be chosen

- 1 Press to give desired function
- 2 Display ● = On
- 3 Display ○ = Off
- 4 Press once to either ● „On“ or ○ „Off“

The Time Switch will remain in continuous „On“ or „Off“ position until it is changed

8.1 Terminating Continuous Switching

- 1 Press once
- 2 The Time Switch returns immediately to Program mode

9. Continuous Switching for a Chosen Number of Days

The switch condition must first be chosen

- 1 Press to give desired function
- 2 Display ● = On
- 3 Display ○ = Off

- 4 Press
- 5 Press to choose the number of Days (d 1 to d 99)
- 6 Press once

In the above example the Time Switch stays „On“ for 14 days. At 0.00 hours on the 15th day the Time Switch returns to its program mode.

9.1 Terminating continuous Switching

- 1 Press once

10. Sunday and Holiday Program

In this mode the Time Switch follows the „Sunday“ (7th day) switching program for a chosen number of Holiday days.

- 1 Press once
- 2 Press to choose the number of Days. (d 1 bis d 99)
- 3 Press once

The Holiday program mode begins at 0.00 next day and ends in the above example at 24.00 hours 2 days later.

10.1 Ending Holiday mode

- 1 Press once

11. Summer-/Winter Changeover

- 1 Press until the Actual Time goes forward 1 hour (Summer) or back 1 hour (Winter)

12. Correcting mistakes

- 1 Press once
- 2 Press until Actual time is displayed