

# Instructions for use

## JetStar – Inkjet film for Epson Printers

100-070	A4 10 sheet pack
100-071	A4 100 sheet pack
100-072	A3 10 sheet pack
100-073	A3 100 sheet pack

1. Set printer to high resolution dpi
2. Print onto the smooth side of the film
3. Allow to dry before use.

### NOTE:

If any streaking or smudging occurs, it may be because the moving print head is in contact with the film before the ink is dry. To correct this, try making a mechanical adjustment to the printer by following the printer manufacturer's instructions to move the print head further away. This adjustment is often made when printing on thick paper or card.



### MEGA ELECTRONICS LIMITED.

Mega House, Grip Industrial Estate,  
Linton, Cambridge, England, CB1 6NR  
Telephone: +44 (0) 1223 893900 Fax: +44 (0) 1223 893894  
email: [sales@megauk.com](mailto:sales@megauk.com)  
web: [www.megauk.com](http://www.megauk.com)