

TRON® In-Line Fuseholders

Single-Pole for Solid Neutral

HET Series



Non-Breakaway Holders
 Catalog Symbol: HET-AA, HET-AB, HET-BB, HET-JJ, and HET-JK
 In-Line Fuseholders, Single-Pole
 Water-Resistant
 For breakaway holders, see page 2

HET — A HEB fuseholder with a permanently installed solid neutral. Easily identified by white plastic coupling nut.

Example:
 A single-pole, in-line holder for a neutral is required. One solid copper #8 is on the load side, copper crimp for connection. A solid copper #6 is on the line side, and a copper crimp is required.

1. Choose HET- series.
2. Choose "A" for load side.
3. Choose "B" for line side.

Complete Catalog Number: HET-AB.

Ordering Information:

| | | | |
|------------|---|----------------------|----------------------|
| HET | — | | |
| | | Load Terminal | Line Terminal |

Recommended Torque on Coupling Nut: 10-20 in-lb.

Catalog and Specification Data - Non-Breakaway Conductor Terminals

| Terminal Type | Conductor Size | No. Per Terminal | | Catalog Symbol Load & Line (2 & 3) |
|---------------|----------------|------------------|----------|------------------------------------|
| | | Solid | Stranded | |
| | #12 to #8 | 1 | • • | A |
| | #12 | 2 | • • | |
| | #10 | 2 | • • | B |
| | #6 | 1 | • • | |
| | #4 | 1 | • • | |
| | #12 to #3 | 1 | • • | J |
| | #12 to #2 | 2 | • • | K |
| | #12 to #2 | 1 | • • | L |

Catalog Data — Insulating Boots



| Catalog Numbers | Type |
|-----------------|------------------|
| 2A0660 | Single Conductor |
| 2A0661 | Two Conductor |

Insulating boots are not included with non-breakaway parts and must be ordered separately. They come standard with the breakaway series. The HET-AW & HET-JW do not have the boots. These catalog items do not have a breakaway receptacle.

When boots are utilized, extra heat retention requires that fuses are sized at a minimum of 200% of the RMS load current.

TRON® In-Line Fuseholders

Single-Pole for Solid Neutral

HET Series

Breakaway Holders

Catalog Symbol: HET-AW-RLC-A, HET-AW-RLC-B, HET-AW-RLC-C, HET-AW-RLC-J, HET-AW-RYC, HET-BW-RLC-B, HET-BW-RYC, HET-JW, HET-JW-RLC-J, HET-JW-RYC, and HET-AW

In-Line Fuseholders, Single-Pole

Example:


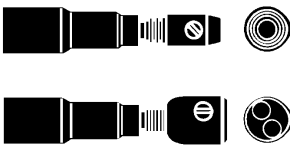

A single-pole, in-line, breakaway holder for a neutral is requested. A single #10 solid, copper crimp is on the load side. A single #10, solid wire and a copper crimp is needed on the line side.

1. Choose HET- series.
2. Choose "A" from 1st page for load side.
3. Choose "W" for breakaway requirement.
4. Choose "RLC-A" for breakaway receptacle on line side.


Complete Catalog Number: HET-AW-RLC-A

Catalog and Specification Data

Breakaway Receptacles

| Terminal Type | Conductor Data | | | | Catalog Symbol Line Terminal (3) |
|---|--------------------------------------|------------------|-------|----------|----------------------------------|
| | Size | No. Per Terminal | Solid | Stranded | |
| Copper Crimp  | #12 to #8 | 1 | • | • | -RLC-A |
| | #6 | 1 | • | • | -RLC-B |
| | #4 | 1 | • | • | -RLC-C |
| Copper Set-Screw  | #12 to #3 | 1 | • | • | -RLC-J |
| | #12 to #3 | 2 | • | • | -RYC |
| Solid Breakaway  | (Required with breakaway Receptacle) | | | W | |

Ordering Information:

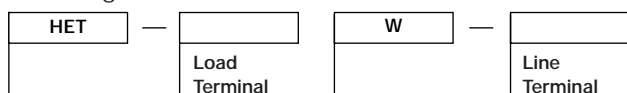

Recommended Torque on Coupling Nut: 10-20 in-lb.

The only controlled copy of this Data Sheet is the electronic read-only version located on the Bussmann Network Drive. All other copies of this document are by definition uncontrolled. This bulletin is intended to clearly present comprehensive product data and provide technical information that will help the end user with design applications. Bussmann reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Bussmann also reserves the right to change or update, without notice, any technical information contained in this bulletin. Once a product has been selected, it should be tested by the user in all possible applications.