 


### Between Series Adapters (Continued)

 
#### Jack-Jack

##### 7-16 Jack – N Series Jack

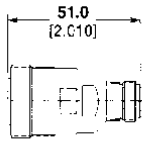


Part No. 1311206-1  
M/A-COM Model No. A55P22E999X

##### BNC Jack – SMB Jack




Part No. 1058056-1  
M/A-COM Model No. 3280-2224-00

##### BNC Jack – 75 ohm SMB Jack

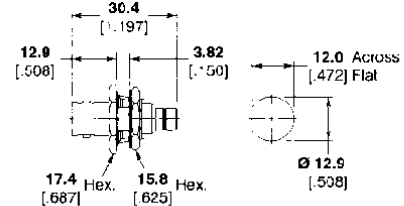 


Part No. 1311209-1  
M/A-COM Model No. A57R03G999X

##### TNC Jack – N Series Flange Mount Jack

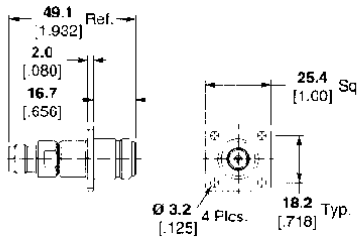 


Part No. 1057843-1  
M/A-COM Model No. 3180-2302-00

##### TNC Jack – BNC Jack

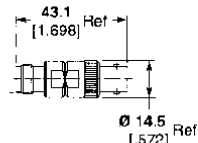 


Part No. 1057845-1  
M/A-COM Model No. 3180-2320-00

##### MCX Jack – SMA Jack

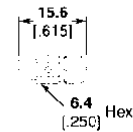 


Part No. 1061070-1  
M/A-COM Model No. 5880-2240-00

##### SMA Jack – N Series Jack

 


Part No. 1057341-1  
M/A-COM Model No. 3080-2240-00

##### SMA Jack – N Series Flange Mount

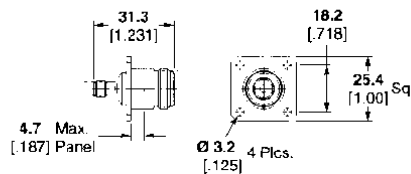 


Part No. 1057343-1  
M/A-COM Model No. 3080-2242-00

##### SMA Jack – N Series Bulkhead Jack

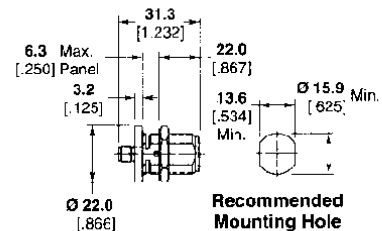 


Part No. 1057463-1  
M/A-COM Model No. 3084-2240-00

##### SMA Jack – BNC Jack

 


Part No. 1058058-1  
M/A-COM Model No. 3280-2240-00

##### BNC Bulkhead Jack – SMA Jack

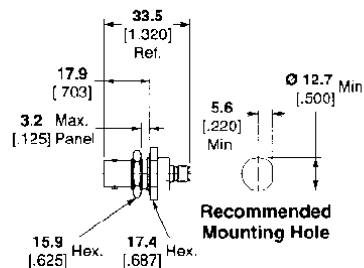 

Part No. 1058117-1  
M/A-COM Model No. 3284-2240-00

##### TNC Jack – SMA Jack

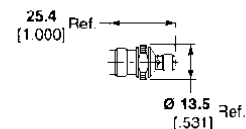 

Part No. 1057839-1  
M/A-COM Model No. 3284-2240-00