



**61-096**

---

### **Automatic SplitJaw Tester**

- Automatically senses and displays AC/DC Volts, AC Amps, resistance and continuity
- Measures 0-200AAC
- Measures 0-750 VAC
- Measures 0-1000 VDC
- Measures 0-2000 Ohms
- Audible Continuity
- Data Hold
- Integral Lead Storage
- Replaceable test leads
- Auto power off
- Low battery indication
- CAT IV - 600V
- CAT III - 1000V

**MORE INFO**