



MOD-GSM development board

Users Manual



All boards produced by Olimex are ROHS compliant

Rev.A, March 2009

Copyright(c) 2009, OLIMEX Ltd, All rights reserved

INTRODUCTION

MOD-GSM is excellent board for adding remote monitoring and control in remote places by GSM cellular network. With this module you can use all the features of each one of Olimex's boards with on-board UEXT connector by GSM network. Also the board can work in stand alone mode, but only when the SIM card is without PIN code. In stand alone mode MOD-GSM don't offer much opportunities. It can receive information by GSM network, but if you want to operate with this information, you will need appropriate board with UEXT connected to MOD-GSM. Choose the other board depending on the application you want to have. MOD-GSM contains quad-band GSM GPRS module 850/900/1800/1900Mhz inside which covers most used GSM networks around the world. The GSM antenna is build in the board so no need for external expensive GSM antennas.

BOARD FEATURES

- GSM/GPRS quad-band MODULE 850/900/1800/1900Mhz with build on-board GSM cellular antenna
- Li-ion backup battery 3.7 V 1200 mAh for up to 200 hours of GSM module stand-by
- SIM-card holder
- Status LED
- On-GSM module temperature sensor
- UEXT
- PWR_EXT
- PWRKEY
- On-board DC-DC converter for stand alone mode and battery recharge
- PCB: FR-4, 1 mm (0,039"), solder mask, silkscreen component print
- Dimensions: 79.2x57.6 mm (3.1182x2.268")

ELECTROSTATIC WARNING

The MOD-GSM board is shipped in protective anti-static packaging. The board must not be subject to high electrostatic potentials. General practice for working with static sensitive devices should be applied when working with this board.

BOARD USE REQUIREMENTS

Hardware: 12V, 800mA at least Adapter, if you want to recharge the battery. Some of Olimex boards with UEXT on it.


Important: If your board does not work, first try to charge the battery as you power supply the board for few hours.

MODULE FEATURES


- Pwer Supply – Single Supply voltage 3.4V – 4.5V
- Power saving – Typical power consumption in SLEEP mode to 2.5mA (BS-PA-MFRMS=5)
- Charging – Supports charging control for Li-Ion battery
- Frequency bands:
 - SIM340DZ Quad-band: GSM 850, EGSM 900, DCS 1800, PCS 1900. The SIM340DZ can search the 4 frequency bands automatically. The frequency bands also can be set by AT command.
 - Compliant to GSM Phase 2/2+
- GSM class – Small MS
- Transmit Power
 - Class 4 (2W) at EGSM 900
 - Class 1 (1W) at DCS1800 and PCS 1900
- GPRS connectivity
 - GPRS multi-slot class 8 (optional)
 - GPRS multi-slot class 10 (default)
 - GPRS mobile station class B
- Temperature range
 - Normal operation: -20°C to +55°C
 - Restricted operation: -30°C to -20°C and +55°C to +80°C
 - Storage temperature -40°C to +80°C
- DATA GPRS:
 - GPRS data downlink transfer: max. 85.6 kbps
 - GPRS data uplink transfer: max. 42.8 kbps
 - Coding scheme: CS-1, CS-2, CS-3 and CS-4
 - SIM340DZ supports the protocols PAP (Password Authentication Protocol) usually used for PPP connections
 - The SIM340DZ integrates the TCP/IP protocol
 - Support Packet Switched Broadcast Control Channel (PBCCH)
 - CSD transmission rates: 2.4, 4.8, 9.6, 14.4 kbps, non-transparent
 - Unstructured Supplementary Services Data (USSD) support
- SMS
 - MT, MO, CB, Text and PDU mode
 - SMS storage: SIM card
- FAX - Group 3 Class 1
- SIM interface - Support SIM card: 1.8V ,3V
- External antenna - Connected via 50 Ohm antenna connector or antenna pad

- Audio features - Speech codec modes:
 - Half Rate (ETS 06.20)
 - Full Rate (ETS 06.10)
 - Enhanced Full Rate (ETS 06.50/06.60/06.80)
 - Echo suppression
- Serial interface and Debug interface
 - Serial Port: Seven lines on Serial Port Interface
 - Serial Port can be used for CSD FAX, GPRS service and sending AT command of controlling module.
 - Autobauding supports baud rates from 1200 bps to 115200bps.
 - Debug port: provide two lines on Serial Port Interface /TXD and /RXD
 - Debug port is only used for debugging
- Phonebook management - Support phonebook types: SM, FD, LD, MC, RC, ON, ME, BN, VM, LA, DC, SD
- SIM Application Toolkit - Support SAT class 3, GSM 11.14 Release 99
- Real time clock - Implemented
- Timer function - Programmable via AT command
- Physical characteristics
 - Size: 33±0.15 x 33±0.15 x 3±0.3 mm
 - Weight: 7.8g
- Firmware upgrade - over serial interface

SCHEMATIC

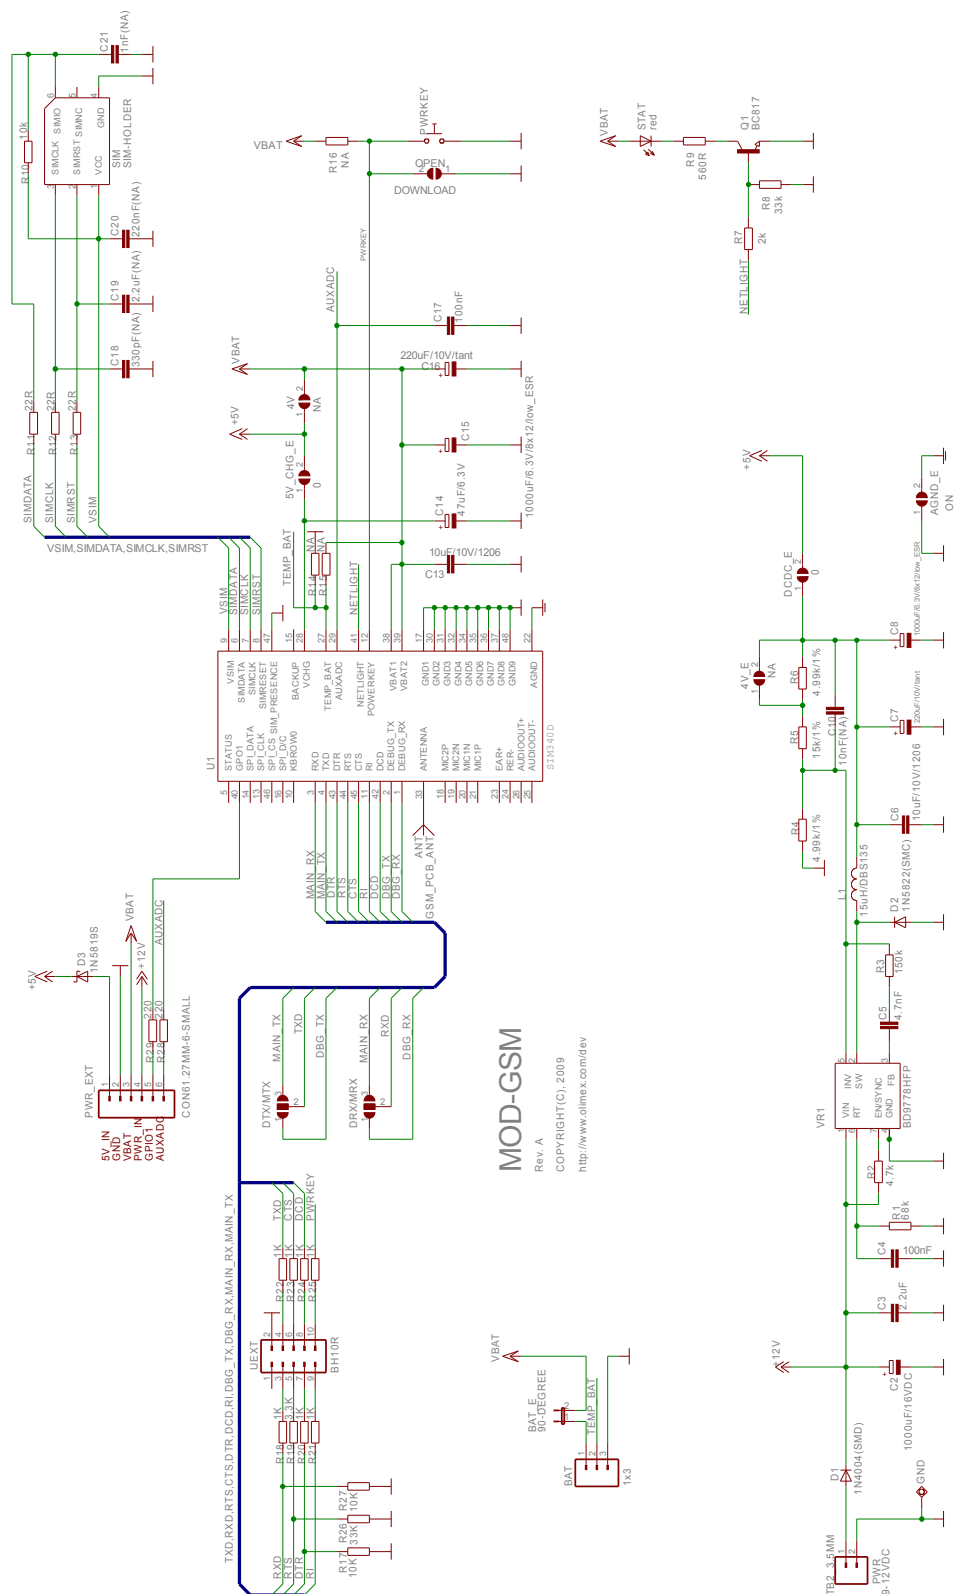

BOARD LAYOUT

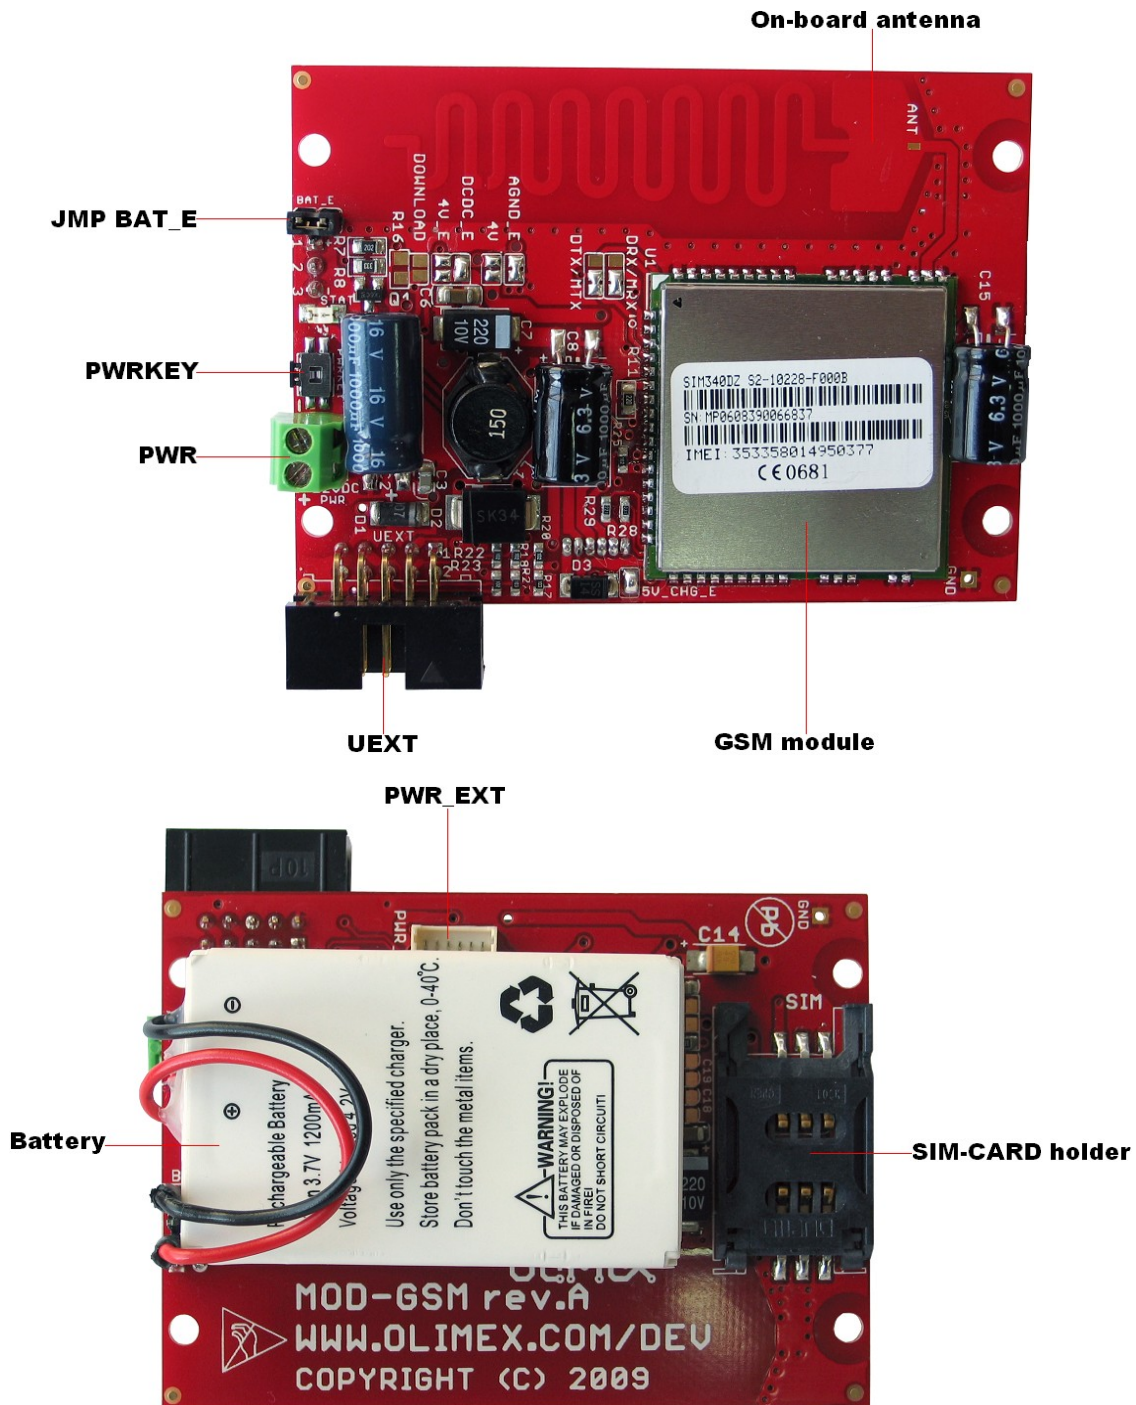

POWER SUPPLY CIRCUIT

The power supply of MOD-GSM may be done in different ways:

1. Power from +9 - 12VDC without using the internal backup battery. The module is powered only from external 12V and the battery is not connected. In this case:
 - jumper BAT_E must be open
 - jumper 4V_E must be closed
 - jumper 4V must be closed
 - jumper 5V_CHG_E must be open.
 - DCDC_E must be closedPower consumption in this mode is:
 - near to 70mA when have a conversation.
 - around 20mA in normal mode (without conversation).


Important: 4V_E, 4V and 5V_CHG_E jumpers have to be moved together.

2. Power from +12VDC with backup battery. The module is powered with battery and allows battery charging. In this case:
 - jumper BAT_E must be closed
 - jumper 4V_E must be open
 - jumper 4V must be open
 - jumper 5V_CHG_E must be closed
 - DCDC_E must be closedPower consumption in this mode:
Depends on live of the battery and vary from 260mA to 330mA (fully discharged battery). If we supply the module only via battery, without external power supply, the current through the battery is between 15mA and 30mA if there is no conversation, and between 180mA - 240mA when there is conversation.

CONNECTOR DESCRIPTIONS

JTAG


| Pin # | Signal Name |
|-------|-------------|
| 1 | NC |
| 2 | GND |
| 3 | RXD |
| 4 | TXD |
| 5 | RTS |
| 6 | CTS |
| 7 | DTR |
| 8 | DCD |
| 9 | RI |
| 10 | PWRKEY |

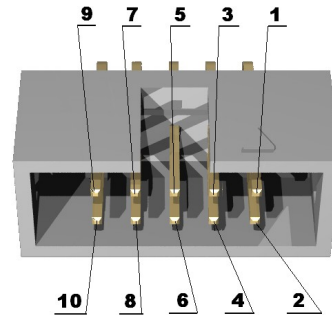

This connector allows connecting to other Olimex boards with UEXT connector.

SIM-CARD


| Pin # | Signal Name |
|-------|-------------|
| 1 | VSIM |
| 2 | SIMRST |
| 3 | SIMCLK |
| 4 | GND |
| 5 | NC |
| 6 | SIMDATA |

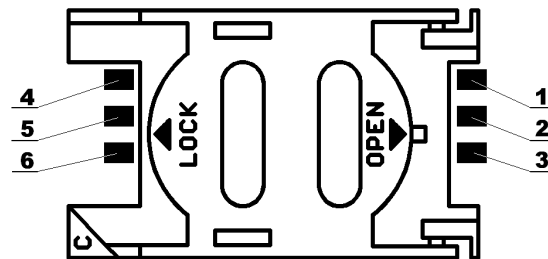

This is standard SIM card connector, to operate MOD-GSM should have inserted valid SIM card for your operator network.

PWR-CON


| Pin # | Signal Name |
|-------|-------------|
| 1 | +12V |
| 2 | GND |

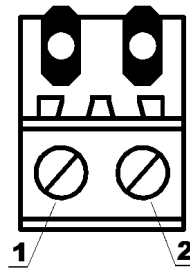

This connector is used to power the MOD-GSM. External (+9-12VDC) power source have to be applied to this pins.


PWR_EXT

| Pin # | Signal Name | Description |
|-------|-------------|---|
| 1 | 5V_IN | 5V input for battery recharge |
| 2 | GND | Ground |
| 3 | VBAT | Output - for power supplying other devices from the GSM battery |
| 4 | PWR_IN | Optional input for external power supply |
| 5 | GPIO1 | Doesn't work |
| 6 | AUXADC | Input for analog signal |

 

BAT

| Pin # | Signal Name |
|-------|-------------|
| 1 | VBAT |
| 2 | TEMP_BAT |
| 3 | GND |

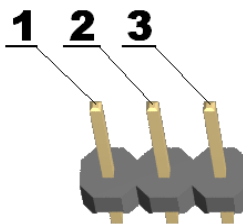

Note: The battery doesn't support TEMP_BAT.

JUMPER DESCRIPTION

BAT_E



Connects 3.7V Li-ion battery to the GSM module. Default state is to be open to not drain the battery during stocking the modules.

Default state - open

4V_E



This jumper is used when power the module without battery. When connected enable 4V to the DCDC output.

Default state - open.

4V



This jumper is used when power the module without battery. When connected the jumper enable 4V to VBAT power pins of SIM340D module.

Default state - open.

5V_CHG_E



This jumper is used when the battery is present and allows battery charging. Connects the DCDC converter output (5V or 4V according 4V_E jumper state) to VCHG power pin of SIM340D module.

Default state closed

Important: 4V_E, 4V and 5V_CHG_E jumpers have to be moved together.

Do not plug in external +12V if BAT_E jumper is open!

DCDC_E



Enable DCDC. Connect DCDC output ((5V or 4V according 4V_E jumper state) to the module.

Default state closed

Download



When the jumper is closed allow SIM340D firmware upgrade.

Default state is open

DTX/MTX



The DebugTX/MainTX defines whether Debug TX terminal or Main TX terminal of SIM340D module is connected to FT232RL virtual com port driver.

Default state is DTX

DRX/MRX



The DebugRX/MainRX define whether Debug RX terminal or Main RX terminal of SIM340D module is connected to FT232RL virtual com port driver.

Default state is DRX

AGND_E



Enable board analog ground.

Default state is closed

INPUT/OUTPUT

PWRKEY button – turns on the MOD-GSM module. You can turn on the SIM340D by driving the PWRKEY to a low level voltage for period time from 500mS to 1S

Status LED (red) with name **STAT** – indicates the state of SIM340D module.


STAT is off state - SIM340D is not running

64ms On/ 800ms Off - SIM340D does not find the network

64ms On/ 3000ms Off - SIM340D find the network

64ms On/ 300ms Off - GPRS communication

MECHANICAL DIMENSIONS

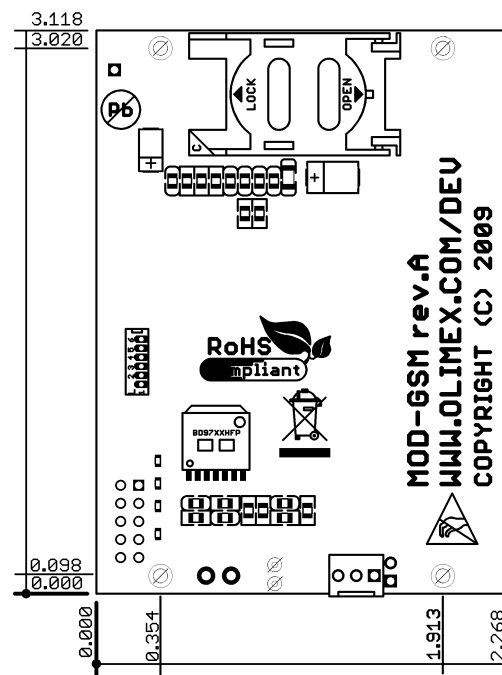

All measures are in inches.

AVAILABLE DEMO SOFTWARE

- MOD-GSM and MOD-GSM-EDGE demo

ORDER CODE

MOD-GSM assembled and tested.

How to order?

You can order to us directly or by any of our distributors.

Check our web www.olimex.com/dev for more info.



All boards produced by Olimex are ROHS compliant

Revision history

REV.A - create March 2009

Disclaimer

© 2009 Olimex Ltd. All rights reserved. Olimex®, logo and combinations thereof, are registered trademarks of Olimex Ltd. Other terms and product names may be trademarks of others.

The information in this document is provided in connection with Olimex products. No license, express or implied or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Olimex products.

Neither the whole nor any part of the information contained in or the product described in this document may be adapted or reproduced in any material from except with the prior written permission of the copyright holder.

The product described in this document is subject to continuous development and improvements. All particulars of the product and its use contained in this document are given by OLIMEX in good faith. However all warranties implied or expressed including but not limited to implied warranties of merchantability or fitness for purpose are excluded.

This document is intended only to assist the reader in the use of the product. OLIMEX Ltd. shall not be liable for any loss or damage arising from the use of any information in this document or any error or omission in such information or any incorrect use of the product.