

## INTRODUCTION 1.

This Instruction Sheet (IS) covers the use of the AMP-LEAF Extraction Tools 465195-1, -2 and -4, which extract AMP-LEAF contacts from the connector housings listed in Figure 3. Read these instructions carefully before extracting any contacts.



All dimensions on this document are in metric units [with U. S. customary units in brackets].

## **DESCRIPTION** (Figure 1) 2.

The extraction tool consists of a lance release tip for depressing the contact locking lance, an alignment tip for positioning the tool in the connector housing, and an

\*Trademark of AMP Incorporated

© Copyright 1962, 1981 and 1991 by AMP incorporated. All International Rights Reserved.

connector housing.

## CONTACT EXTRACTION 3.

Refer to Figure 1 and proceed as follows:


Select the contact to be removed. Look 1. straight into FRONT (mating face) of connector and note the lance release slot.

2. Insert extraction tool into front of connector with lance release tip entering lance release slot and alignment tip entering contact cavity.

Push lance release tip in until locking lance is 3. released from slot.

CAUTION

Do not pry or twist tool when inserting into connector. Damage to the tool or connector could result.

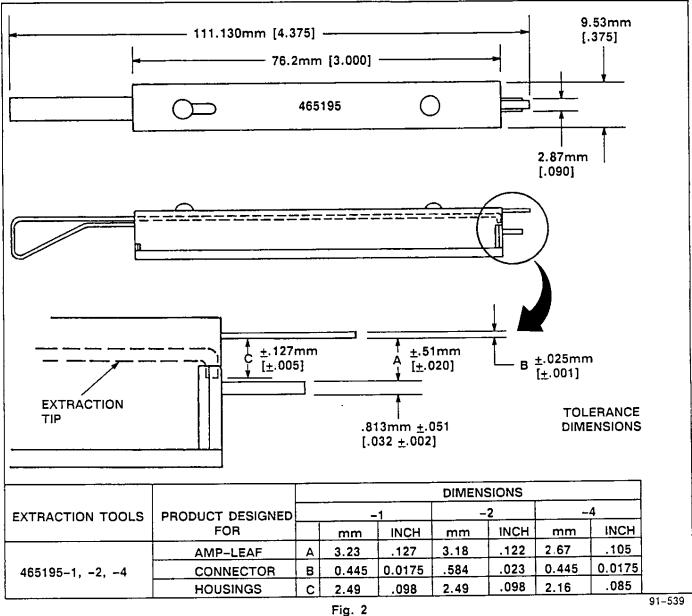

Maintaining pressure on release tip, push 4. extraction tip handle forward to push the contact out the back of connector.

Remove extraction tool and pull contact from 5. back of connector.

## TOOL INSPECTION 4.

The AMP extraction tools listed on this sheet should be inspected with the information provided in Figure 2. We recommend that you inspect the tool immediately upon arrival in your factory, and at regularly scheduled intervals, to ensure that the tool has not been damaged. The tool is not repairable and should be replaced when worn or damaged. It is recommended that the tool be stored in a clean, dry place and cleaned with a soft, lint-free cloth.

Additional tools can be purchased from:

CUSTOMER SERVICE (38-35) AMP INCORPORATED P. O. BOX 3608 HARRISBURG, PA 17105-3608

IS	7045
----	------

TOOL NO.	CONNECTOR HOUSING				TOOL NO.	CONNECTOR HOUSING		
465195-1	480110 480142 582140 582147 582264 582358 582500	582535 582536 582627 582825 583963 583167	583280 583399-1, -3 583449-1 583463-1 583512-1 583552-1, -3	583662-1 583680-1 583685-1	465195-1 465195-2	583722-1 583723-1 583724-1 480133 480146 582191	583725-1 583726-1 583742-1 583360-1 583428-1 583663-1	583950 583952-1 583963 583964-1 583716-1 583731-1
					465195-4	583977 (Recomme	583983 nded by cont	act only).

Fig. 3

•

.