
## **TOUCH PANEL CONTROL BOARD 7-WIRE USB**

#### N16B-0558-B740 USB Interface Controller Board Quick Reference

#### 7-Wire Resistive Touch Panels

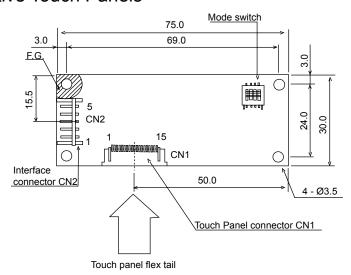



#### **■ FEATURES**

- High quality and reliability touch panel control board with switch selectable cable tail exit direction.
- USB 1.1 Interface for direct connection to PC or alternative USB interfaces.
- · Board is USB bus powered.
- Used to control 7-wire resistive touch panels.
- · RoHS compliant

# A B D C

#### Origin (0,0) Point

#### **■ SWITCH SETTINGS**

SW1	ON		OFF		ON		OFF	
SW2	ON	A	ON	B	OFF	- C	OFF	
SW3	ON		ON	500	OFF		ON	

[SW4 is not used]

#### **■** CONSTRUCTION

Specification Item		N16B-0558-B740 7-Wire USB Control Board		
Mechanical	Size / Weight	75mm x 30mm / 30 g		
Electrical	Supply voltage(max./min.)	Vcc 5.5V/4.1 V		
	Operating current (detect)	36 mA at Vcc = 5V and T = 25 degrees		
	Sleep Mode current	6 mA at Vcc = 5V and T = 25 degree s		
Environment	Operating Temperature	-5° C to +60° C		
	Storage Temperature	-30° C to +70° C		
	Humidity	20%RH to 85% RH at +38° C maximum wet bulb temperature		

### **USB 7-Wire Control Board**

- TOUCH PANEL CONNECTION CN1 (FCI: SFW15R-1STAE1-LF)
- INTERFACE CONNECTION CN2 (JST #: S5B EH (LF))

1.	+5V (Vcc)	3.	D-(Signal)	5.	Frame Ground
2.	D+ (Signal)	4.	Ground		

Complete specification document is available on request for customers with whom we have an approved NDA in place.

#### **Fujitsu Components International Headquarter Offices**

Japan

Fujitsu Component Limited Gotanda-Chuo Building

3-5, Higashigotanda 2-chome, Shinagawa-ku

Tokyo 141, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626

Email: promothq@ft.ed.fujitsu.com

Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A. Tel: (1-408) 745-4900

Fax: (1-408) 745-4970
Email: components@us.fuiits

Email: components@us.fujitsu.com Web: http://us.fujitsu.com/components/ Europe

Fujitsu Components Europe B.V.

Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910

Fax: (31-23) 5560950 Email: info@fceu.fujitsu.com Web: emea.fujitsu.com/components/

Asia Pacific

Fujitsu Components Asia Ltd. 102E Pasir Panjang Road #01-01 Citilink Warehouse Complex

Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@fcal.fujitsu.com

Web: http://www.fujitsu.com/sg/services/micro/components/

©2007 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice. Rev. June 4, 2007.