SP 300-BLUE

PRODUCT DESCRIPTION

The SP 300-BLUE features a 200mV d.c. measurement range with auto-zero and auto-polarity. Decimal points are user selectable. The SP 300-BLUE features a negative rail generator which enables the meter to measure a signal referenced to its own power supply 0V. The blue LED display ensures excellent readability under low light conditions. The module is easily fitted into the panel, using the fixing clip provided. The module's low cost means it will suit high and low volume applications. The design of the panel meter's housing and seal ensures splash proofing in many applications.

FEATURES

- 9.4mm (0.37") Digit Height
- Blue LED Display
- 200mV d.c. Full Scale Reading
- 50mA @ +5V d.c. Power Supply
- Auto-zero and Auto-polarity
- Programmable Decimal Points
- Simplified Connection
- Splash Proof

TYPICAL APPLICATIONS

- Precision Instrumentation Systems
- Power Supply Monitoring
- Test Boxes
- Panel-Mount Indication



ORDERING INFORMATION

	Stock Number
Standard Meter	SP 300-BLUE

ELECTRICAL SPECIFICATIONS

Specification	Min.	Тур.	Max.	Unit
Accuracy (overall error) *		0.1		% (±1 count)
Linearity			±1	count
Sample rate		2.5		samples/sec
Operating temperature range	0		50	C
Warm-up time		10		minute
Temperature stability		150		ppm/°C
Supply voltage	4.75	5	5.25	V
Supply current		50		mA
Input leakage current (Vin = 0V)		1	10	рА


* To ensure maximum accuracy, re-calibrate periodically.


SAFETY


To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's pins must not exceed 60Vdc. The user must ensure that the incorporation of the panel meter into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).


LASCAR ELECTRONICS LTD. LASCAR ELECTRONICS INC. LASCAR ELECTRONICS (HK) LIMITED MODULE HOUSE, 4258 WEST 12th STREET, UNIT NOS. 6-8, 19/F FUTURA PLAZA, WHITEPARISH, ERIE, 111-113 HOW MING STREET, WILTSHIRE SP5 2SJ, PA 16505, KWUN TONG, KOWN TONG, KONG UK USA HONG KONG

SP 300-BLUE

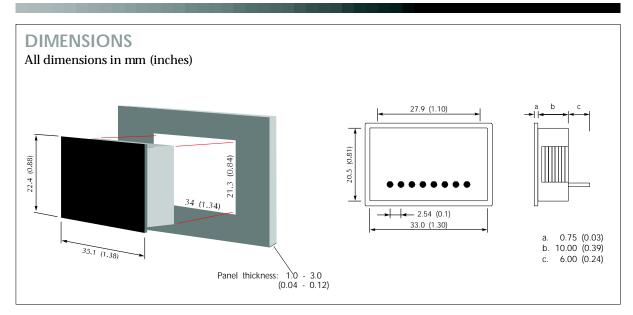

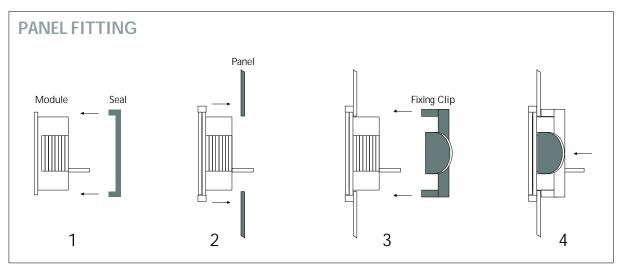

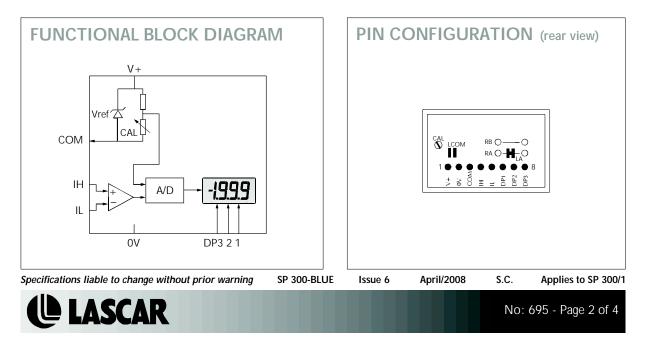

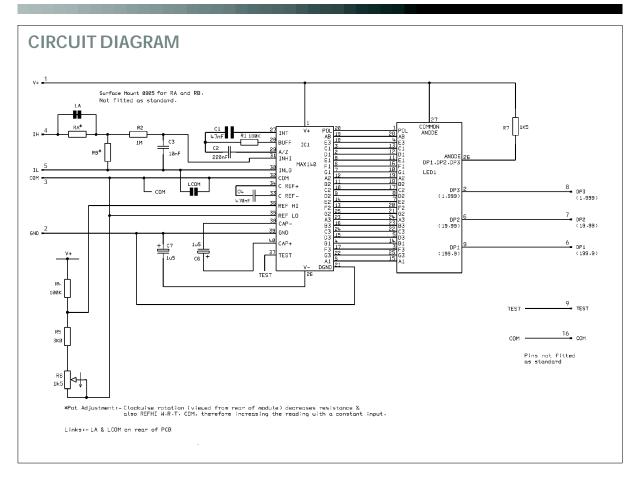

PINFUNCTIONS

- 1. V+ Positive power supply to the meter.
- 2. 0V 0V power supply connection to the meter.
- 3. COM Ground for analogue section of A/D converter.
 - It is actively held at 3.05V (nom) below V+ and must not be allowed to sink excessive current (> 100? A) by, for instance, connecting to a higher voltage.
- 4. IH Positive measuring input.
- 5. IL Negative measuring input.
- 6. DP1 Connect to 0V to display DP1 (199.9).
- 7. DP2 Connect to 0V to display DP2 (19.99).
- 8. DP3 Connect to 0V to display DP3 (1.999).

Note:

A negative supply is generated internally and mirrors the positive supply. For example: if V + is + 5V, then the internally generated V- is -5V. When measuring with the input referenced to the same supply rail as that of the panelmeter, then the limitations on the input range are (V - 1.5V) to (V - 1.5V).

SP 300-BLUE

Solder Links:

LCOM Normally Open. Connects ILtoCOM.

Specifications liable to change without prior warning

Issue 6

April/2008

S.C.

Applies to SP 300/1




SP 300-BLUE

SCALING


Two resistors Ra and Rb may be used to alter the full scale reading (FSR) of the meter - see table. The meter will have to be recalibrated by adjusting the calibration potentiometer on the rear of the module.

	FSR	Ra	Rb
Voltage	2V	910k**	100k
	20V	1M**	10k
	200V	1M**	1k
	2000V*	1M**	100R
Current	200?A	OR	1k
	2mA	OR	100R
	20mA	OR	10R
	200mA	OR	1R

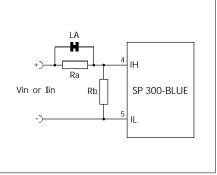


APPLICATIONS

 Do not connect more than one meter to the same power supply if the meters cannot use the same signal ground. Taking any input beyond the power supply railswilldamage the meter.



 
Measuring an input voltage referenced to a floating supply, i.e. the input voltage and the meter's power supply are isolated from each other.



Measuring a single ended input voltage referenced to supply, i.e. the input voltage and the meter's power supply share the same 0V rail.

 $Rs = \underline{200mV}$ (e.g. 0.1? /400mWfor2Afullscale)


 $I_{\rm FSR}$

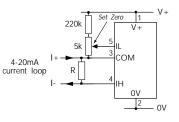

Measuring a 4-20mA loop current.

 $R = \frac{R \text{ eading at } 20\text{mA}}{160}$

The meter's power supply must be isolated from the 4-20mA current loop.

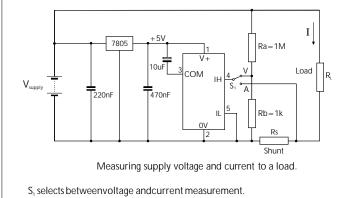

 $R = \underbrace{0.2}{I_{FSR}} \underbrace{0.2}{V_{FSR}} \underbrace{0}{V_{FSR}} \underbrace{0}{V$

Measuring current. The meter's supply is isolated from the current being measured.

S.C.

Specifications liable to change without prior warning SP 300-BLUE

DisplayDP1, DP2orDP3, by connecting to OV, as required

Issue 6 April/2008

Applies to SP 300/1

No: 695 - Page 4 of 4



Raand Rb shown scaled for 200V_{FSR}