

Accessories

Side-Mount Trip Indicating Auxiliary Contacts



Can be fitted on the right side of manual motor protectors. Can be combined with standard auxiliary contacts. Trip indication:
A. General Trip indication (overload) B. Short-circuit trip. Local short-circuit indication by red indicator, manually resettable.

Table 185. Side-Mount Trip Indicating Auxiliary Contacts

Contact Configuration	Contact Sequence	Pkg. Qty.	For Use with...	Catalog Number	Price U.S. \$ ①
2 x 1NO		2	XTPB, XTPR, XTPM, XTPT	XTPAXSATR20	35.25
2 x 1NC		2	XTPB, XTPR, XTPM, XTPT	XTPAXSATR02	35.25

① Price listed is for a quantity of one (1). Orders must be placed in multiples of package quantity listed.

Early-Make Front-Mount Auxiliary Contacts



XTPBXFAEM20



XTPAXFAEM20

For use with XTPB..., B-Frame XTPR and XTPT. Can be fitted to the front of a manual motor protector. 45 mm width of manual motor protector remains unchanged. For early energization of undervoltage release, e.g. in Emergency-Stop circuits to EN 60204.

Table 186. Early-Make Front-Mount Auxiliary Contacts

Contact Configuration	Contact Sequence	Pkg. Qty.	For Use with...	Catalog Number	Price U.S. \$ ②
2NO		5	XTPB	XTPBXFAEM20	29.00
2NO		2	XTPR, XTPM, XTPT	XTPAXFAEM20	29.00

② Price listed is for a quantity of one (1). Orders must be placed in multiples of package quantity listed.

Discount Symbol **1CD7**