

● Part Numbering

SAW Filters for RF/Local and IF · SAW Trap

(Part Number)

<b>SA</b>	<b>F</b>	<b>EB</b>	<b>942M</b>	<b>FL0</b>	<b>F</b>	<b>00</b>	<b>R14</b>
①	②	③	④	⑤	⑥	⑦	⑧

① Product ID

Product ID	
<b>SA</b>	SAW

② Function

Code	Function
<b>F</b>	Single Filter
<b>W</b>	Dual Filter
<b>E</b>	Trap

③ Structure/Size

Code	Structure/Size
<b>EB</b>	Package Type

④ Nominal Center Frequency

Expressed by four-digit alphanumerics. The unit is hertz (Hz). If the unit is "MHz", it is expressed by three figures plus "M". If the unit is "GHz", a decimal point is expressed by capital letter "G".

⑤ Character Design

Code	Character Design
<b>FL0</b>	A serial number expresses the design version.

⑥ Board

Code	Board
<b>F</b>	Expresses the substrate being used.

⑦ Individual Specification

Code	Individual Specification
<b>00</b>	—

⑧ Packaging

Code	Packaging
<b>R00</b>	10000 pcs./ø330mm Reel
<b>R02</b>	2000 pcs./ø330mm Reel
<b>R04</b>	4000 pcs./ø330mm Reel
<b>R05</b>	5000 pcs./ø330mm Reel
<b>R11</b>	1000 pcs./ø180mm Reel
<b>R12</b>	2000 pcs./ø180mm Reel
<b>R14</b>	4000 pcs./ø180mm Reel