

- Move your soundcard connections to the front of your PC for easier use
 Additional USB socket on hub
 Speaker/headset change over switch
 Connections: 3.5mm microphone, headphones and speaker, USB socketContents: Hub, audio lead, USB lead and user guide

Order Code 1860395

price each