PM7/PM8 Series





- · RFI Filter Module Combines IEC Connector, Fusing, and Voltage Select Features in One Unit
- PM7 Series Filters Provide 20% More Differential Mode Attenuation Than Comparable Units
- · Accepts Either U.S. or European Standard Fuse Sizes
- Available to UL/IEC 60601 Standard and Meets UL 544 Specification for Medical and Dental Applications

Specifications:

Rated Voltage: 250VAC Maximum - 50/60 Hz **Rated Current:** 115VAC 250VAC 3A 3A

6A 6A

Current Overload: 6X for 8 Seconds

Hi-Pot Test (1 min):

Line to Ground 1500VAC 1768VDC Line to Line

Insulation Resistance: 9 x 10° Ω at 100VDC

Ambient Temperature: 40°C Max. at Rated Current

Humidity Range: 0% to 95% R.H.

Termination:

· IEC Receptacle Wire Wrap/Solder

Maximum Leakage Current:

PM7, PM8 Each Line to Ground 115VAC, 60Hz: 0.002mA 0.005mA 250VAC, 50Hz:

Voltage Select Card: Installed in 120VAC position

unless otherwise specified

Agency Approvals:










Refer to Page 80 for Ordering Instructions

PM7 Series Simplified Schematic

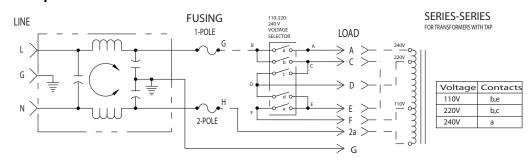


Nominal Current Rating	Part Number	Termination Line/Load	MINIMUM INSERTION LOSS - dB (50 ohm Circuit)						
			MODE	Frequency - MHz					
				.15	.50	1.0	5.0	10	30
2 /	PM7XXX03	IEC/Solder	Common	14	20	22	24	22	15
3A	PM8XXX03	Tabs	Differential	8	18	24	46	50	40
6A	PM7XXX06 PM8XXX06	IEC/Solder Tabs	Common Differential	10 8	15 18	18 24	18 39	18 40	15 40

NOTE: Other combinations of terminals may be specified on special order.




PM7/PM8 Series (continued)

PM7 Series Simplified Schematic

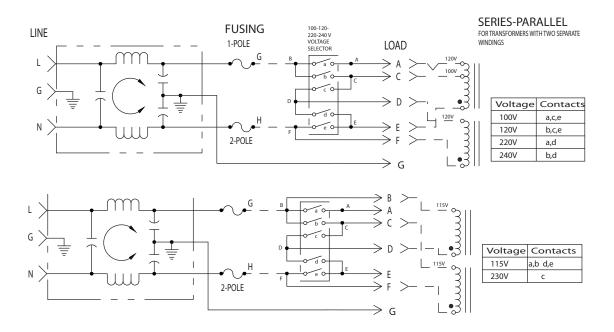

PM8 Series Simplified Schematic

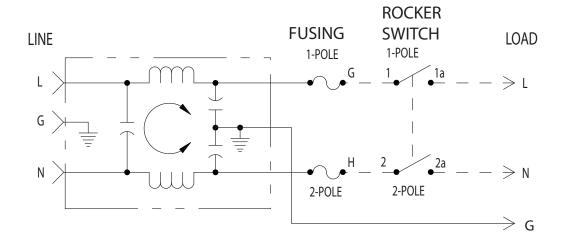


A Division of Powers Holdings, Inc.

PM7/PM8 Snap-Mount Series

(3 and 6Amp) Dimensions


Refer to Page 80 for Standard Mounting Cutouts

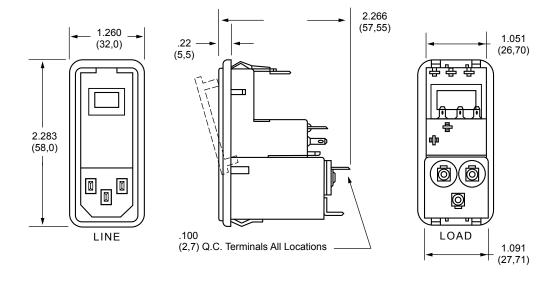

PM7/PM8 Screw-Mount Series


(3 and 6Amp) Dimensions

Refer to Page 80 for Standard Mounting Cutouts

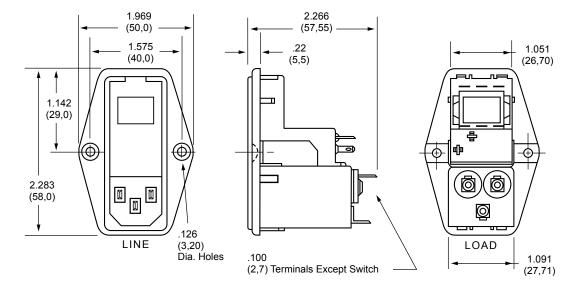

PM7/PM8 Series (continued)

How to Order

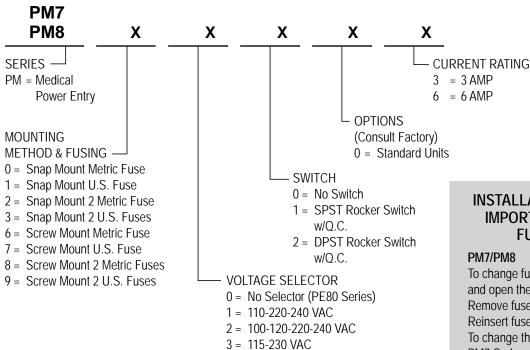

INSTALLATION INSTRUCTION **IMPORTANT - CHANGING FUSE/VOLTAGE**

PM7/PM8

To change fuse, remove power cord and open the front cover on the module. Remove fuse holder and replace fuse. Reinsert fuse holder and close cover. To change the operating voltage on the PM7 Series, remove the power cord and open front cover. Rotate voltage select wheel until desired voltage appears in window of cover.

· Filter shipped without fuse. Always use caution when selecting and changing fuses and voltage requirements. Curtis Industries is not responsible for malfunction due to improper installation/selection of fuse and/or voltage select.

PM7/PM8 Snap-Mount Series *See Below 2.20 (55,9)1.122 (28,50)*Panel Thickness Cutout .08 (2,0) R .031" - .079" use 2.20" .080" - .125" use 2.22"

