

Dual UART with 16-byte/64-byte FIFO's and up to 5 Mbit/s Data Rate

1.0 General Description

The NS16C2552 and NS16C2752 are dual channel Universal Asynchronous Receiver/Transmitter (DUART). The footprint and the functions are compatible to the PC16552D, while new features are added to the UART device. These features include low voltage support, 5V tolerant inputs, enhanced features, enhanced register set, and higher data rate.

The two serial channels are completely independent of each other, except for a common CPU interface and crystal input. On power-up both channels are functionally identical to the PC16552D. Each channel can operate with on-chip transmitter and receiver FIFO's (in FIFO mode).

In the FIFO mode each channel is capable of buffering 16 bytes (for NS16C2552) or 64 bytes (for NS16C2752) of data in both the transmitter and receiver. The receiver FIFO also has additional 3 bits of error data per location. All FIFO control logic is on-chip to minimize system software overhead and maximize system efficiency.

To improve the CPU processing bandwidth, the data transfers between the DUART and the CPU can be done using DMA controller. Signaling for DMA transfers is done through two pins per channel (TXRDY and RXRDY). The RXRDY function is multiplexed on one pin with the OUT2 and BAUDOUT functions. The configuration is through Alternate Function Register.

The fundamental function of the UART is converting between parallel and serial data. Serial-to-parallel conversion is done on the UART receiver and parallel-to-serial conversion is done on the transmitter. The CPU can read the complete status of each channel at any time. Status information reported includes the type and condition of the transfer operations being performed by the DUART, as well as any error conditions (parity, overrun, framing, or break interrupt).

The NS16C2552 and NS16C2752 include one programmable baud rate generator for each channel. Each baud rate generator is capable of dividing the clock input by divisors of 1 to (2¹⁶ - 1), and producing a 16X clock for driving the internal transmitter logic and for receiver sampling circuitry. The NS16C2552 and NS16C2752 have complete MODEM-control capability, and a processor-interrupt system. The interrupts can be programmed by the user to minimize the processing required to handle the communications link.

2.0 Features

- Dual independent UART
- Up to 5 Mbits/s data transfer rate
- 2.97 V to 5.50 V operational Vcc
- 5 V tolerant I/Os in the entire supply voltage range
- Industrial Temperature: -40°C to 85°C
- Default registers are identical to the PC16552D
 Notecosts (Notecosts)
- NS16C2552/NS16C2752 is pin-to-pin compatible to NSC PC16552D, EXAR ST16C2552, XR16C2552, XR 16L2552, and Phillips SC16C2552B
- NS16C2752 is compatible to EXAR XR16L2752, and register compatible to Phillips SC16C752
- Auto Hardware Flow Control (Auto-CTS, Auto-RTS)
- Auto Software Flow Control (Xon, Xoff, and Xon-any)
- Fully programmable character length (5, 6, 7, or 8) with even, odd, or no parity, stop bit
- Adds or deletes standard asynchronous communication bits (start, stop, and parity) to or from the serial data
- Independently controlled and prioritized transmit and receive interrupts
- Complete line status reporting capabilities
- Line break generation and detection
- Internal diagnostic capabilities
 Loopback controls for communications link fault isolation
 - Break, parity, overrun, framing error detection
- Programmable baud generators divide any input clock by 1 to (2¹⁶ - 1) and generate the 16 X clock
- IrDA v1.0 wireless Infrared encoder/decoder
- DMA operation (TXRDY/RXRDY)
- Concurrent write to DUART internal register channels 1 and 2
- Multi-function output allows more package functions with fewer I/O pins
- 44-PLCC or 48-TQFP package

Table of Contents

1.0 General Description	1
2.0 Features	1
3.0 System Block Diagram	4
4.0 Connection Diagrams	4
5.0 Pin Descriptions	5
5.1 PARALLEL BUS INTERFACE	
5.3 CLOCK AND RESET	8
5.4 POWER AND GROUND	8
6.0 Register Set 6.1 RECEIVE BUFFER REGISTER (RBR)	9
	11
6.2 TRANSMIT HOLDING REGISTER (THR)	12
6.3 INTERRUPT ENABLE REGISTER (IER) [´] 6.4 INTERRUPT IDENTIFICATION REGISTER (IIR)	12
6.5 FIFO CONTROL REGISTER (FCR)	
6.6 LINE CONTROL REGISTER (LCR)	
6.7 MODEM CONTROL REGISTER (LCR)	10
6.8 LINE STATUS REGISTER (LSR)	20
6.10 SCRATCHPAD REGISTER (SCR)	23
6.11 PROGRAMMABLE BAUD GENERATOR	
6.12 ALTERNATE FUNCTION REGISTER (AFR)	
6.13 DEVICE IDENTIFICATION REGISTER (ID)	24
6.14 ENHANCED FEATURE REGISTER (EFR)	25
6.15 SOFTWARE FLOW CONTROL REGISTERS (SFR)	. 26
7.0 Operation and Configuration	26
7.1 CLOCK INPUT	26
7.2 RESET	
7.3 RECEIVER OPERATION	
7.3.1 Receive in FIFO Mode	
7.3.2 Receive in non-FIFO Mode	28
7.3.3 Receive Hardware Flow Control	28
7.3.4 Receive Flow Control Interrupt	29
7.4 TRANSMIT OPERATION	29
7.4.1 Transmit in FIFO Mode	
7.4.2 Transmit in non-FIFO Mode	
7.4.3 Transmit Hardware Flow Control	
7.4.4 Transmit Flow Control Interrupt	30
7.5 SOFTWARE XON/XOFF FLOW CONTROL 7.6 SPECIAL CHARACTER DETECT	30
	31
7.7 SLEEP MODE	31
7.8 INTERNAL LOOPBACK MODE	
7.9 DMA OPERATION	
7.10 INFRARED MODE	
8.0 Design Notes	
8.1 DEBUGGING HINTS	
8.2 CLOCK FREQUENCY ACCURACY 8.3 CRYSTAL REQUIREMENTS	
8.3 CRYSTAL REQUIREMENTS	
8.4.1 Set Baud Rate	
8.4.2 Configure Prescaler Output	
8.4.3 Set Xon and Xoff flow control	35
8.4.4 Set Software Flow Control	
8.4.5 Configure Tx/Rx FIFO Threshold	35
8.4.6 Tx and Rx Hardware Flow Control	. 35
8.4.7 Tx and Rx DMA Control	
8.5 DIFFERENCES BETWEEN THE PC16552D AND NS16C2552/2752	35
8.6 NOTES ON TX FIFO OF NS16C2752	
9.0 Absolute Maximum Ratings	
10.0 DC and AC Specifications	
10.1 DC SPECIFICATIONS	
10.2 CAPACITANCE	-
10.3 AC SPECIFICATIONS	
11.0 Timing Diagrams	

Downloaded from Elcodis.com electronic components distributor

List of Figures


FIGURE 1. Internal Clock Dividers	. 18
FIGURE 2. Crystal Oscillator Circuitry	
FIGURE 3. Clock Input Circuitry	. 27
FIGURE 4. Rx FIFO Mode	
FIGURE 5. RXRDY in DMA Mode 1	
FIGURE 6. Rx Non-FIFO Mode	. 28
FIGURE 7. RXRDY in DMA Mode 0	. 28
FIGURE 8. Tx FIFO Mode	
FIGURE 9. TXRDY in DMA Mode 1	
FIGURE 10. Tx Non-FIFO Mode	
FIGURE 11. TXRDY in DMA Mode 0	
FIGURE 12. IrDA Data Transmission	. 32
FIGURE 13. Internal Loopback Functional Diagram	
FIGURE 14. Nominal Mid-bit Sampling	
FIGURE 15. Deviated Baud Rate Sampling	
FIGURE 16. Crystal Oscillator Circuit	. 35
FIGURE 17. External Clock Input	. 39
FIGURE 18. Modem Control Timing	
FIGURE 19. Host Interface Read Timing	
FIGURE 20. Host Interface Write Timing	
FIGURE 21. Receiver Timing	
FIGURE 22. Receiver Timing Non-FIFO Mode	
FIGURE 23. Receiver Timing FIFO Mode	. 41
FIGURE 24. Transmitter Timing	
FIGURE 25. Transmitter Timing Non-FIFO Mode	
FIGURE 26. Transmitter Timing FIFO Mode	. 42

List of Tables

TABLE 1. Basic Register Addresses	. 9
TABLE 2. NS16C2552 Register Summary	10
TABLE 3. RBR (0x0)	11
TABLE 4. THR (0x0)	
TABLE 5. IER (0x1)	. 12
TABLE 6. IIR (0x2)	13
TABLE 7. Interrupt Source and Priority Level	. 13
TABLE 8. Interrupt Sources and Clearing	
TABLE 9. FCR (0x2)	. 14
TABLE 10. LCR (0x3)	. 16
TABLE 11. MCR (0x4)	. 18
TABLE 12. LSR (0x5)	
TABLE 13. MSR (0x6)	. 22
TABLE 14. SCR (0x7)	. 23
TABLE 15. DLL (0x0, LCR[7] = 1, LCR != 0xBF)	
TABLE 16. DLM (0x1, LCR[7] = 1, LCR != 0xBF)	
TABLE 17. Baud Rate Generation Using 1.8432 MHz Clock with MCR[7]=0	
TABLE 18. AFR (0x2, LCR[7] = 1, LCR != 0xBF)	24
TABLE 19. DREV (0x0, LCR[7]=1, LCR!=0xBF, DLL=DLM=0x00)	24
TABLE 20. EFR (0x2, LCR = 0xBF)	
TABLE 21. Xon1 (0x4, LCR=0xBF)	
TABLE 22. Xon2 (0x5, LCR=0xBF)	
TABLE 23. Xoff1 (0x6, LCR=0xBF)	26
TABLE 24. Xoff2 (0x7, LCR=0xBF)	
TABLE 25. Crystal Component Requirement	
TABLE 26. Output State After Reset	
TABLE 27. Auto-RTS HW Flow Control on NS16C2552	29
TABLE 28. Auto-RTS HW flow Control on NS16C2752	29
TABLE 29. Xon/Xoff SW Flow Control on NS16C2552	
TABLE 30. Xon/Xoff SW Flow Control on NS16C2752	
	36
······································	

3.0 System Block Diagram

NS16C2552/NS16C2752

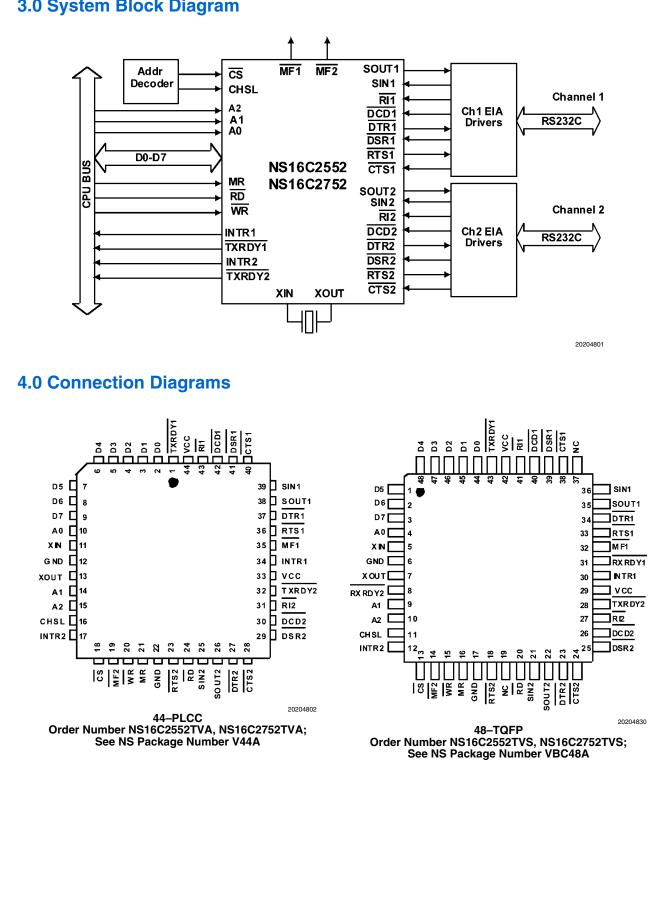

www.national.com

4

5.0 Pin Descriptions

The NS16C2552/NS16C2752 pins are classified into the following interface categories.

- Bus Interface
- Serial I/O Interface
- Clock and Reset
- Power supply and Ground pins

Serial channel number (1 or 2) is designated by a numerical suffix after each pin name. If a numerical suffix (1 or 2) is not

5.1 PARALLEL BUS INTERFACE

associated with the pin name, the information applies to both channels.

The I/O types are as follows:

Type: I Type: O Type: IO_Z

Input Output TRI-STATE I/O

Signal	Туре	PLCC	TQFP	Description
Name	10.7	Pin #	Pin #	· · · ·
D7	IO_Z	9	3	Data Bus:
D6		8	2	Data bus comprises eight TRI-STATE input/output lines. The bus provides bidirectional
D5		7	1	communications between the UART and the CPU. Data, control words, and status
D4		6	48	information are transferred via the D ₇ -D ₀ Data Bus.
D3		5	47	
D2		4	46	
D1		3	45	
D0		2	44	
A2	I	15	10	Register Addresses:
A1		14	9	Address signals connected to these 3 inputs select a DUART register for the CPU to read
A0		10	4	from or write to during data transfer. <i>Table 1</i> shows the registers and their addresses. Note that the state of the Divisor Latch Access Bit (DLAB), which is the most significant bit of the Line Control Register, affects the selection of certain DUART registers. The DLAB must be set high by the system software to access the Baud Generator Divisor Latches and the Alternate Function Register.
CS	I	18	13	Chip Select: When \overline{CS} is low, the chip is selected. This enables communication between the DUART and the CPU. Valid chip select should stabilize according to the t_{AW} parameter.
CHSL	I	16	11	 Channel Select: CHSL directs the address and data information to the selected serial channel. (<i>Table 1</i>) 1 = channel 1 is selected. 0 = channel 2 is selected.
RD	I	24	20	IO Read: The register data is placed on the D0 - D7 on the falling edge of $\overline{\text{RD}}$. The CPU can read status information or data from the selected DUART register on the rising edge.
WR	I	20	15	IO Write: On the falling edge of \overline{WR} , data is placed on the D0 - D7. On the rising edge, the data is latched into the selected DUART register.
RXRDY1 RXRDY2	0	N/A	31 8	UART Receive-ready: The receiver DMA signaling is available through this pin which is a seperate pin on the TQFP package, while on the PLCC package it is available through the MF pins (19, 35). When operating in the FIFO mode, the CPU selects one of two types of DMA transfer via FCR[3]. When operating in the 16450 Mode, only DMA mode 0 is available. Mode 0 supports single transfer DMA (and a transfer is usually made between CPU bus cycles). Mode 1 supports multi-transfer DMA where multiple transfers are made continuously until the Rx FIFO is empty. Details regarding the active and inactive states of this signal are described in <i>Section 6.5 FIFO CONTROL REGISTER (FCR)</i> and <i>Section 7.9 DMA OPERATION</i> .

Signal Name	Туре	PLC Pin		Description						
TXRDY1 TXRDY2	0	1 32	4:	,						
INTR1 INTR2	0	34 17	12							
5.2 SER		PLCC	E TQFP							
Name	Туре	Pin #	Pin #	Description						
SOUT1 SOUT2	0	38 26	35 22	ART Serial Data Out: ART transmit data output or infrared data output. The SOUT signal is set to logic 1 upon re r idle in the UART mode when MCR[6]=0. The SOUT signal transitions to logic 0 (idle stat DA mode) in the infrared mode when MCR[6]=1. ote: SOUT1 and SOUT2 can not be reset to IrDA mode.						
SIN1	I	39	36	UART Serial Data In:						
SIN2		25	21	UART receive data input or infrared data input. The SIN should be idling in logic 1 in the UART mode. The SIN should be idling in logic 0 in the infrared mode. The SIN should be pulled high through a 10K resistor if not used.						
RTS1 RTS2	0	36 23	33 18	UART Request-to-send: When low, RTS informs the remote link partner that it is ready to receive data. The RTS output signal can be set to an active low by writing "1" to MCR[1]. The RTS output can also be configured in auto hardware flow control based on FIFO trigger level. This pin stays logic 1 upon reset or idle (i.e., between data transfers). Loop mode operation holds this signal in its inactive						
DTR1 DTR2	0	37 27	34 23	state. JART Data-terminal-ready: When low, DTR informs the remote link partner that the UART is ready to establis communications link. The DTR output signal can be set to an active low by writing "1" to N 0]. This pin stays at logic 1 upon reset or idle. Loop mode operation holds this signal to nactive state.						
CTS1 CTS2	I	40 28	38 24	JART Clear-to-send: When low, $\overline{\text{CTS}}$ indicates that the remote link partner is ready to receive data. The $\overline{\text{CTS}}$ signal is a modern status input and can be read for the appropriate channel in MSR[4]. This bit reflects the complement of the $\overline{\text{CTS}}$ signal. MSR[0] indicates whether the $\overline{\text{CTS}}$ input has changed state ince the previous read of the MSR. $\overline{\text{CTS}}$ can also be configured to perform auto hardware flow control.						
DSR1 DSR2	I	41 29	39 25	Note: Whenever the CTS bit of the MSR changes state, an interrupt is generated if the MODEM Status Interrupt enabled. UART Data-set-ready: When low, DSR indicates that the remote link partner is ready to establish the communication link. The DSR signal is a MODEM status input and can be read for the appropriate channel i MSR[5]. This bit reflects the complement of the DSR signal. MSR[1] indicates whether th DSR input has changed state since the previous read of the MODEM Status Register. Note: Whenever the DSR bit of the MSR changes state, an interrupt is generated if the MODEM Status Interrupt enabled.						

Signal Name	Туре	PLCC Pin #	TQFP Pin #	Description
DCD1	1	42	40	UART Data-carrier-detect:
DCD2		30	26	 When low, DCD indicates that the data carrier has been detected by the remote link partner. The DCD signal is a MODEM status input and can be read for the appropriate channel in MSR [7]. This bit reflects the complement of the DCD signal. MSR[3] indicates if the DCD input has changed state since the previous reading of the MODEM Status Register. DCD has no effect on the receiver. Note: Whenever the DCD bit of the MSR changes state, an interrupt is generated if the MODEM Status Interrupt is enabled.
RI1		43	41	UART Ring-detector:
RI2		31	27	 When low, RI indicates that a telephone ringing is active. The RI signal is a MODEM status input and can be read for the appropriate channel in MSR[6]. This bit reflects the complement of the RI signal. MSR[2] indicates whether the RI input signal has changed state from low to high since the previous reading of the MSR. Note: Whenever the RI bit of the MSR changes from a high to a low state, an interrupt is generated if the MODEM Status Interrupt is enabled.
MF1	0	35	32	UART Multi-function Pin:
MF2		19	14	MF can be programmed for any one of three signal functions OUT2, BAUDOUT or RXRDY. Bits 2 and 1 of the Alternate Function Register select which output signal will be present on this pin. OUT2 is the default signal and it is selected immediately after master reset or power-up. The OUT2 can be set active low by programming bit 3 (OUT2) of the MCR to a logic 1. A Master Reset operation sets this signal to its inactive (high) state. Loop Mode holds this signal in its inactive state. The BAUDOUT signal is the 16X clock output that drives the transmitter and receiver logic of the associated serial channel. This signal is the result of the XIN clock divided by the value in the Divisor Latch Registers. The BAUDOUT signal for each channel is internally connected to provide the receiver clock (formerly RCLK on the PC16550D). The RXRDY signal can be used to request a DMA transfer of data from the RCVR FIFO. Details regarding the active and inactive states of this signal are described in <i>Section 6.5 FIFO</i> <i>CONTROL REGISTER (FCR)</i> and <i>Section 7.9 DMA OPERATION</i> .

Signal Name	Туре	PLCC Pin #	TQFP Pin #	Description
XIN	I	11	5	External Crystal Input: XIN input is used in conjunction with XOUT to form a feedback circuit for the bau rate generator's oscillator. If a clock signal is generated off-chip, then it should drive the baud rate generator through this pin. Refer to <i>Section 7.1 CLOCK INPUT</i> .
XOUT	0	13	7	External Crystal Output: XOUT output is used in conjunction with XIN to form a feedback circuit for the baue rate generator's oscillator. If the clock signal is generated off-chip, then this pin is unused. Refer to <i>Section 7.1 CLOCK INPUT</i> .
MR	I	21	16	Master Reset: When MR input is high, it clears all the registers including Tx and Rx serial shift registers (except the Receiver Buffer, Transmitter Holding, and Divisor Latches). The output signals, such as OUT2, RTS, DTR, INTR, and SOUT are also affected by an active MR input. (Refer to <i>Table 26</i> and <i>Section 7.2 RESET</i>).

Signal Name	Туре	PLCC Pin #	TQFP Pin #	Description
VCC	I	33	29	V _{cc} :
		44	42	+2.97V to +5.5V supply.
GND	I	12	6	GND:
		22	17	Device ground reference.
NC	I	N/A	19	No Connection:
			37	These pins are only available on the TQFP package.

There are two identical register sets, one for each channel, in the DUART. All register descriptions in this section apply to the register sets in both channels.

To clarify the descriptions of transmission and receiving operations, the nomenclatures through out this documentation are as follows:

- Frame Refers to all the bits between Start and Stop.
 Character or word The payload of a frame, between 5 to 8 bits.
- "!=" Not equal to.
- Res Reserved bit.

The address and control pins to register selection is summarized in *Table 1*.

	DLAB1	CHSL	A2	A1	A0	Register		
	0	1	0	0	0	Receive Buffer (Read), Transmitter Holding Register (Write)		
	0	1	0	0	1	Interrupt Enable		
С	0	1	0	1	0	Interrupt Identification (Read)		
Н	0	1	0	1	0	FIFO Control (Write)		
Α	x	1	0	1	1	Line Control		
N	x	1	1	0	0	Modem Control		
N E	x	1	1	0	1	Line Status (Read)		
L	x	1	1	1	0	Modem Status (Read)		
1	x	1	1	1	1	Scratchpad		
	1	1	0	0	0	Divisor Latch (Least Significant Byte)		
	1	1	0	0	1	Divisor Latch (Most Significant Byte)		
	1	1	0	1	0	Alternate Function		
	DLAB1	CHSL	A2	A1	A0	Register		
	0	0	0	0	0	Receive Buffer (Read), Transmitter Holding Register (Write)		
0	0	0	0	0	1	Interrupt Enable		
C H	0	0	0	1	0	Interrupt Identification (Read)		
A	0	0	0	1	0	FIFO Control (Write)		
Ν	x	0	0	1	1	Line Control		
Ν	х	0	1	0	0	Modem Control		
N E	x x	0	1	0	0	Modem Control Line Status (Read)		
E L		-	-	-	-			
	x	0	1	0	1	Line Status (Read)		
E L	x x	0	1	0	1 0	Line Status (Read) Modem Status (Read)		
E L	x x x	0 0 0	1 1 1	0 1 1	1 0 1	Line Status (Read) Modem Status (Read) Scratchpad		

TABLE 1. Basic Register Addresses

Reg Addr A2-A0	RD/ WR	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0	Comment
			UAR	Г 16С550	Compatib	le Regist	ers (Defa	ault Values Up	on Reset))
RBR THR 0x0	R/W	Data7	Data6	Data5	Data4	Data3	Data2	Data1	Data0	
Default		x	x	х	х	х	х	х	х	
IER	R/W	CTS Int			Sleep Md		RX	Tx Empty Int		
0x1		Ena	Ena	Ena	Ena	Stat Int Ena	Line Stat Int Ena	Ena	Int Ena	
Default		0	0	0	0	0	0	0	0	LCR[7] = 0
IIR	R	FIFOs	FIFOs	INT Src	INT Src		INT Src	INT Src	INT Src	
0x2		Ena	Ena	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Default	147			0 Tx		0	0 Tv	0 Rx FIFO	1 FIFOs	
FCR 0x2	W	RX FIFO Trigger	RX FIFO Trigger	Tx FIFO Trigger (2752)	Tx FIFO Trigger (2752)	DMA Md Ena	Tx FIFO Reset	Reset	Ena	
Default		0	0	0	0	0	0	0	0	
LCR 0x3	R/W	Divisor Ena	Set Tx Break	Set Parity	Even Parity	Parity Ena	Stop Bits	Word Length Bit 1	Word Length Bit 0	
Default		0	0	0	0	0	0	0	0	
MCR 0x4	R/W	Clk Div Sel	IR Md Ena	Xon Any	Internal Loopbk Ena	OUT2	OUT1	RTS Output Control	DTR Output Control	
Default					0	0	0	0	0	
LSR 0x5	R	Rx FIFO Gbl Err	THR & TSR Empty	THR E mpty	Rx Break	Rx Frame Error	Rx Parity Error	Rx Overrun Error	Rx Data Ready	LCR != 0xBF
Default		0	1	1	0	0	0	0	0	
MSR	R	DCD	RI	DSR		Delta	Delta	Delta	Delta	
0x6 Default		Input DCD	Input RI	Input DSR	Input CTS	DCD 0	RI 0	DSR 0	CTS 0	
SCR	R/W	SCR	SCR	SCR	SCR	SCR	SCR	SCR	SCR	
0x7		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Default		1	1	1	1	1	1	1	1	

Reg Addr A2-A0	RD/ WR	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0	Comment
		Į			Baud I	Rate Gen	erator D	ivisor		
DLL 0x0	R/W	DLL Bit 7	DLL Bit 6	DLL Bit 5	DLL Bit 4	DLL Bit 3	DLL Bit 2	DLL Bit 1	DLL Bit 0	
Default		X	Х	Х	Х	Х	Х	Х	Х	
DLM	R/W	DLM	DLM	DLM	DLM	DLM	DLM	DLM	DLM	
0x1		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	LCR[7] = 1
Default		X	X	X	X	X	X	X	X	LCR ! 0xBF
AFR	R/W	Rsrvd	Rsrvd	Rsrvd	Rsrvd	Rsrvd	RXRD T	BAUDOUT	Con- current	
0x2		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Sel	Sel	WR	
Default		0	0	0	0	0	0	0	0	
DREV 0x0	R	ID Bit 7	ID Bit 6	ID Bit 5	ID Bit 4	DREV Bit 3	DREV Bit 2	DREV Bit 1	DREV Bit 0	LCR[7] = 1 LCR != 0xBF DLL = 0x00 DLM = 0x00
		l			Fr	hanced	Register	<u> </u>		BEIN - 0x00
EFR	R/W	Auto	Auto	Special	IER[7:4]	SW	SW	SW Flow	SW	
0x2		CTS	RTS	Char	IIR[5:4]	Flow	Flow	Control Bit 1	Flow	
		Ena	Ena	Sel	FCR[5:4]	Control	Control		Control	
					MCR[7:5]	Bit 3	Bit 2		Bit 0	
Default		0	0	0	0	0	0	0	0	
XON1	R/W	XON1	XON1	XON1	XON1	XON1	XON1	XON1	XON1	
0x4		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Default		0	0	0	0	0	0	0	0	
XON2	R/W	XON2	XON2	XON2	XON2	XON2	XON2	XON2	XON2	LCR = 0xBF
0x5		Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Default										
XOFF1	R/W	XOFF1 Bit 7	XOFF1	XOFF1	XOFF1 Bit 4	XOFF1	XOFF1	XOFF1 Bit 1	XOFF1 Bit 0	
0x6 Default			Bit 6 0	Bit 5 0	ыц 4 0	Bit 3 0	Bit 2 0	0	ы 0	
XOFF2	R/W	XOFF2	XOFF2		XOFF2	XOFF2	XOFF2	XOFF2	XOFF2	
0x7	11/ 11	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Default			0	0	0	0	0	0	0	
Doluali							- Ŭ	v		
		Legend	Bit Name Default Value							

The Nomenclature of register descriptions:

- Register name, address, register bit, and value example: FCR 0x2.7:6 = 2'b11 - bits 6 and 7 of FCR are both 1. Alternative description: FCR[7:6] = 2'b11.
- 'b binary number.
- 'h hex number.
- 0xNN hex number.

• n'bN - n is the number of bits; N is the bit value. Example 8'b01010111 = 8'h57 = 0x57.

6.1 RECEIVE BUFFER REGISTER (RBR)

The receiver section contains an 8-bit Receive Shift Register (RSR) and a 16 (or 64)-byte FIFO that can be accessed through Receive Buffer Register (RBR).

TABLE 3. RBR (0x0)

Bit	Bit Name	R/W Def	Description
7:0	RBR Data	R	Receive Buffer Register
		0xXX	Rx FIFO data.
			Note: This register value does not change upon MR reset.

NS16C2552/NS16C2752

6.2 TRANSMIT HOLDING REGISTER (THR)

This register holds the byte-wide transmit data (THR). This is a write-only register.

		TABLE	4. THR (0x0)
Bit	Bit Name	R/W Def	Description
7:0	THR Data	W	Transmit Holding Register
		0xXX	Tx FIFO data.
			Note: This register value does not change upon MR reset.

6.3 INTERRUPT ENABLE REGISTER (IER)

This register enables eight types of interrupts for the corresponding serial channel. Each interrupt source can individually activate the interrupt (INTR) output signal. Setting the bits of the IER to a logic 1 unmasks the selected interrupt(s). Similarly, the interrupt can be masked off by resetting bits 0 through 7 of the Interrupt Enable Register (IER). If not desired to be used, masking an interrupt source prevents it from going active in the IIR and activating the INTR output signal. While interrupt sources are masked off, all system functions including the Line Status and MODEM Status still operate in their normal manner. *Table 5* shows the contents of the IER.

TABLE 5. IER (0x1)

Bit	Bit Name	R/W Def	Description
7	CTS Int Ena	R/W	CTS Input Interrupt Enable
		0	1 = Enable the $\overline{\text{CTS}}$ to generate interrupt at low to high transition. Requires EFR 0x2.4 = 1.
			$0 = Disable the \overline{CTS}$ interrupt (default).
6	RTS Int Ena	R/W	RTS Output Interrupt Enable
		0	1 = Enable the $\overline{\text{RTS}}$ to generate interrupt at low to high transition. Requires EFR 0x2.4 = 1.
			$0 = Disable the \overline{RTS}$ interrupt (default).
5	Xoff Int Ena	R/W	Xoff Input Interrupt Enable
		0	1 = Enable the software flow control character Xoff to generate interrupt. Requires EFR 0x2.4 = 1.
			0 = Disable the Xoff interrupt (default).
4	Sleep Mode	R/W	Sleep Mode Enable
	Ena	0	1 = Enable the Sleep Mode for the respective channel. Requires EFR 0x2.4 = 1.
			0 = Disable Sleep Mode (default).
3	Mdm Stat Int	R/W	Modem Status Interrupt Enable
	Ena	0	1 = Enable the Modem Status Register interrupt.
			0 = Disable the Modem Status Register interrupt (default).
2	Rx Line Stat Int	R/W	Receive Line Status Interrupt Enable
	Ena	0	An interrupt can be generated when any of the LSR bits 0x5.4:1=1. LSR 0x5.1 generates an interrupt
			as soon as an overflow frame is received. LSR 0x5.4:2 generate an interrupt when there is read error from FIFO.
			1 = Enable the receive line status interrupt.
			0 = Disable the receive line status interrupt (default).
1	Tx_Empty Int	R/W	Tx Holding Reg Empty Interrupt Enable
	Ena	0	1 = Enable the interrupt when Tx Holding Register is empty.
			0 = Disable the Tx Holding Register from generating interrupt (default).
0	Rx_DV Int Ena	R/W	Rx Data Available Interrupt Enable
		0	1 = Enable the Received Data Available and FIFO mode time-out interrupt.
			0 = Disable the Received Data Available interrupt (default).
6.4	INTERRUPT IDE		TION REGISTER (IIR) the associated DUART serial channel freezes all interrupts

In order to provide minimum software overhead during data word transfers, each serial channel of the DUART prioritizes interrupts into seven levels and records these levels in the Interrupt Identification Register. The seven levels of interrupt conditions are listed in *Table 7*. When the CPU reads the IIR, the associated DUART serial channel freezes all interrupts and indicates the highest priority pending interrupt to the CPU. While this CPU access is occurring, the associated DUART serial channel records new interrupts, but does not change its current indication until the access is complete. *Table 6* shows the contents of the IIR.

			TABLE 6. IIR (0x2)
Bit	Bit Name	R/W Def	Description
7:6	FIFOs Ena	R	FIFO Enable Status (FCR 0x2.0)
		00	2'b11 = Tx and Rx FIFOs enabled.
			2'b00 = Tx and Rx FIFOs disabled (default).
5	INT Src 5	R	RTS/CTS Interrupt Status
		0	$1 = \overline{\text{RTS}}$ or $\overline{\text{CTS}}$ changed state from low to high.
			$0 = No change on \overline{RTS} or \overline{CTS}$ from low to high (default).
4	INT Src 4	R	Xoff or Special Character Interrupt Status
		0	1 = Receiver detected Xoff or special character.
			0 = No Xoff character match (default).
3:1	INT Src 3:1	R	Interrupt Source Status
		000	These three bits indicates the source of a pending interrupt. Refer to Table 7 for interrup
			source and priority.
0	INT Src 0	R	Interrupt Status
		1	1 = No interrupt is pending (default).
			0 = An interrupt is pending and the IIR content may be used as a pointer for the interrupt
			service routine.

TABLE 7. Interrupt Source and Priority Level

Priority		lir	Register	Status B	Bits		Interrupt Source
Level	5	4	3	2	1	0	- Interrupt Source
1	0	0	0	1	1	0	LSR
2	0	0	1	1	0	0	RXRDY (Receive data time-out)
3	0	0	0	1	0	0	RXRDY (Receive data ready)
4	0	0	0	0	1	0	TXRDY (Transmit data ready)
5	0	0	0	0	0	0	MSR (Modem Status Register)
6	0	1	0	0	0	0	RXRDY (Received Xoff or special character)
7	1	0	0	0	0	0	CTS, RTS change state from low to high
-	0	0	0	0	0	1	None (default)

TABLE 8. Interrupt Sources and Clearing

Interrupt Generation	Interrupt Sources	Interrupt Clearing
LSR	Any bit is set in LSR[4:1] (Break Interrupt, Framing, Rx parity, or overrun error).	Read LSR register. (Interrupt flags and tags are not cleared until the character(s) that generated the interrupt(s) has/have been emptied or cleared.)
Rx Trigger	Rx FIFO reached trigger level.	Read FIFO data until FIFO pointer falls below the trigger level.
RXRDY Timer	Time-out in 4-word time plus 12-bit delay time.	Read RBR.
TXRDY	THR empty.	Read from IIR register or a write to THR.
MSR	Any state change in MSR[3:0].	Read from MSR register.
Xoff or Special character	Detection of Xoff or Special character.	Read from IIR register or reception of Xon character (or reception of next character if interrupt is caused by Special character).
CTS	Input pin toggles from logic 0 to 1 during CTS auto flow control mode.	Read from IIR or MSR.
RTS	Output pin toggles from logic 0 to 1 during RTS auto flow control mode.	Read from IIR or MSR.
This is a write	NTROL REGISTER (FCR) e only register at the same location as the IIR (the only register). This register is used to enable the	FIFOs, clear the FIFOs, set the FIFO trigger level, and select the DMA mode.

Mode 0: Mode 0 allows for single transfer in each DMA cycle. When in the 16450 Mode (FCR[0] = 0) or in the FIFO Mode (FCR[0] = 1, FCR[3] = 0) and there is at least one character in the RCVR FIFO or RCVR Buffer Register, the RXRDY pin will go active low. After going active, the RXRDY pin will be inactive when there is no character in the FIFO or Buffer Register.

On The Tx side, $\overline{\text{TXRDY}}$ is active low when XMIT FIFO or XMIT Holding Register is empty. $\overline{\text{TXRDY}}$ returns to high when XMIT FIFO or XMIT holding register is not empty.

Mode 1: Mode 1 allows for multiple transfer or multi-character burst transfer. In the FIFO Mode (FCR[0] = 1, FCR[3] = 1)

when the number of characters in the RCVR FIFO equals the trigger threshold level or timeout occurs, the RXRDY goes active low to initiate DMA transfer request. The RXRDY returns high when RCVR FIFO becomes empty.

In the FIFO Mode (FCR[0] = 1, FCR[3] = 1) when there is (1) no character in the XMIT FIFO for NS16C2552, or (2) empty spaces exceed the threshold level for NS16C2752; the TXRDY pin will go active low. This pin will become inactive when the XMIT FIFO is completely full.

Bit	Bit Name	R/W Def	Description
7:6	Rx FIFO	W	Rx FIFO Trigger Select
	Trig Select	00	FCR[6] and FCR[7] are used to designate the interrupt trigger level. When the number of characters in the RCVR FIFO equals the designated interrupt trigger level, a Received Data Available Interrupt is activated. This interrupt must be enabled by IER[0]=1.
			For NS16C2552 with 16-byte FIFO:
			FCR[7] FCR[6] Rx FIFO Trigger Level 1 1 = 14
			1 1 0 = 8
			$ \begin{array}{cccccccccccccccccccccccccccccccccccc$
			$\begin{array}{ccc} 0 & 0 & -4 \\ 0 & 0 & -4 \end{array}$
			For NS16C2752 with 64-byte FIFO:
			FCR[7] FCR[6] Rx FIFO Trigger Level
			1 1 = 60
			1 0 = 56
			0 1 = 16
			0 0 = 8 (Default)
			Refer to Section 7.5 SOFTWARE XON/XOFF FLOW CONTROL and Section 7.9 DMA OPERATION for
			software flow control using FIFO trigger level.
5:4	Tx FIFO	W	Transmit FIFO Trigger Level Selection
	Trig Level Sel	00	The transmit FIFO trigger threshold selection is only available in NS16C2752. When enabled, a transmit interrupt is generated and \overline{TXRDY} is asserted when the number of empty spaces in the FIFO exceeds the threshold level.
			For NS16C2752 with 64-byte FIFO:
			FCR[5] FCR[4] Tx FIFO Trigger Level
			1 1 = 56
			1 0 = 32
			0 1 = 16
			0 0 = 8 (Default)
			Refer to <i>Section 7.4 TRANSMIT OPERATION</i> and <i>Section 7.9 DMA OPERATION</i> for transmit FIFO descriptions.
			These two bits are reserved in NS16C2552 and have no impact when they are written to.
3	DMA	W	DMA Mode Select
	Mode	0	This bit controls the RXRDY and TXRDY initiated DMA transfer mode.
	Select		1 = DMA Mode 1. Allows block transfers. Requires FCR 0x2.0=1 (FIFO mode).
			0 = DMA Mode 0 (default). Single transfers.
2	Tx FIFO	W	Transmit FIFO Reset
	Reset	0	This bit is only active when FCR bit 0 = 1.
			1 = Reset XMIT FIFO pointers and all bytes in the XMIT FIFO (the Tx shift register is not cleared and is
			cleared by MR reset). This bit has the self-clearing capability.
			0 = No impact (default).
			Note: Reset pointer will cause the characters in Tx FIFO to be lost.

TABLE 9. FCR (0x2)

www.national.com

14

Bit	Bit Name	R/W Def	Description
1	Rx FIFO	W	Receive FIFO Reset
	Reset	0	This bit is only active when FCR bit 0 = 1.
			1 = Reset RCVR FIFO pointers and all bytes in the RCVR FIFO (the Rx shift register is not cleared and
			is cleared by MR reset). This bit has the self-clearing capability.
			0 = No impact (default).
			Note: Reset pointer will cause the characters in Rx FIFO to be lost.
0	Tx and Rx	W	Transmit and Receive FIFO Enable
	FIFO	0	1 = Enable transmit and receive FIFO. This bit must be set before other FCR bits are written. Otherwise
	Enable		the FCR bits can not be programmed.
			0 = Disable transmit and receive FIFO (default).

6.6 LINE CONTROL REGISTER (LCR)

The system programmer specifies the format of the asynchronous data communications exchange and sets the Divi-

sor Latch Access bit via the Line Control Register (LCR). This is a read and write register.

TABLE 10. LCR (0x3)

Bit	Bit Name Default	R/W Def	Description
7	Divisor Latch	R/W	Divisor Latch Access Bit (DLAB)
	Ena	0	This bit must be set (logic 1) to access the Divisor Latches of the Baud Generator and the Alterr Function Register during a read or write operation. It must be cleared (logic 0) to access any o
			register.
			 1 = Enable access to the Divisor Latches of the Baud Generator and the AFR. 0 = Enable access to other registers (default).
6	Tx Break Ena	R/W	Set Tx Break Enable
0	TX DIEak Ella	0	This bit is the Break Control bit. It causes a break condition to be transmitted to the receivin
		0	UART. The Break Control bit acts only on SOUT and has no effect on the transmitter logic.
			1 = Serial output (SOUT) is forced to the Spacing State (break state, logic 0).
			0 = The break transmission is disabled (default).
			Note: This feature enables the CPU to alert a terminal in a computer communication system the following sequence is followed, no erroneous or extraneous character will be transmitted because of the break.
			1. Load an all 0s, pad character, in response to THRE.
			2. Set break after the next THRE.
			3. Wait for the transmitter to be idle, (Transmitter Empty TEMT = 1), and clear break when nor
			transmission has to be restored.
			During the break, the transmitter can be used as a character timer to establish the break durat
			During the break state, any word left in THR will be shifted out of the register but blocked by SC
			as forced to break state. This word will be lost.
5	Forced	R/W	Tx and Rx Forced Parity Select
-	Parity Sel	0	When parity is enabled, this bit selects the forced parity format.
			LCR[5] LCR[4] LCR[3] Parity Select
			1 1 1 Force parity to space = 0
			1 0 1 Force parity to mark = 1
			0 1 1 Even parity
			0 0 1 Odd parity
			X X 0 No parity
4	Even/Odd	R/W	Tx and Rx Even/Odd Parity Select
	Parity Sel	0	This bit is only effective when LCR[3]=1. This bit selects even or odd parity format.
			1 = Odd parity is transmitted or checked.
			0 = Even parity is transmitted or checked (default).
3	Tx/Rx Parity	R/W	Tx and Rx Parity Enable
	Ena	0	This bit enables parity generation.
			1 = A parity is generated during the data transmission. The receiver checks for parity error of
			data received.
			0 = No parity (default).
2	Tx/Rx Stop-bit	R/W	Tx and Rx Stop-bit Length Select
	Length Sel	0	This bit specifies the number of Stop bits transmitted with each serial character.
			LCR[2] Word Length Sel Stop-bit Length
			1 6,7,8 = 2
			1 5 = 1.5
			0 5,6,7,8 = 1(Default)
			Stop-bit length is measured in bit time.
	•		

Bit	Bit Name Default	R/W Def			Description	
1:0	Tx/Rx Word	R/W	Tx and Rx	Word Lengt	h Select	
	Length Sel	0	These two b	oits specify t	he word length to be transmitted or received.	
			LCR[1]	LCR[0]	Word Length	
			1	1	= 8	
			1	0	= 7	
			0	1	= 6	
			0	0	= 5 (Default)	

6.7 MODEM CONTROL REGISTER (MCR)

This register controls the interface with the MODEM or data set (or a peripheral device emulating a MODEM). There is a clock divider for each channel. Each is capable of taking a

common clock input from DC to 80 MHz and dividing the clock frequency by 1 (default) or 4 depending on the MCR[7] value. The clock divider and the internal clock division flow is shown in Figure 1.

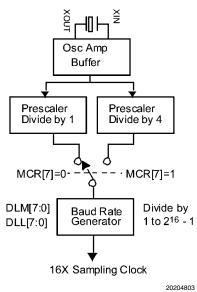


FIGURE 1. Internal Clock Dividers

TABLE 11. MCR (0x4)

Bit	Bit Name	R/W Def	Description
7	Clk Divider	R/W	Clock Divider Select
	Sel	0	This bit selects the clock divider from crystal or oscillator input. The divider output connects to the
			Baud Rate Generator.
			1 = Divide XIN frequency by 4.
			0 = Divide XIN frequency by 1 (default).
6	IR Mode Sel	R/W	Infrared Encoder/Decoder Select
		0	This bit selects standard modem or IrDA interface.
			1 = Infrared IrDA Tx/Rx. The data input and output levels complies to the IrDA infrared interface. The
			Tx output is at logic 0 during the idle state.
			0 = Standard modem Tx/Rx (default).
5	Xon-Any	R/W	Xon-Any Enable
	Ena	0	This bit enables Xon-Any feature.
			1 = Enable Xon-Any function. When Xon/Xoff flow control is enabled, the transmission resumes when
			any character is received. The received character is loaded into the Rx FIFO except for Xon or Xoff
			characters.
			0 = Disable Xon-Any function (default).

Bit	Bit Name	R/W Def	Description
4	Internal	R/W	Internal Loopback Enable
	Loopback	0	This bit provides a local loopback feature for diagnostic testing of the associated serial channel.
	Ena		(Refer to Section 7.8 INTERNAL LOOPBACK MODE and Figure 13.)
			1 = the transmitter Serial Output (SOUT) is set to the Marking (logic 1) state; the receiver Serial Input (SIN) is disconnected; the output of the Transmitter Shift Register is looped back into the Receiver
			Shift Register input; the four MODEM Control inputs (DSR, CTS, RI, and DCD) are disconnected;
			the four MODEM Control outputs (DTR, RTS, OUT1 and OUT2) are internally connected to the four
			MODEM Control inputs; and the MODEM Control output pins are forced to their inactive state (high).
			In this diagnostic mode, data that is transmitted is immediately received. This feature allows the
			processor to verify transmit and receive data paths of the DUART. In this diagnostic mode, the
			receiver and transmitter interrupts are fully operational. Their sources are external to the part. The MODEM Control Interrupts are also operational, but the interrupt sources are now the lower four bits
			of the MODEM Control Register instead of the four MODEM Control inputs. The interrupts are still
			controlled by the Interrupt Ena
			0 = Normal Tx/Rx operation; loopback disabled (default).
3	OUT2	R/W	Output2
		0	This bit controls the Output 2 (OUT2) signal, which is an auxiliary user-designated output. Bit 3 affects
			the OUT2 pin as described below. The function of this bit is multiplexed on a single output pin with
			two other functions: BAUDOUT and RXDRY. The OUT2 function is the default function of the pin after a master reset. See Section 6.12 ALTERNATE FUNCTION REGISTER (AFR) for more
			information about selecting one of these 3 pin functions.
			$1 = Force \overline{OUT2}$ to logic 0.
			$0 = Force \overline{OUT2}$ to logic 1 (default).
2	OUT1	R/W	Output1
		0	In normal operation, $\overline{OUT1}$ bit is not available as an output.
			In internal Loopback Mode (MCR 0x4.4=1) this bit controls the state of the modem input \overline{RI} in the
			MSR bit 6.
			1 = MSR 0x06.6 is at logic 1.
1	RTS Output	R/W	0 = MSR 0x06.6 is at logic 0. RTS Output Control
I		0	This bit controls the RTS pin. If modem interface is not used, this output is used as a general purpose
		Ū	output.
			1 = Force RTS pin to logic 0.
			$0 = Force \overline{RTS}$ pin to logic 1(default).
0	DTR Output	R/W	DTR Output Control
		0	This bit controls the DTR pin. If modem interface is not used, this output is used as a general purpose
			output.
			1 = Force DTR pin to logic 0. 0 = Force DTR pin to logic 1(default).

6.8 LINE STATUS REGISTER (LSR)

This register provides status information to the CPU concerning the data transfer.

Bits 1 through 4 are the error conditions that produce a Receiver Line Status interrupt whenever any of the corresponding conditions are detected and the interrupt is enabled.

TABLE 12. LSR (0x5)

6 THR 8 Em 5 THR 9 4 Rx 8	IFO Err R 0 *& TSR R mpty 1 * Empty R 1 Break R errupt 0	Rx FIFO Data Error This bit is a global Rx FIFO error flag. In the 16450 Mode this bit is 0. 1 = A sum of all error bits in the Rx FIFO. These errors include parity, framing, and break indicati in the FIFO data. 0 = No Rx FIFO error (default). Note: The Line Status Register is intended for read operations only. Writing to this register is not recommended as operation is only used for factory testing. THR and TSR Empty This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicat that the associated serial channel is ready to accept a new character for transmission. In addition this bit causes the DUART to issue an interrupt to the CPU when the Transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Holding Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register bit for the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator This bit is the Break Interrupt (BI) indicator.
5 THR 5 4 Rx B	& TSR R mpty 1 Empty R 1 Break R	 1 = A sum of all error bits in the Rx FIFO. These errors include parity, framing, and break indicate in the FIFO data. 0 = No Rx FIFO error (default). Note: The Line Status Register is intended for read operations only. Writing to this register is not recommended as operation is only used for factory testing. THR and TSR Empty This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicate that the associated serial channel is ready to accept a new character for transmission. In additional that the associated serial channel is ready to accept a new character for transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Holding Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
5 THR 5	mpty 1	 in the FIFO data. 0 = No Rx FIFO error (default). Note: The Line Status Register is intended for read operations only. Writing to this register is not recommended as operation is only used for factory testing. THR and TSR Empty This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicated that the associated serial channel is ready to accept a new character for transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Holding Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register is to the End the Transmitter Holding Register is to the FIFO. Receive Break Interrupt Indicator
5 THR 5	mpty 1	 0 = No Rx FIFO error (default). Note: The Line Status Register is intended for read operations only. Writing to this register is not recommended as operation is only used for factory testing. THR and TSR Empty This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicat that the associated serial channel is ready to accept a new character for transmission. In addition this bit causes the DUART to issue an interrupt to the CPU when the Transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
5 THR 5	mpty 1	 Note: The Line Status Register is intended for read operations only. Writing to this register is not recommended as operation is only used for factory testing. THR and TSR Empty This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicate that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
5 THR 5	mpty 1	 operation is only used for factory testing. THR and TSR Empty This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicate that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
5 THR 5	mpty 1	 This bit is the Transmitter Empty (TEMT) flag. 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicate that the associated serial channel is ready to accept a new character for transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
5 THR E	Empty R 1 Break R	 1 = Whenever the Transmitter Holding Register (THR) (or the Tx FIFO in FIFO mode) and the Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicates that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
4 Rx B	Break R	 Transmitter Shift Register (TSR) are both empty (default). 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicates that the associated serial channel is ready to accept a new character for transmission. In additional that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmit Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
4 Rx B	Break R	 0 = Whenever either the THR (or the Tx FIFO in FIFO mode) or the TSR contains a data word THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicates that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmitter Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
4 Rx B	Break R	THR Empty This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicates that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmit Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
4 Rx B	Break R	 This bit is the Transmitter Holding Register Empty (THRE) flag. In the 16450 mode bit 5 indicat that the associated serial channel is ready to accept a new character for transmission. In additionable this bit causes the DUART to issue an interrupt to the CPU when the Transmit Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
	Break R	 that the associated serial channel is ready to accept a new character for transmission. In additional this bit causes the DUART to issue an interrupt to the CPU when the Transmit Holding Register Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
		 this bit causes the DUART to issue an interrupt to the CPU when the Transmit Holding Regist Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
		 Empty interrupt enable is set. 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
		 1 = In 16450 mode, whenever a character is transferred from the Transmitter Holding Register into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
		 into the Transmitter Shift Register, or in FIFO mode when the Tx FIFO is empty (default). 0 = In 16450 mode, this bit is reset to logic 0 concurrently with the loading of the Transmitter Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
		Holding Register by the CPU. In FIFO mode, it is cleared when at least 1 byte is written to the FIFO. Receive Break Interrupt Indicator
		FIFO. Receive Break Interrupt Indicator
		Receive Break Interrupt Indicator
Inter	errupt 0	This bit is the Break Interrupt (BI) indicator.
		1 = Whenever the received data input is held in the Spacing (logic 0) state for longer than a fu
		frame transmission time (that is, the total time of Start bit + data bits + Parity + Stop bits).
		0 = No break condition (default). This bit is reset to 0 whenever the CPU reads the contents of the Line Status Register or whe
		the next valid character is loaded into the Receiver Buffer Register.
		In the FIFO Mode this condition is associated with the particular character in the FIFO it applie
		to. It is revealed to the CPU when its associated character is at the top of the FIFO. When bre
		occurs only one zero character is loaded into the FIFO. The next character transfer is enabled
		after SIN goes to the Marking (logic 1) state and receives the next valid start bit.
3 Rx Fram	ame Error R	Framing Error Indicator
	0	This bit is the Framing Error (FE) indicator.
		1= Received character did not have a valid Stop bit when the serial channel detects a logic 0 dur
		the first Stop bit time.
		0 = No frame error (default).
		The bit is reset to 0 whenever the CPU reads the contents of the Line Status Register or when the part would express in loaded into the Pageiver Puffer Pagieter. In the FIEO Made this error in
		next valid character is loaded into the Receiver Buffer Register. In the FIFO Mode this error is associated with the particular character in the FIFO it applies to. This error is revealed to the CI
		when its associated character is at the top of the FIFO. The serial channel will try to resynchron
		after a framing error. This assumes that the framing error was due to the next start bit, so it samp
		this start bit twice and then takes in the data.

CD.
67
CT
\geq
\geq
Z
Z
Ž
Ž
SN
SN
-SN
NS1
/NS1
/NS16
/ NS16
/NS16
Ä
Ä
/NS16C
Ä
Ä
Ä
Ä
Ä
Ä
Ä
Ä
C27
Ä
C27
C27
C27
C27

R/W Def	Description
R	Parity Error Indicator
0	This bit is the Parity Error (PE) indicator.
	1 = Received data word does not have the correct even or odd parity, as selected by the even parity-select bit during the character Stop bit time when the character has a parity error. 0 = No parity error (default).
	This bit is reset to a logic 0 whenever the CPU reads the contents of the Line Status Register of when the next valid character is loaded into the Receiver Buffer Register. In the FIFO mode the error is associated with the particular character in the FIFO it applies to. This error is revealed
	the host when its associated character is at the top of the FIFO.
R	Overrun Error Indicator
0	This bit is the Overrun Error (OE) indicator.
	This bit indicates that the next character received was transferred into the Receiver Buffer Regist before the CPU could read the previously received character. This transfer overwrites the previous character. It is reset whenever the CPU reads the contents of the Line Status Register. If the FIF mode data continues to fill the FIFO beyond the trigger level, an overrun error will occur only aft the FIFO is full and the next character has been completely received in the shift register. OE is indicated to the CPU as soon as it happens. The character in the shift register can be overwritted but it is not transferred to the FIFO. 1 = Set to a logic 1 during the character stop bit time when the overrun condition exists.
	0 = No overrun error (default). Receiver Data Indicator
	This bit is the receiver Data Ready (DR) indicator.
	1 = Whenever a complete incoming character has been received and transferred into the Receiv Buffer Register (RBR) or the FIFO. Bit 0 is reset by reading all of the data in the RBR or the FIF
[
	Def R 0 R

6.9 MODEM STATUS REGISTER (MSR)

This register provides the current state of the control lines from the MODEM (or peripheral device) to the CPU. In addition to this current-state information, four bits of the MODEM Status Register provide change information. The latter bits are set to a logic 1 whenever a control input from the MODEM changes state. They are reset to logic 0 whenever the CPU reads the MODEM Status Register.

TABLE 13.	MSR	(0x6)
-----------	-----	-------

Bit	Bit Name	R/W Def	Description
7	DCD Input	R	DCD Input Status
	Status	DCD	This bit is the complement of the Data Carrier Detect (DCD) input. In the loopback mode, this bit is
			equivalent to the OUT2 of the MCR.
			$1 = \overline{\text{DCD}}$ input is logic 0.
			$0 = \overline{\text{DCD}}$ input is logic 1.
6	RI Input	R	RI Input Status
	Status	RI	This bit is the complement of the Ring Indicator (RI) input. In the loopback mode, this bit is equivalent
			to OUT1 of the MCR.
			$1 = \overline{RI}$ input is logic 0.
			$0 = \overline{RI}$ input is logic 1.
5	DSR Input	R	DSR Input Status
	Status	DSR	This bit is the complement of the Data Set Ready (DSR) input. In the loopback mode, this bit is
			equivalent to DTR in the MCR.
			$1 = \overline{\text{DSR}}$ input is logic 0.
			$0 = \overline{\text{DSR}}$ input is logic 1.
4	CTS Input	R	CTS Input Status
7	Status	CTS	This bit is the complement of the Clear to Send (\overline{CTS}) input. In the loopback mode, this bit is equivalent
		010	to RTS in the MCR.
			$1 = \overline{\text{CTS}}$ input is logic 0.
			$0 = \overline{\text{CTS}}$ input is logic 0.
	DDOD		
3	DDCD Input	R	Delta DCD Input Indicator
	Status	0	This bit is the Delta Data Carrier Detect (DDCD) indicator. Bit 3 indicates that the DCD input has
			changed state since the last read by the host.
			$1 = \overline{\text{DCD}}$ input has changed state.
			$0 = \overline{DCD}$ input has no state change (default).
			Note: Whenever bit 0, 1, 2, or 3 is set to logic 1, a MODEM Status Interrupt is generated.
2	Falling	R	Falling Edge RI Indicator
	Edge RI	0	This bit is the Falling Edge of Ring Indicator (TERI) detector. Bit 2 indicates that the RI input pin has
	Indicator		changed from a logic 0 to 1 since the last read by the host.
			$1 = \overline{RI}$ input has changed state from logic 0 to 1.
			$0 = \overline{RI}$ input has no state change from 0 to 1 (default).
1	DDSR Input	R	Delta DSR Input Indicator
	Indicator	0	This bit is the Delta Data Set Ready (DDSR) indicator. Bit 1 indicates that the DSR input pin has
			changed state since the last read by the host.
			$1 = \overline{\text{DSR}}$ input has changed state from logic 0 to 1.
			$0 = \overline{\text{DSR}}$ input has no state change from 0 to 1 (default).
0	DCTS Input	R	Delta CTS Input Indicator
	Indicator	0	This bit is the Delta Clear to Send (DCTS) indicator. Bit 0 indicates that the $\overline{\text{CTS}}$ input pin has change
			state since the last time it was read by the host.
			$1 = \overline{\text{CTS}}$ input has changed state.
			$0 = \overline{\text{CTS}}$ input has no state change (default).
	<u> </u>		

6.10 SCRATCHPAD REGISTER (SCR)

This 8-bit Read/Write Register does not control the serial channel in any way. It is intended as a Scratchpad Register to be used by the programmer to hold data temporarily.

10 06	s used by the p	Jogrammer	to noiu uata	a temporaniy.						
				TABLE 1	4. SC	CR (0x7)				
Bit	Bit Nam	e	R/W Def	Description						
7:0	SCR Dat	ta F	R/W Sc	cratchpad Register						
		0)	xFF Thi	This 8-bit register does not control the UART in any way. It is intended as a scratchpad register						
			to I	be used by the prog	ramm	ner to hold temporary d	ata.			
The Bauc	d Generators.	contains two Each is cap	independer bable of taki	ntly programmable ing prescaler input		X 16)]. The output of mitter and receiver see Two 8-bit latches per	ctions of the associate channel store the divi	ed serial channel. sor in a 16-bit bi-		
and dividing it by any divisor from 1 to $2^{16} - 1$ (<i>Figure 1</i>). The highest input clock frequency recommended with a divisor = 1 is 80MHz. The output frequency of the Baud Generator is 16 X the baud rate, [divisor # = (frequency input) / (baud rate						nary format. These D initialization to ensure tor. Upon loading eithe Counter is loaded.	proper operation of th	ne Baud Genera-		
	TABLE 15. DLL (0x0, LCR[7] = 1, LCR != 0xBF)									
Bit	Bit Name	R/W Def				Description				
7:0	DLL Data	R/W	Divisor Lat	tch LSB						
		0xXX	This 8-bit re	egister holds the least	st sig	nificant byte of the 16-b	bit baud rate generato	r divisor.		
			Note: This reg	egister value does not cha	ange u	pon MR reset.				
			TA	ABLE 16. DLM (0x1,	LCR	[7] = 1, LCR != 0xBF)				
Bit	Bit Name	R/W Def		Description						
7:0	DLM Data		Divisor Lat	tch MSB						
				0	0	nificant byte of the 16-b	oit baud rate generato	r divisor.		
			Note: This rec	gister value does not cha	nge up	oon MR reset.				
quen	ncies of 1.8432	2 MHz, 3.07	72 MHz and	se with crystal fre- d 18.432 MHz. For obtained is minimal.		The accuracy of the c crystal frequency chose ommended.				
		TABL	_E 17. Baud	d Rate Generation l	Jsing	1.8432 MHz Clock wi	ith MCR[7]=0			
0	itnut Data	Output	16x Clock	User 16x Cloc	k	DI M Program	DI I Program	Data Bate		

Output Data Baud Rate	Output 16x Clock Divider (dec)	User 16x Clock Divisor (hex)	DLM Program Value (hex)	DLL Program Value (hex)	Data Rate Error (%)
50	2304	900	09	00	0
75	1536	600	06	00	0
150	768	300	03	00	0
300	384	180	01	80	0
600	192	C0	00	C0	0
1200	96	60	00	60	0
2400	48	30	00	30	0
4800	24	18	00	18	0
9600	12	0C	00	0C	0
19,200	6	06	00	06	0
38,400	3	03	00	03	0
115,200	1	01	00	01	0

Note: For baud rates of 250k, 300k, 375k, 500k, 750k and 1.5M using a 24MHz crystal causes minimal error.

6.12 ALTERNATE FUNCTION REGISTER (AFR)

This is a read/write register used to select simultaneous write

to both register sets and alter MF pin functions.

TABLE 18. AFR (0x2, LCR[7] = 1, LCR != 0xBF)

			TABLE 18	3. AFR (0x2, 1	LCR[7] = 1, LCR != 0xBF)		
Bit	Bit Name Default	R/W Def			Description		
7:3	Reserved		Reserved				
			These bits are set to a logic 0.				
2:1	MF Output Sel	R/W	Multi-function Pin Output Select				
		0		•	gnal that will be present on the multi-function pin, $\overline{\text{MF}}$. These bits are e for each channel, so that different signals can be selected on each		
			AFR[2]	AFR[1]	MF Function		
			1	1	= Reserved (\overline{MF} output is forced logic 1)		
			1	0	$=\overline{RXRDY}$		
			0	1	= BAUDOUT		
			0	0	$=\overline{OUT2}$ (default)		
0	Concurrent Write	R/W	Concurrent	Write Enable	e		
	Ena	0	intended to r are initialized set. When th read operation The user sho executing a c	educe the DL d to the same his bit is set th ons. Setting o buld ensure th concurrent wi	urrently to the same register in both registers sets. This function is JART initialization time. It can be used by a CPU when both channels e state. The CPU can set or clear this bit by accessing either register ne channel select pin still selects the channel to be accessed during or clearing this bit has no effect on read operations. Nat the DLAB bit LCR[7] of both channels are in the same state before rite to register addresses 0, 1 and 2. default). (No impact on read operations.)		
The de	DEVICE IDENTIFIC evice ID for NS16C ialized to 0x00 befo only register.	2552 is 0x0 ore reading t	3. DLL and D he ID registe	er. This is a	=1, LCR!=0xBF, DLL=DLM=0x00)		
Bit	Bit Name	R/W Def			Description		
7:4	Device ID	R	Device ID				
			Value = 0x	(3 for NS16C)	2552; 0x2 for NS16C2752		
3:0	Device Rev	R	Device Re	evision			

Value = 0x1.

6.14 ENHANCED FEATURE REGISTER (EFR)

This register enables the enhanced features of the device.

TABLE 20. EFR (0x2, LCR = 0xBF)

Bit	Bit Name Default	R/W Def					Description			
7	Auto CTS	R/W	Automatic	CTS Flo	w Contro	I Enable				
	Flow Ctl	0	1 = Enable automatic CTS flow control. Data transmission stops when $\overline{\text{CTS}}$ input deasserts to							
	Ena		Data transmission resumes when CTS returns to logic 0.							
			0 = Automatic CTS flow control is disabled (Default)							
6	Auto RTS	R/W	Automatic	RTS Flo	w Contro	l Enable				
	Flow Ctl	0			-		n be used for hardware flow control. When Auto RTS is selected,			
	Ena		asserts to a	a logic 1. T	The RTS o	utput must l	e FIFO is filled to the programmed trigger level and $\overline{\text{RTS}}$ de- be logic 0 before the auto RTS can take effect. $\overline{\text{RTS}}$ pin functions are flow control is disabled.			
			1 = Enable							
			0 = Autom	atic RTS I	flow contro	ol is disable	d (Default)			
5	Special	R/W	Special Cl							
	Char Det	0					e UART compares each incoming received character with data			
	Ena						natch is found, the received data will be transferred to FIFO and			
							special character if IER[5] = 1. Bit 0 corresponds with the LSB set for comparing Xon1, Xoff1 (EFR[1:0] = 10) then flow control			
							ow control is set for comparing Xon2, Xoff2 (EFR[1:0]=01) then			
							not go to the FIFO, and will generate an Xoff interrupt and a			
					•		bled. Special character interrupts are cleared automatically after			
			the next re		-					
			0 = Specia	l characte	er detect d	isabled. (D	efault)			
4	Enhanced	R/W	Enhanced	Functio	n Bits Ena	able				
	Fun Bit Ena	0	[4] can be mode softw	cleared to ware by di	o logic 0 to isabling al	latch in the teration of t	ICR [7:5] to be changed. After changing the enhanced bits, EFR e updated values. EFR[4] allows compatibility with the legacy he enhanced functions.			
				-			, and MCR [7:5].			
				-			MCR [7:5] and, latching in updated value. Upon reset, IER[7:4], ared to logic 0. (Default)			
3:0	Software	R/W	Software I	Flow Con	trol Selec	t				
	Flow Control Sel	0	-				racter software flow control is supported. Combinations of programming the bits.			
			EFR[3]	EFR[2]	EFR[1]	EFR[0]	Rx Flow Control			
			1	1	1	1	Rx compares Xon1 & Xon2, Xoff1 & Xoff2			
			1	0	1	1	Rx compares Xon1 or Xon2, Xoff1 or Xoff2			
			0	1	1	1	Rx compares Xon1 or Xon2, Xoff1 or Xoff2			
			0	0	1	1	Rx compares Xon1 & Xon2, Xoff1 & Xoff2			
			x	Х	1	0	Rx compares Xon1, Xoff1			
			x	Х	0	1	Rx compares Xon2, Xoff2			
			x	х	0	0	No Rx flow control			
			0	0	0	0	No Tx & Rx flow control (default)			
			EFR[3]	EFR[2]	EFR[1]	EFR[0]	Tx Flow Control			
			1	1	Х	Х	Tx Xon1 and Xon2, Xoff1 and Xoff2			
			1	0	Х	Х	Tx Xon1, Xoff1			
			0	1	Х	Х	Tx Xon2, Xoff2			
			0	0	Х	Х	No Tx flow control			

6.15 SOFTWARE FLOW CONTROL REGISTERS (SFR)

The following four registers are used as programmable software flow control characters.

TABLE 21. Xon1 (0x4, LCR=0xBF)

Bit	Bit Name	R/W Def	Description
7:0	Xon1 Data	R/W	Xon1 Data
		0	

TABLE 22. Xon2 (0x5, LCR=0xBF)

Bit	Bit Name	R/W Def	Description
7:0	Xon2 Data	R/W 0	Xon2 Data

TABLE 23. Xoff1 (0x6, LCR=0xBF)

Bit	Bit Name	R/W Def	Description
7:0	Xoff1 Data	R/W 0	Xoff1 Data

TABLE 24. Xoff2 (0x7, LCR=0xBF)

Bit	Bit Name	R/W Def	Description
7:0	Xoff2 Data	R/W	Xoff2 Data
		0	

7.0 Operation and Configuration

7.1 CLOCK INPUT

The NS16C2552/2752 has an on-chip oscillator that accepts standard crystal with parallel resonant and fundamental frequency. The generated clock is supplied to both UART channels with the capability range from DC to 24 MHz. The frequency of the clock oscillator is divided by 16 internally, combined with an on-chip programmable clock divider providing the baud rate for data transmission. The divisor is 16-bit with MSB byte in DLM and LSB byte in DLL. The divisor calculation is shown in *Section 6.11 PROGRAMMABLE BAUD GENERATOR*.

The external oscillator circuitry requires two load capacitors, a parallel resistor, and an optional damping resistor. The oscillator circuitry is shown in *Figure 2*.

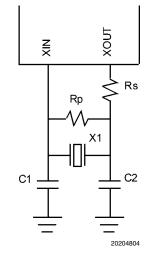


FIGURE 2. Crystal Oscillator Circuitry


The requirement of the crystal is listed in Table 25.


TABLE 25. Crystal Component Requirement

· · · · · · · · · · · · · · · · · · ·				
Parameter	Value			
Crystal Frequency Range	<= 24 MHz			
Crystal Type	Parallel resonant			
	Fundamental			
C1 & C2, Load Capacitance	10 - 22 pF			
ESR	20 - 120 Ω			
Frequency Stability 0 to 70°C	100 ppm			

The capacitors C1 and C2 are used to adjust the load capacitance on these pins. The total load capacitance (C1, C2 and crystal) must be within a certain range for the NS16C2552/2752 to function properly. The parallel resistor Rp and load resistor Rs are recommended by some crystal vendors. Refer to the vendor's crystal datasheet for details. Since each channel has a separate programmable clock divider, each channel can have a different baud rate.

 The oscillator provides clock to the internal data transmission circuitry, writing and reading from the parallel bus is not affected by the oscillator frequency. For circuits not using the external crystal, the clock input is XIN (*Figure 3.*)

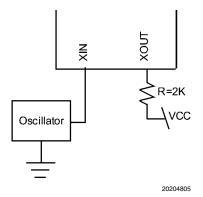



7.2 RESET

The NS16C2552/2752 has an on-chip power-on reset that can accommodate a slow risetime power supply. The poweron reset has a circuit that holds the device in reset state for 2^{23} XIN clock cycles. For example, if the crystal frequency is 24MHz, the reset time will be 2^{23} X 1/(24 X 10⁶) = 349ms. An external active high reset can also be applied. The default output state of the device is listed in *Table 26*.

Reset State
neoer otate
Logic 1
Logic 1
Logic 1
Logic 1
Logic 0
Logic 0

TABLE 26. Output State After Reset

7.3 RECEIVER OPERATION

Each serial channel consists of an 8-bit Receive Shift Register (RSR) and a 16 (or 64) -byte by 11-bit wide Receive FIFO. The RSR contains a 8-bit Receive Buffer Register (RBR) that is part of the Receive FIFO. The 11-bit wide FIFO contains an 8-bit data field and a 3-bit error flag field. The RSR uses 16X clock as timing source. (*Figure 4.*)

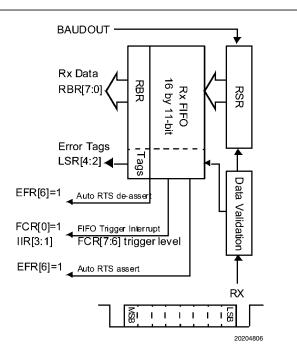


FIGURE 4. Rx FIFO Mode

The RSR operation is described as follows:

- 1. At the falling edge of the start bit, an internal timer starts counting at 16X clock. At 8th 16X clock, approximately the middle of the start bit, the logic level is sampled. If a logic 0 is detected the start bit is validated.
- 2. The validation logic continues to detect the remaining data bits and stop bit to ensure the correct framing. If an error is detected, it is reported in LSR[4:2].
- 3. The data frame is then loaded into the RBR and the Receive FIFO pointer is incremented. The error tags are updated to reflect the status of the character data in RBR. The data ready bit (LSR[0]) is set as soon as a character is transferred from the shift register to the Receive FIFO. It is reset when the Receive FIFO is empty.

7.3.1 Receive in FIFO Mode

Interrupt Mode

In the FIFO mode, FCR[0]=1, RBR can be configured to generate an interrupt after the FIFO pointer reaches a trigger threshold. The interrupt causes CPU host to fetch the Rx character in the FIFO in a burst mode and the transfer number is set by the trigger level. The interrupt is cleared as soon as the number of bytes in the Rx FIFO drops below the trigger level. The Rx FIFO continues to receive new characters, and the interrupt is re-asserted when the character reaches the trigger threshold.

To ensure the data is delivered to the host, a receive data ready time-out interrupt IIR[3] is generated when RBR data is not fetched by the host in 4-word length long (defined in LCR [1:0]) plus 12 bit-time. The RBR interrupt is enabled through IER[0]. This is equivalent of 3.6 to 4.7 frame-time.

The maximum time between a received character and a timeout interrupt will be 147 ms at 300 baud with an 8-bit receive word.

Character delay time is calculated by using the BAUDOUT signal as a clock signal. This makes the delay proportional to the baud rate.


Time-out interrupt is cleared and the timer is reset when the CPU reads one character from the Receive FIFO. When the

time-out interrupt is inactive the time-out timer is reset after a new character is received or after the CPU reads the Receive FIFO.

After the first character is read by the host, the next character is loaded into the RBR and the error flags are loaded into LSR [4:2].

DMA Mode

In the FIFO mode, the $\overline{\text{RXRDY}}$ asserts when the character in the Rx FIFO reaches the trigger threshold or timeout occurs. The $\overline{\text{RXRDY}}$ initiates DMA transfer in a burst mode. The $\overline{\text{RXRDY}}$ deasserts when the Rx FIFO is completely emptied and the DMA transfer stops (*Figure 5.*)

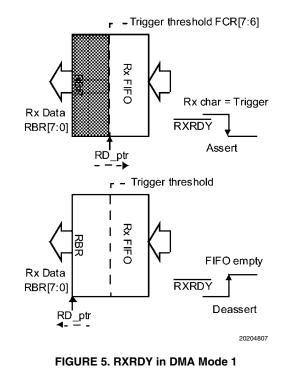

7.3.2 Receive in non-FIFO Mode

Interrupt Mode

In the non-FIFO mode, FCR[0]=0, RBR can be configured to generate an IIR Receive Data Available interrupt IIR[2] immediately after the first byte is received. Upon interrupt, the CPU host reads the RBR and clears the interrupt. The interrupt is reasserted when the next character is received. (*Figure 6.*)

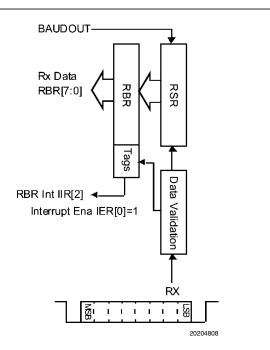


FIGURE 6. Rx Non-FIFO Mode

DMA Mode

In the non-FIFO mode, the presence of a received character in RBR causes the assertion of $\overrightarrow{\text{RXRDY}}$ at which point DMA transfer can be initiated. Upon transfer completion $\overrightarrow{\text{RXRDY}}$ is deasserted. DMA transfer stops and awaits for the next character. (*Figure 7*.)

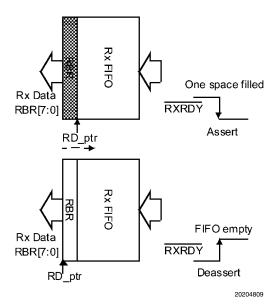


FIGURE 7. RXRDY in DMA Mode 0

7.3.3 Receive Hardware Flow Control

On the line side, $\overline{\text{RTS}}$ signal provides automatic flow control to prevent data overflow in the Receive FIFO. The $\overline{\text{RTS}}$ is used to request remote unit to suspend or resume data transmission. This feature is enabled to suit specific application. The $\overline{\text{RTS}}$ flow control can be enabled by the following steps:

- Enable auto-RTS flow control EFR[6]=1.
- The auto-RTS function is initiated by asserting RTS output pin, MCR[1]=1.

The auto-RTS assertion and deassertion timing is based upon the Rx FIFO trigger level (*Table 27* and *Table 28*).

7.3.4 Receive Flow Control Interrupt

To enable auto RTS interrupt:

- Enable auto RTS flow control EFR[6]=1.
- Enable RTS interrupt IER[6]=1.

An interrupt is generated when RTS pin makes a transition from logic 0 to 1; IIR[5] is set to logic 1.

The receive data ready interrupt (IIR[2]) generation timing is based upon the Rx FIFO trigger level (Table 27 and Table 28).

Rx Trigger Level	INTR Pin Activation	RTS Desertion	RTS Assertion
1	1	2	0
4	4	8	1
8	8	14	4
14	14	14	8

TABLE 20. AUTO-RTS HW HOW CONTROLON NS 10C2/52					
Rx Trigger	INTR Pin RTS		RTS		
Level	Activation	Desertion	Assertion		
8	8	16	0		
16	16	56	8		
56	56	60	16		
60	60	60	56		

7.4 TRANSMIT OPERATION

Each serial channel consists of an 8-bit Transmit Shift Register (TSR) and a 16-byte (or 64-byte) Transmit FIFO. The Transmit FIFO includes a 8-bit Transmit Holding Register (THR). The TSR shifts data out at the 16X internal clock. A bit time is 16 clock periods. The transmitter begins with a startbit followed by data bits, asserts parity-bit if enabled, and adds the stop-bit(s). The FIFO and TSR status is reported in the LSR[6:5].

The THR is an 8-bit register providing a data interface to the host processor. The host writes transmit data to the THR. The THR is the Transmit FIFO input register in FIFO operation. The FIFO operation can be enabled by FCR[0]=1. During the FIFO operation, the FIFO pointer is incremented pointing to the next FIFO location when a data word is written into the THR.

7.4.1 Transmit in FIFO Mode

Interrupt mode

In the NS16C2752 FIFO mode (FCR[0]=1), when the Tx FIFO empty spaces exceed the threshold level the THR empty flag is set (LSR[5]=1). The THR empty flag generates a TXRDY interrupt (IIR[1]=1) when the transmit empty interrupt is enabled (IER[1]=1). Writing to THR or reading from IIR deasserts the interrupt.

There is a two-character hysteresis in interrupt generation. The host needs to service the interrupt by writing at least two characters into the Tx FIFO before the next interrupt can be generated.

The NS16C2552 does not have the FIFO threshold level control. The interrrupt is generated when the FIFO is completely empty.

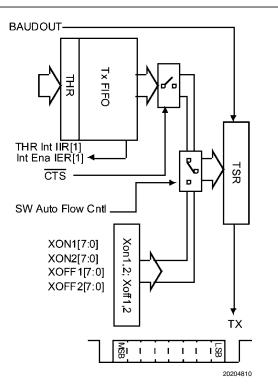


FIGURE 8. Tx FIFO Mode

DMA mode

To fully take advantage of the FIFO buffer, the UART is best operating in DMA mode 1 (FCR[3]=1) when characters are transferred in bursts. The NS16C2752 has a Tx FIFO threshold level control in register FCR[5:4]. The threshold level sets the number of empty spaces in the FIFO and determines when the TXRDY is asserted. If the number of empty spaces in the FIFO exceeds the threshold, the TXRDY asserts initiating DMA transfers to fill the Tx FIFO. When the empty spaces in the Tx FIFO becomes zero (i.e., FIFO is full), the TXRDY deasserts and the DMA transfer stops. TXRDY reasserts when empty space exceeds the set threshold, starting a new DMA transfer cycle. (*Figure 9*.)

The NS16C2552 does not have the FIFO threshold level control. The \overline{TXRDY} is asserted when FIFO is empty and deasserted when FIFO is full. It is equivalent of having trigger threshold set at 16 empty spaces.

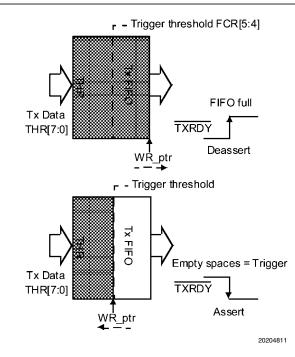


FIGURE 9. TXRDY in DMA Mode 1

7.4.2 Transmit in non-FIFO Mode

Interrupt Mode

The THR empty flag LSR[5] is set when a data word is transferred to the TSR. THR flag can generate a transmit empty interrupt IIR[1] enabled by IER[1]. The TSR flag LSR[6] is set when TSR becomes empty. The host CPU may write one character into the THR and wait for the next IIR[1] interrupt. (*Figure 10*.)

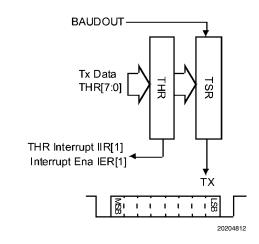


FIGURE 10. Tx Non-FIFO Mode

DMA mode

In the DMA single transfer (mode 0), TXRDY asserts when FIFO is empty initiating one DMA transfer and deasserts when a character is written into the FIFO. (*Figure 11*.)

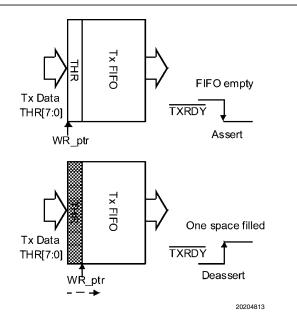


FIGURE 11. TXRDY in DMA Mode 0

7.4.3 Transmit Hardware Flow Control

CTS is a flow control input used to prevent remote receiver FIFO data overflow. The CTS input is monitored to suspend/ resume the local transmitter. The automatic CTS flow control can be enabled to suit specific application.

Enable auto CTS flow control EFR[7]=1.

7.4.4 Transmit Flow Control Interrupt

- Enable auto CTS flow control EFR[7]=1.
- Enable CTS interrupt IER[7]=1.

An interrupt is generated when $\overline{\text{CTS}}$ pin is de-asserted (logic 1). IIR[5] is set to logic 1. The transmitter suspends transmission as soon as the stop bit is shifted out. Transmission is resumed after the $\overline{\text{CTS}}$ pin is asserted logic 0, indicating remote receiver is ready to accept data word.

7.5 SOFTWARE XON/XOFF FLOW CONTROL

Software flow control uses programmed Xon or Xoff characters to enable the transmit/receive flow control. The receiver compares one or two sequentially received data words. If the received character(s) match the programmed values, the transmitter suspends operation as soon as the current transmitting frame is completed. When a match occurs, the Xoff (if enabled via IER[5]) flag is set and an interrupt is generated. Following a transmission suspension, the UART monitors the receive data stream for an Xon character. When a match is found, the transmission resumes and the IIR[4] flag clears.

Upon reset, the Xon/Xoff characters are cleared to logic 0. The user may write any Xon/Xoff value desired for software flow control. Different conditions can be set to detect Xon/Xoff characters and suspend/resume transmissions. When double 8-bit Xon/Xoff characters are selected, the UART compares two consecutively received characters with two software flow control 8-bit values (Xon1, Xon2, Xoff1, and Xoff2) and controls transmission accordingly. Under the above described flow control mechanisms, flow control characters are not placed in the user accessible Rx data buffer or FIFO.

During the flow control operation, when Receive FIFO pointer reaches the upper trigger level, the UART automatically transmits Xoff1 and Xoff 2 messages via the serial TX line output to the remote modem. When Receive FIFO pointer position

matches the lower trigger level, the UART automatically transmits Xon1 and Xon2 characters.

Care should be taken when designing the software flow control section of the driver. In the case where a local UART is transmitting and the remote UART initiates flow control, an Xoff character is sent by the remote UART.

Upon receipt the local UART ceases to transmit until such time as the remote UART FIFO has been drained sufficiently and it signals that it can accept further data by sending an Xon character to the local UART.

There is a corner case in which the receipt of an Xoff by the local UART can occur just after it has sent the last character of a data transfer and is ready to close the transmission. If in so doing the driver disables the local UART, it may not receive the corresponding XON and thus can remain in a flow-controlled state. This will persist even when the UART is reenabled for a succeeding transmission creating a lock-up situation.

To resolve this lock-up issue, the driver should implement a delay before shutting down the local transmitter at the end of a data transfer. This delay time should be equal to the transmission time of four characters PLUS the latency required to drain the RX FIFO on the remote side of the connection. This will allow the remote modem to send an Xon character and for it to be received before the local transmitter shuts down.

Rx Trigge Level	INTR Pin Activation	Xoff Char Sent	Xon Char Sent
1	1	1	0
4	4	4	1
8	8	8	4
14	14	14	8

TABLE 29. Xon/Xoff SW Flow Control on NS16C2552

TABLE 30. Xon/Xoff SW Flow Control on NS16C2752

Rx Trigger Level	INTR Pin Activation	Xoff Char Sent	Xon Char Sent
8	8	8	0
16	16	16	8
56	56	56	16
60	60	60	56

7.6 SPECIAL CHARACTER DETECT

UART can detect an 8-bit special character if EFR[5]=1. When special character detect mode is enabled, the UART compares each received character with Xoff2. If a match is found, Xoff2 is loaded into the FIFO along with the normal received data and IIR[4] is flagged to logic 1.

The Xon and Xoff word length is programmable between 5 and 8 bits depending on LCR[1:0] with the LSB bit mapped to bit 0. The same word length is used for special character comparison.

7.7 SLEEP MODE

To reduce power consumption, NS16C2552/2752 has a per channel sleep mode when channel is not being used. The sleep mode requires following conditions to be met:

- Sleep mode of the respective channel is enabled (IER[4] =1).
- No pending interrupt for the respective channel (IIR[0]=1).
- Divisor is a non-zero value (DLL or DLM != 0x00).
- Modem inputs are not toggling (MSR[3:0]=0).

• Receiver input is idling at logic 1.

The channel wakes up from sleep mode and returns to normal operation when one of the following conditions is met:

- Start bit falling edge (logic 1 to 0) is detected on receiver.
- A character is loaded into the THR or Tx FIFO
- A state change on any of the modem interface inputs, $\overline{\text{DTS}}, \overline{\text{DSR}}, \overline{\text{DCD}},$ and $\overline{\text{RI}}.$

Following the awakening, the channel can fall back into the sleep mode when all interrupt conditions are serviced and cleared. If channel is awakened by the modem line inputs, reading the MSR resets the line inputs.

Following the awakening, the interrupts from the respective channel has to be serviced and cleared before re-entering into the sleep mode. The NS16C2552/2752 sleep mode can be disabled by IER[4]=0.

7.8 INTERNAL LOOPBACK MODE

NS16C2552 incorporates internal loopback path for design validation and diagnostic trouble shooting. In the loopback mode, the transmitted data is looped from the transmit shift register output to the receive shift register input internally. The system receives its transmitted data. The loopback mode is enabled by MCR[4]=1 (*Figure 13*).

In the loopback mode, Tx pin is held at logic 1 or mark condition while $\overline{\text{RTS}}$ and $\overline{\text{DTR}}$ are de-asserted and $\overline{\text{CTS}}$, $\overline{\text{DRS}}$, $\overline{\text{CD}}$, and $\overline{\text{RI}}$ inputs are ignored. Note that Rx input must be held at logic 1 during the loopback test. This is to prevent false start bit detection upon exiting the loopback mode. $\overline{\text{RTS}}$ and $\overline{\text{CTS}}$ are disabled during the test.

7.9 DMA OPERATION

LSR[6:5] provide status of the transmit FIFO and LSR[0] provides the receive FIFO status. User may read the LSR status bits to initiate and stop data transfers.

More efficient direct memory access (DMA) transfers can be setup using the $\overrightarrow{\text{RXRDY}}$ and $\overrightarrow{\text{TXRDY}}$ signals. The DMA transfers are asserted between the CPU cycles and saves CPU processing bandwidth. In mode 0, (FCR[3]=0), each assertion of $\overrightarrow{\text{RXRDY}}$ and $\overrightarrow{\text{TXRDY}}$ will cause a single transfer. Note that the user should verify the interface to make sure the signaling is compatible with the DMA controller.

With built-in transmit and receive FIFO buffers it allows data to be transferred in blocks (mode 1) and it is ideal for more efficient DMA operation that further saves the CPU processing bandwidth.

To enable the DMA mode 1, FCR[3]=1. The DMA Rx FIFO reading is controlled by $\overline{\text{RXRDY}}$. When FIFO data is filled to the trigger level, $\overline{\text{RXRDY}}$ asserts and the DMA burst transfer begins removing characters from Rx FIFO. The DMA transfer stops when Rx FIFO is empty and $\overline{\text{RXRDY}}$ deasserts.

The DMA transmit operation is controlled by $\overline{\text{TXRDY}}$ and is different between the NS16C2552 and NS16C2752. On the NS16C2552, the DMA operation is initiated when transmit FI-FO becomes empty and $\overline{\text{TXRDY}}$ is asserted. The DMA controller fills the Tx FIFO and the filling stops when FIFO is full and $\overline{\text{TXRDY}}$ is deasserted.

On the NS16C2752, the DMA transfer starts when the Tx FI-FO empty space exceeds the threshold set in FCR[5:4] and TXRDY asserts. The transfer stops when Tx FIFO is full and TXRDY desserts. The threshold setting gives CPU more time to arbitrate and relinquish bus control to DMA controller providing higher bus efficiency.

7.10 INFRARED MODE

NS16C2552/2752 also integrates an IrDA version 1.0 compatible infrared encoder and decoder. The infrared mode is enabled by MCR[6]=1.

In the infrared mode, the SOUT idles at logic 0. During data transmission, the encoder transmits a 3/16 bit wide pulse for each logic 0. With shortened transmitter-on light pulse, power saving is achieved.

On the receiving end, each light pulse detected translates to a logic 0, active low (*Figure 12*.)


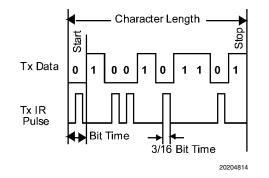


FIGURE 12. IrDA Data Transmission

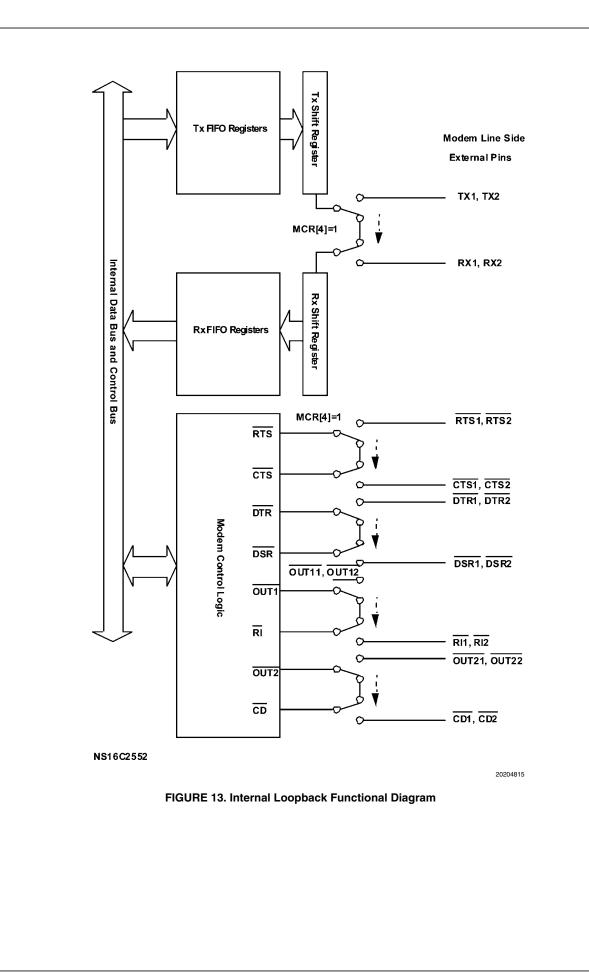

8.0 Design Notes

8.1 DEBUGGING HINTS


Although the UART device is fairly straight forward, there are cases that when device does not behave as expected. The normal trouble shooting steps should include the following.

- 1. Check power supply voltage and make sure it is within the operating range.
- 2. Check device pin connections against the datasheet pin list.
- 3. Check an unpopulated printed circuit board (PCB) against the schematic diagram for any shorts.
- 4. Check the device clock input. For oscillator input, the scope probe can be attached to Xin to verify the clock voltage swing and frequency. For crystal connection, attach the scope probe to Xout to check for the oscillation frequency.
- 5. Reset should be active high and normally low.
- Use internal loopback mode to test the CPU host interface. If loopback mode is not working, check the CPU interface timing including read and write bus timing.
- 7. If loopback mode is getting the correct data, check serial data output and input. The transmit and receive data may be looped back externally to verify the data path integrity.

8.2 CLOCK FREQUENCY ACCURACY

In the UART transmission, the transmitter clock and the receive clock are running in two different clock domains (unlike in some communication interface that the received clock is a copy of the transmitter clock by sharing the same clock or by performing clock-data-recovery). Not only the local oscillator frequency, but also the clock divisor may introduce error in between the transmitter and receiver's baud rate. The question is how much error can be tolerated and does not cause data error?

The UART receiver has an internal sampling clock that is 16X the data rate. The sampling clock allows data to be sampled at the 6/16 to 7/16 point of each bit. The following is an example of a 8-bit data packet with a start, a parity, and one stop bit. (*Figure 14*)

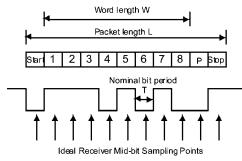

20204816

FIGURE 14. Nominal Mid-bit Sampling

If a receiver baud rate generator deviates from the nominal baud rate by Δf , where $1/\Delta f = \Delta T$, the first sampling point will deviate from the nominal sample point by 0.5 ΔT . Consequently, the second sampling point will deviate by 1.5 ΔT , 3rd will deviate by 2.5 ΔT , and the last bit of a packet with L length (in number of bits) will deviate by

(L – 0.5) x ΔT

In this example, L=11, so that the last bit will deviate by

www.national.com

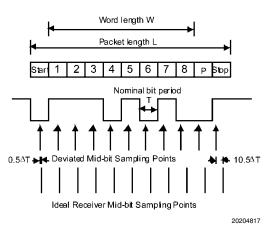


FIGURE 15. Deviated Baud Rate Sampling

Giving some margin for sampling error due to metastability and jitter assuming that the bit period deviation can not be more than 6/16 the bit time (i.e., the worst case), 0.375T. So that

(L – 0.5) x ΔT< 0.375T

for the receiver to correctly recover the transmitted data. Reform the equation

 $\Delta T < 0.375T / (L - 0.5)$

Using the same example of 11-bit packet (L = 11), at 9600 baud, f = 9600, the sampling clock rate is f (i.e., one sample per period) and the bit period is

 $\Delta T < 0.375T / (L - 0.5) = 0.375 / (f x (L - 0.5))$

 $\Delta T < 0.375$ / (9600 x 10.5) = 3.7 x 10^-6 (sec) or 3.7 $\mu s.$ The percentage of the deviation from nominal bit period has to be less than

$$\Delta T$$
 / T = (0.375 / (f x (L – 0.5)) x f = 0.375 / L – 0.5)

ΔT / T =3.7 x 10⁻⁶ x 9600 = 3.6%

From the above example, the error percentage increases with longer packet length (i.e., larger L). The best case is packet with word length 5, a start bit and a stop bit (L = 7) that is most tolerant to error.

 $\Delta T \ / \ T = 0.375 \ / \ (L - 0.5) = 0.375 \ / \ 6.5 = 5.8\%$ The worst case is packet with word length 8, a start bit, a parity bit, and two stop bits (L = 12) that is least tolerant to error.

 $\Delta T / T = 0.375 / L - 0.5) = 0.375 / 11.5 = 3.2\%$

8.3 CRYSTAL REQUIREMENTS

The crystal used should meet the following requirements.

- 1. AT cut with parallel resonance.
- 2. Fundamental oscillation mode between 1 to 24 MHz.
- 3. Frequency tolerance and drift is well within the UART application requirements, and they are not a concern.
- 4. The load capacitance of the crystal should match the load capacitance of the oscillator circuitry seen by the crystal. Under the AC conditions, the oscillator load capacitance is a lump sum of parasitic capacitance and external capacitors. The capacitances connecting to oscillator input and output are in series seen by the crystal. (*Figure 16.*) External capacitors, C1 and C2, are not required to be very accurate. The best practice to follow crystal manufacturer's recommendation for the load capacitance value.

(11 – 0.5) x ΔT = 10.5ΔT(*Figure 15*)

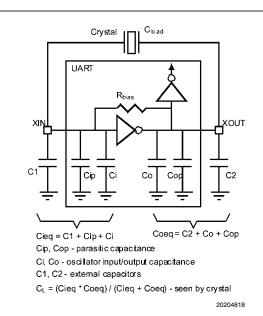


FIGURE 16. Crystal Oscillator Circuit

It should be noted that the parasitic capacitance also include printed circuit board traces. The circuit board traces connecting to the crystal should be kept as short as possible.

8.4 CONFIGURATION EXAMPLES

8.4.1 Set Baud Rate

Set divisor values to DIV_L and DIV_M.

- LCR 0x03.7 = 1
- DLL 0x00.7:0 = DIV_L
- DLM 0x01.7:0 = DIV_M
- LCR 0x03.7 = 0

8.4.2 Configure Prescaler Output

Set prescaler output to XIN divide by 4.

- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.4 = 1
- LCR 0x03.7:0 = 0
- MCR 0x04.7 = 1
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.4 = 0 (optional)
- LCR 0x03.7:0 = temp
- Set prescaler output to XIN divide by 1.
- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.4 = 1
- LCR 0x03.7:0 = 0
- MCR 0x04.7 = 0
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.4 = 0 (optional)
- LCR 0x03.7:0 = temp

8.4.3 Set Xon and Xoff flow control

Set Xon1, Xoff1 to VAL1 and VAL2.

- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- Xon1 0x04.7:0 = VAL1
- Xoff1 0x06.7:0 = VAL2
- LCR 0x03.7:0 = temp
- Set Xon2, Xoff2 to VAL1 and VAL2.
- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- Xon2 0x05.7:0 = VAL1
- Xoff2 0x07.7:0 = VAL2
- LCR 0x03.7:0 = temp

8.4.4 Set Software Flow Control

Set software flow control mode to VAL.

- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.3:0 = VAL
- LCR 0x03.7:0 = temp

8.4.5 Configure Tx/Rx FIFO Threshold

Set Tx (2752) and Rx FIFO thresholds to VAL.

- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.4 = 1
- LCR 0x03.7:0 = 0
- FCR 0x02.7:0 = VAL
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.4 = 0 (optional)
- LCR 0x03.7:0 = temp

8.4.6 Tx and Rx Hardware Flow Control

Configure auto RTS and CTS flow controls, enable RTS and CTS interrupts, and assert RTS.

- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0xBF
- EFR 0x02.7:6 = 2b'11
- EFR 0x02.4 = 1
- LCR 0x03.7:0 = 0
- IER 0x01.7:6 = 2b'11
- MCR 0x04.1 = 1
- LCR 0x03.7:0 = temp

8.4.7 Tx and Rx DMA Control

Configure Tx and Rx in FIFO mode DMA transfers using the threshold in FCR[7:4].

- Save LCR 0x03.7:0 in temp
- LCR 0x03.7:0 = 0
- FCR 0x02.0 = 1
- FCR 0x02.3 = 1
- LCR 0x03.7:0 = temp

8.5 DIFFERENCES BETWEEN THE PC16552D AND NS16C2552/2752

The following are differences between the versions of UART that helps user to identify the feature differences.

TABLE 31. Differences among the UART products

Features	PC16552D	NS16C2552	NS16C2752
Tx and Rx FIFO sizes	16-byte	16-byte	64-byte
Supply voltage	4.5V to 5.5V	2.97V to 5.5V	2.97V to 5.5V
Highest baud rate	1.5Mbps	5.0Mbps	5.0Mbps
Highest clock input frequency	24MHz	80MHz	80MHz
Operating temperature	0 - 70°C	-40 to 85°C	-40 to 85°C
Enhanced Register Set	No	Yes	Yes
Sleep mode IER[4]	No	Yes	Yes
Xon, Xoff, and Xon-Any software auto flow control	No	Yes	Yes
CTS and RTS hardware auto flow control	No	Yes	Yes
Interrupt source ID in IIR	3-bit	5-bit	5-bit
Tx FIFO trigger level select FCR[5:4]	1 level	1 level	4 levels
IrDA v1.0 mode MCR[6]	No	Yes	Yes
Clock divisor 1 or 4 select MCR[7]	No	Yes	Yes

8.6 NOTES ON TX FIFO OF NS16C2752

Notes on interrupt assertion and deassertion.

- To avoid frequent interrupt request generation, there is a hysteresis of two characters. When the transmit FIFO threshold is enabled and the number of empty spaces reaches the threshold, a THR empty interrupt is generated requesting the CPU to fill the transmit FIFO. The host has to fill at least two characters in the Tx FIFO before another THR empty interrupt can be generated. The DMA request TXRDY works differently. When the number of empty spaces exceeds the threshold, TXRDY asserts initiating the DMA transfer. The TXRDY deasserts when the transmit FIFO is full.
- When the number of empty spaces reaches the threshold level, an interrupt is generated. If the host does not fill the FIFO, the interrupt will remain asserted until the host writes to the THR or reads from IIR.
- 3. When the number of empty spaces reaches the threshold level, an interrupt is generated. If the host reads the IIR but does not fill the Tx FIFO, the INTR is deasserted. However, if the host still does not fill the Tx FIFO, the FIFO becomes empty. The THR empty interrupt is not generated because the host has not written to the Tx FIFO and the interrupt service is not complete.
- 4. When the number of empty spaces reaches the threshold level, a THR empty interrupt is generated. If the host writes at least one character into the Tx FIFO, the interrupt is serviced and the THR empty flag is deasserted. Subsequently, if the host fails to fill the FIFO before it reaches empty, a THR empty interrupt will be asserted.
- 5. Reset Tx FIFO causes a THR empty interrupt.

9.0 Absolute Maximum Ratings (Note

1)

If Military/Aerospace specified devices are required, please contact the National Semiconductor Sales Office/ Distributors for availability and specifications.

Operating Temperature	–40°C to +85°C
Storage Temperature	–65°C to +150°C
All Input or Output Voltages with respect	
to V _{ss}	-0.5V to +6.5V
Power Dissipation	250mW

ESD Rating HBM, 1.5K and 100 pF ESD Rating Machine Model NS16C2552/NS16C2752

10.0 DC and AC Specifications

Note: Typical specifications are at TA=25°C, and represent most likely parametric norms at the time of product characterization. The typical specifications are not guaranteed.

10.1 DC SPECIFICATIONS

TA = -40°C to +85°C, V_{CC} = +2.97V to 5.5V, V_{SS} = 0V, unless otherwise specified.

Symbol	Parameter	Conditions	3.3V, 10%		5.0V, 10%		Units
		Conditions	Min	Max	Min	Max	
V _{ILX}	Clock Input Low Voltage		-0.3	0.6	-0.5	0.6	V
V _{IHX}	Clock Input High Voltage		2.4	5.5	3.1	5.5	V
V _{IL}	Input Low Voltage		-0.3	0.8	-0.5	0.8	V
V _{IH}	Input High Voltage		2.0	5.5	2.2	5.5	V
V _{OL}	Output Low Voltage	I _{OL} = 6mA				0.4	V
		I _{OL} = 4mA		0.4			V
V _{OH}	Output High Voltage	I _{OH} = -6mA			2.4		V
		I _{OH} = -1mA	2.0				V
I _{IL}	Input Low Leakage			10		10	μA
I _{IH}	Input High Leakage			10		10	μA
I _{DD}	Current Consumption	Static clock input		1.6		3.0	mA

10.2 CAPACITANCE

 $\mathsf{TA}=25^\circ\mathsf{C},\,\mathsf{V}_{\mathsf{DD}}=\mathsf{V}_{\mathsf{SS}}=\mathsf{0V}$

Symbol	Parameter	Conditions	Min	Тур	Max	Units
C _{XIN}	Clock Input Capacitance			7		pF
C _{XOUT}	Clock Output Capacitance	f _c = 1 MHz		7		pF
C _{IN}	Input Capacitance	Unmeasured Pins Returned to		5		pF
C _{OUT}	Output Capacitance	V _{SS}		6		pF
C _{I/O}	Input/Output Capacitance			10		pF

10.3 AC SPECIFICATIONS


TA = -40°C to +85°C, V_{CC} = +2.97V to 5.5V, V_{SS} = 0V, unless otherwise specified.


Symbol	Parameter	Condition	3.3V Limits		5.0V Limits		Units
			Min	Max	Min	Мах	1
f _c	Crystal Frequency			24		24	MHz
t _{HILO}	External Clock Low/High		6		6		ns
f _{osc}	External Clock Frequency			80		80	MHz
t _{RST}	Reset Pulse Width		70		70		ns
n	Baud Rate Divisor		1	2 ¹⁶ -1	1	2 ¹⁶ -1	
B _{CLK}	Baud Clock		16 x of data rate 1/16 of a bit duration				
		Host In	terface				
t _{AR}	Address Setup Time		10		10		ns
t _{RA}	Address Hold Time		1		1		ns
t _{RD}	RD Strobe Width		35		24		ns
t _{DY}	Read Cycle Delay		35		24		ns
t _{RDV}	Data Access Time			35		24	ns


Symbol	Parameter	Condition	3.3V Limits		5.0V Limits		Units
			Min	Max	Min	Max	1
t _{HZ}	Data Disable Time		0	18	0	18	ns
t _{WR}	WR Strobe Width		35		24		ns
t _{DY}	Write Cycle Delay		35		24		ns
t _{DS}	Data Setup Time		12		12		ns
t _{DH}	Data Hold Time		4		4		ns
		Modem	Control				
t _{MDO}	Delay from WR to Output			20		15	ns
t _{SIM}	Delay from Modem input to Interrupt output			20		15	ns
t _{RIM}	Delay to Reset interrupt from RD falling edge			23		17	ns
		Line Receive	and Transm	it		-	•
t _{SINT}	Delay from Stop to Interrupt Set	(Note 2)		4		4	Bclk
t _{RINT}	Delay from of RD to Reset			45		30	ns
t _{STI}	Delay from center of Start to INTR Set			16		10	ns
t _{WST}	Delay from WR to Transmit Start		0	16	0	16	Bclk
t _{HR}	Delay from WR to interrupt clear			34		22	ns
		DMA In	terface			-3	
t _{WXI}	Delay from WR to TXRDY rising edge			27		18	ns
t _{SXA}	Delay from Center of Start to TXRDY falling edge			8		8	Bclk
t _{SSR}	Delay from Stop to RXRDY falling edge			4		4	Bclk
t _{RXI}	Delay from /RD to RXRDY rising edge			27		18	ns

Note 1: Maximum ratings indicate limits beyond which permanent damage may occur. Continuous operation at these limits is not intended and should be limited to those conditions specified under DC electrical characteristics.

Note 2: The B_{CLK} period decreases with increasing reference clock input. At higher clock input frequency, the number of B_{CLK} increases.

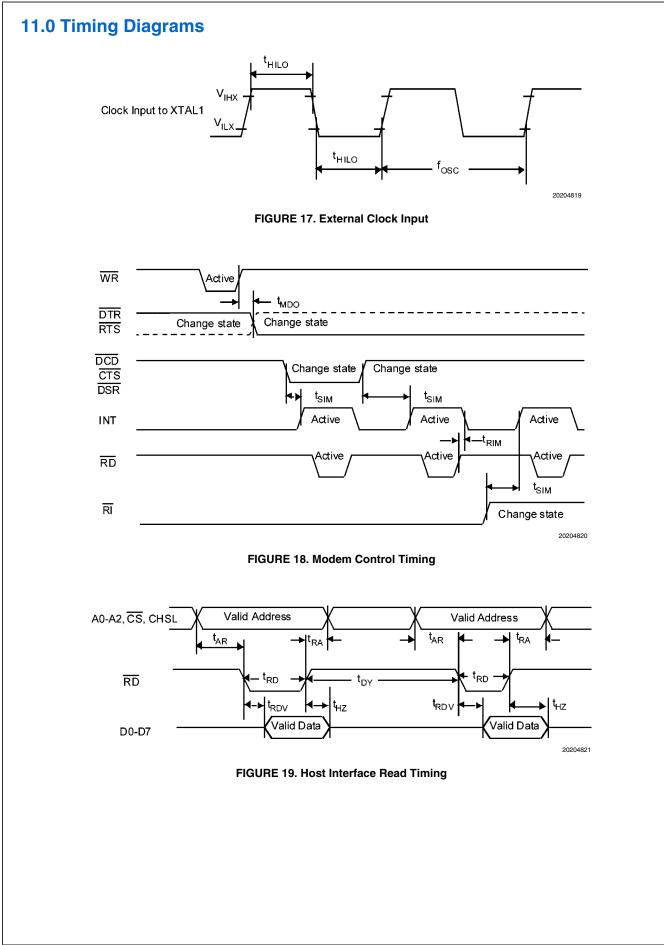

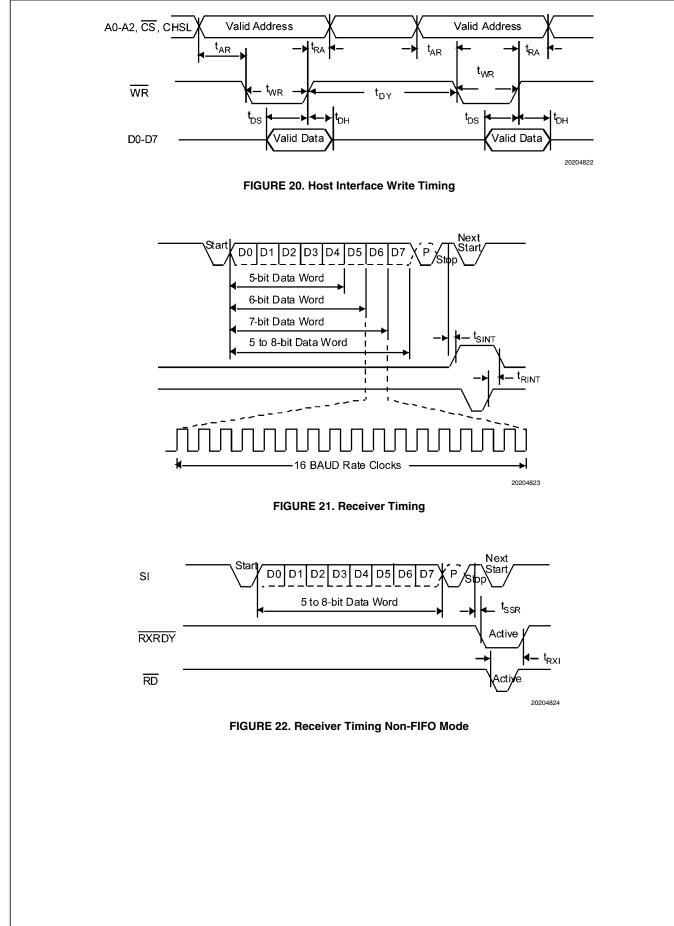

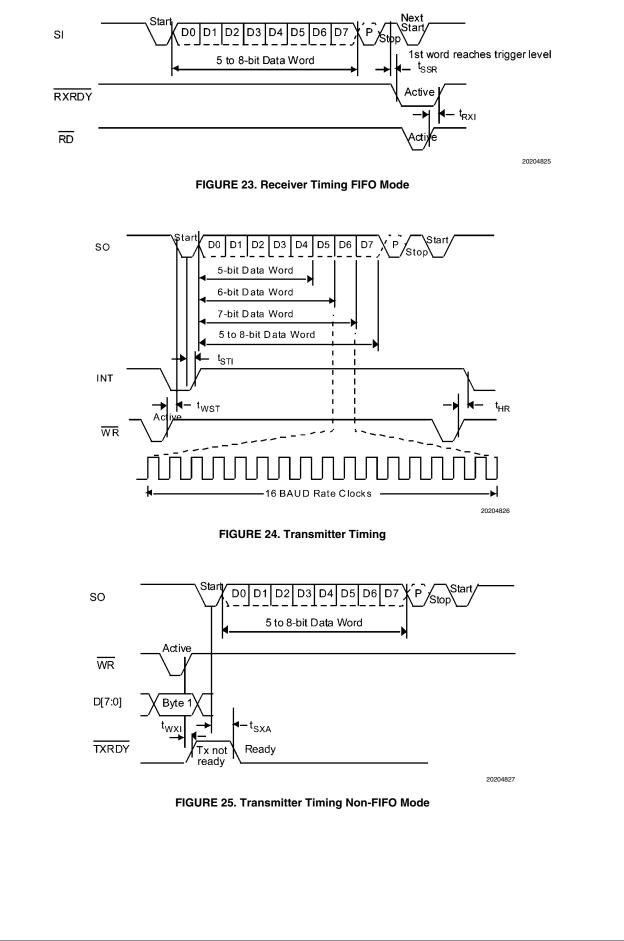




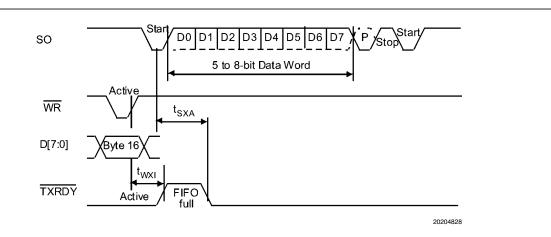


FIGURE 26. Transmitter Timing FIFO Mode

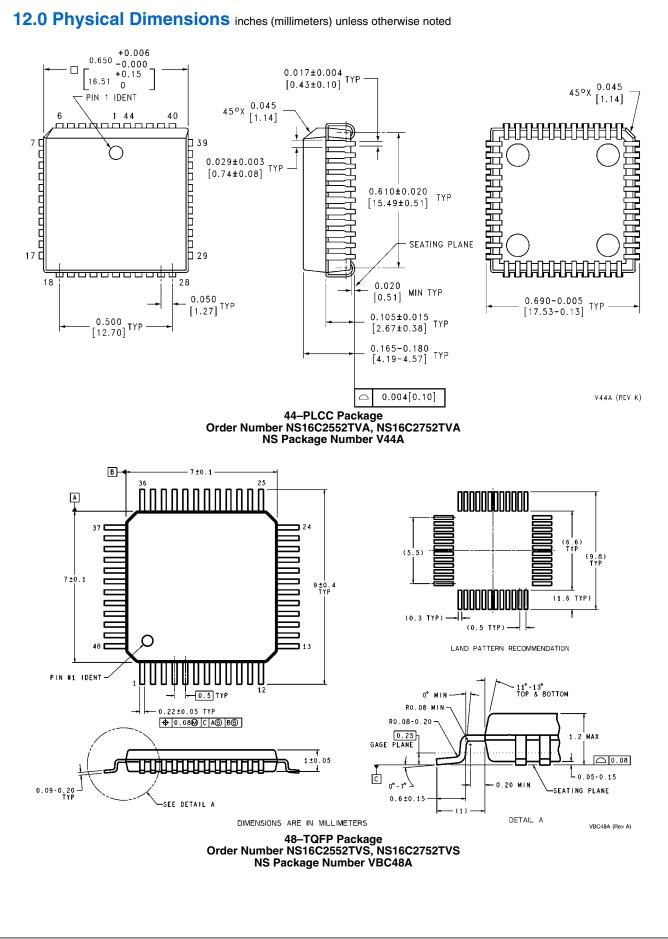

NS16C2552/NS16C2752

Notes

Pr	oducts	Design Support			
Amplifiers	www.national.com/amplifiers	WEBENCH® Tools	www.national.com/webench		
Audio	www.national.com/audio	App Notes	www.national.com/appnotes		
Clock and Timing	www.national.com/timing	Reference Designs	www.national.com/refdesigns		
Data Converters	www.national.com/adc	Samples	www.national.com/samples		
Interface	www.national.com/interface	Eval Boards	www.national.com/evalboards		
LVDS	www.national.com/lvds	Packaging	www.national.com/packaging		
Power Management	www.national.com/power	Green Compliance	www.national.com/quality/green		
Switching Regulators	www.national.com/switchers	Distributors	www.national.com/contacts		
LDOs	www.national.com/ldo	Quality and Reliability	www.national.com/quality		
LED Lighting	www.national.com/led	Feedback/Support	www.national.com/feedback		
Voltage Reference	www.national.com/vref	Design Made Easy	www.national.com/easy		
PowerWise® Solutions	www.national.com/powerwise	Solutions	www.national.com/solutions		
Serial Digital Interface (SDI)	www.national.com/sdi	Mil/Aero	www.national.com/milaero		
Temperature Sensors	www.national.com/tempsensors	SolarMagic™	www.national.com/solarmagic		
Wireless (PLL/VCO)	www.national.com/wireless	PowerWise® Design University	www.national.com/training		

or more National Semiconductor product information and proven design tools, visit the following Web sites at:

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED IN CONNECTION WITH NATIONAL SEMICONDUCTOR CORPORATION ("NATIONAL") PRODUCTS. NATIONAL MAKES NO REPRESENTATIONS OR WARRANTIES WITH RESPECT TO THE ACCURACY OR COMPLETENESS OF THE CONTENTS OF THIS PUBLICATION AND RESERVES THE RIGHT TO MAKE CHANGES TO SPECIFICATIONS AND PRODUCT DESCRIPTIONS AT ANY TIME WITHOUT NOTICE. NO LICENSE, WHETHER EXPRESS, IMPLIED, ARISING BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT.

TESTING AND OTHER QUALITY CONTROLS ARE USED TO THE EXTENT NATIONAL DEEMS NECESSARY TO SUPPORT NATIONAL'S PRODUCT WARRANTY. EXCEPT WHERE MANDATED BY GOVERNMENT REQUIREMENTS, TESTING OF ALL PARAMETERS OF EACH PRODUCT IS NOT NECESSARILY PERFORMED. NATIONAL ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR BUYER PRODUCT DESIGN. BUYERS ARE RESPONSIBLE FOR THEIR PRODUCTS AND APPLICATIONS USING NATIONAL COMPONENTS. PRIOR TO USING OR DISTRIBUTING ANY PRODUCTS THAT INCLUDE NATIONAL COMPONENTS, BUYERS SHOULD PROVIDE ADEQUATE DESIGN, TESTING AND OPERATING SAFEGUARDS.

EXCEPT AS PROVIDED IN NATIONAL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NATIONAL ASSUMES NO LIABILITY WHATSOEVER, AND NATIONAL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY RELATING TO THE SALE AND/OR USE OF NATIONAL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

LIFE SUPPORT POLICY

NATIONAL'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS PRIOR WRITTEN APPROVAL OF THE CHIEF EXECUTIVE OFFICER AND GENERAL COUNSEL OF NATIONAL SEMICONDUCTOR CORPORATION. As used herein:

Life support devices or systems are devices which (a) are intended for surgical implant into the body, or (b) support or sustain life and whose failure to perform when properly used in accordance with instructions for use provided in the labeling can be reasonably expected to result in a significant injury to the user. A critical component is any component in a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system or to affect its safety or effectiveness.

National Semiconductor and the National Semiconductor logo are registered trademarks of National Semiconductor Corporation. All other brand or product names may be trademarks or registered trademarks of their respective holders.

Copyright© 2009 National Semiconductor Corporation

For the most current product information visit us at www.national.com

R

National Semiconductor Americas Technical Support Center Email: support@nsc.com Tel: 1-800-272-9959

National Semiconductor Europe Technical Support Center Email: europe.support@nsc.com National Semiconductor Asia Pacific Technical Support Center Email: ap.support@nsc.com National Semiconductor Japan Technical Support Center Email: jpn.feedback@nsc.com