

Headphone Amplifiers

Standard Headphone Amplifiers





BH3541F,BH3544F,BH3547F,BH3548F

No.10102EAT02

Description

BH3541F, BH3544F, BH3547F, BH3548F is headphone amplifiers suitable for portable products.

BH3541F has a fixed gain of 0 dB and BH3544F, BH3547F, BH3548F has a fixed gain of 6 dB.

External resistors for gain setting are not needed. Package of BH3541F, BH3544F, BH3547F, BH3548F is pin-to-pin compatible (SOP8), enable to replace each other easily.

BH3541F, BH3544F, BH3548F also has mute functions that make it easy to prevent pop noise when power supply turns on/off. Moreover, thermal shutdown function is built-in.

BH3541F, BH3544F, BH3547F can drive 16/32 Ω load, BH3548F can drive 8/16/32 Ω . So, BH3548F is suitable for 8 Ω receiver.

Features

- 1) Built-in mute function for preventing pop noise when power supply turns on/off
- 2) Built-in thermal shutdown function
- 3) BH3541F, BH3544F, BH3547F, BH3548F are pin-to-pin compatible
- 4) SOP8 small package

Applications

TV, Desktop PC, Notebook PC, Camcorder and other equipment having headphone output

Line up

Part No.	BH3541F	BH3544F	BH3547F	BH3548F	Unit
Supply voltage	+2.8	+ 6.5	+4.5 ~ +5.5	+4.0 ~ +5.5	V
Quiescent current	7	.0	3.7	6.5	mA
Amplifier gain	0		6	dB	
Output [RL=16Ω]	6	2	77	62	mW
load impedance		8/16/32	Ω		
Operating temperature range		-40 ~ +85	°C		

● Absolute maximum ratings(Ta=25°C)

Parameter	Cumbal	Ratings		
	Symbol	BH3541F,BH3544F,BH3547F,BH3548F	Unit	
Applied voltage	VCC	7.0	V	
Power dissipation	Pd	550 ^{*1}	mW	
Storage temperature	Tstg	-55~+125	°C	

^{*1} Derating is done at 5.5mW/°C above Ta=25°C. (When mounted on a 70mm×70mm×1.6mm PCB board, FR4)

●Operating conditions (Ta=25°C)


Parameter	Symbol	Limits			
		BH3541F,BH3544F	BH3547F	BH3548F	Unit
Supply voltage	VCC	+2.8 ~ +6.5	+4.5 ~ +6.5	+4.0 ~ +5.5	V
Temperature Range	Topr	-25~	-40 ~ +85	°C	


^{*} These product are not designed for protection against radioactive rays.


• Electrical characteristics (Unless otherwise noted, Ta=25°C,VCC=5V,RL=32Ω,f=1kHz,BW=400~30kHz BH3541F: VIN=0dBV, BH3544F, BH3547F, BH3548F: VIN =-6dBV)

·		Limits(TYP.)				1.1:4	Conditions	
Parameter	Symbol	BH3541F	BH3544F	BH3547F	BH3548F	Unit	Conditions	
Quiescent current	IQ	7 3.7 6.5		mA	VIN=0Vrms			
Mute pin control voltage H	Vтмн	1.6<				٧	Mute OFF	
Mute pin control voltage L	VTML		<().3		٧	Mute ON	
Gain	Gvc	0 6				dB	-	
Gain difference between channels	ΔGvc	0				dB	-	
Total harmonic distortion	THD	0.	02	0.05	0.02	%	BW=20~20kHz	
Rated output 1	P01	3	1	46	31	mW	RL=32Ω,THD<0.1% (BH3541F,BH3544F,BH3548F) RL=32Ω,THD<0.3% (BH3547F)	
Rated output 2	P02	62 77 62		mW	RL=16Ω,THD<0.1% (BH3541F,BH3544F,BH3548F) RL=16Ω,THD<0.5% (BH3547F)			
Rated output 3	Роз	- 120		mW	RL=8Ω,THD<0.25% (BH3548F)			
Output noise voltage	Vno	-93				dBV	BW=20~20kHz,Rg=0Ω	
Channel separation	CS	-90		-87	-90	dB	Rg=0Ω	
Mute attenuation	ATT	-80				dB	Rg=0Ω	
Ripple rejection	RR	-57				dB	frr=100Hz,Vrr=-20dBV	
Input resistance	Rin	180 90				kΩ	-	

●Reference data

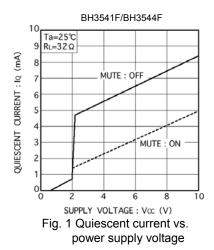

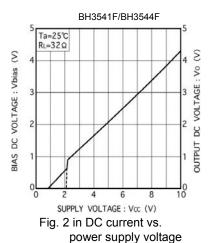

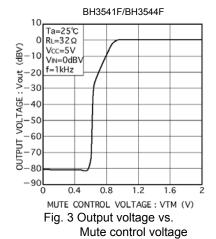

● Reference data (Continued)



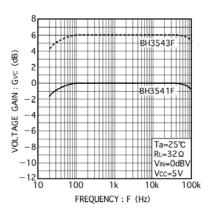


Fig. 4 Voltage gain vs. frequency

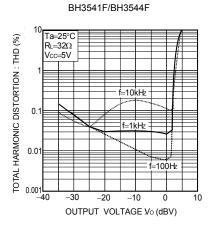


Fig. 5 Total harmonic distortion vs. output voltage (1)

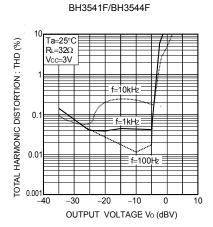


Fig. 6 Total harmonic distortion vs. output voltage (2)

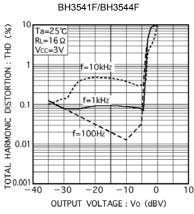


Fig. 7 Total harmonic distortion vs. output voltage (3)

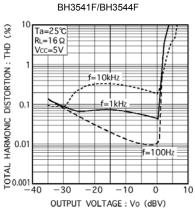


Fig. 8 Total harmonic distortion vs. output voltage (4)

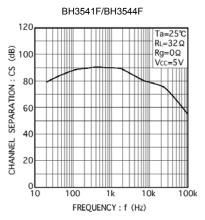


Fig. 9 Channel separation vs. frequency

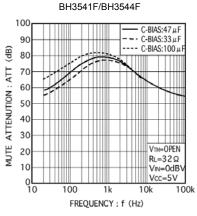


Fig. 10 MUTE attenuation vs. frequency

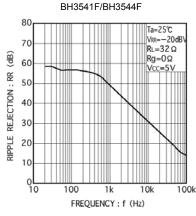


Fig. 11 Ripple rejection vs. frequency


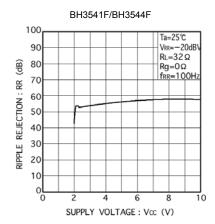


Fig. 12 Ripple rejection vs. power supply voltage


●Block diagram

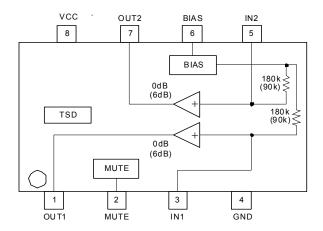

() are BH3544F, BH3547F, BH3548F values.

Fig. 13

Measurement circuit

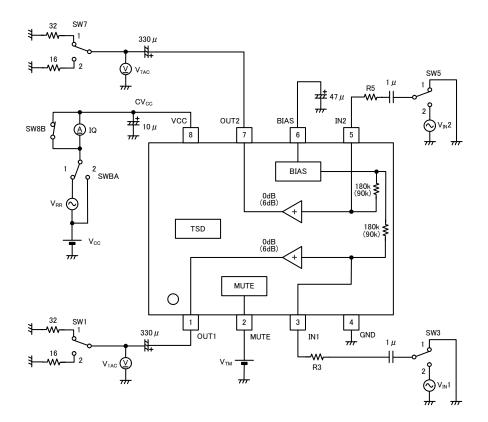

() are BH3544F, BH3547F, BH3548F values.

Fig. 14

•Terminal Equivalent Circuit / Description

Pin	Pin	1/0	Din voltage	Equivale	Function		
No.	Name	170	Pin voltage	BH3544F,BH3547F,BH3548F	BH3547F	Function	
1 7	OUT1 OUT2	0	2.1V (VCC=5V)	VCC 1 10k	VCC 1 7	Output pin	
2	MUTE	I	0.1V (When open)	2 VCC VCC	VCC	Mute control pin Mute on:Hi Mute off:Lo (open)	
3 5	IN1 IN2	I	2.1V (VCC=5V)	VCC 5 BIAS	VCC S 90k BIAS	Input pin	
6	BIAS	I/O	2.1V (VCC=5V)	60k BIAS	VCC **70k BIAS	Bias pin (Since the 47 µF externally attached capacitor also serves as the time constant for pop noise countermeasures, evaluate adequately when changing it.)	
4	GND	I	-	-	-	GND pin	
8	VCC	I	-	-	-	Power supply pin	

XThe figure in the pin explanation and input/output equivalent circuit is reference value, it doesn't guarantee the value.

Application circuit

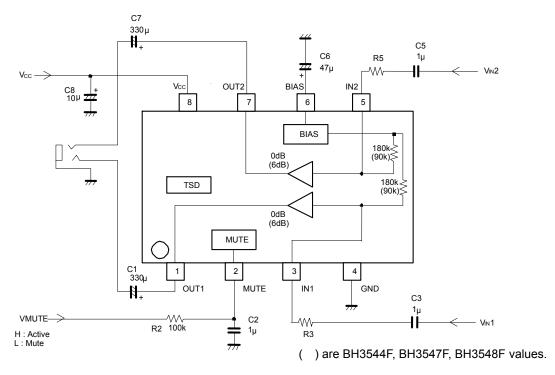


Fig. 15

Description of external components.

1) Input coupling capacitors (C3, C5)

These are determined according to the lower cutoff frequency fc. Moreover, since lowering the capacitance can cause the occurrence of pop noise, when changing this, determine it after adequate checking.

Since the input impedance of the BH3541F is $180k\Omega$ and that of the BH3544F,BH3547F,BH3548F is $90k\Omega$, these are found by the expressions below, although drift, temperature characteristics, and other considerations are necessary. (Layered ceramic capacitors are recommended.)

 $C3(C5)=1/(2 \pi \times 180 \text{k}\Omega \times \text{fc})$ [BH3541F]

C3(C5)=1/(2 π × 90k Ω ×fc) [BH3544 F,BH3547F,BH3548F]

2) Bias capacitor (C6)

When VCC=5V, $47\mu F$ is recommended. Since lowering the capacitance too much can cause worsening of electrical characteristics or the occurrence of pop noise, when changing this, determine it after checking this adequately.

3) Mute pin pop noise countermeasures (R2, C2)

Since the BH3541F,BH3544F,BH3548F has an impedance of $190k\Omega$ against GND and the BH3547F has $200k\Omega$, it may be impossible to cancel mute mode if R2 is made too large.

4) Output coupling capacitors (C1, C7)

These are determined by the lower cutoff frequency. If RL is the output load resistance (assuming a resistance Rx is put in for output protection or current restriction), these are found by the expression below.

 $C1(C7)=1/(2 \pi \times (RL+R \times) \times fc)$

5) Input gain adjustment resistances (R3, R5) (BH3544F,BH3547F)

Externally attached resistances (R3, R5) make input gain adjustment possible. The gain found by the expression below can be set.

 $GVC=6+20log(90k\Omega/(90k\Omega+R3[R5]))$ [dB]

When input gain is not accommodated, these resistors have no use.

●Notes for use

- 1) Numbers and data in entries are representative design values and are not guaranteed values of the items.
- 2) Although we are confident in recommending the sample application circuits, carefully check their characteristics further when using them. When modifying externally attached component constants before use, determine them so that they have sufficient margins by taking into account variations in externally attached components and the Rohm LSI, not only for static characteristics but also including transient characteristics.
- 3) Absolute maximum ratings

If applied voltage, operating temperature range, or other absolute maximum ratings are exceeded, the LSI may be damaged. Do not apply voltages or temperatures that exceed the absolute maximum ratings. If you think of a case in which absolute maximum ratings are exceeded, enforce fuses or other physical safety measures and investigate how not to apply the conditions under which absolute maximum ratings are exceeded to the LSI.

4) GND potential

Make the GND pin voltage such that it is the lowest voltage even when operating below it. Actually confirm that the voltage of each pin does not become a lower voltage than the GND pin, including transient phenomena.

5) Thermal design

Perform thermal design in which there are adequate margins by taking into account the allowable power dissipation in actual states of use.

6) Shorts between pins and misinstallation

When mounting the LSI on a board, pay adequate attention to orientation and placement discrepancies of the LSI. If it is misinstalled and the power is turned on, the LSI may be damaged. It also may be damaged if it is shorted by a foreign substance coming between pins of the LSI or between a pin and a power supply or a pin and a GND.


7) Operation in strong magnetic fields

Adequately evaluate use in a strong magnetic field, since there is a possibility of malfunction.

8) Pop noise countermeasures

In order to prevent the pop noise that occurs when the power supply turns ON or OFF, make the rise and fall with reference to the timing diagram shown below.

1)BH3541F/BH3544F/BH3548F

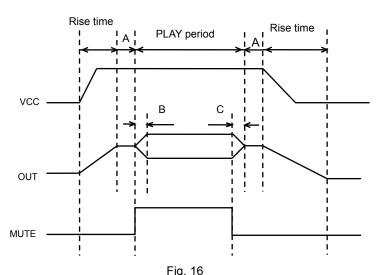

- (A):Mute period (Use as pop noise countermeasure when power supply turns ON/OFF by makingVMUTE=Lo.)
- (B):Mute cancellation period (This has a time constant because it is used by the externally attached C2 and R2 as a pop noise countermeasure on mute cancellation, so be careful of the timing.)
- (C):Mute start time (As on cancellation, this has a time constant.)


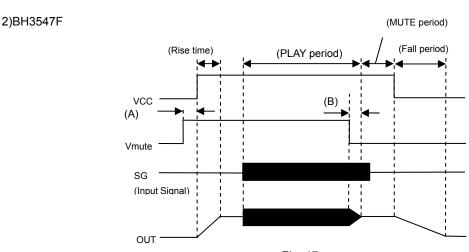


Fig. 17


(A):Before VCC rise (or at the same time as VCC) make mute cancelled (VMUTE=Hi).


(B):Soft mute period (This time can be set by externally attached R2 and C2)

Ordering part number

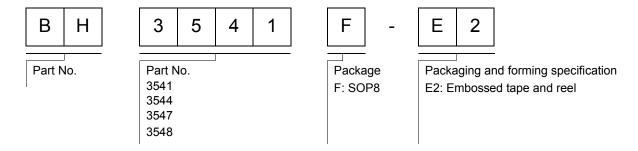

SOP8

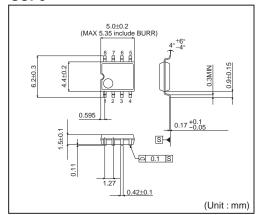

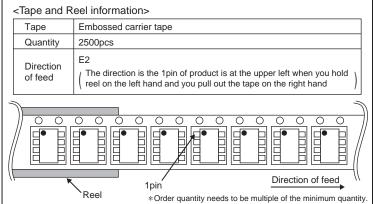

Notes

No copying or reproduction of this document, in part or in whole, is permitted without the consent of ROHM Co.,Ltd.

The content specified herein is subject to change for improvement without notice.

The content specified herein is for the purpose of introducing ROHM's products (hereinafter "Products"). If you wish to use any such Product, please be sure to refer to the specifications, which can be obtained from ROHM upon request.

Examples of application circuits, circuit constants and any other information contained herein illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.

Great care was taken in ensuring the accuracy of the information specified in this document. However, should you incur any damage arising from any inaccuracy or misprint of such information, ROHM shall bear no responsibility for such damage.

The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM and other parties. ROHM shall bear no responsibility whatsoever for any dispute arising from the use of such technical information.

The Products specified in this document are intended to be used with general-use electronic equipment or devices (such as audio visual equipment, office-automation equipment, communication devices, electronic appliances and amusement devices).

The Products specified in this document are not designed to be radiation tolerant.

While ROHM always makes efforts to enhance the quality and reliability of its Products, a Product may fail or malfunction for a variety of reasons.

Please be sure to implement in your equipment using the Products safety measures to guard against the possibility of physical injury, fire or any other damage caused in the event of the failure of any Product, such as derating, redundancy, fire control and fail-safe designs. ROHM shall bear no responsibility whatsoever for your use of any Product outside of the prescribed scope or not in accordance with the instruction manual.

The Products are not designed or manufactured to be used with any equipment, device or system which requires an extremely high level of reliability the failure or malfunction of which may result in a direct threat to human life or create a risk of human injury (such as a medical instrument, transportation equipment, aerospace machinery, nuclear-reactor controller, fuel-controller or other safety device). ROHM shall bear no responsibility in any way for use of any of the Products for the above special purposes. If a Product is intended to be used for any such special purpose, please contact a ROHM sales representative before purchasing.

If you intend to export or ship overseas any Product or technology specified herein that may be controlled under the Foreign Exchange and the Foreign Trade Law, you will be required to obtain a license or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

http://www.rohm.com/contact/