

# M28W320BT M28W320BB

32 Mbit (2Mb x16, Boot Block) 3V Supply Flash Memory

#### **FEATURES SUMMARY**

- SUPPLY VOLTAGE
  - V<sub>DD</sub> = 2.7V to 3.6V Core Power Supply
  - V<sub>DDQ</sub>= 1.65V to 3.6V for Input/Output
  - V<sub>PP</sub> = 12V for fast Program (optional)
- ACCESS TIME: 70, 85, 90,100ns
- PROGRAMMING TIME
  - 10µs typical
  - Double Word Programming Option
- COMMON FLASH INTERFACE
  - 64 bit Security Code
- MEMORY BLOCKS
  - Parameter Blocks (Top or Bottom location)
  - Main Blocks
- BLOCK PROTECTION on TWO PARAMETER BLOCKS
  - WP for Block Protection
- AUTOMATIC STAND-BY MODE
- PROGRAM and ERASE SUSPEND
- 100,000 PROGRAM/ERASE CYCLES per BLOCK
- ELECTRONIC SIGNATURE
  - Manufacturer Code: 20h
  - Top Device Code, M28W320BT: 88BCh
  - Bottom Device Code, M28W320BB: 88BDh

Figure 1. Packages



May 2002 1/43

# M28W320BT, M28W320BB

## **TABLE OF CONTENTS**

SUMMARY DESCRIPTION
Figure 2. Logic Diagram
Table 1. Signal Names
Figure 3. TSOP Connections
Figure 4. TFBGA Connections (Top view through package)7
Figure 5. Block Addresses
SIGNAL DESCRIPTIONS
Address Inputs (A0-A20)
Data Input/Output (DQ0-DQ15)
Chip Enable (E)
Output Enable (G)
Write Enable (W)
Write Protect (WP)
Reset (RP)
V <sub>DD</sub> Supply Voltage9
V <sub>DDQ</sub> Supply Voltage9
V <sub>PP</sub> Program Supply Voltage9
V <sub>SS</sub> Ground
BUS OPERATIONS
Read
Write
Output Disable
Standby
Automatic Standby
Reset
Table 2. Bus Operations
COMMAND INTERFACE11
Read Memory Array command
Read Status Register Command11
Read Electronic Signature Command
Read CFI Query Command11
Block Erase Command
Program Command11
Double Word Program Command
Clear Status Register Command
Program/Erase Suspend Command
Program/Erase Resume Command
Block Protection
Table 3. Commands
Table 4. Read Electronic Signature
Table 5. Memory Blocks Protection Truth Table
2/43

Table 6. Program, Erase Times and Program/Erase Endurance Cycles
STATUS REGISTER
Program/Erase Controller Status (Bit 7)
Erase Suspend Status (Bit 6)
Erase Status (Bit 5)
Program Status (Bit 4)
V <sub>PP</sub> Status (Bit 3)
Program Suspend Status (Bit 2)
Block Protection Status (Bit 1)
·
Reserved (Bit 0)
Table 7. Status Register Bits
MAXIMUM RATING
Table 8. Absolute Maximum Ratings17
DC and AC PARAMETERS
Table 9. Operating and AC Measurement Conditions18
Figure 6. AC Measurement I/O Waveform18
Figure 7. AC Measurement Load Circuit18
Table 10. Device Capacitance
Table 11. DC Characteristics19
Figure 8. Read AC Waveforms
Table 12. Read AC Characteristics
Figure 9. Write AC Waveforms, Write Enable Controlled
Table 13. Write AC Characteristics, Write Enable Controlled
Figure 10. Write AC Waveforms, Chip Enable Controlled
Table 14. Write AC Characteristics, Chip Enable Controlled
Figure 11. Power-Up and Reset AC Waveforms
Table 15. Power-Up and Reset AC Characteristics
PACKAGE MECHANICAL
Figure 12. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, Package Outline 26
Table 16. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, Package Mechanical Data . 26
Figure 13. TFBGA47 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, Bottom View Package Outline27
Table 17. TFBGA47 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, Package Mechanical Data 27
Figure 14. TFBGA47 Daisy Chain - Package Connections (Top view through package) 28
Figure 15. TFBGA47 Daisy Chain - PCB Connections proposal (Top view through package) 28
PART NUMBERING
Table 18. Ordering Information Scheme
200000000000000000000000000000000000000
REVISION HISTORY30
Table 20. Document Revision History
3/4

# M28W320BT, M28W320BB

APPENDIX A. BLOCK ADDRESS TABLES	31
Table 21. Top Boot Block Addresses, M28W320BT	31
Table 22. Bottom Boot Block Addresses, M28W320BB	
APPENDIX B. COMMON FLASH INTERFACE (CFI)	33
Table 23. Query Structure Overview	33
Table 24. CFI Query Identification String	
Table 25. CFI Query System Interface Information	
Table 26. Device Geometry Definition	
Table 27. Primary Algorithm-Specific Extended Query Table	
Table 28. Security Code Area	36
APPENDIX C. FLOWCHARTS AND PSEUDO CODES	37
Figure 16. Program Flowchart and Pseudo Code	37
Figure 17. Double Word Program Flowchart and Pseudo Code	
Figure 18. Program Suspend & Resume Flowchart and Pseudo Code	
Figure 19. Erase Flowchart and Pseudo Code	
Figure 20. Erase Suspend & Resume Flowchart and Pseudo Code	
APPENDIX D. COMMAND INTERFACE AND PROGRAM/ERASE CONTROLLER STATE	42
Table 29. Write State Machine Current/Next	42

#### SUMMARY DESCRIPTION

The M28W320B is a 32 Mbit (2 Mbit x 16) non-volatile Flash memory that can be erased electrically at the block level and programmed in-system on a Word-by-Word basis. These operations can be performed using a single low voltage (2.7 to 3.6V) supply. V<sub>DDQ</sub> allows to drive the I/O pin down to 1.65V. An optional 12V V<sub>PP</sub> power supply is provided to speed up customer programming.


The device features an asymmetrical blocked architecture. The M28W320B has an array of 71 blocks: 8 Parameter Blocks of 4 KWord and 63 Main Blocks of 32 KWord. M28W320BT has the Parameter Blocks at the top of the memory address space while the M28W320BB locates the Parameter Blocks starting from the bottom. The memory maps are shown in Figure 5, Block Addresses.

Parameter blocks 0 and 1 can be protected from accidental programming or erasure. Each block can be erased separately. Erase can be suspended in order to perform either read or program in any other block and then resumed. Program can be suspended to read data in any other block and then resumed. Each block can be programmed and erased over 100,000 cycles.

Program and Erase commands are written to the Command Interface of the memory. An on-chip Program/Erase Controller takes care of the timings necessary for program and erase operations. The end of a program or erase operation can be detected and any error conditions identified. The command set required to control the memory is consistent with JEDEC standards.

The memory is offered in TSOP48 (10 X 20mm), and TFBGA47 (6.39 x 10.5mm, 0.75mm pitch) packages and is supplied with all the bits erased (set to '1').

Figure 2. Logic Diagram

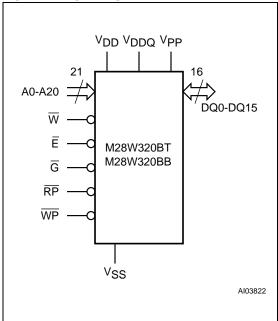


**Table 1. Signal Names** 

A0-A20	Address Inputs
DQ0-DQ15	Data Input/Output
Ē	Chip Enable
G	Output Enable
W	Write Enable
RP	Reset
WP	Write Protect
V <sub>DD</sub>	Core Power Supply
V <sub>DDQ</sub>	Power Supply for Input/Output
V <sub>PP</sub>	Optional Supply Voltage for Fast Program & Erase
V <sub>SS</sub>	Ground

**57** 

Figure 3. TSOP Connections

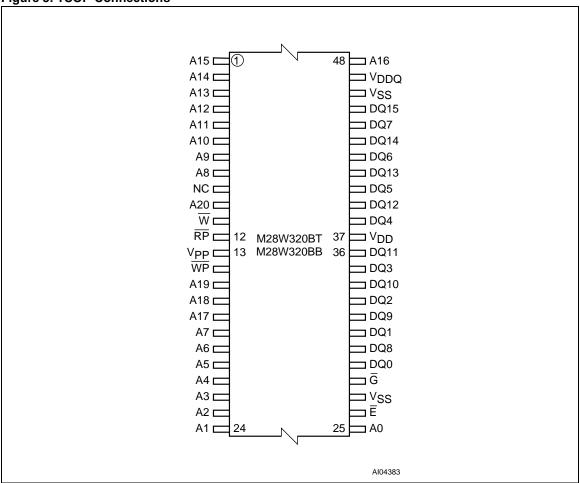


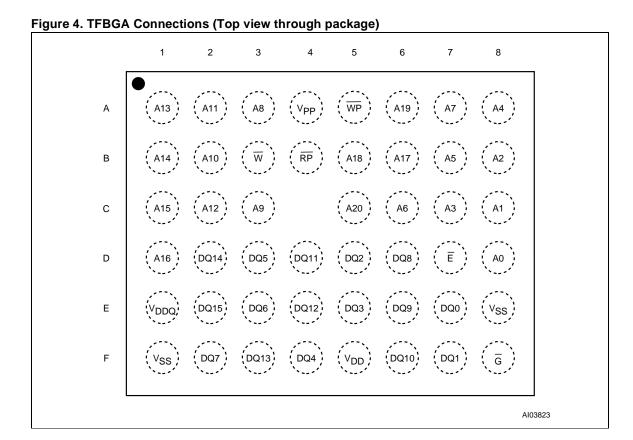


Figure 5. Block Addresses

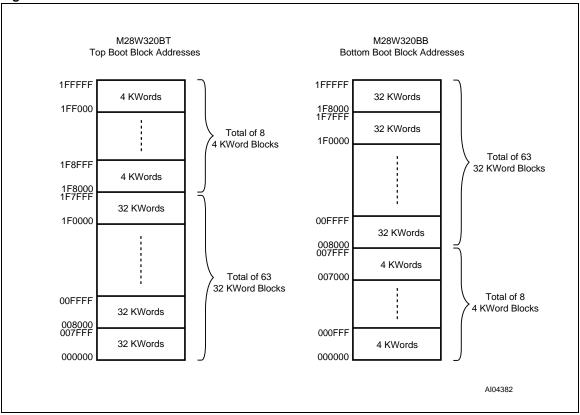

Note: Also see Appendix A, Tables 21 and 22 for a full listing of the Block Addresses.

#### SIGNAL DESCRIPTIONS

See Figure 2 Logic Diagram and Table 1,Signal Names, for a brief overview of the signals connected to this device.

Address Inputs (A0-A20). The Address Inputs select the cells in the memory array to access during Bus Read operations. During Bus Write operations they control the commands sent to the Command Interface of the internal state machine.

**Data Input/Output (DQ0-DQ15).** The Data I/O outputs the data stored at the selected address during a Bus Read operation or inputs a command or data to be programmed during a Write Bus operation.

**Chip Enable (E).** The Chip Enable input activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is at  $V_{IL}$  and Reset is at  $V_{IH}$  the device is in active mode. When Chip Enable is at  $V_{IH}$  the memory is deselected, the outputs are high impedance and the power consumption is reduced to the stand-by level

**Output Enable (G).** The Output Enable controls data outputs during the Bus Read operation of the memory.

**Write Enable (W).** The Write Enable controls the Bus Write operation of the memory's Command Interface. The data and address inputs are latched on the rising edge of Chip Enable, E, or Write Enable, W, whichever occurs first.

Write Protect ( $\overline{WP}$ ). Write Protect is an input to protect or unprotect the two lockable parameter blocks. When Write Protect is at V<sub>IL</sub>, the lockable blocks are protected and Program or Erase operations are not possible. When Write Protect is at V<sub>IH</sub>, the lockable blocks are unprotected and can be programmed or erased (refer to Table 4, Memory Blocks Protection Truth).

**Reset (RP).** The Reset input provides a hardware reset of the memory. When Reset is at  $V_{\rm IL}$ , the memory is in reset mode: the outputs are high impedance and the current consumption is mini-

mized. When Reset is at  $V_{IH}$ , the device is in normal operation. Exiting reset mode the device enters read array mode, but a negative transition of Chip Enable or a change of the address is required to ensure valid data outputs.

**V<sub>DD</sub> Supply Voltage.** V<sub>DD</sub> provides the power supply to the internal core of the memory device. It is the main power supply for all operations (Read, Program and Erase).

 $V_{DDQ}$  Supply Voltage.  $V_{DDQ}$  provides the power supply to the I/O pins and enables all Outputs to be powered independently from  $V_{DD}$ .  $V_{DDQ}$  can be tied to  $V_{DD}$  or can use a separate supply.

**VPP Program Supply Voltage.** VPP is both a control input and a power supply pin. The two functions are selected by the voltage range applied to the pin. The Supply Voltage  $V_{DD}$  and the Program Supply Voltage  $V_{PP}$  can be applied in any order.

If  $V_{PP}$  is kept in a low voltage range (0V to 3.6V)  $V_{PP}$  is seen as a control input. In this case a voltage lower than  $V_{PPLK}$  gives an absolute protection against program or erase, while  $V_{PP} > V_{PP1}$  enables these functions (see Table 11, DC Characteristics for the relevant values).  $V_{PP}$  is only sampled at the beginning of a program or erase; a change in its value after the operation has started does not have any effect and program or erase operations continue.

If  $V_{PP}$  is in the range 11.4V to 12.6V it acts as a power supply pin. In this condition  $V_{PP}$  must be stable until the Program/Erase algorithm is completed (see Table 13 and 14).

**Vss Ground.** Vss is the reference for all voltage measurements.

Note: Each device in a system should have  $V_{DD}$ ,  $V_{DDQ}$  and  $V_{PP}$  decoupled with a  $0.1\mu F$  capacitor close to the pin. See Figure 7, AC Measurement Load Circuit. The PCB trace widths should be sufficient to carry the required  $V_{PP}$  Program and Erase currents.

#### **BUS OPERATIONS**

There are six standard bus operations that control the device. These are Bus Read, Bus Write, Output Disable, Standby, Automatic Standby and Reset. See Table 2, Bus Operations, for a summary.

Typically glitches of less than 5ns on Chip Enable or Write Enable are ignored by the memory and do not affect bus operations.

**Read.** Read Bus operations are used to output the contents of the Memory Array, the Electronic Signature, the Status Register and the Common Flash Interface. Both Chip Enable and Output Enable must be at  $V_{\rm IL}$  in order to perform a read operation. The Chip Enable input should be used to enable the device. Output Enable should be used to gate data onto the output. The data read depends on the previous command written to the memory (see Command Interface section). See Figure 8, Read Mode AC Waveforms, and Table 12, Read AC Characteristics, for details of when the output becomes valid.

Read mode is the default state of the device when exiting Reset or after power-up.

**Write.** Bus Write operations write Commands to the memory or latch Input Data to be programmed. A write operation is initiated when Chip Enable and Write Enable are at  $V_{IL}$  with Output Enable at  $V_{IH}$ . Commands, Input Data and Addresses are latched on the rising edge of Write Enable or Chip Enable, whichever occurs first.

See Figures 9 and 10, Write AC Waveforms, and Tables 13 and 14, Write AC Characteristics, for details of the timing requirements.

Output Disable. The data outputs are high impedance when the Output Enable is at  $V_{IH}$ .

**Standby.** Standby disables most of the internal circuitry allowing a substantial reduction of the current consumption. The memory is in stand-by when Chip Enable is at  $V_{IH}$  and the device is in read mode. The power consumption is reduced to the stand-by level and the outputs are set to high impedance, independently from the Output Enable or Write Enable inputs. If Chip Enable switches to  $V_{IH}$  during a program or erase operation, the device enters Standby mode when finished.

**Automatic Standby.** Automatic Standby provides a low power consumption state during Read mode. Following a read operation, the device enters Automatic Standby after 150ns of bus inactivity, even if Chip Enable is low,  $V_{IL}$ , and the supply current is reduced to  $I_{DD1}$ . The data Inputs/Outputs will still output data.

**Reset.** During Reset mode, when Output Enable is low,  $V_{IL}$ , the memory is deselected and the outputs are high impedance. The memory is in Reset mode when Reset is at  $V_{IL}$ . The power consumption is reduced to the Standby level, independently from the Chip Enable, Output Enable or Write Enable inputs. If Reset is pulled to  $V_{SS}$  during a Program or Erase, this operation is aborted and the memory content is no longer valid.

**Table 2. Bus Operations** 

Operation	Ē	G	w	RP	WP	V <sub>PP</sub>	DQ0-DQ15
Read	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IH</sub>	Х	Don't Care	Data Output
Write	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IL</sub>	V <sub>IH</sub>	Х	V <sub>DD</sub> or V <sub>PPH</sub>	Data Input
Output Disable	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IH</sub>	V <sub>IH</sub>	Х	Don't Care	Hi-Z
Standby	V <sub>IH</sub>	Х	Х	V <sub>IH</sub>	Х	Don't Care	Hi-Z
Reset	Х	Х	Х	V <sub>IL</sub>	Х	Don't Care	Hi-Z

Note:  $X = V_{IL}$  or  $V_{IH}$ ,  $V_{PPH} = 12V \pm 5\%$ .

#### **COMMAND INTERFACE**

All Bus Write operations to the memory are interpreted by the Command Interface. Commands consist of one or more sequential Bus Write operations. An internal Program/Erase Controller handles all timings and verifies the correct execution of the Program and Erase commands. The Program/Erase Controller provides a Status Register whose output may be read at any time, to monitor the progress of an operation, or the Program/Erase states. See Appendix D, Table 29, Write State Machine Current/Next, for a summary of the Command Interface.

The Command Interface is reset to Read mode when power is first applied, when exiting from Reset or whenever  $V_{DD}$  is lower than  $V_{LKO}$ . Command sequences must be followed exactly. Any invalid combination of commands will reset the device to Read mode. Refer to Table 3, Commands, in conjunction with the text descriptions below.

#### Read Memory Array command

The Read command returns the memory to its Read mode. One Bus Write cycle is required to issue the Read Memory Array command and return the memory to Read mode. Subsequent read operations will read the addressed location and output the data. When a device Reset occurs, the memory defaults to Read mode.

### **Read Status Register Command**

The Status Register indicates when a program or erase operation is complete and the success or failure of the operation itself. Issue a Read Status Register command to read the Status Register's contents. Subsequent Bus Read operations read the Status Register, at any address, until another command is issued. See Table 7, Status Register Bits, for details on the definitions of the bits.

The Read Status Register command may be issued at any time, even during a Program/Erase operation. Any Read attempt during a Program/ Erase operation will automatically output the content of the Status Register.

### **Read Electronic Signature Command**

The Read Electronic Signature command reads the Manufacturer and Device Codes.

The Read Electronic Signature command consists of one write cycle, a subsequent read will output the Manufacturer or the Device Code depending on the levels of A0. The Manufacturer Code is output when the address line A0 is at  $V_{IL}$ , the Device Code is output when A0 is at  $V_{IH}$ . Addresses A1-A7 must be kept to  $V_{IL}$ , other addresses are ignored. The codes are output on DQ0-DQ7 with DQ8-DQ15 at 00h. (see Table 4)

#### **Read CFI Query Command**

The Read Query Command is used to read data from the Common Flash Interface (CFI) Memory Area, allowing programming equipment or applications to automatically match their interface to the characteristics of the device.

One Bus Write cycle is required to issue the Read Query Command. Once the command is issued subsequent Bus Read operations read from the Common Flash Interface Memory Area. See Appendix B, Common Flash Interface, Tables 23, 24, 25, 26, 27 and 28 for details on the information contained in the Common Flash Interface memory area.

#### **Block Erase Command**

The Block Erase command can be used to erase a block. It sets all the bits within the selected block to '1'. All previous data in the block is lost. If the block is protected then the Erase operation will abort, the data in the block will not be changed and the Status Register will output the error.

Two Bus Write cycles are required to issue the command.

- The first bus cycle sets up the Erase command.
- The second latches the block address in the internal state machine and starts the Program/ Erase Controller.

If the second bus cycle is not Write Erase Confirm (D0h), Status Register bits b4 and b5 are set and the command aborts.

Erase aborts if Reset turns to  $V_{\rm IL}$ . As data integrity cannot be guaranteed when the Erase operation is aborted, the block must be erased again.

During Erase operations the memory will only accept the Read Status Register command and the Program/Erase Suspend command, all other commands will be ignored. Typical Erase times are given in Table 6, Program, Erase Times and Program/Erase Endurance Cycles.

See Appendix C, Figure 19, Erase Flowchart and Pseudo Code, for the flowchart for using the Erase command.

#### **Program Command**

The memory array can be programmed word-byword. Two bus write cycles are required to issue the Program command.

- The first bus cycle sets up the Program command.
- The second latches the Address and the Data to be written and starts the Program/Erase Controller

During Program operations the memory will only accept the Read Status Register command and the Program/Erase Suspend command. All other

commands will be ignored. Typical Program times are given in Table 6, Program, Erase Times and Program/Erase Endurance Cycles.

Programming aborts if Reset goes to  $V_{IL}$ . As data integrity cannot be guaranteed when the program operation is aborted, the block containing the memory location must be erased and reprogrammed.

See Appendix C, Figure 16, Program Flowchart and Pseudo Code, for the flowchart for using the Program command.

#### **Double Word Program Command**

This feature is offered to improve the programming throughput, writing a page of two adjacent words in parallel. The two words must differ only for the address A0. Programming should not be attempted when Vpp is not at VppH. The command can be executed if Vpp is below VpPH but the result is not guaranteed.

Three bus write cycles are necessary to issue the Double Word Program command.

- The first bus cycle sets up the Double Word Program command.
- The second bus cycle latches the Address and the Data of the first word to be written.
- The third bus cycle latches the Address and the Data of the second word to be written and starts the Program/Erase Controller.

Read operations output the Status Register content after the programming has started. Programming aborts if Reset goes to  $V_{IL}$ . As data integrity cannot be guaranteed when the program operation is aborted, the block containing the memory location must be erased and reprogrammed.

See Appendix C, Figure 17, Double Word Program Flowchart and Pseudo Code, for the flow-chart for using the Double Word Program command.

#### **Clear Status Register Command**

The Clear Status Register command can be used to reset bits 1, 3, 4 and 5 in the Status Register to '0'. One bus write cycle is required to issue the Clear Status Register command.

The bits in the Status Register do not automatically return to '0' when a new Program or Erase command is issued. The error bits in the Status Register should be cleared before attempting a new Program or Erase command.

#### **Program/Erase Suspend Command**

The Program/Erase Suspend command is used to pause a Program or Erase operation. One bus write cycle is required to issue the Program/Erase command and pause the Program/Erase controller

During Program/Erase Suspend the Command Interface will accept the Program/Erase Resume, Read Array, Read Status Register, Read Electronic Signature and Read CFI Query commands. Additionally, if the suspend operation was Erase then the Program command will also be accepted. Only the blocks not being erased may be read or programmed correctly.

During a Program/Erase Suspend, the device can be placed in a pseudo-standby mode by taking Chip Enable to  $V_{IH}$ . Program/Erase is aborted if Reset turns to  $V_{II}$ .

See Appendix C, Figure 18, Program Suspend & Resume Flowchart and Pseudo Code, and Figure 20, Erase Suspend & Resume Flowchart and Pseudo Code for flowcharts for using the Program/ Erase Suspend command.

#### **Program/Erase Resume Command**

The Program/Erase Resume command can be used to restart the Program/Erase Controller after a Program/Erase Suspend operation has paused it. One Bus Write cycle is required to issue the command. Once the command is issued subsequent Bus Read operations read the Status Register.

See Appendix C, Figure 18, Program or Double Word Program Suspend & Resume Flowchart and Pseudo Code, and Figure 20, Erase Suspend & Resume Flowchart and Pseudo Code for flowcharts for using the Program/Erase Resume command.

#### **Block Protection**

Two parameter/lockable blocks (blocks #0 and #1) can be protected against Program or Erase operations. Unprotected blocks can be programmed or erased.

To protect the two lockable blocks set Write Protect to  $V_{IL}$ . When  $V_{PP}$  is below  $V_{PPLK}$  all blocks are protected. Any attempt to Program or Erase protected blocks will abort, the data in the block will not be changed and the Status Register outputs the error.

Table 5, Memory Blocks Protection Truth Table, defines the protection methods.

**Table 3. Commands** 

		Bus Write Operations								
Commands	No. of	1st Cycle				2nd Cycle	9	3nd Cycle		
	Cycles	Bus Op.	Addr	Data	Bus Op.	Addr	Data	Bus Op.	Addr	Data
Read Memory Array	1+	Write	Х	FFh	Read	Read Addr	Data			
Read Status Register	1+	Write	Х	70h	Read	Х	Status Register			
Read Electronic Signature	1+	Write	Х	90h	Read	Signature Addr <sup>(2)</sup>	Signature			
Read CFI Query	1+	Write	Х	98h	Read	CFI Addr	Query			
Erase	2	Write	Х	20h	Write	Block Addr	D0h			
Program	2	Write	Х	40h or 10h	Write	Addr	Data Input			
Double Word Program <sup>(3)</sup>	3	Write	Х	30h	Write	Addr 1	Data Input	Write	Addr 2	Data Input
Clear Status Register	1	Write	Х	50h						
Program/Erase Suspend	1	Write	Х	B0h						
Program/Erase Resume	1	Write	Х	D0h						

Note: 1. X = Don't Care.

**Table 4. Read Electronic Signature** 

Code	Device	E	G	W	A0	A1-A7	A8-A20	DQ0-DQ7	DQ8-DQ15
Manufacture. Code		V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IL</sub>	$V_{IL}$	Don't Care	20h	00h
Device Code	M28W320CT	V <sub>IL</sub>	VIL	V <sub>IH</sub>	V <sub>IH</sub>	V <sub>IL</sub>	Don't Care	BCh	88h
	M28W320CB	$V_{IL}$	$V_{IL}$	V <sub>IH</sub>	V <sub>IH</sub>	$V_{IL}$	Don't Care	BDh	88h

**Table 5. Memory Blocks Protection Truth Table** 

V <sub>PP</sub> <sup>(1)</sup>	RP	WP <sup>(1)</sup>	Lockable Blocks (blocks #0 and #1)	Other Blocks
Х	V <sub>IL</sub>	X	Protected	Protected
V <sub>IL</sub>	V <sub>IH</sub>	X	Protected	Protected
V <sub>DD</sub> or V <sub>PPH</sub> <sup>(2)</sup>	V <sub>IH</sub>	V <sub>IL</sub>	Protected	Unprotected
V <sub>DD</sub> or V <sub>PPH</sub> <sup>(2)</sup>	V <sub>IH</sub>	V <sub>IH</sub>	Unprotected	Unprotected

Note: 1. X = Don't Care

47/

A0=V<sub>IL</sub> outputs Manufacturer code, A0=V<sub>IH</sub> outputs Device code. Address A7-A1 must be V<sub>IL</sub>.
 Addr 1 and Addr 2 must be consecutive Addresses differing only for A0.

<sup>2.</sup>  $V_{PP}$  must also be greater than the Program Voltage Lock Out  $V_{PPLK}$ .

# M28W320BT, M28W320BB

Table 6. Program, Erase Times and Program/Erase Endurance Cycles

D		ı	M28W320B				
Parameter	Test Conditions	Min	Тур	Max	Unit		
Word Program	$V_{PP} = V_{DD}$		10	200	μs		
Double Word Program	V <sub>PP</sub> = 12V ±5%		10	200	μs		
Main Diagle Drawnan	V <sub>PP</sub> = 12V ±5%		0.16	5	S		
Main Block Program	V <sub>PP</sub> = V <sub>DD</sub>		0.32	5	S		
	V <sub>PP</sub> = 12V ±5%		0.02	4	S		
Parameter Block Program	V <sub>PP</sub> = V <sub>DD</sub>		0.04	4	S		
Main Dianis France	V <sub>PP</sub> = 12V ±5%		1	10	S		
Main Block Erase	V <sub>PP</sub> = V <sub>DD</sub>		1	10	S		
Development of Disability Consession	V <sub>PP</sub> = 12V ±5%		0.8	10	S		
Parameter Block Erase	V <sub>PP</sub> = V <sub>DD</sub>		0.8	10	s		
Program/Erase Cycles (per Block)		100,000			cycles		

#### STATUS REGISTER

The Status Register provides information on the current or previous Program or Erase operation. The various bits convey information and errors on the operation. To read the Status register the Read Status Register command can be issued, refer to the Read Status Register Command section. To output the contents, the Status Register is latched on the falling edge of the Chip Enable or Output Enable signals, and can be read until Chip Enable or Output Enable returns to V<sub>IH</sub>. Either Chip Enable or Output Enable must be toggled to update the latched data.

Bus Read operations from any address always read the Status Register during Program and Erase operations.

The bits in the Status Register are summarized in Table 7, Status Register Bits. Refer to Table 7 in conjunction with the following text descriptions.

Program/Erase Controller Status (Bit 7). The Program/Erase Controller Status bit indicates whether the Program/Erase Controller is active or inactive. When the Program/Erase Controller Status bit is Low (set to '0'), the Program/Erase Controller is active; when the bit is High (set to '1'), the Program/Erase Controller is inactive, and the device is ready to process a new command.

The Program/Erase Controller Status is Low immediately after a Program/Erase Suspend command is issued until the Program/Erase Controller pauses. After the Program/Erase Controller pauses the bit is High .

During Program, Erase, operations the Program/ Erase Controller Status bit can be polled to find the end of the operation. Other bits in the Status Register should not be tested until the Program/Erase Controller completes the operation and the bit is High.

After the Program/Erase Controller completes its operation the Erase Status, Program Status,  $V_{PP}$  Status and Block Protection Status bits should be tested for errors.

**Erase Suspend Status (Bit 6).** The Erase Suspend Status bit (set to '1') indicates that an Erase operation has been suspended or is going to be suspended.

The Erase Suspend Status should only be considered valid when the Program/Erase Controller Status bit is High (Program/Erase Controller inactive). Bit 7 is set within 30µs of the Program/Erase Suspend command being issued therefore the memory may still complete the operation rather than entering the Suspend mode.

When a Program/Erase Resume command is issued the Erase Suspend Status bit returns Low.

memory may still complete the operation rather

Erase Status (Bit 5). The Erase Status bit can be used to identify if the memory has failed to verify that the block has erased correctly. When the Erase Status bit is High (set to '1'), the Program/ Erase Controller has applied the maximum number of pulses to the block and still failed to verify that the block has erased correctly. The Erase Status bit should be read once the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

Once set High, the Erase Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to fail.

Program Status (Bit 4). The Program Status bit is used to identify a Program failure. When the Program Status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the byte and still failed to verify that it has programmed correctly. The Program Status bit should be read once the Program/Erase Controller Status bit is High (Program/Erase Controller inactive).

Once set High, the Program Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new command is issued, otherwise the new command will appear to fail.

**V<sub>PP</sub> Status (Bit 3).** The V<sub>PP</sub> Status bit can be used to identify an invalid voltage on the V<sub>PP</sub> pin during Program and Erase operations. The V<sub>PP</sub> pin is only sampled at the beginning of a Program or Erase operation. Indeterminate results can occur if V<sub>PP</sub> becomes invalid during an operation.

When the V<sub>PP</sub> Status bit is Low (set to '0'), the voltage on the V<sub>PP</sub> pin was sampled at a valid voltage; when the V<sub>PP</sub> Status bit is High (set to '1'), the V<sub>PP</sub> pin has a voltage that is below the V<sub>PP</sub> Lockout Voltage, V<sub>PPLK</sub>, the memory is protected and Program and Erase operations cannot be performed.

Once set High, the V<sub>PP</sub> Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new Program or Erase command is issued, otherwise the new command will appear to fail.

**Program Suspend Status (Bit 2).** The Program Suspend Status bit (set to '1') indicates that a Program operation has been suspended or is going to be suspended.

The Program Suspend Status should only be considered valid when the Program/Erase Controller Status bit is High (Program/Erase Controller inactive). Bit 2 is set within 5µs of the Program/Erase Suspend command being issued therefore the than entering the Suspend mode.

When a Program/Erase Resume command is issued the Program Suspend Status bit returns Low.

**Block Protection Status (Bit 1).** The Block Protection Status bit can be used to identify if a Program or Erase operation has tried to modify the contents of a protected block.

When the Block Protection Status bit is High (set to '1'), a Program or Erase operation has been attempted on a protected block.

Once set High, the Block Protection Status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new command is issued, otherwise the new command will appear to fail.

Peserved (Bit 0) Bit 0 of the Status Register is

**Reserved (Bit 0).** Bit 0 of the Status Register is reserved. Its value must be masked.

Note: Refer to Appendix C, Flowcharts and Pseudo Codes, for using the Status Register.

**Table 7. Status Register Bits** 

Bit	Name	Logic Level	Definition
7	P/E.C. Status	'1'	Ready
,	P/E.C. Status	'0'	Busy
6	Franc Supposed Status	'1'	Suspended
6	Erase Suspend Status	'0'	In progress or Completed
_	France Chatture	'1'	Erase Error
5	Erase Status	'0'	Erase Success
4	D 01.1	'1'	Program Error
4	Program Status	'0'	Program Success
0	V Ctatus	'1'	V <sub>PP</sub> Invalid, Abort
3	V <sub>PP</sub> Status	'0'	V <sub>PP</sub> OK
	D 0 10/1	'1'	Suspended
2	Program Suspend Status	'0'	In Progress or Completed
4	Dia de Dratactica Ctatus	'1'	Program/Erase on protected Block, Abort
1	Block Protection Status	'0'	No operation to protected blocks
0	Reserved	•	

Note: Logic level '1' is High, '0' is Low.

#### **MAXIMUM RATING**

Stressing the device above the rating listed in the Absolute Maximum Ratings table may cause permanent damage to the device. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. These are stress ratings only and operation of the device at

these or any other conditions above those indicated in the Operating sections of this specification is not implied. Refer also to the STMicroelectronics SURE Program and other relevant quality documents.

**Table 8. Absolute Maximum Ratings** 

Symbol	Parameter	Valu	Unit	
Symbol	Parameter	Min	Oille	
T <sub>A</sub>	Ambient Operating Temperature (1)	-40	85	°C
T <sub>BIAS</sub>	Temperature Under Bias	-40	125	°C
T <sub>STG</sub>	Storage Temperature	<b>-</b> 55	155	°C
V <sub>IO</sub>	Input or Output Voltage	-0.6	V <sub>DDQ</sub> +0.6	V
V <sub>DD</sub> , V <sub>DDQ</sub>	Supply Voltage	-0.6	4.1	V
V <sub>PP</sub>	Program Voltage	-0.6	13	V

Note: 1. Depends on range.

#### DC AND AC PARAMETERS

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measure-

ment Conditions summarized in Table 9, Operating and AC Measurement Conditions. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

**Table 9. Operating and AC Measurement Conditions** 

	M28W320BT, M28W320BB								
Parameter	7	70		85		90		100	
Parameter	Min	Max	Min	Max	Min	Max	Min	Max	Units
V <sub>DD</sub> Supply Voltage	2.7	3.6	2.7	3.6	2.7	3.6	2.7	3.6	V
V <sub>DDQ</sub> Supply Voltage (V <sub>DDQ</sub> ≤ V <sub>DD</sub> )	2.7	3.6	2.7	3.6	2.7	3.6	1.65	3.6	V
Ambient Operating Temperature	-40	85	-40	85	-40	85	- 40	85	°C
Load Capacitance (C <sub>L</sub> )	5	0	50		50		50		pF
Input Rise and Fall Times		5		5		5		5	ns
Input Pulse Voltages	0 to V <sub>DDQ</sub>		0 to V <sub>DDQ</sub>		0 to V <sub>DDQ</sub>		0 to V <sub>DDQ</sub>		V
Input and Output Timing Ref. Voltages	V <sub>DE</sub>	<sub>OQ</sub> /2	V <sub>DDQ</sub> /2		V <sub>DDQ</sub> /2		V <sub>DDQ</sub> /2		V

Figure 6. AC Measurement I/O Waveform


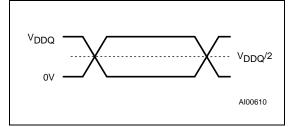


Figure 7. AC Measurement Load Circuit

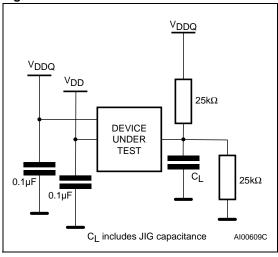

**Table 10. Device Capacitance** 

Symbol	Parameter	rameter Test Condition		Max	Unit
C <sub>IN</sub>	Input Capacitance	$V_{IN} = 0V$		6	pF
C <sub>OUT</sub>	Output Capacitance	V <sub>OUT</sub> = 0V		12	pF


Note: Sampled only, not 100% tested.

**Table 11. DC Characteristics** 

Symbol	Parameter	Test Condition	Min	Тур	Max	Unit
ILI	Input Leakage Current	$0V \le V_{IN} \le V_{DDQ}$			±1	μΑ
I <sub>LO</sub>	Output Leakage Current	0V≤ V <sub>OUT</sub> ≤V <sub>DDQ</sub>			±10	μΑ
I <sub>DD</sub>	Supply Current (Read)	$\overline{E} = V_{SS}, \overline{G} = V_{IH}, f = 5MHz$		10	20	mA
I <sub>DD1</sub>	Supply Current (Stand-by or Automatic Stand-by)	$\overline{E} = V_{DDQ} \pm 0.2V,$ $\overline{RP} = V_{DDQ} \pm 0.2V$		15	50	μΑ
I <sub>DD2</sub>	Supply Current (Reset)	$\overline{RP} = V_{SS} \pm 0.2V$		15	50	μΑ
	Supply Current (Brogram)	Program in progress V <sub>PP</sub> = 12V ± 5%		10	20	mA
I <sub>DD3</sub>	Supply Current (Program)	Program in progress V <sub>PP</sub> = V <sub>DD</sub>		10	20	mA
lan.	Supply Current (Frees)	Erase in progress V <sub>PP</sub> = 12V ± 5%		5	20	mA
I <sub>DD4</sub>	Supply Current (Erase)	Erase in progress V <sub>PP</sub> = V <sub>DD</sub>		5	20	mA
I <sub>DD5</sub>	Supply Current (Program/Erase Suspend)	E = V <sub>DDQ</sub> ± 0.2V, Erase suspended			50	μA
lpp	Program Current (Read or Stand-by)	V <sub>PP</sub> > V <sub>DD</sub>			400	μΑ
I <sub>PP1</sub>	Program Current (Read or Stand-by)	V <sub>PP</sub> ≤ V <sub>DD</sub>			5	μΑ
I <sub>PP2</sub>	Program Current (Reset)	$\overline{RP} = V_{SS} \pm 0.2V$			5	μΑ
I <sub>PP3</sub>	Duranta Carrent (Duranta)	Program in progress V <sub>PP</sub> = 12V ± 5%			10	mA
1993	Program Current (Program)	Program in progress $V_{PP} = V_{DD}$			5	μΑ
I <sub>PP4</sub>	Program Current (Erase)	Erase in progress V <sub>PP</sub> = 12V ± 5%			10	mA
1994	Program Current (Liase)	Erase in progress V <sub>PP</sub> = V <sub>DD</sub>			5	μΑ
$V_{IL}$	Input Low Voltage		-0.5		0.4	V
VIL	Input Low voltage	$V_{DDQ} \ge 2.7V$	-0.5		0.8	V
$V_{IH}$	Input High Voltage		V <sub>DDQ</sub> -0.4		V <sub>DDQ</sub> +0.4	V
VIΠ	Input riight voltage	$V_{DDQ} \ge 2.7V$	0.7 V <sub>DDQ</sub>		V <sub>DDQ</sub> +0.4	٧
$V_{OL}$	Output Low Voltage	$I_{OL} = 100\mu A$ , $V_{DD} = V_{DD} min$ , $V_{DDQ} = V_{DDQ} min$			0.1	>
V <sub>OH</sub>	Output High Voltage	$I_{OH} = -100\mu A$ , $V_{DD} = V_{DD}$ min, $V_{DDQ} = V_{DDQ}$ min	V <sub>DDQ</sub> -0.1			V
V <sub>PP1</sub>	Program Voltage (Program or Erase operations)		1.65		3.6	V
V <sub>PPH</sub>	Program Voltage (Program or Erase operations)		11.4		12.6	V
V <sub>PPLK</sub>	Program Voltage (Program and Erase lock-out)				1	V
$V_{LKO}$	V <sub>DD</sub> Supply Voltage (Program and Erase lock-out)				2	٧



Figure 8. Read AC Waveforms

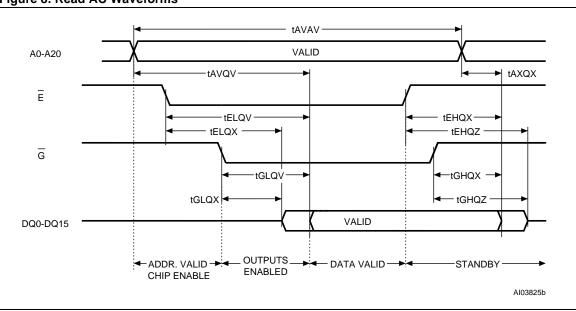

**Table 12. Read AC Characteristics** 

Symbol	Alt	Parameter			M28V	/320B		Unit
Symbol	Ait	Farameter	rameter		85	90	100	Offic
t <sub>AVAV</sub>	t <sub>RC</sub>	Address Valid to Next Address Valid	Min	70	85	90	100	ns
t <sub>AVQV</sub>	t <sub>ACC</sub>	Address Valid to Output Valid	Max	70	85	90	100	ns
t <sub>AXQX</sub> (1)	toH	Address Transition to Output Transition	Min	0	0	0	0	ns
t <sub>EHQX</sub> (1)	tон	Chip Enable High to Output Transition	Min	0	0	0	0	ns
t <sub>EHQZ</sub> (1)	t <sub>HZ</sub>	Chip Enable High to Output Hi-Z	Max	20	20	25	30	ns
t <sub>ELQV</sub> (2)	t <sub>CE</sub>	Chip Enable Low to Output Valid	Max	70	85	90	100	ns
t <sub>ELQX</sub> (1)	t <sub>LZ</sub>	Chip Enable Low to Output Transition	Min	0	0	0	0	ns
t <sub>GHQX</sub> (1)	tон	Output Enable High to Output Transition	Min	0	0	0	0	ns
t <sub>GHQZ</sub> (1)	t <sub>DF</sub>	Output Enable High to Output Hi-Z	Max	20	20	25	30	ns
t <sub>GLQV</sub> (2)	t <sub>OE</sub>	Output Enable Low to Output Valid	Max	20	20	30	35	ns
t <sub>GLQX</sub> (1)	t <sub>OLZ</sub>	Output Enable Low to Output Transition	Min	0	0	0	0	ns

Note: 1. Sampled only, not 100% tested.
2.  $\overline{G}$  may be delayed by up to  $t_{ELQV}$  -  $t_{GLQV}$  after the falling edge of  $\overline{E}$  without increasing  $t_{ELQV}$ .


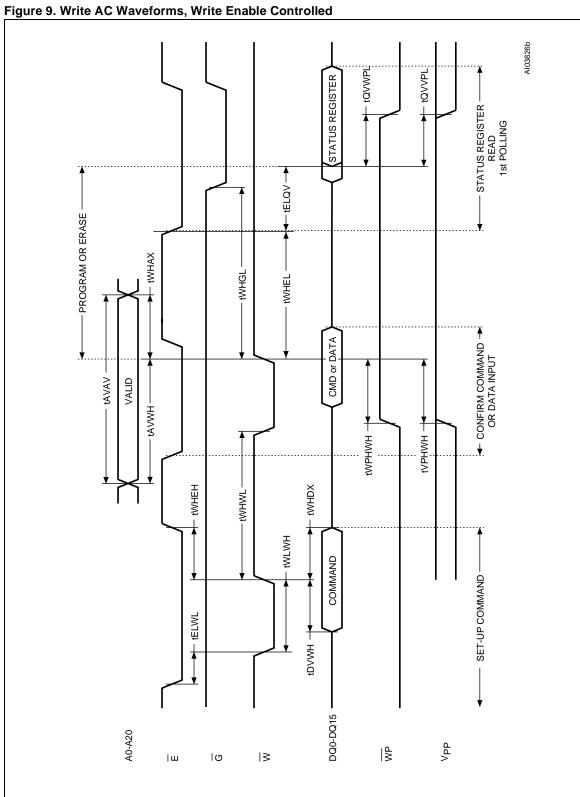


Table 13. Write AC Characteristics, Write Enable Controlled

0	A 14	Parameter			M28W320B			11::4
Symbol	Alt	Parameter		70	85	90	100	Unit
t <sub>AVAV</sub>	t <sub>WC</sub>	Write Cycle Time	Min	70	85	90	100	ns
t <sub>AVWH</sub>	t <sub>AS</sub>	Address Valid to Write Enable High	Min	45	45	50	50	ns
t <sub>DVWH</sub>	t <sub>DS</sub>	Data Valid to Write Enable High	Min	45	45	50	50	ns
t <sub>ELWL</sub>	t <sub>CS</sub>	Chip Enable Low to Write Enable Low	Min	0	0	0	0	ns
t <sub>ELQV</sub>		Chip Enable Low to Output Valid	Min	70	85	90	100	ns
t <sub>QVVPL</sub> (1,2)		Output Valid to V <sub>PP</sub> Low		0	0	0	0	ns
t <sub>QVWPL</sub>		Output Valid to Write Protect Low Min		0	0	0	0	ns
t <sub>VPHWH</sub> (1)	t <sub>VPS</sub>	V <sub>PP</sub> High to Write Enable High	Min	200	200	200	200	ns
t <sub>WHAX</sub>	t <sub>AH</sub>	Write Enable High to Address Transition	Min	0	0	0	0	ns
t <sub>WHDX</sub>	t <sub>DH</sub>	Write Enable High to Data Transition	Min	0	0	0	0	ns
t <sub>WHEH</sub>	t <sub>CH</sub>	Write Enable High to Chip Enable High	Min	0	0	0	0	ns
t <sub>WHEL</sub>		Write Enable High to Chip Enable Low	Min	25	25	30	30	ns
twHGL		Write Enable High to Output Enable Low Mir		20	20	30	30	ns
t <sub>WHWL</sub>	t <sub>WPH</sub>	Write Enable High to Write Enable Low M		25	25	30	30	ns
t <sub>WLWH</sub>	t <sub>WP</sub>	Write Enable Low to Write Enable High		45	45	50	50	ns
twphwh		Write Protect High to Write Enable High	Min	45	45	50	50	ns

Note: 1. Sampled only, not 100% tested.
2. Applicable if V<sub>PP</sub> is seen as a logic input (V<sub>PP</sub> < 3.6V).

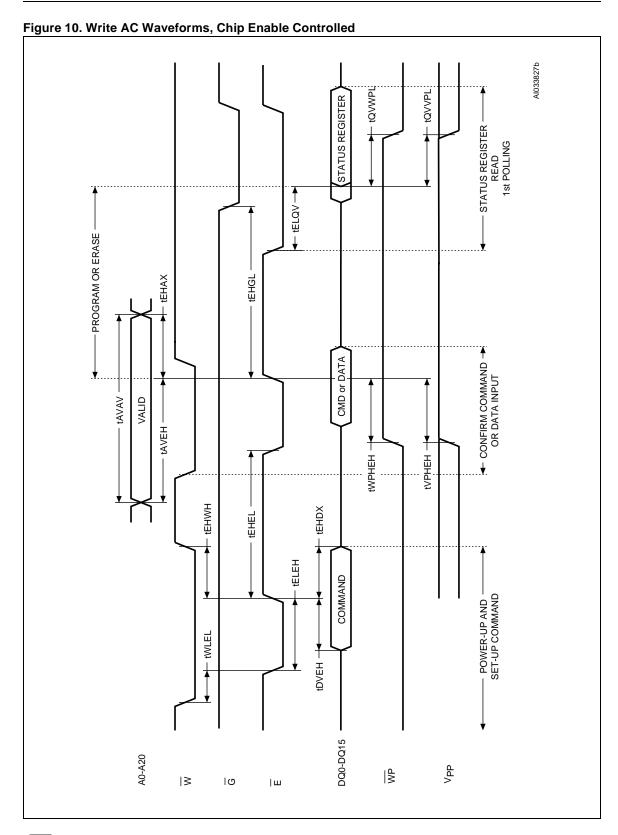

# M28W320BT, M28W320BB

Table 14. Write AC Characteristics, Chip Enable Controlled

Cumah al	A 14	Davas salar			M28V	V320B		Unit
Symbol	Alt	Parameter		70	85	90	100	Unit
t <sub>AVAV</sub>	t <sub>WC</sub>	Write Cycle Time	Min	70	85	90	100	ns
t <sub>AVEH</sub>	t <sub>AS</sub>	Address Valid to Chip Enable High	Min	45	45	50	50	ns
t <sub>DVEH</sub>	t <sub>DS</sub>	Data Valid to Chip Enable High	Min	45	45	50	50	ns
t <sub>EHAX</sub>	t <sub>AH</sub>	Chip Enable High to Address Transition	Min	0	0	0	0	ns
tehdx	t <sub>DH</sub>	Chip Enable High to Data Transition	Min	0	0	0	0	ns
tehel	tcph	Chip Enable High to Chip Enable Low Min		25	25	30	30	ns
tEHGL		Chip Enable High to Output Enable Low Min		25	25	30	30	ns
tehwh	t <sub>WH</sub>	Chip Enable High to Write Enable High	Min	0	0	0	0	ns
tELEH	t <sub>CP</sub>	Chip Enable Low to Chip Enable High	Min	45	45	50	50	ns
t <sub>ELQV</sub>		Chip Enable Low to Output Valid	Min	70	85	90	100	ns
t <sub>QVVPL</sub> (1,2)		Output Valid to V <sub>PP</sub> Low	Min	0	0	0	0	ns
t <sub>QVWPL</sub>		Data Valid to Write Protect Low	Min	0	0	0	0	ns
t <sub>VPHEH</sub> (1)	t <sub>VPS</sub>	V <sub>PP</sub> High to Chip Enable High Min		200	200	200	200	ns
tWLEL	t <sub>CS</sub>	Write Enable Low to Chip Enable Low Min		0	0	0	0	ns
twpheh		Write Protect High to Chip Enable High	Min	45	45	50	50	ns

477

Note: 1. Sampled only, not 100% tested. 2. Applicable if V<sub>PP</sub> is seen as a logic input (V<sub>PP</sub> < 3.6V).

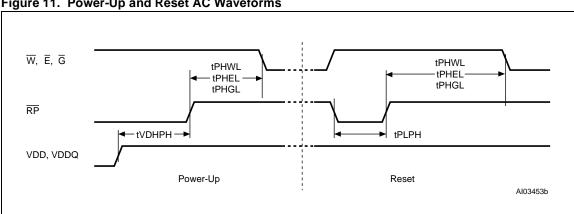


Figure 11. Power-Up and Reset AC Waveforms

Table 15. Power-Up and Reset AC Characteristics

Symbol	Parameter	Test Cond		Unit				
Symbol	Farameter	lest cond	iilion	70	85	90	100	Onit
t <sub>PHWL</sub>	Reset High to Write Enable Low, Chip Enable Low, Output Enable Low	During Program and Erase	Min	50	50	50	50	μs
t <sub>PHGL</sub>		others	Min	30	30	30	30	ns
t <sub>PLPH</sub> (1,2)	Reset Low to Reset High		Min	100	100	100	100	ns
t <sub>VDHPH</sub> (3)	Supply Voltages High to Reset High		Min	50	50	50	50	μs


Note: 1. The device Reset is possible but not guaranteed if t<sub>PLPH</sub> < 100ns.

2. Sampled only, not 100% tested.

3. It is important to assert RP in order to allow proper CPU initialization during power up or reset.

## PACKAGE MECHANICAL

Figure 12. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, Package Outline

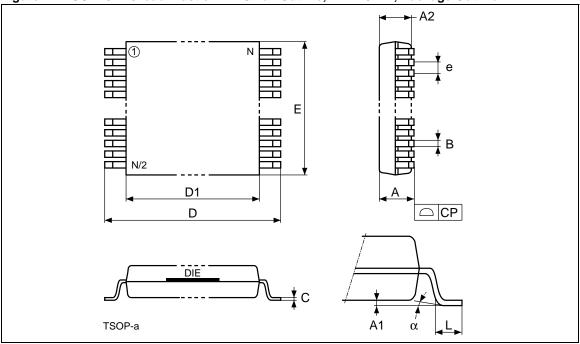

Note: Drawing is not to scale.

Table 16. TSOP48 - 48 lead Plastic Thin Small Outline, 12 x 20mm, Package Mechanical Data

Symbol		mm			inches	
Symbol	Тур	Min	Max	Тур	Min	Max
А			1.20			0.0472
A1		0.05	0.15		0.0020	0.0059
A2		0.95	1.05		0.0374	0.0413
В		0.17	0.27		0.0067	0.0106
С		0.10	0.21		0.0039	0.0083
D		19.80	20.20		0.7795	0.7953
D1		18.30	18.50		0.7205	0.7283
E		11.90	12.10		0.4685	0.4764
е	0.50	-	-	0.0197	_	_
L		0.50	0.70		0.0197	0.0279
α		0°	5°		0°	5°
N		48			48	
СР			0.10			0.0039

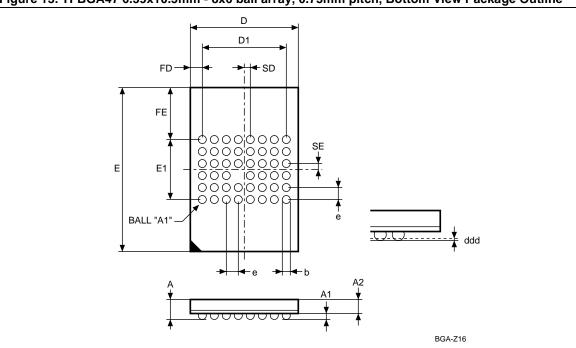


Figure 13. TFBGA47 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, Bottom View Package Outline

Drawing is not to scale.

Table 17. TFBGA47 6.39x10.5mm - 8x6 ball array, 0.75mm pitch, Package Mechanical Data

7			• • • • • • • • • • • • • • • • • • • •	, , , , , , , , , , , , , , , , , , , ,			
Symbol		mm		inch			
Symbol	Тур	Min	Max	Тур	Min	Max	
А			1.200			0.0472	
A1		0.200			0.0079		
A2			1.000			0.0394	
b	0.400	0.350	0.450	0.0157	0.0138	0.0177	
D	6.390	6.290	6.490	0.2516	0.2476	0.2555	
D1	5.250	-	-	0.2067	=	-	
ddd			0.100			0.0039	
е	0.750	-	-	0.0295	=	=	
E	10.500	10.400	10.600	0.4134	0.4094	0.4173	
E1	3.750	-	-	0.1476	=	=	
FD	0.570	-	-	0.0224	-	-	
FE	3.375	-	-	0.1329	-	-	
SD	0.375	_	-	0.0148	-	_	
SE	0.375	_	-	0.0148	_	_	



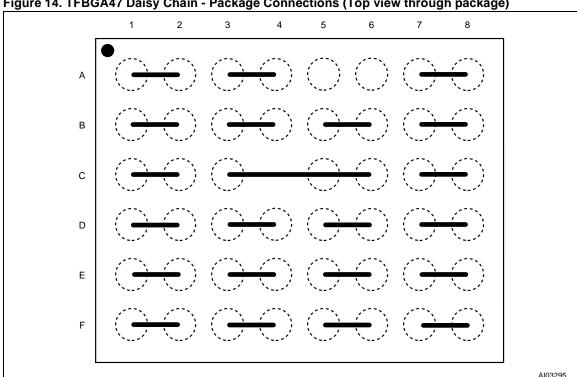



Figure 14. TFBGA47 Daisy Chain - Package Connections (Top view through package)

 

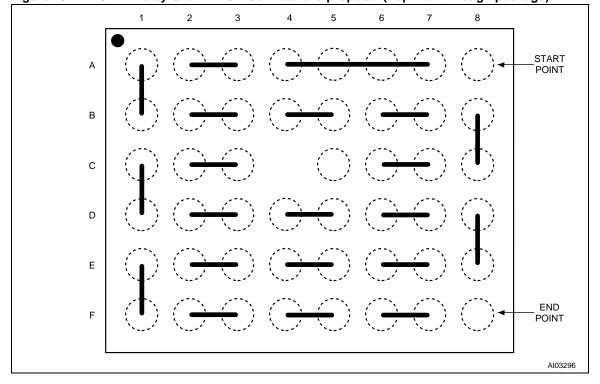


#### **PART NUMBERING**

### **Table 18. Ordering Information Scheme**

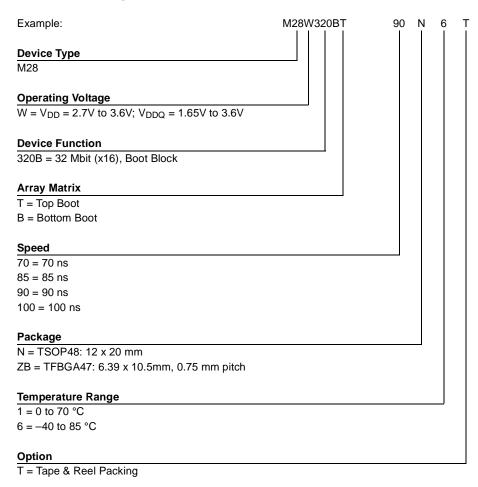

**Table 19. Daisy Chain Ordering Scheme** 

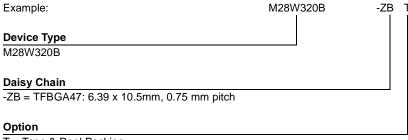

T = Tape & Reel Packing

Note:Devices are shipped from the factory with the memory content bits erased to '1'. For a list of available options (Speed, Package, etc...) or for further information on any aspect of this device, please contact the ST Sales Office nearest to you.

47/

# M28W320BT, M28W320BB

## **REVISION HISTORY**

**Table 20. Document Revision History** 

Date	Version	Revision Details
January 2001	-01	First Issue
06-Mar-2001	-02	Document type : from Preliminary Data to Data Sheet 70ns Speed Class added
10-May-2001	-03	Completely rewritten and restructured, 85ns speed class added.
29-May-2001	-04	Corrections to CFI data and Block Address Table.
31-Oct-2001	-05	V <sub>DDQ</sub> Maximum changed to 3.3V Commands Table, Read CFI Query Address on 1st cycle changed to 'X' (Table 3) t <sub>WHEL</sub> description clarified (Table 13)
16-May-2002	-06	V <sub>DDQ</sub> Maximum changed to 3.6V, TFBGA package dimensions added to description.

# APPENDIX A. BLOCK ADDRESS TABLES

Table 21. Top Boot Block Addresses, M28W320BT

#	Size (KWord)	Address Range
0	4	1FF000-1FFFFF
1	4	1FE000-1FEFFF
2	4	1FD000-1FDFFF
3	4	1FC000-1FCFFF
4	4	1FB000-1FBFFF
5	4	1FA000-1FAFFF
6	4	1F9000-1F9FFF
7	4	1F8000-1F8FFF
8	32	1F0000-1F7FFF
9	32	1E8000-1EFFFF
10	32	1E0000-1E7FFF
11	32	1D8000-1DFFFF
12	32	1D0000-1D7FFF
13	32	1C8000-1CFFFF
14	32	1C0000-1C7FFF
15	32	1B8000-1BFFFF
16	32	1B0000-1B7FFF
17	32	1A8000-1AFFFF
18	32	1A0000-1A7FFF
19	32	198000-19FFFF
20	32	190000-197FFF
21	32	188000-18FFFF
22	32	180000-187FFF
23	32	178000-17FFFF
24	32	170000-177FFF
25	32	168000-16FFFF
26	32	160000-167FFF
27	32	158000-15FFFF
28	32	150000-157FFF
29	32	148000-14FFFF
30	32	140000-147FFF
31	32	138000-13FFFF
32	32	130000-137FFF
33	32	128000-12FFFF

34	32	120000-127FFF
35	32	118000-11FFFF
36	32	110000-117FFF
37	32	108000-10FFFF
38	32	100000-107FFF
39	32	0F8000-0FFFF
40	32	0F00000-F7FFF
41	32	0E8000-0EFFFF
42	32	0E0000-0E7FFF
43	32	0D8000-0DFFFF
44	32	0D0000-0D7FFF
45	32	0C8000-0CFFFF
46	32	0C0000-0C7FFF
47	32	0B8000-0BFFFF
48	32	0B0000-0B7FFF
49	32	0A8000-0AFFFF
50	32	0A0000-0A7FFF
51	32	098000-09FFFF
52	32	090000-097FFF
53	32	088000-08FFFF
54	32	080000-087FFF
55	32	078000-07FFFF
56	32	070000-077FFF
57	32	068000-06FFFF
58	32	060000-067FFF
59	32	058000-05FFFF
60	32	050000-057FFF
61	32	048000-04FFFF
62	32	040000-047FFF
63	32	038000-03FFFF
64	32	030000-037FFF
65	32	028000-02FFFF
66	32	020000-027FFF
67	32	018000-01FFFF
68	32	010000-017FFF
69	32	008000-00FFFF
70	32	000000-007FFF

Table 22. Bottom Boot Block Addresses, M28W320BB

#	Size (KWord)	Address Range
70	32	1F8000-1FFFFF
69	32	1F0000-1F7FFF
68	32	1E8000-1EFFFF
67	32	1E0000-1E7FFF
66	32	1D8000-1DFFFF
65	32	1D0000-1D7FFF
64	32	1C8000-1CFFFF
63	32	1C0000-1C7FFF
62	32	1B8000-1BFFFF
61	32	1B0000-1B7FFF
60	32	1A8000-1AFFFF
59	32	1A0000-1A7FFF
58	32	198000-19FFFF
57	32	190000-197FFF
56	32	188000-18FFFF
55	32	180000-187FFF
54	32	178000-17FFFF
53	32	170000-177FFF
52	32	168000-16FFFF
51	32	160000-167FFF
50	32	158000-15FFFF
49	32	150000-157FFF
48	32	148000-14FFFF
47	32	140000-147FFF
46	32	138000-13FFFF
45	32	130000-137FFF
44	32	128000-12FFFF
43	32	120000-127FFF
42	32	118000-11FFFF
41	32	110000-117FFF
40	32	108000-10FFFF
39	32	100000-107FFF
38	32	0F8000-0FFFF
37	32	0F0000-0F7FFF

36         32         0E8000-0EFFFF           35         32         0E0000-0E7FFF           34         32         0D8000-0DFFFF           33         32         0D0000-0TFFF           31         32         0C8000-0CFFFF           30         32         0B8000-0BFFFF           29         32         0B0000-0AFFFF           28         32         0A8000-0AFFFF           26         32         098000-09FFF           25         32         098000-09FFF           24         32         088000-08FFF           23         32         088000-08FFF           24         32         088000-08FFF           23         32         078000-07FFF           24         32         078000-07FFF           22         32         078000-07FFF           20         32         068000-06FFF           19         32         060000-057FFF           10         32         048000-04FFF           15         32         040000-04FFF           16         32         048000-04FFF           13         32         038000-03FFF           14         32         038000-03FFF							
34         32         OD8000-0DFFFF           33         32         OD0000-0D7FFF           32         32         OC8000-0CFFFF           31         32         OC8000-0BFFFF           30         32         OB8000-0BFFFF           29         32         OB0000-0AFFFF           28         32         OA0000-0AFFF           26         32         O98000-09FFFF           26         32         O98000-09FFFF           25         32         O90000-09FFFF           24         32         O88000-08FFFF           23         32         O80000-08FFFF           24         32         O88000-08FFFF           23         32         O68000-07FFFF           21         32         O78000-07FFFF           20         32         O68000-06FFFF           19         32         O68000-05FFFF           17         32         O50000-05FFFF           18         32         O48000-04FFFF           15         32         O40000-03FFFF           14         32         O38000-03FFFF           13         32         O18000-01FFFF           10         32         O180	36	32	0E8000-0EFFFF				
33         32         0D0000-0D7FFF           32         32         0C8000-0CFFFF           31         32         0C0000-0C7FFF           30         32         0B8000-0BFFFF           29         32         0B0000-0AFFFF           28         32         0A0000-0AFFF           26         32         098000-09FFF           26         32         098000-09FFF           25         32         090000-09FFF           24         32         088000-08FFF           23         32         080000-08FFF           24         32         080000-07FFF           22         32         078000-07FFF           21         32         068000-06FFFF           20         32         068000-06FFFF           19         32         060000-057FFF           16         32         048000-04FFFF           15         32         040000-04FFF           14         32         038000-03FFFF           13         32         030000-03FFF           14         32         028000-02FFFF           10         32         018000-01FFF           1         4         007000-007FFF <td>35</td> <td>32</td> <td>0E0000-0E7FFF</td>	35	32	0E0000-0E7FFF				
32         32         0C8000-0CFFFF           31         32         0C0000-0C7FFF           30         32         0B8000-0BFFFF           29         32         0B0000-0BFFFF           28         32         0A8000-0AFFFF           27         32         0A0000-0AFFFF           26         32         098000-09FFF           25         32         090000-09FFF           24         32         088000-08FFF           23         32         080000-08FFF           23         32         078000-07FFF           22         32         078000-07FFF           20         32         068000-06FFF           19         32         068000-06FFF           19         32         058000-05FFF           16         32         048000-04FFF           15         32         048000-04FFF           14         32         038000-03FFF           13         32         028000-02FFF           11         32         028000-02FFF           11         32         018000-01FFF           10         32         018000-01FFF           1         4         006000-006FFF	34	32	0D8000-0DFFFF				
31         32         0C0000-0C7FFF           30         32         0B8000-0BFFFF           29         32         0B0000-0B7FFF           28         32         0A8000-0AFFFF           27         32         0A0000-0A7FFF           26         32         098000-09FFFF           25         32         090000-09FFF           24         32         088000-08FFF           23         32         080000-07FFF           21         32         078000-07FFF           20         32         068000-06FFF           19         32         060000-06FFF           19         32         058000-05FFF           17         32         058000-05FFF           16         32         048000-04FFF           15         32         048000-04FFF           14         32         038000-03FFF           13         32         038000-03FFF           11         32         028000-02FFF           10         32         018000-01FFF           10         32         018000-01FFF           9         32         010000-007FFF           6         4         006000-006FFF	33	32	0D0000-0D7FFF				
30         32         0B8000-0BFFFF           29         32         0B0000-0B7FFF           28         32         0A8000-0AFFFF           27         32         0A0000-0A7FFF           26         32         098000-09FFF           25         32         090000-09FFF           24         32         088000-08FFF           23         32         080000-08FFF           21         32         078000-07FFF           21         32         078000-07FFF           20         32         068000-06FFF           19         32         060000-06FFF           18         32         058000-05FFF           17         32         050000-05FFF           16         32         048000-04FFF           15         32         040000-04FFF           14         32         038000-03FFF           12         32         028000-02FFF           11         32         018000-01FFF           10         32         018000-01FFF           10         32         018000-00FFF           8         32         008000-00FFF           7         4         006000-00FFF </td <td>32</td> <td>32</td> <td>0C8000-0CFFFF</td>	32	32	0C8000-0CFFFF				
29         32         0B0000-0B7FFF           28         32         0A8000-0AFFFF           27         32         0A0000-0A7FFF           26         32         098000-09FFF           25         32         090000-097FFF           24         32         088000-08FFFF           23         32         080000-087FFF           22         32         078000-07FFF           21         32         070000-07FFF           20         32         068000-06FFF           19         32         060000-067FFF           18         32         058000-05FFF           17         32         050000-057FFF           16         32         048000-04FFF           15         32         040000-047FFF           14         32         038000-03FFF           13         32         038000-02FFF           10         32         018000-01FFF           10         32         018000-01FFF           8         32         008000-00FFF           9         32         010000-01FFF           6         4         006000-005FFF           5         4         005000-005FFF	31	32	0C0000-0C7FFF				
28         32         0A8000-0AFFFF           27         32         0A0000-0A7FFF           26         32         098000-09FFF           25         32         090000-097FFF           24         32         088000-08FFF           23         32         080000-07FFF           22         32         078000-07FFF           21         32         068000-06FFF           20         32         068000-06FFF           19         32         050000-05FFF           17         32         050000-05FFF           16         32         048000-04FFF           15         32         040000-047FF           14         32         038000-03FFF           13         32         030000-037FF           12         32         028000-02FFF           11         32         018000-01FFF           9         32         010000-01FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-00FFF           5         4         005000-00FFF           4         4         004000-00FFF	30	32	0B8000-0BFFFF				
27         32         0A0000-0A7FFF           26         32         098000-09FFF           25         32         090000-097FFF           24         32         088000-08FFF           23         32         080000-087FFF           22         32         078000-07FFF           21         32         070000-07FFF           20         32         068000-06FFF           19         32         060000-05FFF           18         32         058000-05FFF           17         32         050000-05FFF           16         32         048000-04FFF           15         32         040000-04FFF           14         32         038000-03FFF           12         32         028000-02FFF           11         32         018000-01FFF           10         32         018000-01FFF           10         32         018000-01FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-00FFF           5         4         005000-00FFF           4         4         004000-00FFF	29	32	0B0000-0B7FFF				
26         32         098000-09FFF           25         32         090000-097FFF           24         32         088000-08FFF           23         32         080000-087FFF           22         32         078000-07FFF           21         32         070000-07FFF           20         32         068000-06FFF           19         32         060000-05FFF           18         32         058000-05FFF           17         32         050000-05FFF           16         32         048000-04FFF           15         32         040000-04FFF           14         32         038000-03FFF           13         32         038000-03FFF           11         32         028000-02FFF           11         32         018000-01FFF           10         32         018000-01FFF           1         4         007000-007FFF           6         4         006000-006FFF           7         4         007000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           4         4         004000-004FFF	28	32	0A8000-0AFFFF				
25         32         090000-097FFF           24         32         088000-08FFFF           23         32         080000-087FFF           22         32         078000-07FFF           21         32         070000-07FFF           20         32         068000-06FFF           19         32         060000-067FF           18         32         058000-05FFF           17         32         050000-05FFF           16         32         048000-04FFF           15         32         040000-04FFF           14         32         038000-03FFF           12         32         028000-02FFF           11         32         018000-01FFF           10         32         018000-01FFF           10         32         018000-01FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           4         4         004000-004FFF	27	32	0A0000-0A7FFF				
24         32         088000-08FFF           23         32         080000-087FFF           22         32         078000-07FFF           21         32         070000-077FFF           20         32         068000-06FFF           19         32         060000-057FFF           18         32         058000-05FFF           17         32         050000-057FF           16         32         048000-04FFF           15         32         040000-047FF           14         32         038000-03FFF           13         32         030000-037FF           11         32         028000-02FFF           11         32         018000-01FFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           4         4         004000-004FFF           3         4         002000-002FFF	26	32	098000-09FFFF				
23         32         080000-087FFF           22         32         078000-07FFFF           21         32         070000-077FFF           20         32         068000-06FFFF           19         32         060000-057FFF           18         32         058000-05FFFF           17         32         050000-057FFF           16         32         048000-04FFFF           15         32         040000-047FFF           14         32         038000-03FFFF           13         32         030000-037FFF           11         32         028000-02FFFF           11         32         018000-01FFFF           9         32         010000-01FFFF           8         32         008000-00FFFF           7         4         007000-00FFF           6         4         006000-005FFF           5         4         004000-004FFF           3         4         003000-003FFF           4         4         004000-004FFF           3         4         002000-002FFF           1         4         001000-001FFF	25	32	090000-097FFF				
22         32         078000-07FFF           21         32         070000-07FFF           20         32         068000-06FFF           19         32         060000-05FFF           18         32         058000-05FFF           17         32         050000-05FFF           16         32         048000-04FFF           15         32         040000-04FFF           14         32         038000-03FFF           13         32         030000-03FFF           12         32         028000-02FFF           11         32         018000-01FFF           9         32         010000-01FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	24	32	088000-08FFFF				
21         32         070000-077FFF           20         32         068000-06FFFF           19         32         060000-067FFF           18         32         058000-05FFFF           17         32         050000-057FFF           16         32         048000-04FFFF           15         32         040000-047FFF           14         32         038000-03FFF           13         32         030000-037FFF           12         32         028000-02FFFF           11         32         018000-01FFFF           10         32         018000-01FFF           8         32         008000-00FFFF           7         4         007000-00FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	23	32	080000-087FFF				
20         32         068000-06FFF           19         32         060000-067FF           18         32         058000-05FFF           17         32         050000-057FF           16         32         048000-04FFF           15         32         040000-047FF           14         32         038000-03FFF           13         32         030000-037FF           12         32         028000-02FFF           11         32         018000-01FFF           9         32         010000-01FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-00FFF           5         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	22	32	078000-07FFFF				
19         32         060000-067FF           18         32         058000-05FFF           17         32         050000-057FF           16         32         048000-04FFF           15         32         040000-047FFF           14         32         038000-03FFF           13         32         030000-037FF           12         32         028000-02FFF           11         32         018000-01FFF           9         32         010000-01FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-006FFF           5         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	21	32	070000-077FFF				
18         32         058000-05FFF           17         32         050000-057FFF           16         32         048000-04FFF           15         32         040000-047FFF           14         32         038000-03FFF           13         32         030000-037FFF           12         32         028000-02FFF           11         32         018000-01FFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-00FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	20	32	068000-06FFFF				
17         32         050000-057FFF           16         32         048000-04FFFF           15         32         040000-047FFF           14         32         038000-03FFF           13         32         030000-037FFF           12         32         028000-02FFF           11         32         020000-027FFF           10         32         018000-01FFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	19	32	060000-067FFF				
16         32         048000-04FFF           15         32         040000-047FFF           14         32         038000-03FFF           13         32         030000-037FFF           12         32         028000-02FFFF           11         32         020000-027FFF           10         32         018000-01FFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	18	32	058000-05FFFF				
15         32         040000-047FFF           14         32         038000-03FFFF           13         32         030000-027FFF           12         32         028000-02FFFF           11         32         020000-027FFF           10         32         018000-01FFFF           9         32         010000-017FFF           8         32         008000-00FFFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	17	32	050000-057FFF				
14         32         038000-03FFF           13         32         030000-037FFF           12         32         028000-02FFF           11         32         020000-027FFF           10         32         018000-01FFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-007FF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	16	32	048000-04FFF				
13         32         030000-037FFF           12         32         028000-02FFFF           11         32         020000-027FFF           10         32         018000-01FFFF           9         32         010000-017FFF           8         32         008000-00FFFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	15	32	040000-047FFF				
12     32     028000-02FFFF       11     32     020000-027FFF       10     32     018000-01FFFF       9     32     010000-017FFF       8     32     008000-00FFF       7     4     007000-007FFF       6     4     006000-006FFF       5     4     005000-005FFF       4     4     004000-004FFF       3     4     003000-003FFF       2     4     002000-002FFF       1     4     001000-001FFF	14	32	038000-03FFFF				
11         32         020000-027FFF           10         32         018000-01FFFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	13	32	030000-037FFF				
10         32         018000-01FFF           9         32         010000-017FFF           8         32         008000-00FFF           7         4         007000-007FFF           6         4         006000-006FFF           5         4         005000-005FFF           4         4         004000-004FFF           3         4         003000-003FFF           2         4         002000-002FFF           1         4         001000-001FFF	12	32	028000-02FFFF				
9 32 010000-017FF  8 32 008000-00FFF  7 4 007000-007FF  6 4 006000-006FF  5 4 005000-005FF  4 4 004000-004FF  3 4 003000-003FFF  2 4 002000-002FF  1 4 001000-001FF	11	32	020000-027FFF				
8     32     008000-00FFFF       7     4     007000-007FFF       6     4     006000-006FFF       5     4     005000-005FFF       4     4     004000-004FFF       3     4     003000-003FFF       2     4     002000-002FFF       1     4     001000-001FFF	10	32	018000-01FFFF				
7 4 007000-007FFF 6 4 006000-006FFF 5 4 005000-005FFF 4 4 004000-004FFF 3 4 003000-003FFF 2 4 002000-002FFF 1 4 001000-001FFF	9	32	010000-017FFF				
6 4 006000-006FFF 5 4 005000-005FFF 4 4 004000-004FFF 3 4 003000-003FFF 2 4 002000-002FFF 1 4 001000-001FFF	8	32	008000-00FFF				
5 4 005000-005FFF 4 4 004000-004FFF 3 4 003000-003FFF 2 4 002000-002FFF 1 4 001000-001FFF	7	4	007000-007FFF				
4     4     004000-004FFF       3     4     003000-003FFF       2     4     002000-002FFF       1     4     001000-001FFF	6	4	006000-006FFF				
3 4 003000-003FFF 2 4 002000-002FFF 1 4 001000-001FFF	5	4	005000-005FFF				
2 4 002000-002FFF 1 4 001000-001FFF	4	4	004000-004FFF				
1 4 001000-001FFF	3	4	003000-003FFF				
	2	4	002000-002FFF				
0 4 000000-000FFF	1	4	001000-001FFF				
	0	4	000000-000FFF				

### **APPENDIX B. COMMON FLASH INTERFACE (CFI)**

The Common Flash Interface is a JEDEC approved, standardized data structure that can be read from the Flash memory device. It allows a system software to query the device to determine various electrical and timing parameters, density information and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the CFI Query Command (RCFI) is issued the device enters CFI Query mode and the data

structure is read from the memory. Tables 23, 24, 25, 26, 27 and 28 show the addresses used to retrieve the data.

The CFI data structure also contains a security area where a 64 bit unique security number is written (see Table 28, Security Code area). This area can be accessed only in Read mode by the final user. It is impossible to change the security number after it has been written by ST. Issue a Read command to return to Read mode.

**Table 23. Query Structure Overview** 

Offset	Sub-section Name	Description			
00h	Reserved	Reserved for algorithm-specific information			
10h	CFI Query Identification String	Command set ID and algorithm data offset			
1Bh	System Interface Information	Device timing & voltage information			
27h	Device Geometry Definition	Flash device layout			
Р	Primary Algorithm-specific Extended Query table	Additional information specific to the Primary Algorithm (optional)			
А	Alternate Algorithm-specific Extended Query table	Additional information specific to the Alternate Algorithm (optional)			

Note: Query data are always presented on the lowest order data outputs.

**Table 24. CFI Query Identification String** 

Offset	Data	Description	Value
00h	0020h	Manufacturer Code	ST
01h	88BCh 88BDh	Device Code	Top Bottom
02h-0Fh	reserved	Reserved	
10h	0051h	Query Unique ASCII String "QRY"	"Q"
11h	0052h	Query Unique ASCII String "QRY"	"R"
12h	0059h	Query Unique ASCII String "QRY"	"Y"
13h	0003h	Primary Algorithm Command Set and Control Interface ID code 16 bit ID	Intel
14h	0000h	code defining a specific algorithm	Compatible
15h	offset = P = 0035h	Address for Primary Algorithm extended Query table	P=35h
16h	0000h		P=3311
17h	0000h	Alternate Vendor Command Set and Control Interface ID Code second	NA
18h	0000h	vendor - specified algorithm supported (note: 0000h means none exists)	INA
19h	value = A = 0000h	Address for Alternate Algorithm extended Query table	NA
1Ah 0000h		note: 0000h means none exists	

Note: Query data are always presented on the lowest order data outputs (DQ7-DQ0) only. DQ8-DQ15 are '0'.

47/

# M28W320BT, M28W320BB

Table 25. CFI Query System Interface Information

Offset	Data	Description	Value
1Bh	0027h	V <sub>DD</sub> Logic Supply Minimum Program/Erase or Write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 mV	2.7V
1Ch	0036h	V <sub>DD</sub> Logic Supply Maximum Program/Erase or Write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 mV	3.6V
1Dh	00B4h	V <sub>PP</sub> [Programming] Supply Minimum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	11.4V
1Eh	00C6h	V <sub>PP</sub> [Programming] Supply Maximum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	12.6V
1Fh	0004h	Typical timeout per single word program = 2 <sup>n</sup> μs	16µs
20h	0004h	Typical timeout for Double Word Program = 2 <sup>n</sup> µs	16µs
21h	000Ah	Typical timeout per individual block erase = 2 <sup>n</sup> ms	1 s
22h	0000h	Typical timeout for full chip erase = 2 <sup>n</sup> ms	NA
23h	0005h	Maximum timeout for word program = 2 <sup>n</sup> times typical	512µs
24h	0005h	Maximum timeout for Double Word Program = 2 <sup>n</sup> times typical	512µs
25h	0003h	Maximum timeout per individual block erase = 2 <sup>n</sup> times typical	8 s
26h	0000h	Maximum timeout for chip erase = 2 <sup>n</sup> times typical	NA

**Table 26. Device Geometry Definition** 

Offset Word Mode Data		Data	Description				
	27h 0016h		Device Size = 2 <sup>n</sup> in number of bytes	4MByte			
	28h 0001h 29h 0000h		Flash Device Interface Code description				
	2Ah 2Bh	0002h 0000h	Maximum number of bytes in multi-byte program or page = 2 <sup>n</sup>	4			
	2Ch	0002h	Number of Erase Block Regions within the device. It specifies the number of regions within the device containing contiguous Erase Blocks of the same size.	2			
	2Dh 2Eh	003Eh 0000h	Region 1 Information Number of identical-size erase block = 003Eh+1	63			
M28W320BT	2Fh 30h	0000h 0001h	Region 1 Information Block size in Region 1 = 0100h * 256 byte	64KByte			
M28W	31h 32h	0007h 0000h	Region 2 Information Number of identical-size erase block = 0007h+1				
	33h 34h	0020h 0000h	Region 2 Information Block size in Region 2 = 0020h * 256 byte	8KByte			
	2Dh 2Eh	0007h 0000h	Region 1 Information Number of identical-size erase block = 0007h+1	8			
M28W320BB	2Fh 30h	0020h 0000h	Region 1 Information Block size in Region 1 = 0020h * 256 byte	8KByte			
M28W:	31h 32h	003Eh 0000h	Region 2 Information Number of identical-size erase block = 003Eh+1	63			
	33h 34h	0000h 0001h	Region 2 Information Block size in Region 2 = 0100h * 256 byte	64KByte			

Table 27. Primary Algorithm-Specific Extended Query Table

Offset P = 35h <sup>(1)</sup>	Data	Description					
(P+0)h = 35h	0050h		"P"				
(P+1)h = 36h	0052h	Primary Algorithm extended Query table unique ASCII string "PRI"	"R"				
(P+2)h = 37h	0049h		"I"				
(P+3)h = 38h	0031h	Major version number, ASCII	"1"				
(P+4)h = 39h	0030h	Minor version number, ASCII	"0"				
(P+5)h = 3Ah	0006h	Extended Query table contents for Primary Algorithm. Address (P+5)h					
(P+6)h = 3Bh	0000h	contains less significant byte.					
(P+7)h = 3Ch	0000h	bit 0 Chip Erase supported (1 = Yes, 0 = No) bit 1 Erase Suspend supported (1 = Yes, 0 = No)	No Yes				
(P+8)h = 3Dh	0000h	bit 2 Program Suspend (1 = Yes, 0 = No) bit 3 Lock/Unlock supported (1 = Yes, 0 = No) bit 4 Queued Erase supported (1 = Yes, 0 = No) bit 31 to 5 Reserved; undefined bits are '0'	Yes No No				
(P+9)h = 3Eh	0001h	Supported Functions after Suspend Read Array, Read Status Register and CFI Query are always supported during Erase or Program operation  bit 0 Program supported after Erase Suspend (1 = Yes, 0 = No) bit 7 to 1 Reserved: undefined bits are '0'					
(P+A)h = 3Fh $(P+B)h = 40h$	0000h 0000h	Block Lock Status  Defines which bits in the Block Status Register section of the Query are implemented.  bit 0 Block Lock Status Register Lock/Unlock bit active (1 = Yes, 0 = No) bit 1 Block Lock Status Register Lock-Down bit active (1 = Yes, 0 = No) bit 15 to 2 Reserved for future use: undefined bits are '0'					
(P+C)h = 41h	0030h	V <sub>DD</sub> Logic Supply Optimum Program/Erase voltage (highest performance)  bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV					
(P+D)h = 42h	00C0h	V <sub>PP</sub> Supply Optimum Program/Erase voltage  bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV					
(P+E)h	0000h	Reserved					


Note: 1. See Table 24, offset 15h for P pointer definition.

**Table 28. Security Code Area** 

Offset	Data	Description
81h	XXXX	
82h	XXXX	64 hita unique device number
83h	XXXX	64 bits unique device number.
84h	XXXX	

#### APPENDIX C. FLOWCHARTS AND PSEUDO CODES

Figure 16. Program Flowchart and Pseudo Code

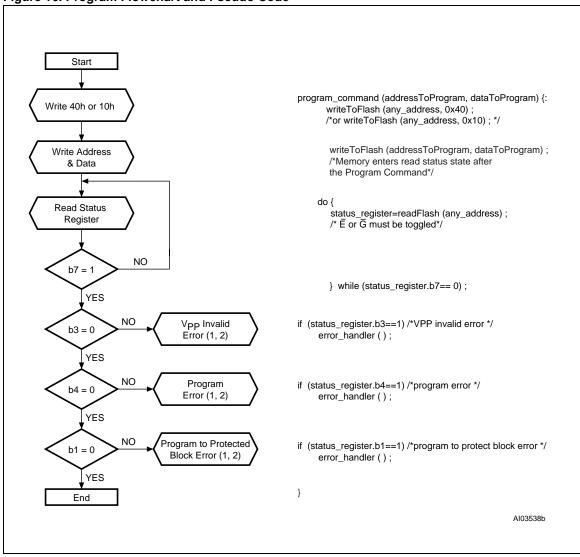


Note: 1. Status check of b1 (Protected Block), b3 (V<sub>PP</sub> Invalid) and b4 (Program Error) can be made after each program operation or after a sequence.

If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

**477** 

Figure 17. Double Word Program Flowchart and Pseudo Code

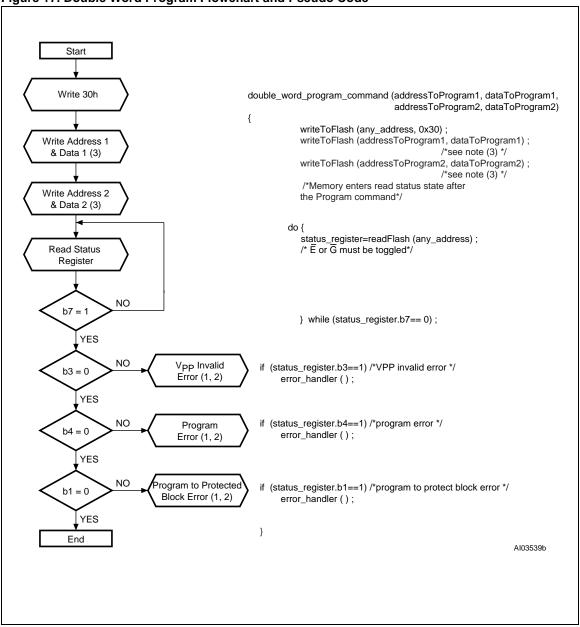

Note: 1. Status check of b1 (Protected Block), b3 (V<sub>PP</sub> Invalid) and b4 (Program Error) can be made after each program operation or after a sequence.

3. Address 1 and Address 2 must be consecutive addresses differing only for bit A0.

<sup>2.</sup> If an error is found, the Status Register must be cleared before further Program/Erase operations.


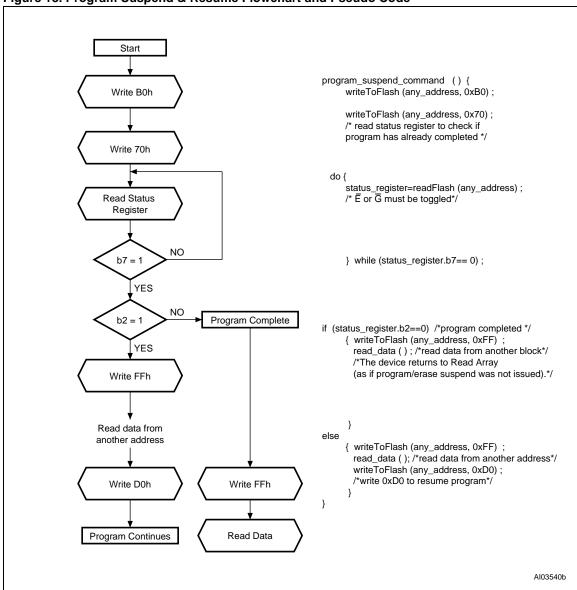


Figure 18. Program Suspend & Resume Flowchart and Pseudo Code

Figure 19. Erase Flowchart and Pseudo Code

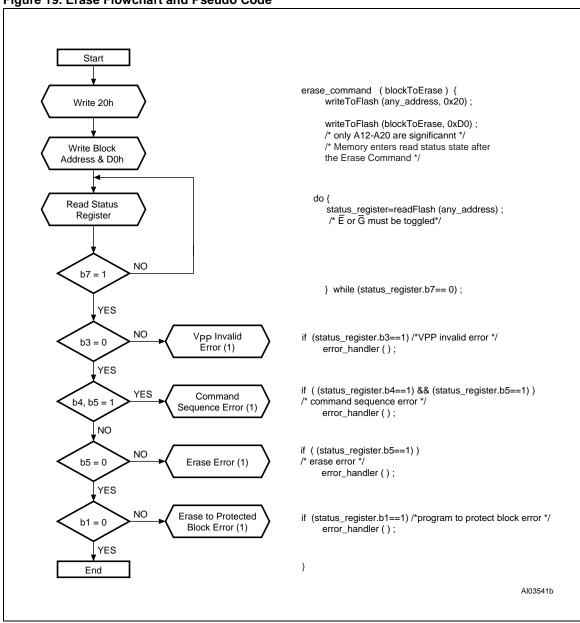

Note: If an error is found, the Status Register must be cleared before further Program/Erase operations.

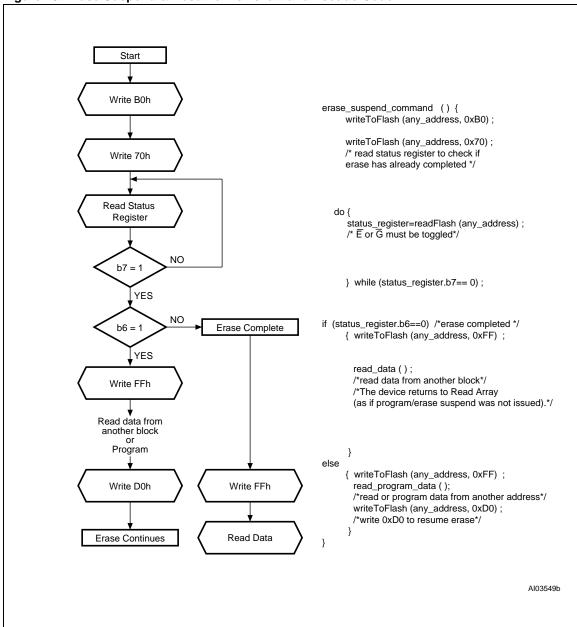


Figure 20. Erase Suspend & Resume Flowchart and Pseudo Code

## APPENDIX D. COMMAND INTERFACE AND PROGRAM/ERASE CONTROLLER STATE

**Table 29. Write State Machine Current/Next** 

			Command Input (and Next State)								
Current State	SR bit 7	Data When Read	Read Array (FFh)	Program Setup (10/40h)	Erase Setup (20h)	Erase Confirm (D0h)	Program/ Erase Suspend (B0h)	Program/ Erase Resume (D0h)	Read Status (70h)	Clear Status (50h)	Read Elect.Sg. (90h)
Read Array	"1"	Array	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	Read Elect.Sg.
Read Status	"1"	Status	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	Read Elect.Sg.
Read Elect.Sg.	"1"	Electronic Signature	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	Read Elect.Sg.
Program Setup	"1"	Status			Program	(Command	input = Data	to be Progr	ammed)		
Program (continue)	"0"	Status		Program	(continue)		Program Suspend to Read Status			(continue)	
Program Suspend to Read Status	"1"	Status	Program Suspend to Read Array		Suspend to Array	Program (continue)	Program Suspend to Read Array	Program (continue)	Program Suspend to Read Status	Program Suspend to Read Array	Program Suspend to Read Elect.Sg.
Program Suspend to Read Array	"1"	Array	Program Suspend to Read Array		Suspend to Array	Program Suspend Program (continue) to Read Array		Program Suspend to Read Status	Program Suspend to Read Array	Program Suspend to Read Elect.Sg	
Program Suspend to Read Elect.Sg.	"1"	Electronic Signature	Program Suspend to Read Array		Suspend to Array	Program Suspend Program (continue) to Read Array		Program Suspend to Read Status	Program Suspend to Read Array	Program Suspend to Read Elect.Sg.	
Program (complete)	"1"	Status	Read Array	Program Setup	Erase Setup	Read Array		Read Status	Read Array	Read Elect.Sg.	
Erase Setup	"1"	Status	Eras	e Command	Error	Erase (continue)	Erase Command Error	Erase (continue)	Frase Command Error		Error
Erase Cmd. Error	"0"	Status	Read Array	Program Setup	Erase Setup		Read Array		Read Status	Read Array	Read Elect.Sg.
Erase (continue)	"1"	Status		Erase (c	continue)	Erase Suspend to Read Status  Erase (continue)					
Erase Suspend to Read Status	"1"	Status	Erase Suspend to Read Array	Program Setup	Erase Suspend to Read Array	Erase (continue)	Erase Suspend to Read Array	Erase (continue)	Erase Suspend to Read Status	Erase Suspend to Read Array	Erase Suspend to Read Elect.Sg.
Erase Suspend to Read Array	"1"	Array	Erase Suspend to Read Array	Program Setup	Erase Suspend to Read Array	Erase (continue)	Array	Erase (continue)	Erase Suspend to Read Status	Erase Suspend to Read Array	Erase Suspend to Read Elect.Sg.
Erase Suspend to Read Elect.Sg.	"1"	Electronic Signature	Erase Suspend to Read Array	Program Setup	Erase Suspend to Read Array	Erase (continue)	Erase Suspend to Read Array	Erase (continue)	Erase Suspend to Read Status	Erase Suspend to Read Array	Erase Suspend to Read Elect.Sg.
Erase (complete)	"1"	Status	Read Array	Program Setup	Erase Setup		Read Array	_	Read Status	Read Array	Read Elect.Sg.

Note: Elect.Sg. = Electronic Signature.

Information furnished is believed to be accurate and reliable. However, STMicroelectronics assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of STMicroelectronics. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. STMicroelectronics products are not authorized for use as critical components in life support devices or systems without express written approval of STMicroelectronics.

The ST logo is registered trademark of STMicroelectronics All other names are the property of their respective owners.

© 2002 STMicroelectronics - All Rights Reserved

STMicroelectronics GROUP OF COMPANIES

Australia - Brazil - Canada- China - Finland - France - Germany - Hong Kong - India - Italy - Japan - Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - U.S.A.

www.st.com

This datasheet has been download from:

www.datasheetcatalog.com

Datasheets for electronics components.