

Windows 95, NT4.0, 2000 Installation

There is no Windows 95, Windows NT4, or Windows 2000 support for the CH Pro Throttle USB. Check our website periodically for any new software updates.

Macintosh Installation

Since the Pro Throttle USB is a USB device it will work with a Macintosh. However, the mode switch function will not work. Therefore, the Pro Throttle USB will only have 19 functions and one point of view feature on a Macintosh. Check our website periodically for software updates and/or information concerning MacOS updates.

Technical Support

****Before contacting Technical Support, please read the *Users Guide* carefully. It has a more comprehensive troubleshooting section that may solve your problem****

To get the most efficient support, we recommend that you do a little research on your computer system so you can have answers ready for the questions the technicians may ask you. Please write down answers to the following before you contact us:

- What kind of computer do you have?
- How many/what kind of USB ports does your system have?
- With which software are you having problems?
- Do you have any other controllers (i.e. joysticks, rudders) plugged in?

Now call CH Products technical support at 760.598.7833. Or write, mail, or e-mail, us at the following addresses:

Mailing address: CH Products
970 Park Center Dr.
Vista, CA 92083

Technical Support number: 760.598.7833
Web site: www.chproducts.com
Internet email form: www.chproducts.com/support/form
Online Knowledge Base <http://www.chproducts.com/fom/cache/1.html>

Warranty

The CH Pro Throttle USB™ is warranted to the original purchaser to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. During this warranty period, CH PRODUCTS will, at its option, repair or replace, at no charge, any component determined to be defective.

The liability under this warranty is limited to the repair of and/or replacement of the defect or defective part at our factory, and does not include shipping expenses. This warranty does not apply if, in the opinion of CH PRODUCTS, the CH Pro Throttle USB™ has been damaged by accident, abuse, improper usage, or as a result of service or modification by other than CH PRODUCTS.

"NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF SALABILITY AND FITNESS FOR A PARTICULAR PURPOSE. CH PRODUCTS IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES." SOME STATES DO NOT ALLOW EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty services, send the CH Pro Throttle USB, postage prepaid, with a check for \$6.00 to cover shipping and handling, together with a dated proof of purchase and RMA# (Return Merchandise Authorization) obtained from CH PRODUCTS at 760.598.7833 to: CH PRODUCTS, 970 Park Center Dr., Vista, CA 92083.

The enclosed software is made available as is, and without warranties of any kind. All warranty claims made on CH PRODUCTS relating to defects which may be present are expressly excluded where this is legally permissible.

CH PRODUCTS assumes no liability for the correctness, precision, or currency of the software or of its accompanying documentation, nor for the suitability of the software for a specific purpose or for normal market quality.

The risk relating to usability of the running characteristics of the software and the accompanying hardware lies with the user of the software. CH PRODUCTS shall not be liable for the performance of the software or for its functional capability in a multiple users association. The user shall bear the costs for correction of defects, costs for maintenance, repair or improvement work and not CH PRODUCTS, its dealers, distributors, representatives or employees.

CH PRO THROTTLE USB™

QUICK START: HOW TO INSTALL AND PROGRAM THE CH PRO THROTTLE USB

Congratulations on your purchase of the CH Pro Throttle USB! Your new Pro Throttle USB offers you an unprecedented amount of programmable functions that are easy to use and more powerful than ever.

Requirements

- IBM-compatible computer running Windows 98 or ME.
- One available USB port
- Direct X 7.0a (minimum)

IMPORTANT: This is only a brief guide; for more information, please read the CH Pro Throttle USB Users Guide included with the software.

Features

- **Control Manager-** Control Manager is the software that controls all of your CH USB devices. With the Pro Throttle USB you are able to program not only the CH Pro Throttle but other CH USB devices as well. Control Manager also comes packaged with a comprehensive Users Guide to help you use the software to its fullest.
- **Mode Switch-** The CH Pro Throttle USB allows you to select between three separate modes for both the CH Pro Throttle USB and all other CH USB devices. This feature is only available with the CH Pro Throttle USB.
- **LED lights-** The three LED lights provide a quick and easy reference to your current mode.
- **Mini joystick-** This joystick can be used as either a 2-axis joystick or mouse control.

Installation

To install the CH Pro Throttle USB software, follow the steps below:

1. **Unplug** all CH USB devices (including the CH Pro throttle USB). It is not necessary to unplug other devices like scanners, printers, etc.
2. Insert the **CH Products Installation CD** into your CD-ROM drive
3. **Double click** on My Computer
4. **Double click** on your CD-ROM drive
5. **Double click** on the Setup.exe file (the correct Setup file has an icon image of a computer, and not of a yellow star)
6. From the main installation screen, **single click** on **Drivers and Software**
7. **Single click** on the **Control Manager** link (shown underlined in red)
8. Follow the directions on screen. These directions will walk you through the New Hardware Wizard as well as the setup of the Control Manager software.

Programming the CH Pro Throttle

All the information you need is located in the Users Guide section of Control Manager. To access this information, install Control Manager and follow the onscreen instructions until completed. The Users Guide should appear after the installation guide is complete. If not, click on Start, Programs, CH Products, Control Manager, Users Guide.

Note: The Pro Throttle will not work correctly until you read the Users Guide. **This step is mandatory**, as it will educate you on the inner workings of Control Manager and how to program maps to your CH Pro Throttle USB. At this point, it is recommended that you place this manual on your desk and refer to the Control Manager Users Guide before continuing with the instructions below.

Windows 95, NT4.0, 2000 Installation

There is no Windows 95, Windows NT4, or Windows 2000 support for the CH Pro Throttle USB. Check our website periodically for any new software updates.

Macintosh Installation

Since the Pro Throttle USB is a USB device it will work with a Macintosh. However, the mode switch function will not work. Therefore, the Pro Throttle USB will only have 19 functions and one point of view feature on a Macintosh. Check our website periodically for software updates and/or information concerning MacOS updates.

Technical Support

****Before contacting Technical Support, please read the *Users Guide* carefully. It has a more comprehensive troubleshooting section that may solve your problem****

To get the most efficient support, we recommend that you do a little research on your computer system so you can have answers ready for the questions the technicians may ask you. Please write down answers to the following before you contact us:

- What kind of computer do you have?
- How many/what kind of USB ports does your system have?
- With which software are you having problems?
- Do you have any other controllers (i.e. joysticks, rudders) plugged in?

Now call CH Products technical support at 760.598.7833. Or write, mail, or e-mail, us at the following addresses:

Mailing address:

CH Products
970 Park Center Dr.
Vista, CA 92083

760.598.7833

Technical Support number:

www.chproducts.com

Web site:

Internet email form:

www.chproducts.com/support/form

Online Knowledge Base

<http://www.chproducts.com/fom/cache/1.html>

Warranty

The CH Pro Throttle USB™ is warranted to the original purchaser to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. During this warranty period, CH PRODUCTS will, at its option, repair or replace, at no charge, any component determined to be defective.

The liability under this warranty is limited to the repair of and/or replacement of the defect or defective part at our factory, and does not include shipping expenses. This warranty does not apply if, in the opinion of CH PRODUCTS, the CH Pro Throttle USB™ has been damaged by accident, abuse, improper usage, or as a result of service or modification by other than CH PRODUCTS.

"NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF SALABILITY AND FITNESS FOR A PARTICULAR PURPOSE. CH PRODUCTS IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES." SOME STATES DO NOT ALLOW EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty services, send the CH Pro Throttle USB, postage prepaid, with a check for \$6.00 to cover shipping and handling, together with a dated proof of purchase and RMA# (Return Merchandise Authorization) obtained from CH PRODUCTS at 760.598.7833 to: CH PRODUCTS, 970 Park Center Dr., Vista, CA 92083.

The enclosed software is made available as is, and without warranties of any kind. All warranty claims made on CH PRODUCTS relating to defects which may be present are expressly excluded where this is legally permissible.

CH PRODUCTS assumes no liability for the correctness, precision, or currency of the software or of its accompanying documentation, nor for the suitability of the software for a specific purpose or for normal market quality.

The risk relating to usability of the running characteristics of the software and the accompanying hardware lies with the user of the software. CH PRODUCTS shall not be liable for the performance of the software or for its functional capability in a multiple users association. The user shall bear the costs for correction of defects, costs for maintenance, repair or improvement work and not CH PRODUCTS, its dealers, distributors, representatives or employees.

CH PRO THROTTLE USB™

QUICK START: HOW TO INSTALL AND PROGRAM THE CH PRO THROTTLE USB

Congratulations on your purchase of the CH Pro Throttle USB! Your new Pro Throttle USB offers you an unprecedented amount of programmable functions that are easy to use and more powerful than ever.

Requirements

- IBM-compatible computer running Windows 98 or ME.
- One available USB port
- Direct X 7.0a (minimum)

IMPORTANT: This is only a brief guide; for more information, please read the CH Pro Throttle USB Users Guide included with the software.

Features

- **Control Manager-** Control Manager is the software that controls all of your CH USB devices. With the Pro Throttle USB you are able to program not only the CH Pro Throttle but other CH USB devices as well. Control Manager also comes packaged with a comprehensive Users Guide to help you use the software to its fullest.
- **Mode Switch-** The CH Pro Throttle USB allows you to select between three separate modes for both the CH Pro Throttle USB and all other CH USB devices. This feature is only available with the CH Pro Throttle USB.
- **LED lights-** The three LED lights provide a quick and easy reference to your current mode.
- **Mini joystick-** This joystick can be used as either a 2-axis joystick or mouse control.

Installation

To install the CH Pro Throttle USB software, follow the steps below:

1. **Unplug** all CH USB devices (including the CH Pro throttle USB). It is not necessary to unplug other devices like scanners, printers, etc.
2. Insert the **CH Products Installation CD** into your CD-ROM drive
3. **Double click** on My Computer
4. **Double click** on your CD-ROM drive
5. **Double click** on the Setup.exe file (the correct Setup file has an icon image of a computer, and not of a yellow star)
6. From the main installation screen, **single click** on **Drivers and Software**
7. **Single click** on the **Control Manager** link (shown underlined in red)
8. Follow the directions on screen. These directions will walk you through the New Hardware Wizard as well as the setup of the Control Manager software.

Programming the CH Pro Throttle

All the information you need is located in the Users Guide section of Control Manager. To access this information, install Control Manager and follow the onscreen instructions until completed. The Users Guide should appear after the installation guide is complete. If not, click on Start, Programs, CH Products, Control Manager, Users Guide.

Note: The Pro Throttle will not work correctly until you read the Users Guide. **This step is mandatory**, as it will educate you on the inner workings of Control Manager and how to program maps to your CH Pro Throttle USB. At this point, it is recommended that you place this manual on your desk and refer to the Control Manager Users Guide before continuing with the instructions below.