50061154

ISSUE 1

Installation Instructions for the Honeywell HumidIcon™ Digital Humidity/Temperature Sensors: HIH-6130/6131 Series

GENERAL INFORMATION

The following associated literature is available on the Web:

- Product data sheet
- Product application note
- Application sheets:
 - Humidity Sensor Performance Characteristics
 - Humidity Sensor Theory and Behavior
 - Humidity Sensor Moisture and Psychrometrics
 - Humidity Sensor Chemical Resistivity
 - Thermoset Polymer-based Capacitive Sensors
- Technical Notes:
 - I²C Communication with the Honeywell HumidIcon™ Digital Humidity/Temperature Sensors: HIH-6130/6131 Series
 - Using Alarms on the Honeywell HumidIcon™ Digital Humidity/Temperature Sensors: HIH-6130/6131 Series
 - Entering and Using Command Mode on the Honeywell HumidIcon™ Digital Humidity/Temperature Sensors: HIH-6130/6131 Series
 - Total Error Band Specification for Honeywell Digital Humidity/Temperature Sensors

CAUTION

IMPROPER HANDLING

- Do not remove the sensor from its original protective packaging until it is ready to be installed.
- Do not touch the sensor surface. Use latex finger cots. Handle the sensor by its package edges or leads.
- Do not allow objects to enter the cavity of the sensor element.
- Do not allow debris or contaminants to accumulate on the filter.

Failure to comply with these instructions may result in product damage.

SOLDERING AND ASSEMBLY

CAUTION

IMPROPER CLEANING

• Insert and solder the sensor after the PCB cleaning process.

Failure to comply with these instructions may result in product damage.

CAUTION

IMPROPER SENSOR POSITIONING

• Position the sensor so that its face is exposed to the atmosphere being monitored.

Failure to comply with these instructions may result in product damage.

CAUTION

IMPROPER SOLDERING

- For better product reliability, the HIH-6130/6131 Series is factory-shipped with a protective tape on the cover (sensing face). This tape must remain in place during soldering.
- After soldering, remove the protective tape as described below to activate the sensor.

Failure to comply with these instructions may result in product damage.

PROTECTIVE TAPE REMOVAL

- 1. Use proper ESD protection.
- Using covered fingers or tweezers to ensure that no debris falls into the filter, sensor cover or die, grip the overhanging front edge of the protective tape and peel it back from the top surface of the sensor.
- 3. Ensure the complete rectangle of protective tape is removed.

Figure 1. Protective Tape Removal



SOLDERING

Process

- Automated: Use a no-clean flux. Limit the contact of the flux to the leads only. Reflow soldering profile is specified by J-STD-020D for a small package with a peak temperature of 260 °C [500 °F].
- Manual: Do not exceed 350 °C [662 °F] for 4 s max.

Sensing and Control

Issue 1 50061154

SENSOR REHYDRATION

NOTICE

SENSOR REHYDRATION

- Exposure to elevated temperatures, such as those experienced during solder reflow, may dry out the sensing element. It is recommended that the sensor be allowed time to rehydrate after soldering or other high temperature/dry exposures.
- Exposure to these conditions will not permanently damage the sensor. It will generally return to its factory-calibrated value after rehydration.
- If rehydration is not performed, the sensor may read a slight offset that slowly disappears over time as the sensor becomes exposed to ambient conditions.
 Conversely, extended exposure to condensing and high humidity environments (>90 %RH) may cause a revisable shift in readings which will generally return to normal after the sensor has been allowed to dry off.

To rehydrate the sensor, expose it to room temperature under ambient conditions (>50 %RH) for a minimum of five hours.

MOISTURE SEALING THE LEADS

If, in the presence of intermittent moisture or other contaminants, there is the possibility of galvanic paths between the leads, moisture seal the leads and exposed pads.

Characteristic	Condition	Min.	Тур.	Max.	Unit
Operating temperature range	_	-25 [-13]	_	85[185]	°C [°F]
Storage temperature range	_	-40 [-40]	-	85[185]	°C [°F]
Storage humidity	_	30	-	50	%RH
Soldering:					
automated	IPC/EIA/JEDEC J-STD-020D	-	-	260 [500]	°C [°F]
manual	apply heat for 4 s max. for manual soldering	-	-	350 [662]	
ESD	MIL-STD 883H, Method 3015.7	I	-	±4	kV
Latch-up immunity	_	I	-	±100	mA
Shock	MIL-STD 202G, Method 213D, Test Condition C,				
	half-sine, 6 ms ±3 perpendicular axis, 3 shock	-	-	100	g
	pulses per axis				
Vibration MIL-STD 202G, Method 204D, Test Condition D,				20	a
	10 Hz to 2000 Hz	-	-	20	y,
Light sensitivity	exposed to 50 lumens yellow light; exhibited no change in output				

Table 1. Environmental Specifications

Table 2. Humidity Performance Specifications

Characteristic	Condition	Min.	Тур.	Max.	Unit
Supply voltage variation	2.3 Vdc to 5.5 Vdc	_	0.1	0.5	%RH
Compensated humidity range	_	10	I	90	%RH
Compensated temp. range	_	5 [41]	-	50 [122]	°C [°F]
Resolution	14 bit ADC resolution	-	-	0.04	%RH
Accuracy ¹	_	-	-	±4	%RH
Total error band ²	_	-	-	±5	%RH
Response time	airflow minimum 20 l/min	_	6	8	S
Operating range	non-condensing	0	-	100	%RH
Long term stability	50 %RH for 5 years	-	±0.05	±1.2	%RH
Impact of soldering	IPC/EIA/JEDEC J-STD-020D, peak temp. of	_	_	±2.5	%RH
-	260 °C [500 °F]				

Notes:

 Accuracy is specified at the typical supply voltage of 3.3 Vdc and at 25 °C [77 °F]. It is the maximum deviation from the ideal transfer function of relative humidity measured over the humidity range of 10 %RH to 90 %RH and includes all errors due to humidity non-linearity, humidity hysteresis and humidity non-repeatability.

 Total error band is the maximum deviation from the ideal transfer function of relative humidity over the compensated range of 5 °C [41 °F] to 50 °C [122 °F]. It includes all errors due to humidity non-linearity, humidity hysteresis, humidity non-repeatability, thermal effect on zero, thermal effect on span and thermal hysteresis.

2 Honeywell • Sensing and Control

Table 3. Temperature Performance Specifications

Characteristic	Condition	Min.	Тур.	Max.	Unit
Supply voltage variation	2.3 Vdc to 5.5 Vdc	-	0.5	1.0	°C
Compensated temp. range	-	5 [41]	-	50 [122]	°C [°F]
Resolution	14 bit ADC resolution	-	_	0.025	°C
Accuracy (BFSL) ¹	_	-	_	±1.0	°C
Response time	1/e slow moving air	5	-	30	s
Long term stability	25 °C for 5 years	-	_	±0.05	°C/yr
Impact of soldering	IPC/EIA/JEDEC J-STD-020D, peak temp.	-	-	±0.1	°C
	of 260 °C [500 °F]				

Note:

1. Accuracy is specified over the compensated temperature range.

Table 4. Current Consumption

Characteristic	Vdd	Abbr.	Condition	Тур.	Max.	Unit
Sleep current	3.3	SLEEP	_	0.6	1	μA
Supply current	3.3	ldd	14 bit fastest update, no sleep	0.65	1	mA

Table 5. Input and Output Characteristics

Characteristic	Abbr.	Condition	Min.	Тур.	Max.	Unit
Supply voltage	Vdd	-	2.3	3.3	5.5	Vdc
Low level output voltage	Vol	lo∟ = 2.8 mA min.	I		20%	Vdd
High level output voltage	Vон	Іон = -2.8 mA min.	80%		-	Vdd
Low level input voltage	VIL	-	I	I	20%	Vdd
High level input voltage	Vін	_	80%		1	Vdd
I ² C pull-up resistor	RP	Η	1	2.2	1	kOhm

Table 6. Measurement Timing

Characteristic	Abbr.	Condition	Min.	Тур.	Max.	Unit
Start-up time (Power-On to	TSTA	14 bit TH and 14 bit humidity resolution	-	50	60	ms
data ready)						
Update rate	application dependent: measurements are taken only when the application requests the			sts them		

Figure 2. I²C Timing

SDA SDA tLOW SCL tHDDAT SCL SCL tHDDAT SCL TCL TCL TCL TCL TCL TCL TCL T)			JS
Characteristic	Abbr.	Min.	Тур.	Max.	Unit
SCL clock frequency	Fscl	100	-	400	kHz
Start condition hold time relative to SCL edge	t hdsta	0.1	-	_	μs
Minimum SCL clock low width	t∟ow	0.6	-	-	μs
Minimum SCL clock high width	tнigн	0.6	_	_	μs
Start condition setup time relative to SCL edge	t susta	0.1	_	_	μs
Start condition setup time relative to SCL edge Data hold time on SDA relative to SCL edge	tsusta thddat	0.1 0	-	-	μs µs
Start condition setup time relative to SCL edge Data hold time on SDA relative to SCL edge Data setup time on SDA relative to SCL edge	tsusta thddat tsudat	0.1 0 0.1		-	μs μs μs
Start condition setup time relative to SCL edge Data hold time on SDA relative to SCL edge Data setup time on SDA relative to SCL edge Stop condition setup time on SCL	tsusta thddat tsudat tsusto	0.1 0 0.1 0.1	- - -	-	μs μs μs μs

Figure 4. PCB Landing Pattern (For reference only.

Figure 3. Mounting Dimensions and Pinout (For reference only. mm/[in])



Note:

1. Do not connect Pin(s) 5 and/or 6 if the built-in alarm feature is not desired.





Figure 6. Typical Application Circuit



Figure 7. HIH-6130/6131 Series Maximal Accuracy¹ (Performance is specified between 10 %RH and 90 %RH.)



Note:

1. Maximal accuracy is the mean value between rising and falling RH points.

A WARNING

PERSONAL INJURY

- DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.
- The sensor's housing does not provide electrical safety isolation. Mount the sensor in a location where it cannot be touched, or where a surrounding barrier prevents human contact.

Failure to comply with these instructions could result in death or serious injury.

WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

SALES AND SERVICE

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office or:

E-mail: info.sc@honeywell.com

Internet: www.honeywell.com/sensing

Phone and Fax:

Asia Pacific	+65 6355-2828
	+65 6445-3033 Fax
Europe	+44 (0) 1698 481481
	+44 (0) 1698 481676 Fax
Latin America	+1-305-805-8188
	+1-305-883-8257 Fax
USA/Canada	+1-800-537-6945
	+1-815-235-6847
	+1-815-235-6545 Fax

Sensing and Control Honeywell 1985 Douglas Drive North Golden Valley, MN 55422 www.honeywell.com/sensing

Honeywell

50061154-1-EN IL50 GLO Printed in USA August 2011 Copyright © 2011 Honeywell International Inc. All rights reserved.