

512MBit MOBILE SDR SDRAMs based on 8M x 4Bank x161/0

Specification of

512Mb (32Mx16bit) Mobile SDRAM

Memory Cell Array

- Organized as 4banks of 8,388,608 x16

This document is a general product description and is subject to change without notice. Hynix does not assume any responsibility for use of circuits described. No patent licenses are implied.
Rev 1.5 / Feb. 2009
1

Document Title 4Bank x 8M x 16bits Synchronous DRAM

Revision History

Revision No.	History	Draft Date	Remark
0.1	Initial Draft	Sep. 2007	Preliminary
0.2	Update: IDD values	Mar. 2008	Preliminary
1.0	Final Version	Apr. 2008	
1.1	 Corrected the description of BURST TERMINATE Corrected the CKE state on every command Corrected PKG size (8mm x 10mm to 8mm x 8mm) Deleted the extended temperature products 	May 2008	
1.2	Modify : tRAS (166MHz/133Mhz: 42ns/45ns)	Jun. 2008	
1.3	Modify : tCK (CL=2, 166MHz [12ns -> 9.6ns])	Jun. 2008	
1.4	Change the ball height(page 54)	Jan. 2009	
1.5	Add : AC Undershoot/Overshoot specification	Feb. 2009	

ициіх

DESCRIPTION

The Hynix H55S5162DFR is suited for non-PC application which use the batteries such as PDAs, 2.5G and 3G cellular phones with internet access and multimedia capabilities, mini-notebook, hand-held PCs. The Hynix 512M Mobile SDRAM is 536,870,912-bit CMOS Mobile Synchronous DRAM(Mobile SDR), ideally suited for the main memory applications which requires large memory density and high bandwidth. It is organized as 4banks of 8,388,608x16.

Mobile SDRAM is a type of DRAM which operates in synchronization with input clock. The Hynix Mobile SDRAM latch each control signal at the rising edge of a basic input clock (CLK) and input/output data in synchronization with the input clock (CLK). The address lines are multiplexed with the Data Input/ Output signals on a multiplexed x16 Input/ Output bus. All the commands are latched in synchronization with the rising edge of CLK.

The Mobile SDRAMs provides for programmable read or write Burst length of Programmable burst lengths: 1, 2, 4, 8 locations or full page. An AUTO PRECHARGE function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst access. The Mobile SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the *2n* rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing one of the other three banks will hide the precharge cycles and provide seamless, high-speed, random-access operation.

Read and write accesses to the Hynix Mobile SDRAMs are burst oriented;

accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and the row to be accessed. The address bits registered coincident with the READ or WRITE command are used to select the bank and the starting column location for the burst access. A burst of Read or Write cycles in progress can be terminated by a burst terminate command or can be interrupted and replaced by a new burst Read or Write command on any cycle(This pipelined design is not restricted by a *2N* rule).

The Hynix Mobile SDR also provides for special programmable options including Partial Array Self Refresh of full array, half array, quarter array Temperature Compensated Self Refresh of 45 or 85 degrees °C.

The Hynix Mobile SDR has the special Low Power function of Auto TCSR(Temperature Compensated Self Refresh) to reduce self refresh current consumption. Since an internal temperature sensor is implanted, it enables to automatically adjust refresh rate according to temperature without external EMRS command.

Deep Power Down Mode is a additional operating mode for Mobile SDR. This mode can achieve maximum power reduction by removing power to the memory array within each Mobile SDR. By using this feature, the system can cut off almost all DRAM power without adding the cost of a power switch and giving up mother-board power-line layout flexibility.

All inputs are LV-CMOS compatible. Devices will have a VDD and VDDQ supply of 1.8V (nominal).



INFORMATION for Hynix KNOWN GOOD DIE

With the advent of Multi-Chip package (MCPs), Package on Package (PoP) and system in a package (SiP) applications, customer demand for Known Good Die (KGD) has increased.

Requirements for smaller form factors and higher memory densities are fueling the need for Wafer-level memory solutions due to their superior flexibility. Hynix Known Good Die (KGD) products can be used in packaging technologies such as systems-in-a-package (SIPs) and multi-chip packages (MCPs) to reduce the board area required, making them ideal for hand-held PCs, and many other portable digital applications.

Hynix Mobile DRAM will be able to continue its constant effort of enabling the Advanced package products of all application customers.

- Please Contact Hynix Office for Hynix KGD product availability and informations.

ициіх


FEATURES

- Standard SDRAM Protocol
- Clock Synchronization Operation
 - All the commands registered on positive edge of basic input clock (CLK)
- MULTIBANK OPERATION Internal 4bank operation
 - During burst Read or Write operation, burst Read or Write for a different bank is performed.
 - During burst Read or Write operation, a different bank is activated and burst Read or Write for that bank is performed
 - During auto precharge burst Read or Write, burst Read or Write for a different bank is performed
- Power Supply Voltage: VDD = 1.8V, VDDQ = 1.8V
- LVCMOS compatible I/O Interface
- Low Voltage interface to reduce I/O power
- Programmable burst length: 1, 2, 4, 8 or full page
- Programmable Burst Type: sequential or interleaved
- Programmable CAS latency of 3 or 2
- Programmable Drive Strength
- Low Power Features
 - Programmable PASR(Partial Array Self Refresh)
 - Auto TCSR (Temperature Compensated Self Refresh)
 - Programmable DS (Drive Strength)
 - Deep Power Down Mode
 - Operation Temperature
 - Mobile Temp.: -30°C ~ 85°C
- Package Type: 54ball FBGA, 0.8mm pitch, 8 x 8 [mm²], t=1.0mm max, Lead & Halogen Free

512M SDRAM ORDERING INFORMATION

Part Number	Clock Frequency	Temperature	CAS Latency	Organization	Interface	54Ball FBGA
H55S5162DFR-60M	166MHz					Lead &
H55S5162DFR-75M	133MHz	Mobile Temp. -30°C ~ 85°C	3	4banks x 8Mb x 16	LVCMOS	Halogen Free
H55S5162DFR-A3M	105MHz					iiee

BALL DESCRIPTION

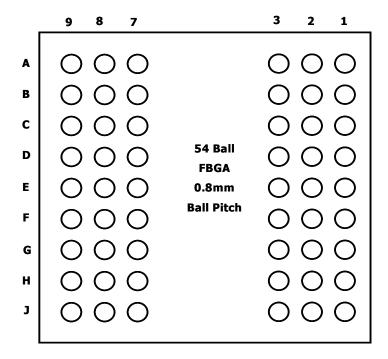

<Bottom View>

1	2	3		7	8	9
VSS	DQ15	VSSQ	A	VDDQ	DQ0	VDD
DQ14	DQ13	VDDQ	B	VSSQ	DQ2	DQ1
DQ12	DQ11	VSSQ	С	VDDQ	DQ4	DQ3
DQ10	DQ9	VDDQ	D	VSSQ	DQ6	DQ5
DQ8	NC	VSS	E	VDD	LDQM	DQ7
UDQM	CLK	CKE	F	/ CAS	/ RAS	/ WE
A12	A11	A9	G	BA0	BA1	/ CS
A8	A7	A6	Н	A0	A 1	A10
VSS	A5	A4	J	A3	A2	VDD

< Top View >

и и и и и и и

BALL DESCRIPTION

SYMBOL	ТҮРЕ	DESCRIPTION
CLK	INPUT	Clock: The system clock input. All other inputs are registered to the SDRAM on the rising edge of CLK
СКЕ	INPUT	Clock Enable: Controls internal clock signal and when deactivated, the SDRAM will be one of the states among (deep) power down, suspend or self refresh
CS	INPUT	Chip Select: Enables or disables all inputs except CLK, CKE, UDQM and LDQM
BAO, BA1	INPUT	Bank Address: Selects bank to be activated during $\overline{\text{RAS}}$ activity Selects bank to be read/written during $\overline{\text{CAS}}$ activity
A0 ~ A12	INPUT	Row Address: RA0 ~ RA12, Column Address: CA0 ~ CA9 Auto-precharge flag: A10
RAS, CAS, WE	INPUT	Command Inputs: \overline{RAS} , \overline{CAS} and \overline{WE} define the operation Refer function truth table for details
UDQM, LDQM	INPUT	Data Mask: Controls output buffers in read mode and masks input data in write mode
DQ0 ~ DQ15	I/O	Data Input/Output: Multiplexed data input/output pin
VDD/VSS	SUPPLY	Power supply for internal circuits
VDDQ/VSSQ	SUPPLY	Power supply for output buffers
NC	-	No connection

ABSOLUTE MAXIMUM RATING

Parameter	Symbol	Rating	Unit
Ambient Temperature	ТА	-30 ~ 85	°C
Storage Temperature	TSTG	-55 ~ 125	°C
Voltage on Any Pin relative to VSS	VIN, VOUT	-1.0 ~ 2.6	V
Voltage on VDD relative to VSS	VDD	-1.0 ~ 2.6	V
Voltage on VDDQ relative to VSS	VDDQ	-1.0 ~ 2.6	V
Short Circuit Output Current	IOS	50	mA
Power Dissipation	PD	1	W
Soldering Temperature · Time	TSOLDER	260 · 20	°C · Sec

DC OPERATING CONDITION (TA= -30 to 85°C)

Parameter	Symbol	Min	Тур	Max	Unit	Note
Power Supply Voltage	VDD	1.7	1.8	1.95	V	1
Power Supply Voltage	VDDQ	1.7	1.8	1.95	V	1, 2
Input High Voltage	VIH	0.8*VDDQ	-	VDDQ+0.3	V	1, 2
Input Low Voltage	VIL	-0.3	-	0.3	V	1, 2

Notes:

1. All Voltages are referenced to VSS = 0V

2. VDDQ must not exceed the level of VDD

AC OPERATING TEST CONDITION (TA= -30 to 85 °C, VDD = 1.8V, VSS = 0V)

Parameter	Symbol	Value	Unit
AC Input High/Low Level Voltage	VIH / VIL	0.9*VDDQ/0.2	V
Input Timing Measurement Reference Level Voltage	Vtrip	0.5*VDDQ	V
Input Rise/Fall Time	tR / tF	1	ns
Output Timing Measurement Reference Level Voltage	Voutref	0.5*VDDQ	V
Output Load Capacitance for Access Time Measurement	CL	30	pF

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

CAPACITANCE (TA= 25 °C, f=1MHz)

Parameter	Pin	Symbol	6/H	Unit	
i uluinetei	••••	Cymbol	Min	Max	onic
Input capacitance	CLK	CI1	2	4.0	pF
	A0~A12, BA0, BA1, CKE, CS, RAS, CAS, WE, UDQM, LDQM	CI2	2	4.0	pF
Data input/output capacitance	DQ0 ~ DQ15	CI/O	2	4.5	pF

DC CHARACTERRISTICS I (TA= -30 to 85°C)

Parameter	Symbol	Min	Мах	Unit	Note
Input Leakage Current	ILI	-1	1	uA	1
Output Leakage Current	ILO	-1	1	uA	2
Output High Voltage	Voh	VDDQ-0.2	-	V	3
Output Low Voltage	Vol	-	0.2	V	4

Notes:


- 1. VIN = 0 to 1.8V. All other pins are not tested under VIN=0V.
- 2. DOUT is disabled. VOUT= 0 to 1.95V.
- 3. IOUT = 0.1mA
- 4. IOUT = + 0.1mA

Mobile SDRAM AC OVERSHOOT / UNDERSHOOT SPECIFICATION

Parameter	Specification
Maximum peak amplitude allowed for overshoot	0.5V
Maximum peak amplitude allowed for undershoot	0.5V
The area between overshoot signal and VDD must be less than or equal to	3V-ns
The area between undershoot signal and GND must be less than or equal to	3V-ns

Note:

1. This specification is intended for devices with no clamp protection and is guaranteed by design.

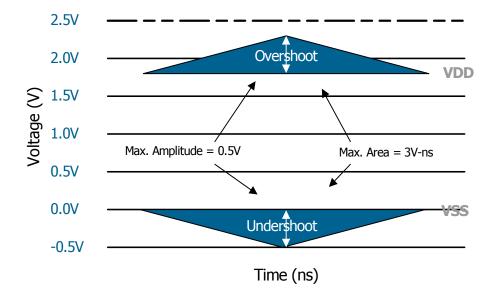



512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

DC CHARACTERISTICS II (TA= -30 to 85°C)

Darameter	Symbol	Test Condition		Speed		Unit	Nete
Parameter	Symbol	Test Condition	166MHz	133MHz	105MHz	Unit	Note
Operating Current	IDD1	Burst length=1, One bank active tRC \geq tRC(min), IOL=0mA	60	45	45	mA	1
Precharge Standby	IDD2P	CKE \leq VIL(max), tck = 15ns		0.3		mA	
Current in Power Down Mode	IDD2PS	$CKE \leq VIL(max), \ tCK = \infty$		0.3		mA	
Precharge Standby Current in Non Power Down Mode	IDD2N	$\begin{array}{l} \mbox{CKE} \geq \mbox{VIH(min), \overline{CS}} \geq \mbox{VIH(min), tCK} \\ = 15 \mbox{ns} \\ \mbox{Input signals are changed one time} \\ \mbox{during} \\ \mbox{2clks.} \\ \mbox{All other pins} \geq \mbox{VDD-0.2V or } \leq 0.2 \mbox{V} \end{array}$	= 15ns Input signals are changed one time during 2clks.		mA		
	IDD2NS	$CKE \ge VIH(min)$, $tCK = \infty$ Input signals are stable.		1			
Active Standby Current	IDD3P	CKE \leq VIL(max), tCK = 15ns	L5ns 5		mA		
in Power Down Mode	IDD3PS	$CKE \leq VIL(max), \ tCK = \infty$	3		ША		
Active Standby Current in Non Power Down Mode	IDD3N	$\begin{array}{l} CKE \geq VIH(min), \ \overline{CS} \geq VIH(min), \ tCK \\ = 15 ns \\ \text{Input signals are changed one time} \\ during \\ 2clks. \\ All other pins \geq VDD\text{-}0.2V \ or \leq 0.2V \end{array}$	10		mA		
	IDD3NS	$CKE \ge VIH(min)$, $tCK = \infty$ Input signals are stable.	5				
Burst Mode Operating Current	IDD4	tCK ≥ tCK(min), IOL=0mA All banks active	60	50	50	mA	1
Auto Refresh Current	IDD5	$tRFC \ge tRFC(min),$	100		•	mA	
Self Refresh Current	IDD6	$CKE \le 0.2V$	KE ≤ 0.2V See Next Page		mA	2	
Standby Current in Deep Power Down Mode	IDD7	See the pages for the Deep Power Down operation.	10		uA	3	

Notes:

- 1. IDD1 and IDD4 depend on output loading and cycle rates. Specified values are measured with the output open
- 2. See the tables of next page for more specific IDD6 current values.
- 3. Please contact Hynix office for more information and ability for DPD operation.

Deep Power Down operation is a hynix optional function.

DC CHARACTERISTICS III - Low Power (IDD6)

Temp.		Unit		
(°C)	4 Banks	2 Banks	1 Bank U	
45	250	220	200	uA
85	500	400	350	uA

1. VDD / VDDQ = 1.8V

2. Related numerical values in this 45°C are examples for reference sample value only.

3. With a on-chip temperature sensor of Mobile memory, auto temperature compensated self refresh will automatically adjust the interval of self-refresh operation according to ambient temperature variations.

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Paramet	or	Symbol	166	MHz	133	MHz	105	MHz	Unit	Note
Falanie		Symbol	Min	Max	Min	Max	Min	Max	Onic	Note
System Clock	CAS Latency=3	tCK3	6.0	1000	7.5	1000	9.5	1000	ns	
Cycle Time	CAS Latency=2	tCK2	9.6	1000	12	1000	15	1000	ns	
Clock High Pulse Width	I	tCHW	2.0	-	2.5	-	3.0	-	ns	1
Clock Low Pulse Width		tCLW	2.0	-	2.5	-	3.0	-	ns	1
Access Time From Clock	CAS Latency=3	tAC3	-	5.4	-	6.0	-	7.0	ns	2, 3
Access Time From Clock	CAS Latency=2	tAC2	-	6.0	-	8.0	-	10	ns	2, 3
Data-out Hold Time		tOH	2.6	-	2.6	-	2.6	-	ns	3
Data-Input Setup Time		tDS	2.0	-	2.0	-	3.0	-	ns	1
Data-Input Hold Time		tDH	1.0	-	1.0	-	1.5	-	ns	1
Address Setup Time		tAS	2.0	-	2.0	-	3.0	-	ns	1
Address Hold Time		tah	1.0	-	1.0	-	1.5	-	ns	1
CKE Setup Time		tCKS	2.0	-	2.0	-	3.0	-	ns	1
CKE Hold Time		tckh	1.0	-	1.0	-	1.5	-	ns	1
Command Setup Time		tCS	2.0	-	2.0	-	3.0	-	ns	1
Command Hold Time		tCH	1.0	-	1.0	-	1.5	-	ns	1
CLK to Data Output in Lo	w-Z Time	tOLZ	1.0	-	1.0	-	1.0	-	ns	
CLK to Data Output in	CAS Latency=3	tOHZ3		5.4		6.0		7.0	ns	
High-Z Time	CAS Latency=2	tOHZ2		6.0		8.0		10	ns	


AC CHARACTERISTICS I (AC operating conditions unless otherwise noted)

Notes:

1. Assume tR / tF (input rise and fall time) is 1ns. If tR & tF> 1ns, then [(tR+tF)/2-1]ns should be added to the parameter.

2. Access time to be measured with input signals of 1V/ns edge rate, from 0.8V to 0.2V. If tR> 1ns, then (tR/2-0.5)ns should be added to the parameter.

- 3. Output Load: 30pF+No termination
- AC high level input voltage / low level input voltage: 1.6 / 0.2V
- Input timing measurement reference level: 0.9V
- Transition time (input rise and fall time): 0.5ns
- Output timing measurement reference level: 0.9V
- Output load: CL = 30pF

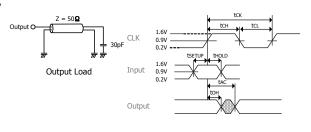

Rev 1.5 / Feb. 2009

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Parame	ator	Symbol	166	MHz	133	MHz	105	MHz	Unit	Note
Falanc		Symbol	Min	Max	Min	Max	Min	Max	Onic	Note
RAS Cycle Time		tRC	60	-	72.5	-	90	-	ns	
RAS to CAS Delay		tRCD	18	-	22.5	-	28.5	-	ns	
RAS Active Time		tRAS	42	100K	45	100K	60	100K	ns	
RAS Precharge Time		tRP	18	-	22.5	-	28.5	-	ns	
RAS to RAS Bank Active De	elay	trrd	12	-	15	-	19	-	ns	
AUTO REFRESH Period		tRFC	72	-	72	-	72	-	ns	
CAS to CAS Delay		tCCD	1	-	1	-	1	-	CLK	
Write Command to Data-In	n Delay	tWTL	0	-	0	-	0	-	CLK	
Data-in to Precharge Com	mand	tDPL	2	-	2	-	2	-	CLK	
Data-In to Active Comman	d	tDAL		tDPL+tRP						
DQM to Data-Out Hi-Z		tDQZ	2	-	2	-	2	-	CLK	
DQM to Data-In Mask		tDQM	0	-	0	-	0	-	CLK	
MRS to New Command		tMRD	2	-	2	-	2	-	CLK	
Precharge to Data Output	CAS Latency=3	tPROZ3	3	-	3	-	3	-	CLK	
High-Z	CAS Latency=2	tPROZ2	2	-	2	-	2	-	CLK	
Power Down Exit Time		tDPE	1CLK + tCKS	-	1CLK + tCKS	-	1CLK + tCKS	-	CLK	
Self Refresh Exit Time		txsr	120	-	120	-	120	-	ns	
Refresh Time		tREF	-	64	-	64	-	64	ms	

AC CHARACTERISTICS II (AC operating conditions unless otherwise noted)


PASR Extended Self refresh Mode logic & timer Register Internal Row Counter 8Mx16 Bank3 CLK 8Mx16 Bank2 Row Row decoders Row Active CKE Pre 8Mx16 Bank1 Row decoders Decoder 8Mx16 Bank0 State Machine CS Row decoders Sense AMP & I/O Gate Row decoders DQ0 RAS Output Buffer Refresh Memory $\overline{\mathsf{CAS}}$ Logic Cell 16 Array $\overline{\mathsf{WE}}$ Column Active Column Pre LDQM, æ Decoder DQ15 UDQM Column decoders Column Add Bank Select Counter Address A0 Burst Register Address A,1 Counter Burst Length CAS Buffers A12 Latency Data Out Control Mode Register BA1 BA0

FUNCTIONAL BLOCK DIAGRAM 8Mbit x 4banks x 16 I/O Mobile Synchronous DRAM

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

BASIC FUNCTIONAL DESCRIPTION

Mode Register

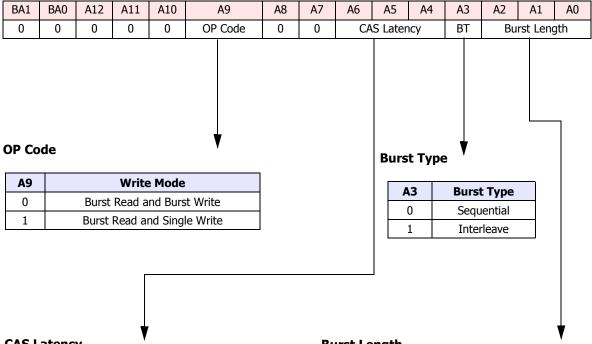

CAS Latency

A6	A5	A4	CAS Latency
0	0	0	Reserved
0	0	1	Reserved
0	1	0	2
0	1	1	3
1	0	0	Reserved
1	0	1	Reserved
1	1	0	Reserved
1	1	1	Reserved

Burst Length


A2	A1	AO	Burst	Length		
AZ	AI	AU	A3 = 0	A3=1		
0	0	0	1	1		
0	0	1	2	2		
0	1	0	4	4		
0	1	1	8	8		
1	0	0	Reserved	Reserved		
1	0	1	Reserved	Reserved		
1	1	0	Reserved	Reserved		
1	1	1	Full page	Reserved		

<mark>ичиіх</mark>

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

BASIC FUNCTIONAL DESCRIPTION (Continued)

Extended Mode Register

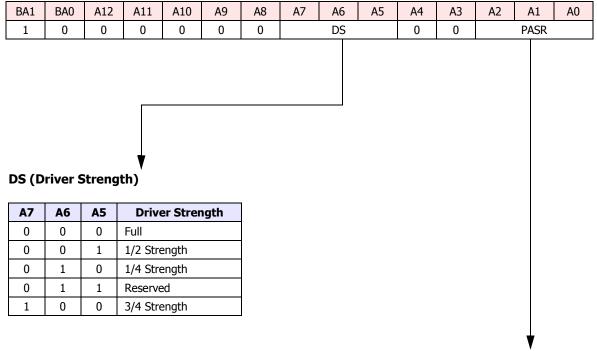



A2	A1	A0	Self Refresh Coverage
0	0	0	All Banks
0	0	1	Half of Total Bank (BA1=0 or Bank 0,1)
0	1	0	Quarter of Total Bank (BA1=BA0=0 or Bank 0)
0	1	1	Reserved
1	0	0	Reserved
1	0	1	Half of Bank 0(Bank 0 and Row Address MSB=0)
1	1	0	Quarter of Bank 0(Bank 0 and Row Address 2 MSBs=0)
1	1	1	Reserved

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

COMMAND TRUTH TABLE

Function	CKEn-1	CKEn	CS	RAS	CAS	WE	DQM	ADDR	A10 /AP	BA	Note
Mode Register Set	Н	Х	L	L	L	L	Х	0	p Code		2
Extended Mode Register Set	Н	х	L	L	L	L	х	0	p Code		2
No Operation	Н	Х	L	Н	Н	Н	Х		Х		
Device Deselect	Н	Х	Н	Х	Х	Х	Х		Х		
Bank Active	Н	х	L	L	Н	Н	Х	Row Ad	ldress	V	
Read	Н	Х	L	Н	L	Н		Column	L	٧	
Read with Autoprecharge	Н	Х	L	Н	L	Н	Х	Column	Н	٧	
Write	Н	Х	L	Н	L	L	Х	Column	L	٧	
Write with Autoprecharge	Н	Х	L	Н	L	L	Х	Column	Н	٧	
Precharge All Banks	Н	Х	L	L	Н	L	Х	Х	Н	Х	
Precharge selected Bank	Н	Х	L	L	Н	L	Х	Х	L	٧	
Burst stop	Н	Х	L	Н	Н	L	Х		Х		
Data Write/Output Enable	Н	Х	X			Х		Х			
Data Mask/Output Disable	Н	Х		2	x		V		Х		
Auto Refresh	Н	н	L	L	L	Н	Х		Х		
Self Refresh Entry	Н	L	L	L	L	Н	Х		Х		
Self Refresh Exit	L	Н	Н	Х	Х	Х	x		х		1
			L	Н	Н	Н					
Precharge Power Down	Н	L	H	Х	Х	Х	х		х		
Entry			L	H	H	H					
Precharge Power Down Exit	L	н	н	X	X	X	х		х		
			L H	H X	H X	H X					
Clock Suspend Entry	Н	L		× V	× V	× V	x		Х		
Clock Suspend Exit	L	н			x	1	Х		Х		
Deep Power Down Entry	Н	L	L	Н	Н	L	Х		Х		
Deep Power Down Exit	L	н	1		x	•	Х		Х		

Notes:

1. Exiting Self Refresh occurs by asynchronously bringing CKE from low to high.

2. BA1/BA0 must be issued 0/0 in the mode register set, and 1/0 in the extended mode register set.

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Current						Command			
Current State	cs	RAS	CAS	WE	BAO/ BA1	A <i>max</i> -A0	Description	Action	Notes
	L	L	L	L		OP CODE	Mode Register Set	Set the Mode Register	14
	L	L	L	Н	Х	Х	Auto or Self Refresh	Start Auto or Self Refresh	5
	L	L	Н	L	BA	Х	Precharge	No Operation	
	L	L	Н	Н	BA	Row Add.	Bank Activate	Activate the specified bank and row	
Idle	L	н	L	L	BA	Col. Add. A10	Write/WriteAP	ILLEGAL	4
	L	н	L	Н	BA	Col. Add. A10	Read/ReadAP	ILLEGAL	4
	L	Н	Н	Н	Х	Х	No Operation	No Operation	3
	н	х	х	х	х	х	Device Deselect	No Operation or Power Down	3
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	Precharge	7
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Row Active	L	н	L	L	BA	Col Add. A10	Write/WriteAP	Start Write: optional AP(A10=H)	6
	L	н	L	Н	BA	Col Add. A10	Read/ReadAP	Start Read: optional AP(A10=H)	6
	L	Н	Н	Н	Х	Х	No Operation	No Operation	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	х	Precharge	Termination Burst: Start the Precharge	
Read	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
	L	н	L	L	BA	Col Add. A10	Write/WriteAP	Termination Burst: Start Write(optional AP)	8,9
	L	н	L	Н	BA	Col Add. A10	Read/ReadAP	Termination Burst: Start Read(optional AP)	8
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	

CURRENT STATE TRUTH TABLE (Sheet 1 of 4)

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Current					С	ommand			
Current State	cs	RAS	CAS	WE	BAO/ BA1	A <i>max</i> -A0	Description	Action	Notes
Read	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	X Auto or Self Refresh ILLEGA		ILLEGAL	13
	L	L	Н	L	BA	х	Precharge	Termination Burst: Start the Precharge	10
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4
Write	L	н	L	L	BA	Col Add. A10	Write/WriteAP	Termination Burst: Start Write(optional AP)	8
	L	н	L	Н	BA	Col Add. A10	Read/ReadAP	Termination Burst: Start Read(optional AP)	8,9
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,12
Read with Auto	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Precharge	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	12
	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	12
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
Multer	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,12
Write with Auto	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Precharge	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	12
	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	12
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	

CURRENT STATE TRUTH TABLE (Sheet 2 of 4)

ициіх

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Current					C	ommand			
State	CS	RAS	CAS	WE	BAO/ BA1	A <i>max</i> -A0	Description	Action	Notes
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	х	Precharge	No Operation: Bank(s) idle after tRP	
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Precharging	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	4,12
	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	4,12
	L	Н	Н	Н	х	х	No Operation	No Operation: Bank(s) idle after tRP	
	Η	х	х	х	х	х	Device Deselect	No Operation: Bank(s) idle after tRP	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,12
Davi	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,11,1 2
Row Activating	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	4,12
	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	4,12
	L	Н	Н	Н	х	х	No Operation	No Operation: Row Active after tRCD	
	Η	х	х	х	х	х	Device Deselect	No Operation: Row Active after tRCD	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,13
NA & ''	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Write Recovering	L	н	L	L	BA	Col Add. A10	Write/WriteAP	Start Write: Optional AP(A10=H)	
	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	Start Read: Optional AP(A10=H)	9
	L	н	Н	Н	х	х	No Operation	No Operation: Row Active after tDPL	

hqиіх

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Current					C	ommand			
State	cs	RAS	CAS	WE	BAO/ BA1	A <i>max</i> -A0	Description	Action	Notes
Write Recovering	Н	х	х	х	Х	x	Device Deselect	No Operation: Row Active after tDPL	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	4,13
Write	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	4,12
Recovering with Auto	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	4,12
Precharge	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	4,9,12
	L	Н	Н	Н	х	х	No Operation	No Operation: Precharge after tDPL	
	Н	х	х	Х	х	х	Device Deselect	No Operation: Precharge after tDPL	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	13
	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	13
Refreshing	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	13
	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	13
	L	Н	Н	Н	х	х	No Operation	No Operation: idle after tRC	
	Н	х	х	х	х	х	Device Deselect	No Operation: idle after tRC	
	L	L	L	L		OP CODE	Mode Register Set	ILLEGAL	13,14
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	13
	L	L	Н	L	BA	Х	Precharge	ILLEGAL	13
Mode	L	L	Н	Н	BA	Row Add.	Bank Activate	ILLEGAL	13
Register	L	Н	L	L	BA	Col Add. A10	Write/WriteAP	ILLEGAL	13
Accessing	L	Н	L	Н	BA	Col Add. A10	Read/ReadAP	ILLEGAL	13
	L	н	Н	Н	х	х	No Operation	No Operation: idle after 2 clock cycles	
	Η	х	х	Х	х	Х	Device Deselect	No Operation: idle after 2 clock cycles	

Notes:

- 1. H: Logic High, L: Logic Low, X: Don't care, BA: Bank Address, AP: Auto Precharge.
- 2. All entries assume that CKE was active during the preceding clock cycle.
- 3. If both banks are idle and CKE is inactive, then in power down cycle
- 4. Illegal to bank in specified states. Function may be legal in the bank indicated by Bank Address,
- depending on the state of that bank.
- 5. If both banks are idle and CKE is inactive, then Self Refresh mode.
- 6. Illegal if tRCD is not satisfied.
- 7. Illegal if tRAS is not satisfied.
- 8. Must satisfy burst interrupt condition.
- 9. Must satisfy bus contention, bus turn around, and/or write recovery requirements.
- 10. Must mask preceding data which don't satisfy tDPL.
- 11. Illegal if tRRD is not satisfied
- 12. Illegal for single bank, but legal for other banks in multi-bank devices.
- 13. Illegal for all banks.
- 14. Mode Register Set and Extended Mode Register Set is same command truth table except BA1.

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Current State	СКЕ				Com	mand				
	Previous	S Current	cs	RAS	CAS	WE	BA0,	, A <i>max</i> -	Action	Notes
	Cycle	Cycle					BA1	A0		
Self Refresh	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	1
	L	Н	Н	х	х	х	х	x	Exit Self Refresh with Device Deselect	2
	L	Н	L	Н	Н	Н	х	x	Exit Self Refresh with No Operation	2
	L	Н	L	Н	Н	L	Х	Х	ILLEGAL	2
	L	Н	L	Н	L	Х	Х	Х	ILLEGAL	2
	L	Н	L	L	Х	Х	Х	Х	ILLEGAL	2
	L	L	Х	Х	Х	Х	Х	Х	Maintain Self Refresh	
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	1
Power Down	L	Н	Н	Х	Х	Х	Х	Х	Power Down mode exit, all banks idle	2
			L	Н	Н	Н	Х	Х		
	L	Н	L	L	Х	Х	Х	Х	ILLEGAL	2
Domi				Х	L	Х	Х	Х		
				Х	Х	L	Х	Х		
	L	L	Х	Х	Х	Х	Х	Х	Maintain Power Down Mode	
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	1
Deep Power Down	L	Н	х	х	х	х	х	x	Deep Power Down mode exit	5
	L	L	х	х	х	х	х	х	Maintain Deep Power Down Mode	

CKE Enable(CKE) Truth TABLE (Sheet 2 of 1)

и и и и и и

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Current State	СКЕ				Com	mand				
	Previous	Current	cs	RAS	CAS	WE	BA0,	A <i>max</i> -	Action	Notes
	Cycle	Cycle	CS	KA3	CAS	VVL	BA1	A0		
All	Н	Н	Н	Х	Х	Х			Refer to the idle State section	3
	Н	Н	L	Н	Х	Х			of the Current State	3
	Н	Н	L	L	Н	Х			Truth Table	3
	Н	Н	L	L	L	Н	Х	Х	Auto Refresh	
	Н	Н	L	L	L	L	OP CODE		Mode Register Set	4
Banks	Н	L	Н	Х	Х	Х			Refer to the idle State section	3
Idle	Н	L	L	Н	Х	Х			of the Current State	3
	Н	L	L	L	Н	Х			Truth Table	3
	Н	L	L	L	L	Н	Х	Х	Entry Self Refresh	4
	Н	L	L	L	L	L	OP CODE		Mode Register Set	
	L	Х	Х	Х	Х	Х	Х	Х	Power Down	4
									Refer to operations of	
	Н	Н	х	Х	Х	х	Х	Х	the Current State	
Any State									Truth Table	
other than	Н	L	х	х	х	х	х	х	Begin Clock Suspend	
listed above		L	~	~	~	^	~	^	next cycle	
	L	Н	х	x	x	х	x	x	Exit Clock Suspend	
	L		^	^	^	~	~		next cycle	
	L	L	Х	Х	Х	Х	Х	Х	Maintain Clock Suspend	

CKE Enable(CKE) Truth TABLE (Sheet 2 of 2)

Notes:

- 1. For the given current state CKE must be low in the previous cycle.
- When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously.
 When exiting power down mode, a NOP (or Device Deselect) command is required on the first positive edge of clock after CKE goes high.
- 3. The address inputs depend on the command that is issued.

clock after CKE goes high and is maintained for a minimum 200usec.


- 4. The Precharge Power Down mode, the Self Refresh mode, and the Mode Register Set can only be entered from the all banks idle state.
- When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously.
 When exiting deep power down mode, a NOP (or Device Deselect) command is required on the first positive edge of

ициіх

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Mobile SDR SDRAM OPERATION

State Diagram

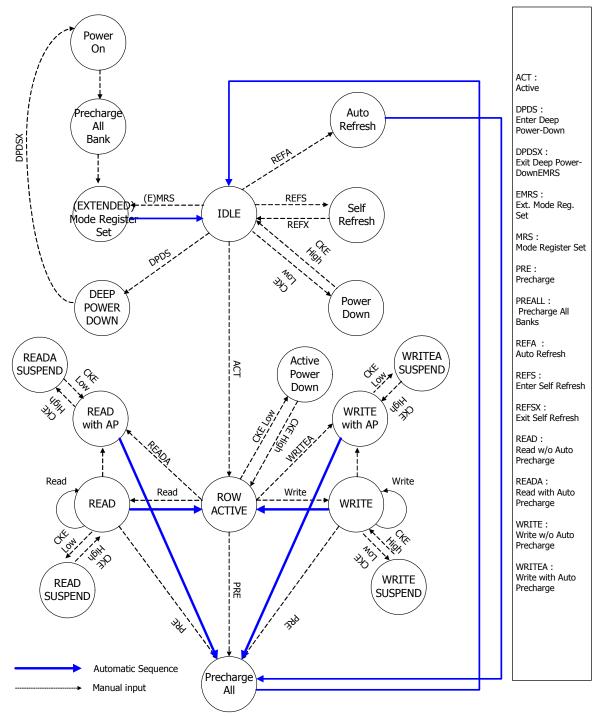



26

DESELECT


The DESELECT function (\overline{CS} = High) prevents new commands from being executed by the Mobile SDRAM, the Mobile SDRAM ignore command input at the clock. However, the internal status is held. The Mobile SDRAM is effectively deselected. Operations already in progress are not affected.

NO OPERATION

The NO OPERATION (NOP) command is used to perform a NOP to a Mobile SDRAM that is selected (\overline{CS} = Low, \overline{RAS} = \overline{CAS} = \overline{WE} = High). This command is not an execution command. However, the internal operations continue. This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected. (see to next figure)

ACTIVE

The Active command is used to activate a row in particular bank for a subsequent Read or Write access. The value of the BA0,BA1 inputs selects the bank, and the address provided on A0-A12(or the highest address bit) selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. (see to next figure)

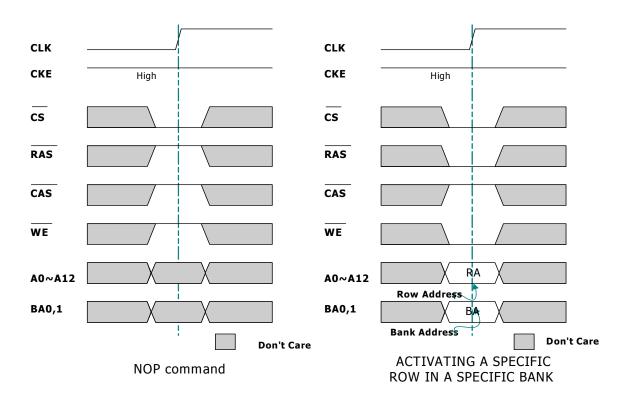

Rev 1.5 / Feb. 2009

READ / WRITE COMMAND


Before executing a read or write operation, the corresponding bank and the row address must be activated by the bank active (ACT) command. An interval of tRCD is required between the bank active command input and the following read/write command input.

The READ command is used to initiate a Burst Read to an active row. The value of BA0 and BA1 selects the bank and address inputs select the starting column location.

The value of A10 determines whether or not auto precharge is used. If auto-precharge is selected, the row being accessed will be precharged at the end of the read burst; if auto precharge is not selected, the row will remain open for subsequent access. The valid data-out elements will be available CAS latency after the READ command is issued.

The WRITE command is used to initiate a Burst Write access to an active row. The value of BA0, BA1 selects the bank and address inputs select the starting column location.

The value of A10 determines whether or not auto precharge is used. If auto-precharge is selected, the row being accessed will be precharged at the end of the write burst; if auto precharge is not selected, the row will remain open for subsequent access.

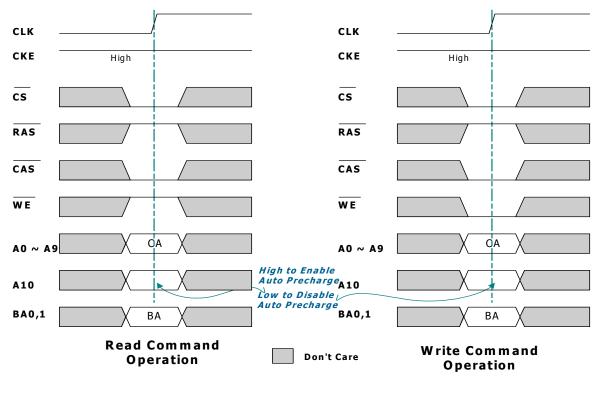

READ / WRITE COMMAND


READ


A read operation starts when a read command is input. Output buffer becomes Low-Z in the (/CAS Latency - 1) cycle after read command set. The SDRAM can perform a burst read operation.

The burst length can be set to 1, 2, 4 and 8. The start address for a burst read is specified by the column address and the bank select address at the read command set cycle. In a read operation, data output starts after the number of clocks specified by the /CAS Latency. The /CAS Latency can be set to 2 or 3.

When the burst length is 1, 2, 4 and 8 the DOUT buffer automatically becomes High-Z at the next clock after the successive burst-length data has been output.

The /CAS latency and burst length must be specified at the mode register.

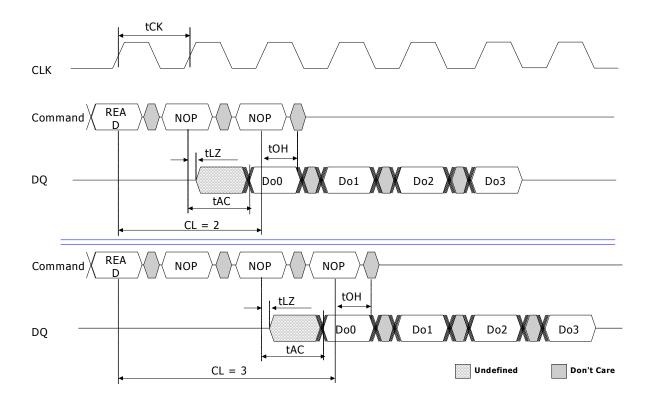


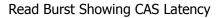

READ to READ

Data from a read burst may be concatenated or truncated by a subsequent READ command. The first data from the new burst follows either the last element of a completed burst or the last desired element of a longer burst that is being truncated.


When another read command is executed at the same ROW address of the same bank as the preceding read command execution, the second read can be performed after an interval of no less than 1 clock. Even when the first command is a burst read that is not yet finished, the data read by the second command will be valid.

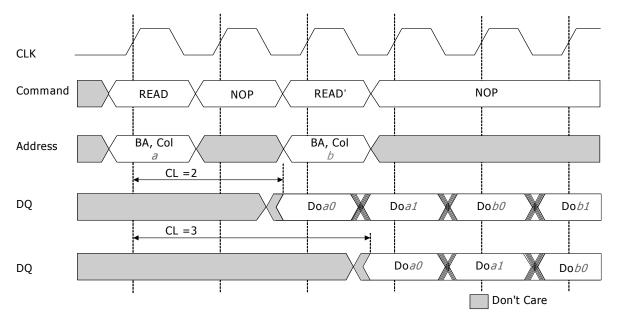

Consecutive Read Bursts

hyиix


512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

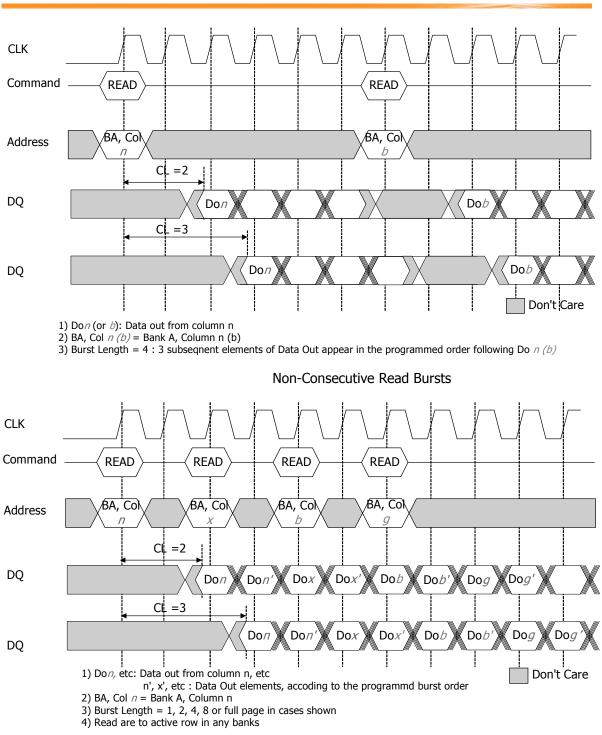

Random Read Bursts

READ BURST TERMINATE


Data from any READ burst may be truncated with a BURST TERMINATE command. The BURST TERMINATE latency is equal to the read (CAS) latency, i.e., the BURST TERMINATE command should be issued X cycles after the READ command where X equals the desired data-out element.

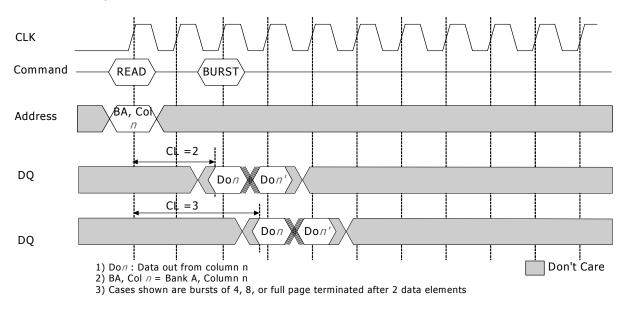

Terminating a Read Burst

READ to WRITE

Data from READ burst must be completed or truncated before a subsequent WRITE command can be issued. If truncation is necessary, the BURST TERMINATE command must be used, as shown in next fig.

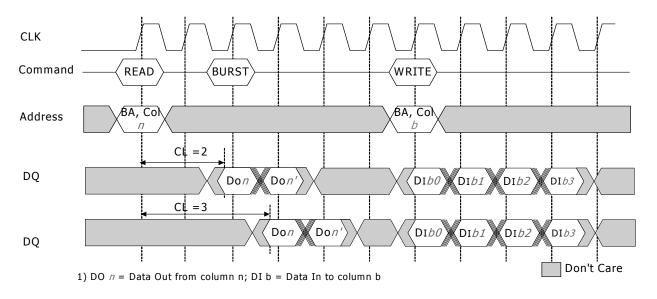

Read to Write

Notes:


- 1. Same bank, same ROW address: When the write command is executed at the same ROW address of the same bank as the preceding read command, the write command can be performed after an interval of no less than 1 clock. However, DQM must be set High so that the output buffer becomes High-Z before data input.
- 2. Same bank, different ROW address: When the ROW address changes, consecutive write commands cannot be executed; it is necessary to separate the two commands with a precharge command and a bank active command.
- 3. Different bank: When the bank changes, the write command can be performed after an interval of no less than 1 cycle, provided that the other bank is in the bank active state. However, DQM must be set High so that the output buffer becomes High-Z before data input.

READ to PRECHARGE

Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until tRP is met. Note that part of the row precharge time is hidden during the access of the last data element(s).

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge.

The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts.

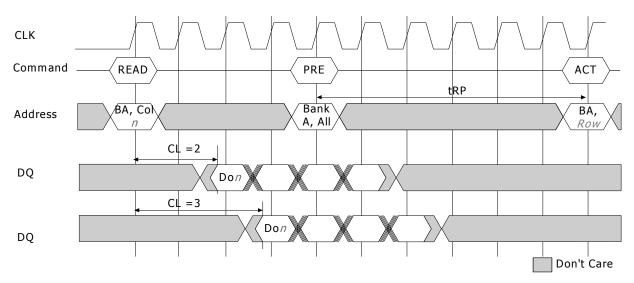

1) DO n = Data Out from column n

2) Note that Precharge may not be issued before tRAS ns after the ACTIVE command for applicable banks.

3) The ACTIVE command may be applied if tRC has been met.

READ to PRECHARGE


512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Write

Input data appearing on the data bus, is written to the memory array subject to the DM input logic level appearing coincident with the data. If a given DM signal is registered Low, the corresponding data will be written to the memory; if the DM signal is registered High, the corresponding data inputs will be ignored, and a write will not be executed to that byte / column location.

During WRITE bursts, the first valid data-in element will be registered coincident with the WRITE command. Subsequent data elements will be registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQ will remain High-Z and any additional input data will be ignored. A full-page burst will continue until terminated.

Data for any WRITE burst may be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst may be immediately followed by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command.

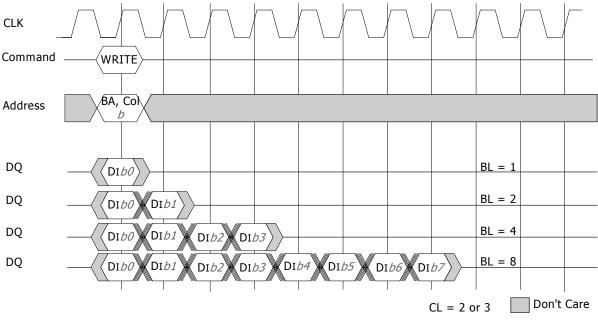

Basic Write timing parameters for Write Burst Operation


Notes:

- 1. Same bank, same ROW address: When another write command is executed at the same ROW address of the same bank as the preceding write command, the second write can be performed after an interval of no less than 1 clock. In the case of burst writes, the second write command has priority.
- Same bank, different ROW address: When the ROW address changes, consecutive write commands cannot be executed; it is necessary to separate the two write commands with a precharge command and a bank active command.
- 3. Different bank: When the bank changes, the second write can be performed after an interval of no less than 1 clock, provided that the other bank is in the bank active state. In the case of burst write, the second write command has priority.

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series


WRITE to WRITE

Data for any WRITE burst may be concatenated with or truncated with a subsequent WRITE command. In either case, a continuous flow of input data, can be maintained. The new WRITE command can be issued on any positive edge of the clock following the previous WRITE command. The first data-in element from the new burst is applied after either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new WRITE command, where X equals the number of desired data-in element.

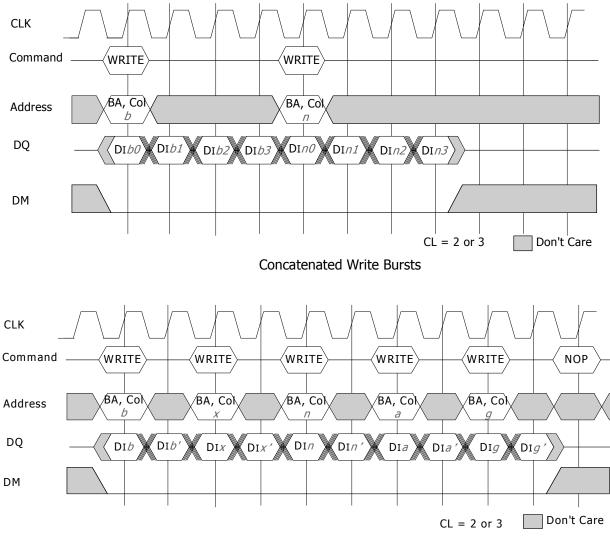

Random Write Cycles

WRITE to READ

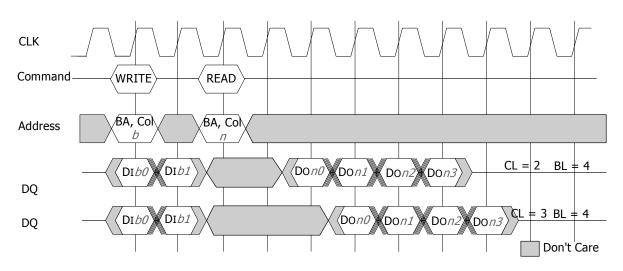

The preceding burst write operation can be aborted and a new burst read operation can be started by inputting a new read command in the write cycle. The data of the read command (READ) is output after the lapse of the /CAS latency. The preceding write operation (WRIT) writes only the data input before the read command. The data bus must go into a high-impedance state at least one cycle before output of the latest data.


Notes:

- Same bank, same ROW address: When the read command is executed at the same ROW address of the same bank as the preceding write command, the read command can be performed after an interval of no less than 1 clock. However, in the case of a burst write, data will continue to be written until one clock before the read command is executed.
- 2. Same bank, different ROW address: When the ROW address changes, consecutive read commands cannot be executed; it is necessary to separate the two commands with a precharge command and a bank active command.
- 3. Different bank: When the bank changes, the read command can be performed after an interval of no less than 1 clock, provided that the other bank is in the bank active state. However, in the case of a burst write, data will continue to be written until one clock before the read command is executed (as in the case of the same bank and the same address).

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series


WRITE to PRECHARGE

Data for any WRITE burst may be followed by a subsequent PRECHARGE command to the same bank (provided Auto Precharge was not activated). When the precharge command is executed for the same bank as the write command that preceded it, the minimum interval between the two commands is 1 clock. However, if the burst write operation is unfinished, the input data must be masked by means of DQM for assurance of the clock defined by tDPL. To follow a WRITE without truncating the WRITE burst, tDPL should be met as shown in Fig.

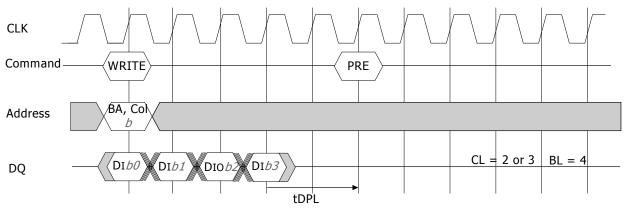

Non-Interrupting Write to Precharge

Data for any WRITE burst may be truncated by a subsequent PRECHARGE command as shown in Figure. Note that only data-in that are registered prior to the tDPL period are written to the internal array, and any subsequent data-in should be masked with DM, as shown in next Fig. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until tRP is met.

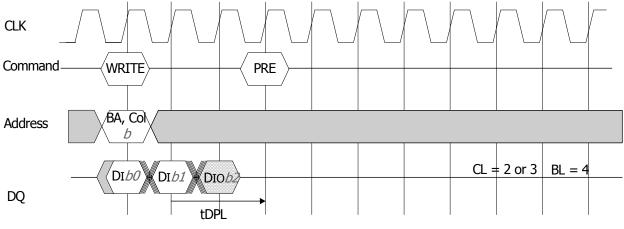


Interrupting Write to Precharge

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

WRITE BURST TERMINATE


WRITE bursts can be truncated with the BURST TERMINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command will be ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied one clock previous to the BURST TERMINATE command.

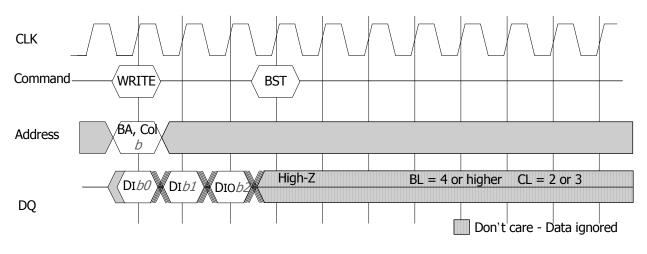

Terminating a Burst Write command with BST

BURST TERMINATE

The BURST TERMINATE command is used to truncate read bursts or write bursts (with auto precharge disabled). The most recently registered READ or WRITE command prior to the BURST TERMINATE command will be truncated, as shown in the Operation section of this datasheet. The BURST TERMINATE command is not bank specific.

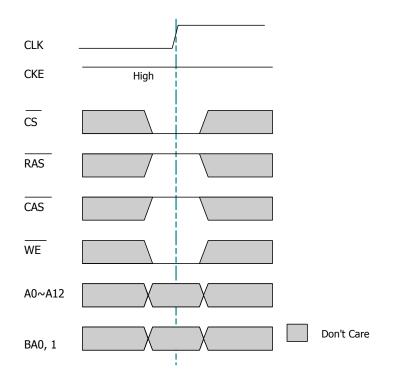


BURST TERMINATE COMMAND

<mark>ичиіх</mark>

PRECHARGE

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. Another command to the same bank (or banks) being precharged must not be issued until the precharge time (tRP) is completed.

If one bank is to be precharged, the particular bank address needs to be specified. If all banks are to be precharged, A10 should be set high along with the PRECHARGE command. If A10 is high, BA0 and BA1 are ignored. A PRECHARGE command will be treated as a NOP if there is no open row in that bank, or if the previously open row is already in the process of precharging.

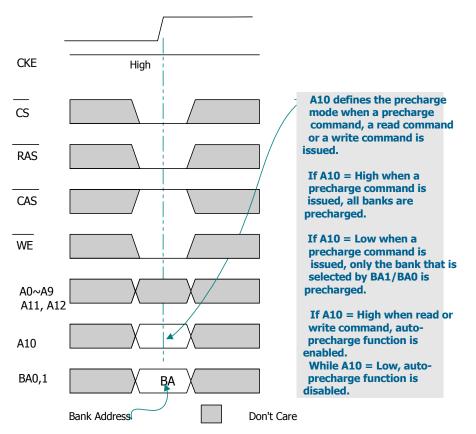

PRECHARGE command

AUTO PRECHARGE

Auto Precharge is a feature which performs the same individual bank precharge function as described above, but without requiring an explicit command.

This is accomplished by using A10 (A10=high), to enable auto precharge in conjunction with a specific Read or Write command. This precharges the bank/row after the Read or Write burst is complete.

Auto precharge is non persistent, so it should be enabled with a Read or Write command each time auto precharge is desired. Auto precharge ensures that a precharge is initiated at the earliest valid stage within a burst.

The user must not issue another command to the same bank until the precharge time (tRP) is completed.

AUTO REFRESH AND SELF REFRESH

Mobile SDRAM devices require a refresh of all rows in any rolling 64ms interval. Each refresh is generated in one of two ways: by an explicit AUTO REFRESH command, or by an internally timed event in SELF REFRESH mode:

- AUTO REFRESH.

This command is used during normal operation of the Mobile SDRAM. It is non persistent, so must be issued each time a refresh is required. The refresh addressing is generated by the internal refresh controller. The Mobile SDRAM requires AUTO REFRESH commands at an average periodic interval of tREF.

To allow for improved efficiency in scheduling and switching between tasks, some flexibility in the absolute refresh interval is provided. A maximum of eight AUTO REFRESH commands can be posted to any given Mobile SDRMA, and the maximum absolute interval between any AUTO REFRESH command and the next AUTO REFRESH command is 8*tREF.

-SELF REFRESH.

This state retains data in the Mobile SDRAM, even if the rest of the system is powered down. Note refresh interval timing while in Self Refresh mode is scheduled internally in the Mobile SDRAM and may vary and may not meet tREF time. After executing a self-refresh command, the self-refresh operation continues while CKE is held Low. During self refresh operation, all ROW addresses are refreshed by the internal refresh timer. A self-refresh is terminated by a self-refresh exit command. Before and after self-refresh mode, execute auto-refresh to all refresh addresses in or within tREF (max.) period on the condition 1 and 2 below.

1. Enter self-refresh mode within time as below* after either burst refresh or distributed refresh at equal interval to all refresh addresses are completed.


2. Start burst refresh or distributed refresh at equal interval to all refresh addresses within time as below* after exiting from self-refresh mode.

Note: tREF (max.) / refresh cycles.

The use of SELF REFRESH mode introduces the possibility that an internally timed event can be missed when CKE is raised for exit from self refresh mode. Upon exit from SELF REFRESH an extra AUTO REFRESH command is recommended. In the self refresh mode, two additional power-saving options exist. They are Temperature Compensated Self Refresh and Partial Array Self Refresh and are described in the Extended Mode Register section. The Self Refresh command is used to retain cell data in the Mobile SDRAM. In the Self Refresh mode, the Mobile SDRAM operates refresh cycle asynchronously.

The Self Refresh command is initiated like an Auto Refresh command except CKE is disabled(Low). The Mobile SDRAM can accomplish an special Self Refresh operation by the specific modes(PASR) programmed in extended mode registers. The Mobile SDRAM can control the refresh rate automatically by the temperature value of Auto TCSR(Temperature Compensated Self Refresh) to reduce self refresh current and select the memory array to be refreshed by the value of PASR(Partial Array Self Refresh). The Mobile SDRAM can reduce the self refresh current(IDD6) by using these two modes.

hqиіх

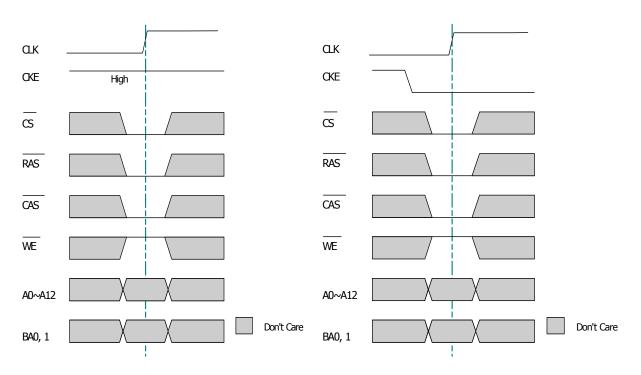

AUTO REFRESH COMMAND

SELF REFRESH ENTRY COMMAND

Note 1: If all banks are in the idle status and CKE is inactive (low level), the self refresh mode is set.


Function	CKEn-1	CKEn	CS	RAS	CAS	WE	DQM	ADDR	A10/AP	BA
Auto Refresh	Н	Н	L	L	L	Н	Х	Х		
Self Refresh Entry	Н	L	L	L	L	Н	Х		Х	

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

MODE REGISTER SET


The mode registers are loaded via the address bits.

BA0 and BA1 are used to select between the Mode Register and the Extended Mode Register. See the Mode Register description in the register definition section. The MODE REGISTER SET command can only be issued when all banks are idle and no bursts are in progress, and a subsequent executable command cannot be issued until tMRD is met.

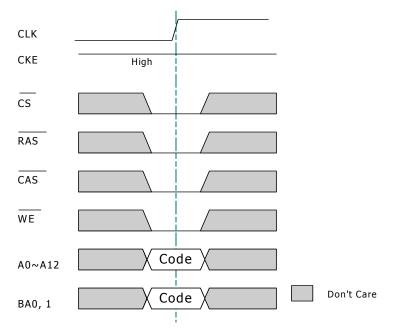

MODE REGISTER SET COMMAND

Note: BA0=BA1=Low loads the Mode Register, whereas BA0=Low and BA1=High loads the Extended Mode Register.

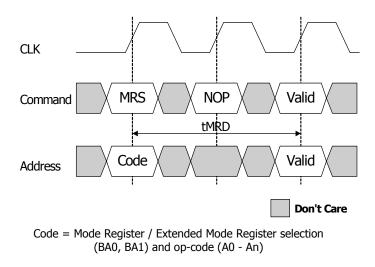

tMRD DEFINITION

POWER DOWN

Power down occurs if CKE is set low coincident with Device Deselect or NOP command and when no accesses are in progress. If power down occurs when all banks are idle, it is Precharge Power Down.

If Power down occurs when one or more banks are Active, it is referred to as Active power down. The device cannot stay in this mode for longer than the refresh requirements of the device, without losing data. The power down state is exited by setting CKE high while issuing a Device Deselect or NOP command.


If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby.

DEEP POWER-DOWN

The Deep Power-Down (DPD) mode enables very low standby currents. All internal voltage generators inside the Mobile SDRAM are stopped and all memory data is lost in this mode.


All the information in the Mode Register and the Extended Mode Register is lost. Next Figure, *DEEP POWER-DOWN COMMAND* shows the DEEP POWER-DOWN command All banks must be in idle state with no activity on the data bus prior to entering the DPD mode. While in this state, CKE must be held in a constant low state.

To exit the DPD mode, CKE is taken high after the clock is stable and NOP command must be maintained for at least 200 us. After 200 us a complete re-initialization routing is required defined for the initialization sequence.

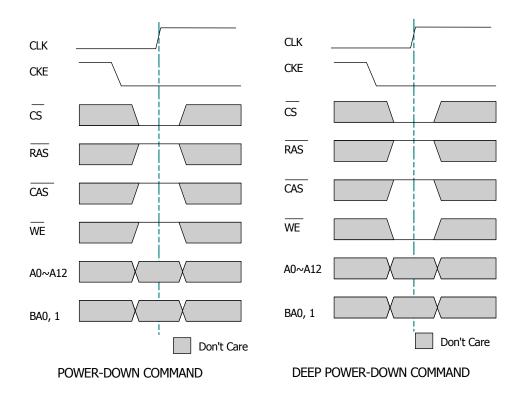


hqиіх

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

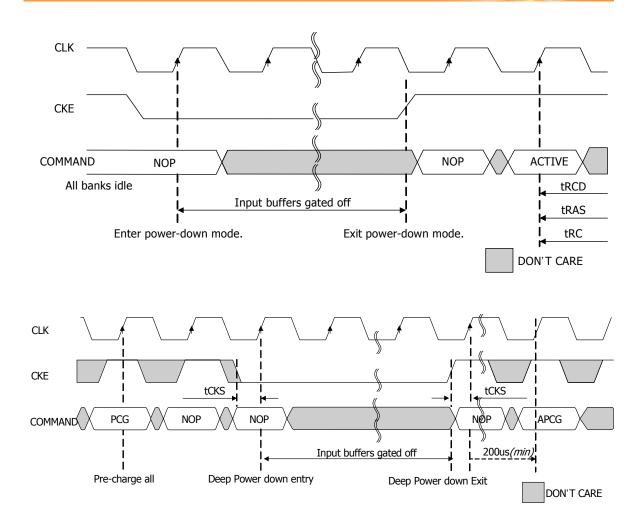

hqиіх


512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

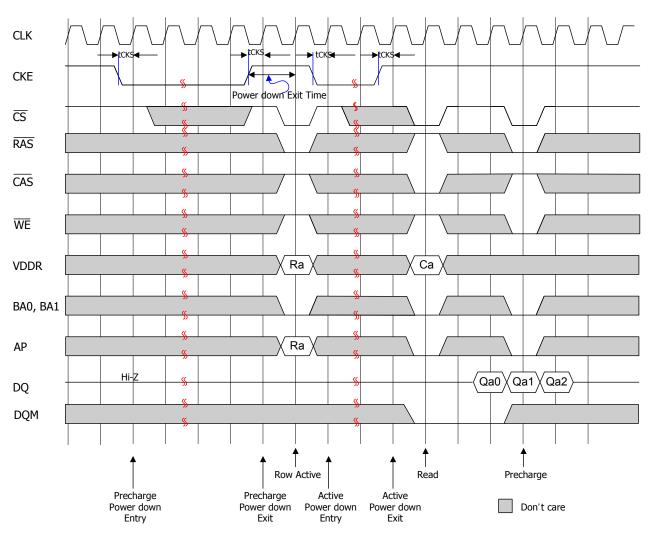

Note : CKE should be set high at least 1CLK + tCKS prior to Row active command.

hyиix

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

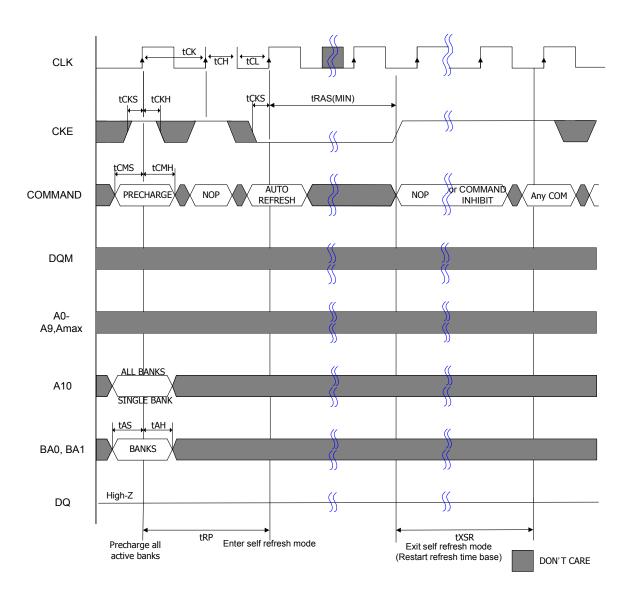

Power-up and Initialization

Like a Synchronous DRAM, Low Power SDRAM(Mobile SDRAM) must be powered up and initialized in a predefined manner. Power must be applied to VDD and VDDQ(simultaneously). The clock signal must be started at the same time. After power up, an initial pause of 200 usec is required. And a precharge all command will be issued to the Mobile SDRAM. Then, 8 or more Auto refresh cycles will be provided. After the Auto refresh cycles are completed, a mode register set(MRS) command will be issued to program the specific mode of operation (Cas Latency, Burst length, etc.) And a extended mode register set command will be issued to program specific mode of self refresh operation(PASR). The following these cycles, the Mobile SDRAM is ready for normal operation.

Programming the registers

Mode Register

The mode register contains the specific mode of operation of the Mobile SDRAM. This register includes the selection of a burst length(1, 2, 4, 8, Full Page), a cas latency(2 or 3), a burst type. The mode register set must be done before any activate command after the power up sequence. Any contents of the mode register be altered by re-programming the mode register through the execution of mode register set command.

Extended Mode Register

The extended mode register contains the specific features of self refresh operation of the Mobile SDRAM. This register includes the selection of partial arrays to be refreshed(half array, quarter array, etc.). The extended mode register set must be done before any activate command after the power up sequence. Any contents of the mode register be altered by re-programming the mode register through the execution of extended mode register set command.

Bank(Row) Active

The Bank <u>Active command is used to activate a row in a specified bank of the device.</u> This command is initiated by activating \overline{CS} , \overline{RAS} and deasserting \overline{CAS} , \overline{WE} at the positive edge of the clock. The value on the BA1 and BA0 selects the bank, and the value on the A0-A12 selects the row. This row remains active for column access until a precharge command is issued to that bank. Read and write operations can only be initiated on this activated bank after the minimum tRCD time is passed from the activate command.

Read

The READ command is used to initiate the burst read of data. This command is initiated by activating \overline{Cs} , \overline{CAS} , and deasserting \overline{WE} , \overline{RAS} at the positive edge of the clock. BA1 and BA0 inputs select the bank, A9-A0 address inputs select the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected the row being accessed will be precharged at the end of the READ burst; if Auto Precharge is not selected, the row will remain active for subsequent accesses.

The length of burst and the CAS latency will be determined by the values programmed during the MRS command.

Write

The WRITE command is used to initiate the burst write of data. This command is initiated by activating \overline{CS} , \overline{CAS} , \overline{WE} and deasserting \overline{RAS} at the positive edge of the clock. BA1 and BA0 inputs select the bank, A9-A0 address inputs select the starting column location. The value on input A10 determines whether or not Auto Precharge is used.

If Auto Precharge is selected the row being accessed will be precharged at the end of the WRITE burst; if Auto Precharge is not selected, the row will remain active for subsequent accesses.

Precharge

The Precharge command is used to close the open row in a particular bank or the open row in all banks. When the precharge command is issued with address A10, high, then all banks will be precharged, and If A10 is low, the open row in a particular bank will be precharged. The bank(s) will be available when the minimum tRP time is met after the precharge command is issued.

Auto Precharge

The Auto Precharge command is issued to close the open row in a particular bank after READ or WRITE operation. If A10 is high when a READ or WRITE command is issued, the READ or WRITE with Auto Precharge is initiated.

Burst Termination


The Burst Termination is used to terminate the burst operation. This function can be accomplished by asserting a Burst Stop command or a Precharge command during a burst READ or WRITE operation. The Precharge command interrupts a burst cycle and close the active bank, and the Burst Stop command terminates the existing burst operation leave the bank open.

Data Mask

The Data Mask command is used to mask READ or WRITE data. During a READ operation, When this command is issued, data outputs are disabled and become high impedance after two clock delay. During a WRITE operation, When this command is issued, data inputs can't be written with no clock delay.

If data mask is initiated by asserting low on DQM during the read cycle, the data outputs are enabled.

If DQM is asserted to High. the data outputs are masked (disabled) and become Hi-Z state after 2 cycle later. During the write cycle, DQM mask data input with zero latency

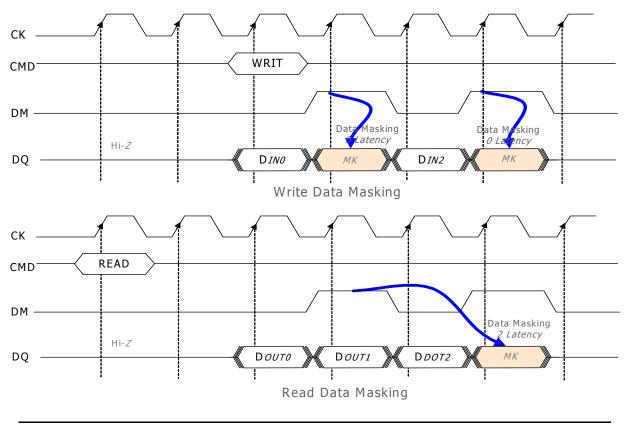


Rev 1.5 / Feb. 2009

512Mbit (32Mx16bit) Mobile SDR Memory H55S5162DFR Series

Clock Suspend

The Clock Suspend command is used to suspend the internal clock of Mobile SDRAM. The clock suspend operation stops transmission of the clock to the internal circuits of the device during burst transfer of data to stop the operation of the device. During normal access mode, CKE is keeping High. When CKE is low, it freezes the internal clock and extends data Read and Write operations. (See examples in next Figures)

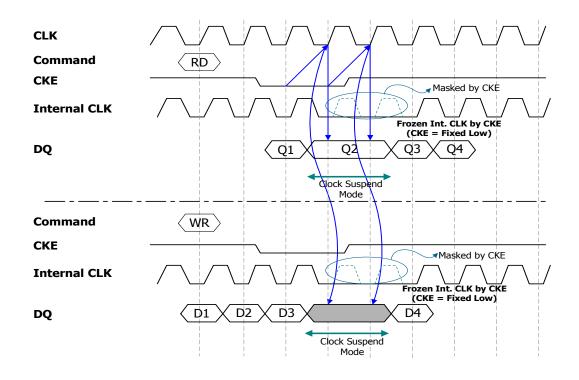

Power Down

The Power Down command is used to reduce stand-by current. Before this command is issued, all banks must be precharged and tRP must be passed after a precharge command. Once the Power Down command is initiated by keeping CKE low, all of the input buffer except CKE are gated off.

Auto Refresh

The Auto Refresh command is used during normal operation and is similar to CBR refresh in Conventional DRAMs. This command must be issued each time a refresh is required. When an Auto Refresh command is issued, the address bits is "Don't care", because the specific address bits is generated by internal refresh address counter.

Self Refresh

The Self Refresh command is used to retain cell data in the Mobile SDRAM. In the Self Refresh mode, the Mobile SDRAM operates refresh cycle asynchronously.

The Self Refresh command is initiated like an Auto Refresh command except CKE is disabled(Low). The Mobile SDRAM can accomplish an special Self Refresh operation by the specific modes(PASR) programmed in extended mode registers. The Mobile SDRAM can control the refresh rate automatically by the temperature value of Auto TCSR(Temperature Compensated Self Refresh) to reduce self refresh current and select the memory array to be refreshed by the value of PASR(Partial Array Self Refresh). The Mobile SDRAM can reduce the self refresh current(IDD6) by using these two modes.

Deep Power Down

The Deep Power Down Mode is used to achieve maximum power reduction by cutting the power of the whole memory array of the devices.

For more information, see the special operation for Low Power consumption of this data sheet.

Special Operation for Low Power Consumption

Deep Power Down Mode

Deep Power Down Mode is an operating mode to achieve maximum power reduction by cutting the power of the whole memory array of the devices.

Data will not be retained once the device enters Deep Power Down Mode.


Full initialization is required when the device exits from Deep Power Down Mode.

Truth Table

Current State	Command	CKEn-1	CKEn	CS	RAS	CAS	WE
Idle	Deep Power Down Entry	Н	L	L	Н	Н	L
Deep Power Down	Deep Power Down Exit	L	Н	Х	Х	Х	Х

Deep Power Down Mode Entry

The Deep Power Down Mode is entered by having \overline{CS} and \overline{WE} held low with \overline{RAS} and \overline{CAS} high at the rising edge of the clock, while CKE is low. The following diagram illustrates deep power down mode entry.

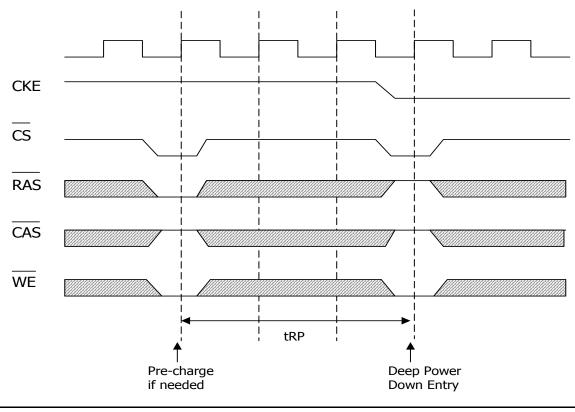


Deep Power Down Mode (Continued)

Deep Power Down Mode Exit Sequence

The Deep Power Down mode is exited by asserting CKE high. After the exit, the following sequence is needed to enter a new command.

- 1. Maintain NOP input conditions for a minimum of 200usec
- 2. Issue precharge commands for all banks of the device
- 3. Issue 8 or more auto refresh commands
- 4. Issue a mode register set command to initialize the mode register
- 5. Issue an extended mode register set command to initialize the extended mode register

The following timing diagram illustrates deep power down mode exit sequence.

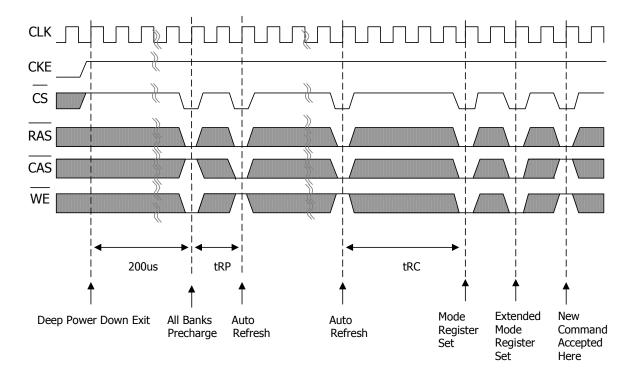

PACKAGE INFORMATION

54 Ball FBGA 0.8mm pitch (8mm x 8mm)

