#### www.datasheet4u.com

### <u>General Description</u>

The MAX9921 provides a single chip solution to interface two 2-wire Hall-effect sensors to a low-voltage microprocessor ( $\mu$ P). This device supplies and monitors the current drawn by two Hall-effect sensors, filters the sensed current level, and outputs the corresponding logic level.

The MAX9921 includes input diagnostics and fault protection. These features allow the device to determine fault conditions such as open inputs, inputs shorted to the battery, and inputs shorted to ground. If the MAX9921 detects any of these conditions at either IN1 or IN2, the device shuts off the current to the corresponding input.

The MAX9921 protects the Hall sensors from supply transients up to 60V at the BAT supply. Normal operating supply voltage ranges from 6V to 18V. If the battery voltage is out of range, the MAX9921 shuts off the current to the Hall sensors.

The MAX9921 provides an 80µs blanking time following Hall sensor power-up or restart. The open-drain logic outputs are compatible with logic levels up to 5.5V.

The MAX9921 is available in a small 10-pin  $\mu\text{MAX}^{\textcircled{B}}$  package and is specified over the -40°C to +125°C automotive temperature range.

**Applications** 

Door Modules Window Lifters Seat Movers Electric Sunroofs Powered Lift Gate Controllers Powered Running Boards Seatbelt Buckles

### \_Features

- Withstands 60V at BAT Supply and Hall Inputs
- 6V to 18V Operating Voltage Range
- Provides Supply Current and Interfaces to Two 2-Wire Hall Sensors
- Error Output with Diagnostics of Hall Inputs and BAT Voltage
- Protects Hall Sensors from Overvoltage by Isolating them from Supply Transients
- Hall Inputs Protected from Short to Ground
- ♦ Ramps Current to Hall Sensors at 4mA/µs
- Output Enable Input Allows Multiplexing of Outputs from Multiple MAX9921s
- Hall Output Filtering
- Hall Sensor Blanking Following Hall Sensor Power-Up and Restart
- Low-Power Shutdown, Controlled with OE and DIAG Inputs
- Operates with ±2V Ground Shifts Between Hall Sensor and MAX9921


### **\_Ordering Information**

PART	TEMP RANGE	PIN-PACKAGE				
MAX9921AUB+T	-40°C to +125°C	10 µMAX				
+Denotes a lead-free package.						

T = Tape and reel.

Pin Configuration appears at end of data sheet.

### **Typical Application Circuit**

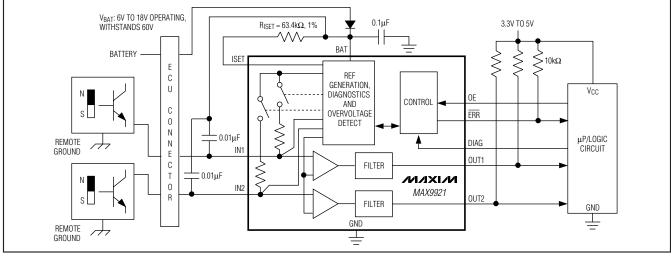

µMAX is a registered trademark of Maxim Integrated Products, Inc.

M \X \/M

\_ Maxim Integrated Products 1

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4644.com or visit Maxim's website at www.maxim-ic.com.

### **ABSOLUTE MAXIMUM RATINGS**

BAT to GND	0.3V to +60V
ISET to BAT	
IN1, IN2 to GND5.0V to the lower of	+60V or (V <sub>BAT</sub> + 1V)
DIAG, OE to GND	0.3V to +6.0V
OUT1, OUT2, ERR to GND	0.3V to +6.0V
Short-Circuit Duration of OUT1, OUT2, ERR	to GND
or to 5.5V (individually)	Continuous
Current into Any Pin Except IN1, IN2	±20mA

Current into IN1, IN2±1	00mA
Continuous Power Dissipation ( $T_A = +70^{\circ}C$ )	
10-Pin µMAX (derate 5.6mW/°C above +70°C)444	.4mW
Operating Temperature Range40°C to +	125°C
Junction Temperature+	150°C
Storage Temperature Range65°C to +	150°C
Lead Temperature (soldering, 10s)+	300°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

### DC ELECTRICAL CHARACTERISTICS

 $(V_{BAT} = 13.6V, V_{DIAG} = 0V, V_{OE} = 5V, IN1 = IN2 = no connection, R_{ISET} = 63.4k\Omega, R_{PU} = 10k\Omega at ERR, OUT1 and OUT2, T_A = -40°C to +125°C, unless otherwise noted. Typical values are at T_A = +25°C.) (Note 1)$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	ТҮР	MAX	UNITS
GENERAL			•			
BAT Supply Range	VBAT		6		18	V
VBAT Low for ERR Output Active	V <sub>BL</sub>		5.2			V
VBAT High for ERR Output Active	V <sub>BH</sub>				22	V
RAT Supply Current	IBAT	Normal mode		1	1.3	mA
BAT Supply Current	I <sub>SD</sub>	Shutdown mode, $V_{OE} = V_{DIAG} = 0V$			1	μA
HALL INPUTS (IN1 and IN2)						
Input Current for Output High	Iн				-11.5	mA
Input Current for Output Low	١ <sub>١L</sub>		-7.2			mA
Input Current Hysteresis for High/Low Detection	I <sub>IN,HYS</sub>			0.76		mA
Input Pullup Impedance	R <sub>PU</sub>	$V_{BAT} = 6V$ , inputs IN1, IN2 with $I_{IN} = -14mA$		50		Ω
Input Voltage Interpreted as Shorted to Battery	V <sub>SB</sub>	Measured with respect to VBAT			100	mV
Current Range Interpreted as Open Circuit	loc		-2		+0.02	mA
Current Level Interpreted as Shorted Sensor to Ground	ISC	Not a sustained condition, reverts to -50µA when detected			-23	mA

MAX9921

### www.daDC ELECTRICAL CHARACTERISTICS (continued)

 $(V_{BAT} = 13.6V, V_{DIAG} = 0V, V_{OE} = 5V, IN1 = IN2 = no connection, R_{ISET} = 63.4k\Omega, R_{PU} = 10k\Omega at \overline{ERR}, OUT1 and OUT2, T_A = -40°C to +125°C, unless otherwise noted. Typical values are at T_A = +25°C.) (Note 1)$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
LOGIC I/O (OUT1, OUT2, ERR, DI	AG, and OE)					
Output Voltage Low (ERR, OUT1, OUT2)	V <sub>OL</sub>	Sink current = 1mA			0.4	V
Three-State Output Current (ERR, OUT1, OUT2)	I <sub>OZ</sub>	$V_{OE} = 0V, 0 \le V_{OUT} \le 5V$			±1	μA
Input-Voltage High (DIAG, OE)	VIH		2.1			V
Input-Voltage Low (DIAG, OE)	VIL				0.8	V
Input Resistance to GND (DIAG, OE)	R <sub>IN</sub>		50	80		kΩ

### **AC TIMING CHARACTERISTICS**

 $(V_{BAT} = 13.6V, V_{DIAG} = 0V, V_{OE} = 5V, IN1 = IN2 = no connection, R_{ISET} = 63.4k\Omega, R_{PU} = 10k\Omega at ERR, OUT1 and OUT2, T_A = -40°C to +125°C, unless otherwise noted. Typical values are at T_A = +25°C.) (Notes 1 and 2)$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	ТҮР	MAX	UNITS
IN1, IN2 Blanking Time at Hall Switch Power-Up	t <sub>BL</sub>	$I_{IH}$ = -11.5mA to GND, time from $V_{IN}$ = 500mV until OUT_ high, $C_L$ = 20pF (Note 3)	50		140	μs
IN1, IN2 Current Ramp Rate After Turn-On	tramp.	V <sub>IN</sub> = GND		3.8		mA/µs
Delay from IN_ to OUT_ (Filter Delay)	<sup>t</sup> DEL	From I <sub>IH</sub> to I <sub>IL</sub> or from I <sub>IL</sub> to I <sub>IH</sub> , $C_L$ = 20pF, Figure 1		6.5		μs
Delay from IN_ Fault to ERR	terr	From I <sub>IL</sub> to I <sub>SC</sub> or from I <sub>IH</sub> to I <sub>OC</sub> , falling edge only, C <sub>L</sub> = 20pF, Figure 1		31		ns
Delay from DIAG High to OUT_ and ERR	t <sub>DLH</sub>	Rising edge of DIAG to falling or rising edge of outputs, $C_L = 20$ pF, Figure 1		350		ns
Delay from DIAG Low to OUT_ and ERR	<sup>t</sup> dhl	Falling edge of DIAG to falling or rising edge of outputs, $C_L = 20$ pF, Figure 1		1.6		μs
Delay Difference Between Rising and Falling Edges for Both Channels	tDM	$C_{HALL\text{-}BYPASS}$ = 0.01µF, I1H = -11.5mA and I1L = -7.2mA, $C_L$ = 20pF		20		ns
Delay Difference Between Channels	tcc	$C_{HALL\text{-}BYPASS}$ = 0.01µF, $I_{IH}$ = -11.5mA and $I_{IL}$ = -7.2mA, $C_L$ = 20pF		100		ns
Maximum Frequency on Hall Inputs	fMAX	$C_{HALL\text{-}BYPASS}$ = 0.01µF, I1H = -11.5mA and I1L = -7.2mA, $C_L$ = 20pF	50			kHz
IN_ Pulse Length Rejected by Filter to OUT_	P <sub>R</sub>	Figure 2		5.5		μs

Note 1: All DC specifications are 100% tested at T<sub>A</sub> = +25°C. AC specifications and specifications over -40°C to +125°C are guaranteed by design.

Note 2:  $C_L$  is external load capacitance on the outputs for test only.

**Note 3:** These blanking times apply when the MAX9921 is operating in normal mode. Blanking times following power-up or startup from shutdown mode are 20µs longer.



MAX992

3

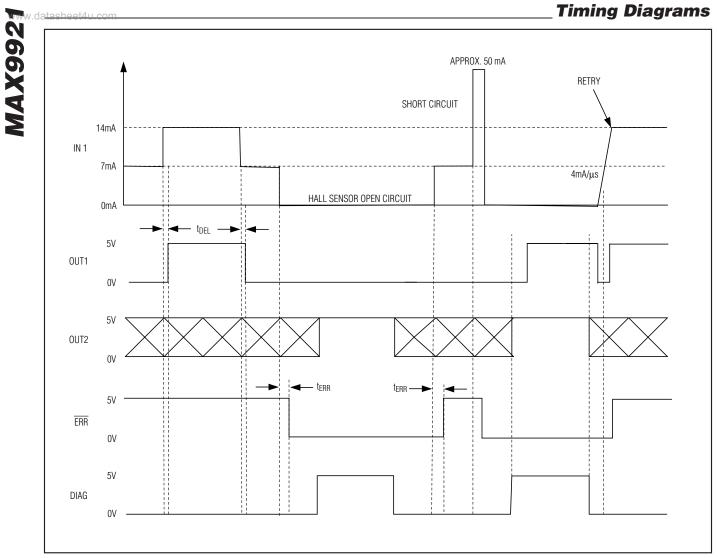


Figure 1. Timing Diagram

## Timing Diagrams (continued)


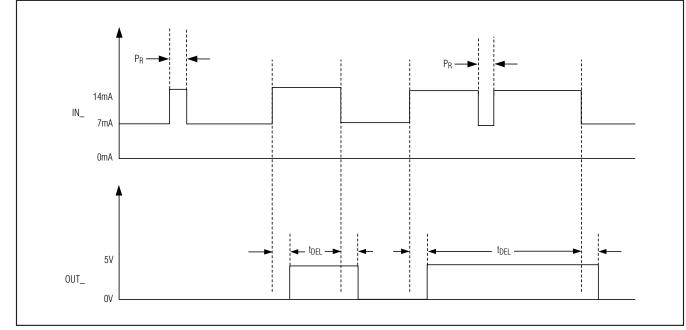


Figure 2. Hall Input Pulse Rejection

www.datasheet4


**MAX9921** 

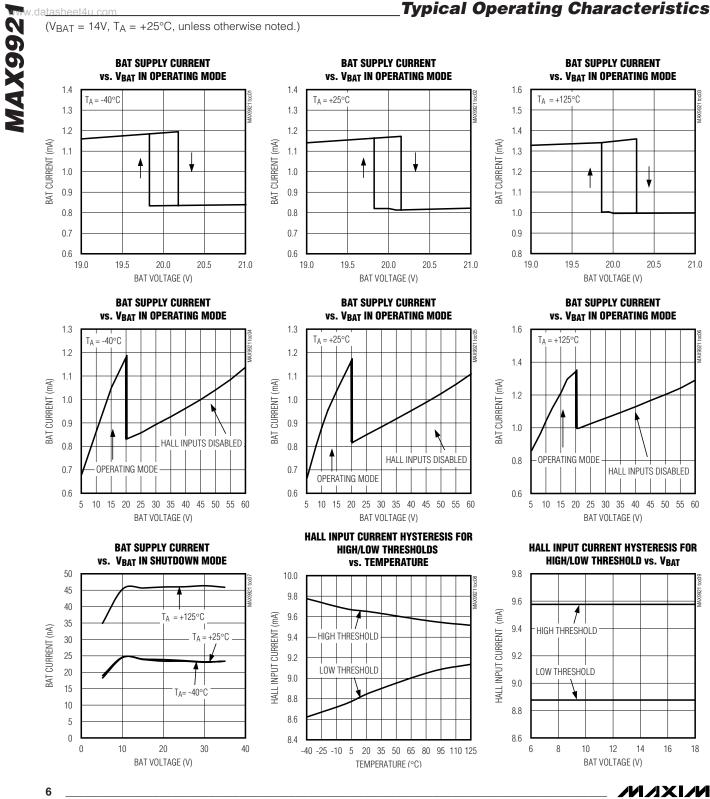

www.DataSheet4U.com



www.datasheet4u.com ( $V_{BAT} = 14V$ ,  $T_A = +25^{\circ}C$ , unless otherwise noted.)

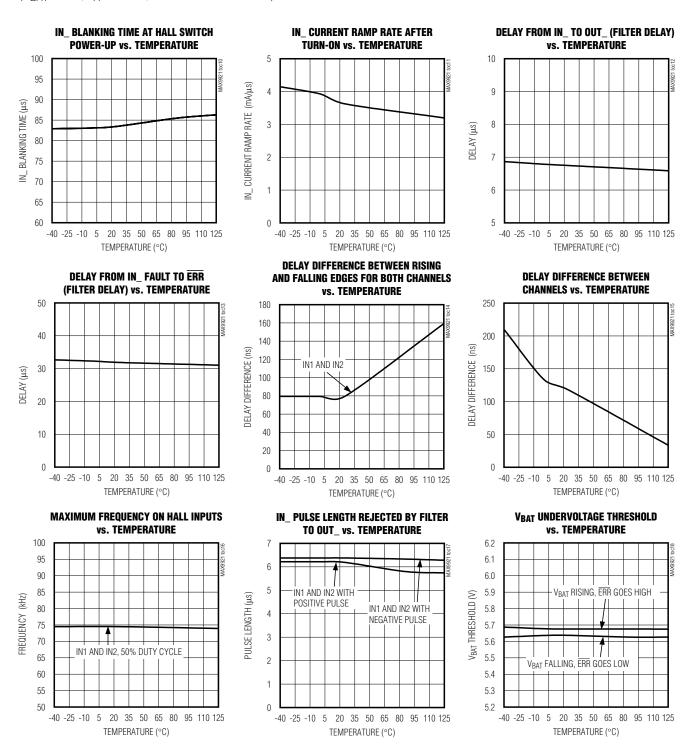

www.DataSheet4U.com

7

### **Typical Operating Characteristics (continued)**

MAX9921  $(V_{BAT} = 14V, T_A = +25^{\circ}C, unless otherwise noted.)$ 

> -15 -15

8

-10


-5


0


CHANGE IN ISET RESISTOR (%)

5 10


da<u>tasheet4u.com</u>

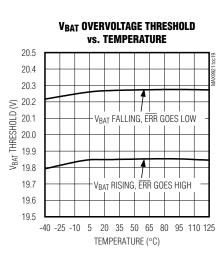

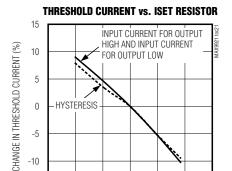

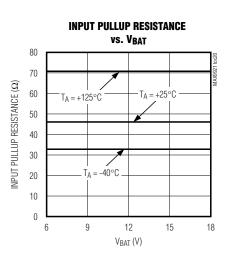


**RESPONSE OF INPUT TO SHORT TO GROUND** 

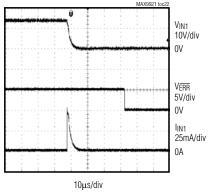



15

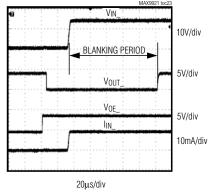

M/XI/M


Pin Description

PIN	NAME	FUNCTION				
1	BAT	Battery Power Supply. Connect BAT to the positive supply through an external reverse-polarity diode. Bypass to ground with a 0.1µF capacitor.				
2	ISET	Current-Setting Input. Connect a 63.4k $\Omega$ , 1% resistor (R <sub>ISET</sub> ) between BAT and ISET to set the standard current thresholds for Hall current sensing. Make no other connections to ISET. All routing must have low parasitic capacitance.				
3	IN1	Hall-Effect Sensor Input 1. Bypass IN1 to BAT or GND with a 0.01 $\mu$ F capacitor. Terminate an unused input with a 1.5k $\Omega$ resistor from IN1 to GND to prevent false error diagnostics.				
4	IN2	Hall-Effect Sensor Input 2. Bypass IN2 to BAT or GND with a 0.01 $\mu$ F capacitor. Terminate an unused input with a 1.5k $\Omega$ resistor from IN2 to GND to prevent false error diagnostics.				
5	GND	Ground				
6	OUT2	Open-Drain Output Signal 2. OUT2 is the signal translated from Hall Sensor 2. Connect a $10k\Omega$ or larger pullup resistor to logic supply.				
7	OUT1	Open-Drain Output Signal 1. OUT1 is the signal translated from Hall Sensor 1. Connect a 10k $\Omega$ or larger pullup resistor to logic supply.				
8	ERR	Open-Drain Diagnostic and Error Output. Connect a $10k\Omega$ or larger pullup resistor to logic supply. If DIAG is asserted low, a high on ERR indicates that there is no fault while a low on ERR indicates that either the battery voltage is out of range or there is a fault condition. If DIAG is high, ERR provides diagnostic information in conjunction with OUT1 and OUT2. See Tables 1 and 2. If OE is low or while in shutdown, ERR is high impedance.				
9	OE	Output Enable Input. OE has an internal $80k\Omega$ resistor to GND. Drive OE high to enable the outputs $\overline{\text{ERR}}$ , OUT1, and OUT2. Drive OE low to place the outputs in high impedance. If OE and DIAG are both low for more than 40µs, the device enters shutdown and all outputs are in high impedance. While in shutdown, if either OE or DIAG transitions low to high, the device exits shutdown mode.				
10	DIAG	Diagnostic Enable Input. DIAG has an internal 80kΩ resistor to GND. Drive DIAG low for normal operation. In this mode, ERR, OUT1, and OUT2 provide Hall sensor information. Drive DIAG high for diagnostic operation. A high-to-low transition initiates an attempt to restart, with a blanking cycle any Hall input that has been shut down. See Tables 1 and 2 (diagnostic truth tables). If OE and DIAG are both low for more than 40µs, the device enters shutdown mode with all outputs in high impedance. While in the shutdown mode, if either OE or DIAG transitions low to high, the device exits shutdown mode.				

**MAX9921** 

www.datasheet4u.com

MAX9924

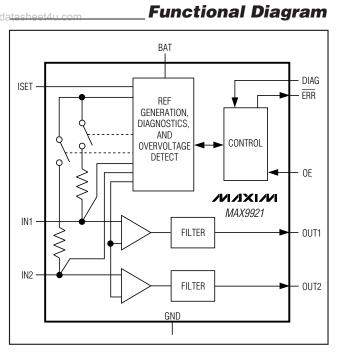

### **Detailed Description**

The MAX9921 connects two 2-wire Hall-effect sensors to a low-voltage  $\mu$ P. This device supplies current through IN1 and IN2 to Hall sensors and monitors the current level drawn by the Hall sensors. The MAX9921 outputs a high or low logic-level to the corresponding open-drain output (OUT1 or OUT2). If the current flowing out of either IN1 or IN2 exceeds the high input current threshold, the corresponding output goes high. If the current flowing out of either IN1 or IN2 is lower than the low input current threshold, the corresponding output goes low.

#### Hall Input Diagnostic

#### Normal Mode

In normal mode, DIAG is driven low. In this case, if ERR is high, the outputs (OUT1 and OUT2) indicate the high or low state of the corresponding Hall sensors (IN1 and IN2). In normal mode, a low ERR indicates a fault. If ERR is low, the outputs may be pulled low and may not indicate the high or low state of the Hall sensors. This can happen during the power-up, restart, or blanking cycles of the Hall inputs, or due to a fault on one or both of the Hall inputs, or when  $V_{BAT}$  is out of range, while the error output is low. If one output with the low logic-level indicates a fault or a restart and blanking cycle on the corresponding Hall or a runt to the summarizes normal mode operation.

#### **Diagnostic Mode**

When DIAG is driven high, the MAX9921 enters diagnostic mode. In this mode, OUT1 and OUT2 output diagnostic information. IN1 takes precedence over IN2. IN2's diagnostics remain masked until a fault on IN1 is cleared. For diagnostics and troubleshooting, when IN1 or IN2 shuts off due to an input short to ground, it continues to source 50µA. A falling edge at DIAG restarts a Hall input that has been shut off due to a short to ground.

Diagnostic indications are never latched internally and they indicate the real-time state of IN1 or IN2. Table 2 summarizes diagnostic mode operation.

#### **Hall Input Fault Detection**

If a fault is detected, the  $\overline{\text{ERR}}$  output is asserted low to notify the  $\mu P.$  This condition can occur due to the Hall input being shorted to ground, shorted to battery, or open.

INPUT		OUTPUT		DIAGNOSIS	COMMENT
DIAG	ERR	OUT1	OUT2	DIAGNOSIS	COMMENT
0	1	0 or 1	0 or 1	OUT1 and OUT2 indicate state of IN1 and IN2, respectively	Normal mode: No fault indication (outputs indicate Hall sensor high or low status)
0	0	0	0	Fault on IN1 and/or IN2, or V <sub>BAT</sub> out of range, or power-up or restart blanking (unknown current level of IN1 and IN2)	Normal mode: ERR asserted low indicates fault (outputs may no longer indicate the high or low state of the Hall sensors)
0	0	0	0 or 1	Fault on IN1 or restart blanking of IN1	Normal mode: ERR asserted low indicates fault; Hall output 2 continues signaling
0	0	0 or 1	0	Fault on IN2 or restart blanking of IN2	Normal mode: ERR asserted low indicates fault; Hall output 1 continues signaling

### Table 1. Diagnostic Truth Table (Normal Mode)



### www.da**Table 2. Diagnostic Truth Table (Diagnostic Mode)**

INPUT	OUTPUT			DIAGNOSIS
DIAG	ERR	OUT1	OUT2	DIAGNOSIS
1	0	0	0	No fault
1	0	0	1	IN1 open circuit, or IN1 open circuit and fault on IN2
1	0	1	0	IN1 shorted to battery, or IN1 shorted to battery and fault on IN2
1	0	1	1	IN1 shorted to ground, or IN1 shorted to ground and fault on IN2
1	1	0	0	$V_{\text{BAT}}$ out of range, or power-up or restart and blanking cycle (dominant fault masks all other faults)
1	1	0	1	IN2 open circuit
1	1	1	0	IN2 shorted to battery
1	1	1	1	IN2 shorted to ground

#### Hall Sensor Protection from Supply Transients

If the V<sub>BAT</sub> voltage is lower than 6V or exceeds 18V, IN1 and IN2 shut off current to both Hall sensors and ERR, OUT1, and OUT2 go low. When V<sub>BAT</sub> returns to the proper range, both IN1 and IN2 restart, following a blanking cycle.

#### Hall Inputs Open Condition

If either IN1 or IN2 is open ( $I_{IN} < 2mA$ ), the corresponding input shuts off current to the Hall sensor. If IN1 or IN2 is loaded, it exits the open input fault condition and restarts the corresponding Hall input, following a blanking cycle.

#### Hall Input Shorted to Battery

**MAX992** 

If either IN1 or IN2 is shorted to the battery ( $V_{IN} > V_{BAT}$  + 100mV), the MAX9921 shuts off current to the corresponding Hall sensor. In this case, if IN1 or IN2 is more than 1V above V<sub>BAT</sub>, it may back-drive current into BAT. In such a condition, the current level in the Hall input should not exceed 100mA. Therefore, all the MAX9921s together can share a separate reverse-polarity protection diode to avoid powering up other circuitry sharing a common diode (Figure 4).

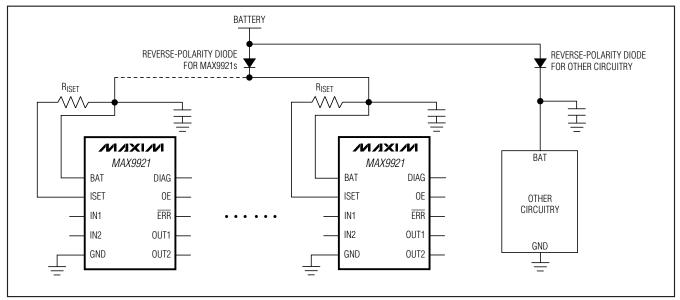


Figure 4. Several MAX9921s Connected to a Common Reverse-Polarity Diode

11

#### Hall Input Short-to-Ground

**C66X VI** switt rent a 50 man ECL blan due

The Hall input shorted-to-ground fault is effectively a latched condition if the input remains loaded by the Hall switch when the shorting condition is removed. The current required to power the Hall switch is shut off and only a 50 $\mu$ A pullup current remains. The Hall input can be manually re-energized or it can be re-energized by the ECU. A falling edge at DIAG initiates a restart with a blanking cycle of any Hall input that has been shut down due to the shorted-to-ground condition. During startup or restart, it is possible for a Hall input to charge up an external capacitance of 0.02 $\mu$ F without tripping into a shorted-to-ground latched state. All other fault conditions are not latched and when these other faults are removed, ERR goes high and the Hall input is again functional.

#### Manual Method for Re-Energizing Hall Sensor and Means for Diagnosing an Intermittent Hall Sensor Connection

Figure 5 shows the behavior of the MAX9921 when a Hall input is open. Figure 6 shows the behavior of the MAX9921 when the open input is reconnected to a Hall sensor. Figures 5 and 6 demonstrate how a shorted-to-ground Hall input can be reset.

Resetting a shorted-to-ground Hall input involves three steps:

- 1) Relieve the short to ground at the Hall sensor.
- 2) Disconnect the Hall input from the Hall sensor (open input fault condition).
- 3) Reconnect the Hall input to the Hall sensor.

The MAX9921 restarts the Hall input with a blanking cycle. If the Hall input is disconnected from the Hall sensor for 10ms, it allows the Hall input to be pulled up by the 50µA pullup current to register the open-input fault condition. Then, reconnecting the Hall input to the Hall sensor restarts the Hall input with a blanking cycle. This provides a manual means of re-energizing a Hall input without having to resort to the ECU to reset it. This also demonstrates that an intermittent connection to a Hall sensor can recover without intervention of the ECU. This gives the ECU a means of diagnosing an intermittent connection to a Hall sensor by using the diagnostic mode to detect a diagnostic sequence of "open-circuit" to "blanking cycle" to "no fault."

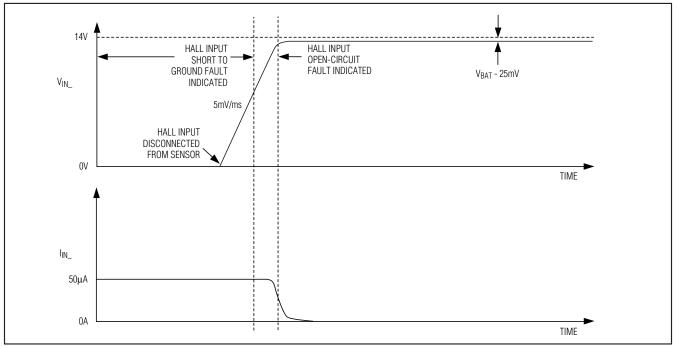


Figure 5. Hall Input Ramps to Open-Circuit Fault When Short to Ground is Relieved

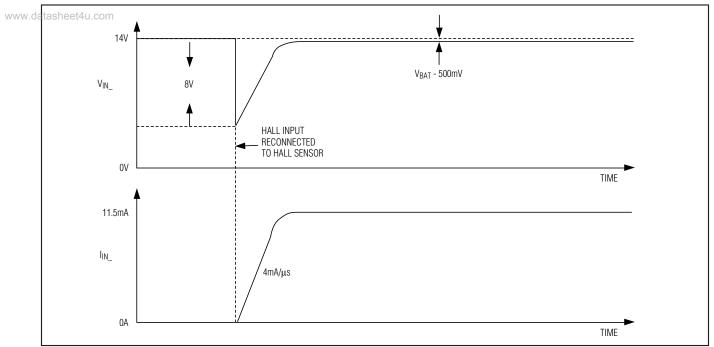


Figure 6. Hall Input Re-Energized When Open Input is Reconnected to Hall Sensor

### Table 3. Summary of Fault Protection and Recovery

EALU T		МА	X9921 ACTIONS	
FAULT DESCRIPTION	CRITERION	ERR OUTPUT	HALL INPUT RESPONSE	COMMENT/RECOVERY
V <sub>BAT</sub> < 6V		Asserted low	Shutoff current to both Hall sensors	Both IN1 and IN2 are restarted with blanking cycle when $V_{BAT}$ returns to proper range.
V <sub>BAT</sub> > 18V		Asserted low	Shutoff current to both Hall sensors	Both IN1 and IN2 are restarted with blanking cycle when $V_{BAT}$ returns to proper range.
Hall input open	I <sub>IN</sub> < 2mA	Asserted low	Shutoff current to corresponding Hall sensor	When a Hall input is again loaded, terminating open input condition, the Hall input are restarted with blanking cycle.
Hall input shorted to battery	VIN > VBAT due to external reverse-battery protection diode	Asserted low	Shutoff current to corresponding Hall sensor	If a Hall input is pulled more than 1V above $V_{BAT}$ , the input may back drive current into the BAT supply and pull $V_{BAT}$ up with it. In this condition, current levels in the Hall inputs should never exceed 100mA. For this reason, it is recommended that one or more MAX9921s be powered together and share a reverse-polarity diode separate from other circuitry.
Hall input shorted to ground	I <sub>IN</sub> > 23mA	Asserted low	Shutoff current to corresponding Hall sensor. 50µA of pullup current is sourced to IN1 or IN2 to aid in troubleshooting.	A falling edge at DIAG initiates a restart with a blanking cycle of any Hall input that has been shut off due to a short to ground. See Hall input short-to-ground description.



www.DataSheet4U.com

**MAX9921** 

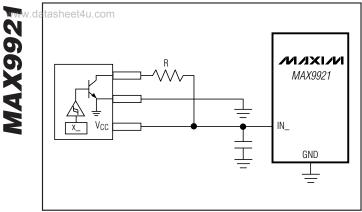


Figure 7. 3-Wire Hall-Effect Switches Configured as 2-Wire

### Applications Information

#### Hall-Effect Sensor Selection

The MAX9921 is optimized for use with 2-wire Halleffect switches or with 3-wire Hall-effect switches connected as 2-wire (Figure 7). When using a 3-wire Hall sensor, the resistor R is chosen so that the current drawn by the Hall sensor crosses the MAX9921 current threshold when the magnetic threshold of the Hall sensor is exceeded.

Table 4 shows a partial list of mostly 2-wire Hall switches, which can be used with the MAX9921.

#### Hall Input Bypass Capacitor

The MAX9921 is optimized for use with external protection  $0.01\mu$ F capacitors from both IN1 and IN2 to BAT. These are essential to ensure robustness against automotive transients. These capacitors may be tied to GND instead of to BAT, but the connection to BAT is recommended.

#### **Low-Voltage Operation**


To ensure correct operation of the Hall sensor at low input voltages, it is important to consider the voltage drop of the MAX9921 with low battery voltages. This dropout voltage can be calculated using the formula:

#### VDROPOUT = IHALL X RPU

I<sub>HALL</sub> is the maximum current which must be supplied to the Hall sensor and R<sub>PU</sub> is the internal resistance of the MAX9921, nominally 50 $\Omega$  (see the Input Pullup Resistance vs. V<sub>BAT</sub> graph in the *Typical Operating Characteristics*). As an example, assume the use of a HAL573 sensor, which draws a maximum current of 17mA. The dropout voltage is then 850mV and the approximate minimum voltage supplied to the Hall sensor is 6V - 0.85V = 5.15V, which is higher than the minimum operating voltage of 3.75V specified for the HAL573.

PART	MANUFACTURER	WEBSITE	COMMENT
HAL573-6	Micronas	www.micronas.com	2-wire
HAL556/560/566	Micronas	www.micronas.com	2-wire
HAL581/584	Micronas	www.micronas.com	2-wire
A1140/1/2/3	Allegro	www.allegromicro.com	2-wire
3161	Allegro	www.allegromicro.com	3-wire, optimized for 2-wire use without added resistor
TLE4941/C	Infineon	www.infineon.com	2-wire

#### Table 4. Partial List of Compatible Hall Switches

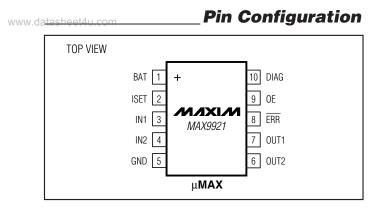

\_Chip Information

PROCESS: BICMOS

### Package Information

For the latest package outline information and land patterns, go to **www.maxim-ic.com/packages**.

PACKAGE TYPE	PACKAGE CODE	DOCUMENT NO.
10 µMAX	U10+2	<u>21-0061</u>

on MAX9921

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600 \_\_

© 2008 Maxim Integrated Products

is a registered trademark of Maxim Integrated Products, Inc. www.DataSheet4U.com

\_\_\_\_ 15