ROHM

STRUCTURE	Silicon Monolithic Integrated Circuit
NAME OF PRODUCT	DC-AC Inverter Control IC
TYPE	B D 9 8 8 4 F V
FUNCTION	•2ch control with Half-bridge

- ·Lamp current and voltage sense feed back control
- · Sequencing easily achieved with Soft Start Control
- Short circuit protection with Timer Latch
- Under Voltage Lock Out
- Short circuit protection with over voltage
- Mode-selectable the operating or stand-by mode by stand-by pin
- ·2ch BURST mode selectivity in-phase or reversed phase
- Synchronous operating the other BD9884FV IC's

\bigcirc Absolute Maximum Ratings (Ta = 25°C)

Parameter	Symbol	Limits	Unit
Supply Voltage	Vcc	12	V
Operating Temperature Range	Topr	-35~+85	ۍ ۲
Storage Temperature Range	Tstg	-55~+125	с С
Power Dissipation	Pd	850*	mW
Maximum Junction Temperature	Tjmax	+125	Ĵ

*Pd derated at 8.5mW/°C for temperature above Ta = 25°C (When mounted on a PCB 70.0mm×70.0mm×1.6mm)

ORecommended operating condition

Parameter	Symbol	Limits	Unit
Supply voltage	Vcc	5.0~11.0	V
CT oscillation frequency	fct	20~150	kHz
BCT oscillation frequency	fвст	0.05~0.50	kHz

Status of this document

The Japanese version of this document is the official specification.

Please use the translation version of this document as a reference to expedite understanding of the official version.

If these is any uncertainty in translation version of this document, official version takes priority.

ROHM


OElectric Characteristics (Ta=25°C, VCC=7V)

Parameter	Symbol		Limits		Unit	Conditions
		MIN.	TYP.	MAX.		
((WHOLE DEVICE))	1					
Operating current		_	9.0	17.0	mA	CT=0.5V
Stand-by current	lcc2	-	4	10	μA	
((OVER VOLTAGE DETECT))	11-16	0.70	2 00			· · · · · · · · · · · · · · · · · · ·
FB over voltage detect voltage	Vovf	2.70	3.00	3.30	V	
((STAND BY CONTROL)) Stand-by voltage H1	T	r		1	1	· · · · · · · · · · · · · · · · · · ·
(BURST mode in reverse phase)	VstH1	2.4	—	VCC	V V	System ON
Stand-by voltage H2						
(BURST mode in phase)	VstH2	1.4	_	1.8	V V	System ON
Stand-by voltage L	VstL	-0.3	-	0.5	v	System OFF
Stand-by hysteresis	⊿Vst	0.10	0.25	0.40	V	· · · · · · · · · · · · · · · · · · ·
((TIMER LATCH))						•
Timer Latch voltage	Уср	1.8	2.0	2.2	V	
Timer Latch current	Іср	0.5	1.0	1.5	μA	
((OSC BLOCK))		•				
OSC constant current	ICT	1.35/RT	1.5/RT	1.65/RT	A	
OSC Max voltage	VoscH	1.8	2.0	2.2	V	fCT=60kHz
OSC Min voltage	VoscL	0.3	0.5	0.7	v	fCT=60kHz
MAX DUTY	MAXDUTY	44	46.5	49	*	fCT=60kHz
Soft start current	Iss	1.0	2.0	3.0	μA	
IS COMP detect Voltage	Visc	0.45	0.60	0.75	v v	
SS COMP detect voltage	Vss	2.0	2.2	2.4	v	<u> </u>
SRT ON resistance	RSRT	-	200	400	Ω	
((UVLO BLOCK))					.1	
Operating voltage	VuvToH	4.100	4.300	4.500	V	
Lock out voltage	VuvloL	3.900	4.100	4.300	V	
Operating voltage (External UVLO)	Vuvlo1	1.900	2,000	2.100	V	
Lock out voltage (External UVLO)	Vuv lo2	2.100	2.200	2.300	V	
((FEED BACK BLOCK))						
IS threshold voltage	Vis	1.220	1.250	1.280	v	
VS threshold voltage	Vvs	1.220	1.250	1.280	v	
IS source current 1	lis1	<u> </u>		1.5	μA	DUTY=2.0V
IS source current 2	lis2	13.0	20.0	27.0	μA	DUTY=0V, IS=0.5V
VS source current	lvs	-		1.0	μÅ	
((OUTPUT BLOCK))						
Pch output voltage H	VoutPH	VCC-0.3	VCC-0.1	- T	V	
Nch output voltage H	VoutNH	VCC-0.3	VCC-0.1	_	V	
Pch output voltage L	VoutPL		0.1	0.3	V	
Nch output voltage L	VoutNL	-	0.1	0.3	V	
Pch output_sink_resistance	RsinkP	-	8	16	Ω	
Pch output source resistance	RsourceP		10	20	Ω	
Nch output sink resistance	RsinkN		8	16	Ω	
Nch output source resistance	RsourceN		10	20	Ω	
((BURST MODE BLOCK))					T	
BOSC Max voltage	VburH	1.92	2.0	2.08	V	fBCT=0.3kHz
BOSC Win Voltage	VourL	0.4	0.5	0.6	v	fBCT=0.3kHz
BOSC constant current	IBCT	1.35/BRT	1.5/BRT	1.65/BRT	A	
((REG BLOCK))		· · · · · ·				1
REG output voltage	VREG	3.038	3.100	3.162	v	
REG source current	IREG	5.0		-	mA	†
VREF voltage	Vref	1.220	1.250	1.280	V V	
((COMP BLOCK))				1	I	
Over voltage detect	VCOMPH	2.20	2.5	2.80	V	
Under voltage detect	VCOMPL	0.590	0.640	0.690	v	
((PROTECT CLOCK))		· · ·		-	•	
((ITIOTEDT DECONT))						
Normal output voltage	VPH	2.9	3.1	3.3	v	


(This product is not designed for normal operation with in a radio active environment.)

ROHM

OPackage Dimensions

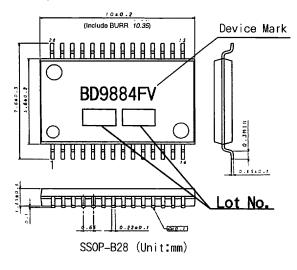

OBlock Diagram

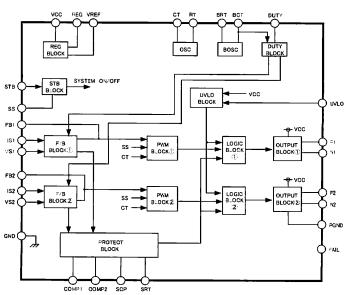

		•		
Pin No.	Pin Name	Function		
1	DUTY	Control PWM mode and BURST mode		
2	BRT	External resistor from BRT to GND for adjusting the BURST triangle oscillator		
3	вст	External capacitor from BCT to GND for adjusting the BURST triangle oscillator		
4	RT	External resistor from SRT to RT for adjusting the triangle oscillator		
5	SRT	External resistor from SRT to RT for adjusting the triangle oscillator		
6	ст	External capacitor from CT to GND for adjusting the triangle oscillator		
77	GND	GROUND		
8	FB1	Error amplifier output①		
9	IS1	Error amplifier input①		
10	VS1	Error amplifier input@		
11	FB2	Error amplifier output②		
12	1S2	Error amplifier input③		
13	VS2	Error amplifier input④		
14	VREF	Reference voltage for ISNECE, VSENCE error amplifier		
15	FAIL	Protect clock output		
16	STB	Stand-by switch		
17	COMP1	Under, over voltage detect for 1ch		
18	COMP2	Under, over voltage detect for 2ch		
19	UVLO	External Under Voltage Lock OUT		
20	REG	Internal regulator output		
21	SS	External capacitor from SS to GND for Soft Start Control		
22	SCP	External capacitor from SCP to GND for Timer Latch		
23	P2	FET driver for 2ch		
24	N2	FET driver for 2ch		
25	PGND	Ground for FET drivers		
26	N1	FET driver for 1ch		
27	P1	FET driver for 1ch		
28	VCC	Supply voltage input		

OPin Description



ONOTE FOR USE

- 1. When designing the external circuit, including adequate margins for variation between external devices and the IC.Use adequate margins for steady state and transient characteristics.
- 2. Recommended Operating Range

The circuit functionality is guaranteed within of ambient temperature operation range as long as it is within recommended operating range. The standard electrical characteristic values cannot be guaranteed at other voltages in the operating ranges, however, the variation will be small.

3. Mounting Failures

Mounting failures, such as misdirection or miscounts, may harm the device.

4. Electromagnetic Fields


A strong electromagnetic field may cause the IC to malfunction.

- 5. The GND pin should be the location within $\pm 0.3V$ compared with the PGND pin
- 6. BD9884FV has the short circuit protection with Thermal Shut Down System. When STB or Vcc pin re-supplied, They enables to cancel the latch. If It rise the temperature of the chip more than 170°C (TYP), It make the external FET OFF
- 7. Absolute maximum ratings are those values that, if exceeded, may cause the life of a device to become significantly shortened. Moreover, the exact failure mode caused by short or open is not defined. Physical countermeasures, such as a fuse, need to be considered when using a device beyond its maximum ratings.
- 8. About the external FET, the parasitic Capacitor may cause the gate voltage to change, when the drain voltage is switching. Make sure to leave adequate margin for this IC variation.
- 9. On operating Slow Start Control (SS is less than 2.2V), It does not operate Timer Latch.
- 10. By STB voltage, BD9884FV is changed to 3 states. Therefore, do not input STB pin voltage between one state and the other state (0.5~1.4V, 1.8~2.4V).
- 1 1. The pin connected a connector need to connect to the resistor for electrical surge destruction.
- 1 2. This IC is a monolithic IC which (as shown is Fig-1)has P* substrate and between the various pins. A P-N junction is formed from this P layer of each pin. For example, the relation between each potential is as follows,

 \odot (When GND > PinB and GND > PinA, the P-N junction operates as a parasitic diode.)

 \bigcirc (When PinB > GND > PinA, the P-N junction operates as a parasitic transistor.)

Parasitic diodes can occur inevitably in the structure of the IC. The operation of parasitic diodes can result in mutual interference among circuits as well as operation faults and physical damage. Accordingly you must not use methods by which parasitic diodes operate, such as applying a voltage that is lower than the GND(P substrate)voltage to an input pin.

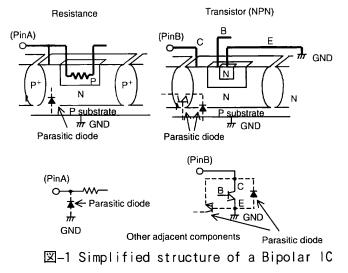

Notes

- No technical content pages of this document may be reproduced in any form or transmitted by any means without prior permission of ROHM CO.,LTD.
- The contents described herein are subject to change without notice. The specifications for the product described in this document are for reference only. Upon actual use, therefore, please request that specifications to be separately delivered.
- Application circuit diagrams and circuit constants contained herein are shown as examples of standard use and operation. Please pay careful attention to the peripheral conditions when designing circuits and deciding upon circuit constants in the set.
- Any data, including, but not limited to application circuit diagrams information, described herein are intended only as illustrations of such devices and not as the specifications for such devices. ROHM CO.,LTD. disclaims any warranty that any use of such devices shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such devices.
- Upon the sale of any such devices, other than for buyer's right to use such devices itself, resell or otherwise dispose of the same, no express or implied right or license to practice or commercially exploit any intellectual property rights or other proprietary rights owned or controlled by
- ROHM CO., LTD. is granted to any such buyer.
- Products listed in this document are no antiradiation design.

The products listed in this document are designed to be used with ordinary electronic equipment or devices (such as audio visual equipment, office-automation equipment, communications devices, electrical appliances and electronic toys).

Should you intend to use these products with equipment or devices which require an extremely high level of reliability and the malfunction of with would directly endanger human life (such as medical instruments, transportation equipment, aerospace machinery, nuclear-reactor controllers, fuel controllers and other safety devices), please be sure to consult with our sales representative in advance.

About Export Control Order in Japan

Products described herein are the objects of controlled goods in Annex 1 (Item 16) of Export Trade Control Order in Japan.

In case of export from Japan, please confirm if it applies to "objective" criteria or an "informed" (by MITI clause) on the basis of "catch all controls for Non-Proliferation of Weapons of Mass Destruction.

ROHM

Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact your nearest sales office.

Please contact our sales offices for details ;

U.S.A / San Diego Atlanta Dallas	TEL : +1(858)625-3630 TEL : +1(770)754-5972 TEL : +1(972)312-8818	FAX : +1(858)625-3670 FAX : +1(770)754-0691 FAX : +1(972)312-0330
Germany / Dusseldorf	TEL : +49(2154)9210	FAX : +49(2154)921400
United Kingdom / London	TEL : +44(1)908-282-666	FAX : +44(1)908-282-528
France / Paris	TEL : +33(0)1 56 97 30 60	FAX : +33(0) 1 56 97 30 80
China / Hong Kong Shanghai Dilian Beijing	TEL : +852(2)740-6262 TEL : +86(21)6279-2727 TEL : +86(411)8230-8549 TEL : +86(10)8525-2483	FAX : +852(2)375-8971 FAX : +86(21)6247-2066 FAX : +86(411)8230-8537 FAX : +86(10)8525-2489
Taiwan / Taipei	TEL : +866(2)2500-6956	FAX : +866(2)2503-2869
Korea / Seoul	TEL : +82(2)8182-700	FAX : +82(2)8182-715
Singapore	TEL : +65-6332-2322	FAX : +65-6332-5662
Malaysia / Kuala Lumpur	TEL : +60(3)7958-8355	FAX : +60(3)7958-8377
Philippines / Manila	TEL : +63(2)807-6872	FAX : +63(2)809-1422
Thailand / Bangkok	TEL : +66(2)254-4890	FAX : +66(2)256-6334

Tokyo	2-1-1, Yaesu, Chuo-ku, Tokyo 104-0082 TEL : +81(3)5203-0321 FAX : +81(3)5203-0300
Yokohama	2-4-8, Shin Yokohama, Kohoku-ku, Yokohama, Kanagawa 222-8575 TEL : +81(45)476-2131 FAX : +81(45)476-2128
Nagoya	Dainagayo Building 9F 3-28-12, Meieki, Nakamura-ku, Nagoya,Aichi 450-0002 TEL : +81(52)581-8521 FAX : +81(52)561-2173
Kyoto	579-32 Higashi Shiokouji-cho, Karasuma Nishi-iru, Shiokoujidori, Shimogyo-ku Kyoto 600-8216 TEL : +81(75)311-2121 FAX : +81(75)314-6559
Contact addr	ess for overseas customers in Japan)
Yokohama	TEL : +81(45)476-9270 FAX : +81(045)476-9271

As of 18th. April 2005