

October 31, 2005

# PQ-MDS-PCIEXP PCI Expansion Adaptor Board 084-00195-1

User's manual

1 PCI Expansion Adapter Board 084-00195-1UM

Rev1.1



### **Table of Contents**

1.	General	. 3
2.	Form factor	. 3
3.	Power sequence.	. 4
4.	Data interface	5
5.	Compatibility	. 5
6.	Identification	5
7	Interrupts	6




#### 1. General

This document details technical specification of the PCI Expansion Adapter Board (**PQ-MDS-PCIEXP**) targeted be used with 83xx I/O board to provide standard PCI slot's data interface to Host CPU and power supply to inserted PCI cards.

#### 2. Form factor

**PQ-MDS-PCIEXP** realized as single PCB board to provide interconnections between corresponding ATCA PMC connectors placed on the **PQ-MDS-PIB** Platform I/O Board and standard PCI slots. ATX PS connector provides accessing to external PS guaranteeing powering of the PCI cards inserted into the slots. Layout of the **PQ-MDS-PCIEXP** represented in the Figure 1.

Figure 1

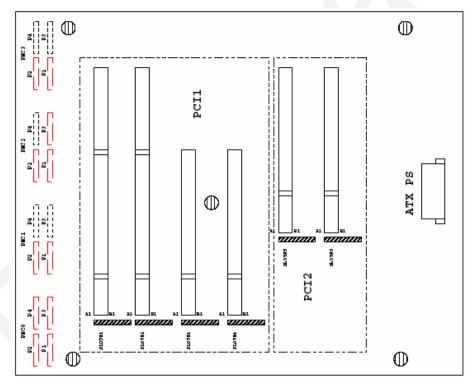

1. - Assembled
2. - Not populated
3. - Slot for PCI card bracket
4. - Board feet

3


PCI Expansion Adapter Board 084-00195-1UM

LEGEND:



## 3. Power supply

To secure fail-safe interconnection between **PQ-MDS-PIB** and PCI Add-in card/cards inserted into the **PQ-MDS-PCIEXP** slots PCI interface buffers placed on **PQ-MDS-PIB** board should be 3-stated until signal Power-OK from ATX PS (OK) received. In its turn this signal produced by ATX PS after ATX PS\_ON- signal from **PQ-MDS-PIB** board (OK) received, and all voltages supplied by PS are stable. To summarize this explanation power sequence timing-diagram represented in the Figure 2.

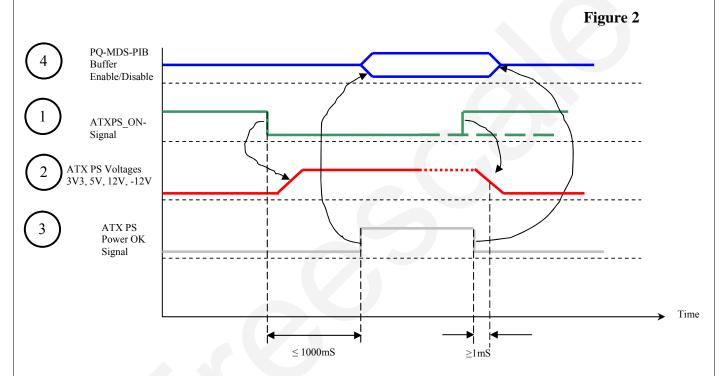

To simplify integration procedure there is the service jumper populated in the **PQ-MDS-PCIEXP**, which provide manual ATX PS\_ON signal to the PS or remote one from **PQ-MDS-PIB** board as it's explained above (short J1 pins 1-2 or 2-3 correspondingly). Usage of external ATX PS to supply inserted PCI cards provide capability to use up to 6 add-in cards without any power consumption restriction.

Two LED's are populated on the board to indicate:

- ATX-PS connection (PS-RDY) and
- Normal operation (PWR-ON)

J1 default – short 1-2 pins (Manual ATX PS Control)

4

PCI Expansion Adapter Board 084-00195-1UM

Rev1 1



#### 4. Data interface

**PQ-MDS-PCIEXP** supports 6 PCI slots ensuring following buses:

- PCI1 64bit 2slots (#1,2)
- PCI1 32bit 4slots (#1...4)
- PCI2 32bit 2slots (#5,6)

# 5. Compatibility

PQ-MDS-PCIEXP supports both 3V3 and 5V0 PCI Add-in cards

#### 6. Identification

PCI slots allocated on the **PQ-MDS-PCIEXP** are use corresponding IDSEL signals connected each one to the AD bus as shows in the Table 1

Table 1

Slot#	IDSEL signal connected to	Note
1	PCI1_AD21	
2	PCI1_AD22	
3	PCI1_AD23	
4	PCI1_AD24	
5	PCI2_AD25 (PCI1_AD57)	
6	PCI2_AD26 (PCI1_AD58)	



**7. Interrupts**Interrupt signals from all slots are implemented in compliance with PCI standard and represented in the Table 2.

Table 2

	Slot #						
Interrupt	1	2	3	4	5	6	Note
	Pin#						
INTA-	A6	В7	A7	В8	A6	B7	
INTB-	В7	A7	В8	A6	В7	A7	
INTC-	A7	В8	A6	В7	A7	B8	
INTD-	В8	A6	B7	A7	B8	A6	