



**LK204-7T-1U**  
**Technical Manual**

**Revision: 1.2**

# Contents

<b>Contents</b>	<b>ii</b>
<b>1 Getting Started</b>	<b>1</b>
1.1 Display Options Available . . . . .	1
1.2 Accessories . . . . .	2
1.3 Features . . . . .	4
1.4 Connecting to a PC . . . . .	4
1.5 Installing the Software . . . . .	5
1.5.1 uProject . . . . .	5
<b>2 Hardware Information</b>	<b>6</b>
2.1 Standard Power Cable Connector . . . . .	7
2.2 Communication Connectors . . . . .	8
2.2.1 Power/Data Connector for Non-USB modules only . . . . .	8
2.2.2 USB Mini-B Connector for USB modules only . . . . .	9
2.3 DB-9 Connector - For Non-USB modules only . . . . .	9
2.3.1 Power Through DB-9 Jumper - for Non-USB modules only . . . . .	10
2.4 Alternate Communication Headers . . . . .	11
2.4.1 Serial Header for Non-USB modules only . . . . .	11
2.4.2 Optional Internal USB Header for USB modules only . . . . .	12
2.5 Protocol Select Jumpers . . . . .	12
2.6 General Purpose Outputs . . . . .	13
2.7 Manual Override . . . . .	14
<b>3 Troubleshooting</b>	<b>15</b>
3.1 The display does not turn on when power is applied. . . . .	15
3.2 The display module is not communicating. . . . .	16
3.3 The display module is communicating, however text cannot be displayed. . . . .	16
<b>4 Communications</b>	<b>16</b>
4.1 Introduction . . . . .	16
4.1.1 I <sup>2</sup> C Communication Summary . . . . .	16
4.1.2 I <sup>2</sup> C Transaction Example . . . . .	17
4.1.3 Serial Communication . . . . .	18
4.1.4 USB Communication . . . . .	18
4.2 Changing the I <sup>2</sup> C Slave Address . . . . .	18
4.3 Changing the Baud Rate . . . . .	19
4.4 Setting a Non-Standard Baud Rate . . . . .	19
<b>5 Text</b>	<b>21</b>
5.1 Introduction . . . . .	21
5.1.1 Character Set . . . . .	21
5.1.2 Control Characters . . . . .	22
5.2 Auto Scroll On . . . . .	22

5.3	Auto Scroll Off . . . . .	22
5.4	Clear Screen . . . . .	22
5.5	Changing the Startup Screen . . . . .	23
5.6	Set Auto Line Wrap On . . . . .	23
5.7	Set Auto Line Wrap Off . . . . .	23
5.8	Set Cursor Position . . . . .	24
5.9	Go Home . . . . .	24
5.10	Move Cursor Back . . . . .	24
5.11	Move Cursor Forward . . . . .	25
5.12	Underline Cursor On . . . . .	25
5.13	Underline Cursor Off . . . . .	25
5.14	Blinking Block Cursor On . . . . .	25
5.15	Blinking Block Cursor Off . . . . .	26
<b>6</b>	<b>Special Characters</b>	<b>26</b>
6.1	Introduction . . . . .	26
6.2	Creating a Custom Character . . . . .	26
6.3	Saving Custom Characters . . . . .	27
6.4	Loading Custom Characters . . . . .	28
6.5	Save Startup Screen Custom Characters . . . . .	28
6.6	Initialize Medium Number . . . . .	29
6.7	Place Medium Numbers . . . . .	29
6.8	Initialize Large Numbers . . . . .	30
6.9	Place Large Number . . . . .	30
6.10	Initialize Horizontal Bar . . . . .	30
6.11	Place Horizontal Bar Graph . . . . .	31
6.12	Initialize Narrow Vertical Bar . . . . .	31
6.13	Initialize Wide Vertical Bar . . . . .	31
6.14	Place Vertical Bar . . . . .	32
<b>7</b>	<b>General Purpose Output</b>	<b>32</b>
7.1	Introduction . . . . .	32
7.2	General Purpose Output Off . . . . .	34
7.3	General Purpose Output On . . . . .	34
7.4	Set Startup GPO state . . . . .	34
<b>8</b>	<b>Dallas 1-Wire</b>	<b>35</b>
8.1	Introduction . . . . .	35
8.2	Search for a 1-Wire Device . . . . .	35
8.3	Dallas 1-Wire Transaction . . . . .	36
<b>9</b>	<b>Keypad</b>	<b>37</b>
9.1	Introduction . . . . .	37
9.2	Auto Transmit Key Presses On . . . . .	38
9.3	Auto Transmit Key Presses Off . . . . .	38
9.4	Poll Key Press . . . . .	39
9.5	Clear Key Buffer . . . . .	39

9.6	Set Debounce Time	39
9.7	Set Auto Repeat Mode	40
9.8	Auto Repeat Mode Off	41
9.9	Assign Keypad Codes	41
9.10	Keypad Backlight Off	42
9.11	Set Keypad Brightness	42
9.12	Set and Save Keypad Brightness	43
<b>10</b>	<b>Display Functions</b>	<b>43</b>
10.1	Introduction	43
10.2	Display On	43
10.3	Display Off	44
10.4	Set Brightness	44
10.5	Set and Save Brightness	44
10.6	Set Backlight Base Colour	45
10.7	Set Contrast	45
10.8	Set and Save Contrast	46
<b>11</b>	<b>Data Security</b>	<b>46</b>
11.1	Introduction	46
11.2	Set Remember	46
11.3	Data Lock	47
11.4	Set and Save Data Lock	48
11.5	Write Customer Data	49
11.6	Read Customer Data	49
<b>12</b>	<b>Miscellaneous</b>	<b>49</b>
12.1	Introduction	49
12.2	Read Version Number	49
12.3	Read Module Type	50
<b>13</b>	<b>Command Summary</b>	<b>52</b>
13.1	Communications	52
13.2	Text	52
13.3	Special Characters	53
13.4	General Purpose Output	54
13.5	Dallas 1-Wire	54
13.6	Keypad	54
13.7	Display Functions	55
13.8	Data Security	56
13.9	Miscellaneous	56
13.10	Command By Number	56

<b>14 Appendix</b>	<b>58</b>
14.1 Specifications . . . . .	58
14.1.1 Environmental . . . . .	58
14.1.2 Electrical . . . . .	58
14.2 Optical Characteristics . . . . .	59
14.3 Physical Layout . . . . .	59
14.4 Ordering Information . . . . .	61
14.5 Definitions . . . . .	61
14.6 Contacting Matrix Orbital . . . . .	62
14.7 Revision History . . . . .	62

# 1 Getting Started



Figure 1: LK204-7T-1U

The LK204-7T-1U is an intelligent graphic LCD display designed to decrease development time by providing an instant solution to any project. With the ability to communicate via serial RS-232/TTL and I<sup>2</sup>C protocols, the versatile LK204-7T-1U can be used with virtually any controller. Furthermore, the LK204-7T-1U-USB has the ability to communicate via USB. The ease of use of these displays is further enhanced by an intuitive command structure to allow display settings such as backlight brightness, contrast and baud rate to be software controlled. Additionally, up to thirty-two custom characters such as character sets for bar graphs, medium and large numbers may be stored in the non-volatile memory to be easily recalled and displayed at any time.

## 1.1 Display Options Available

Both the (Non-USB) LK204-7T-1U and the (USB) LK204-7T-1U-USB modules come in a variety of colours, including the standard grey text with yellow-green background, grey text with white background, white text with blue background, and stylish tricolor text on black background. Voltage and temperature options are also available to allow you to select the display which will best fit your project needs.

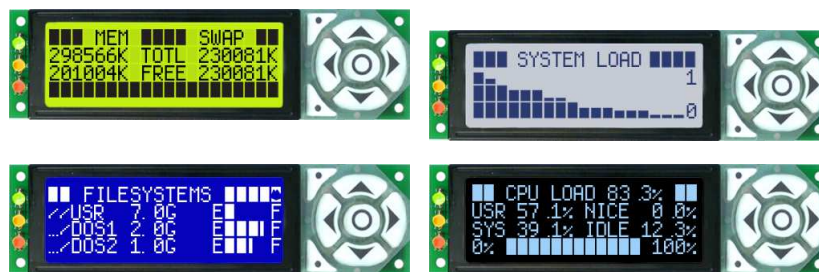


Figure 2: LK204-7T-1U Options

## 1.2 Accessories

---

**NOTE** Matrix Orbital provides all the interface accessories needed to get your display up and running. You will find these accessories and others on our e-commerce website at <http://www.matrixorbital.com>. To contact a sales associate see Section 14.6 for contact information.

---



Figure 4: 5V Power Adapter



Figure 3: Standard Power



Figure 5: 3ft Mini-B USB Cable



Figure 6: Breadboard Cable

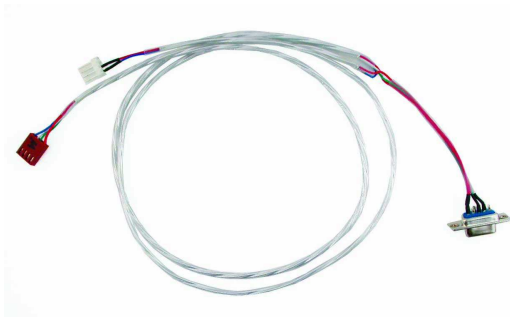


Figure 7: Communication & Power Cable

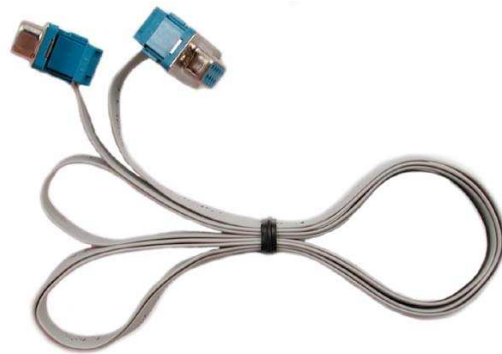


Figure 8: Serial Cable





Figure 9: PC Bay Insert

## 1.3 Features


- 20 column by 4 line alphanumeric liquid crystal display
- Selectable communication protocol, RS-232 or I<sup>2</sup>C for Non-USB model; USB only for USB models
- 128 byte buffered communication
- Lightning fast communication speeds, up to 115 kbps for RS-232 and 100 kbps for I<sup>2</sup>C
- Default 19.2 kbps serial communication speed
- Use of up to 127 modules on the same 2 wire I<sup>2</sup>C interface
- Extended temperature available for extreme environments of -20C to 70C
- Low Voltage Power Supply Available
- Built in font with provision for up to 8 user defined characters
- Ability to add a customized splash / startup screen
- Adjustable contrast and backlight brightness
- Horizontal or vertical bar graphs
- Built in tactile keypad
- 3 Built in Tri-color LED's
- 3 Multi purpose low power 3.3v GPOs

## 1.4 Connecting to a PC


The LK204-7T-1U Non-USB connects seamlessly to a PC and it is an excellent means of testing the functionality and uploading new fonts and bitmaps. You will require a standard RS-232 9-pin serial cable such as the one pictured in Figure 8, as well as a modified 5V power adapter such as the one pictured in Figure 4.

In order to connect your Non-USB display to a personal computer follow these easy instructions:

1. Plug the serial cable into the com port you wish to use.
2. Connect the modified 5V power adapter to a power lead from your PC power supply (you will have to open your computer case).
3. Connect the serial cable to the DB-9 connector on the back of the display.
4. Connect the 5V power adapter to the 4-pin connector on the back of the display.

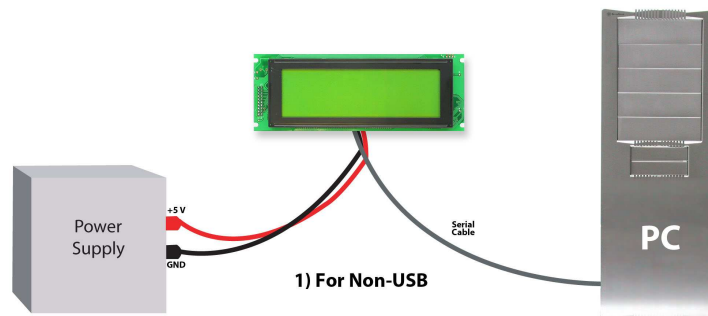

In order to connect your USB display to a personal computer simply plug the mini-B USB cable from the PC to the USB connector on the display.

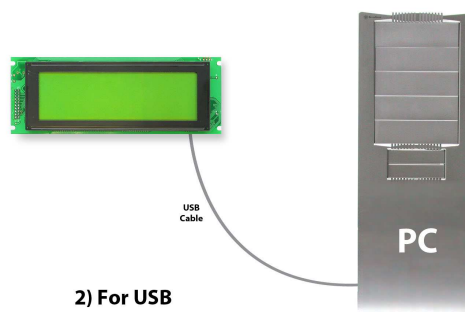

In order to power your USB display from a non-USB source simply plug the Power Cable Standard into the back of the display and the other end to a suitable power source. There is no communication through the Power Cable Standard.

## 1.5 Installing the Software

### 1.5.1 uProject

uProject was designed by Matrix Orbital to provide a simple and easy to use interface that will allow you to test all of the features of our alpha numeric displays.

To install uProject from the Matrix Orbital CD, follow the following steps:

1. Insert the Matrix Orbital CD-ROM into the CD drive
2. Locate the file, uProject.exe, which should be in the "CD-drive:\Download" directory.
3. Copy uProject.exe to a directory that you wish to run it from.

4. Double click on "uProject.exe"

Be sure to check the information selected in the COM Setup the first time uProject is run. Once this information is entered correctly the program can be used to control all functions of the graphic display.



**Comport** The serial port the display is plugged in to.

**Baudrate** The communication speed the display module is s

Figure 10: uProject Settings

---


## NOTES

- uProject and other alphanumeric software may also be downloaded from Matrix Orbital's support site at [http://www.matrixorbital.ca/software/software\\_alpha/](http://www.matrixorbital.ca/software/software_alpha/)

---


## 2 Hardware Information

Refer to the following diagram for this chapter:

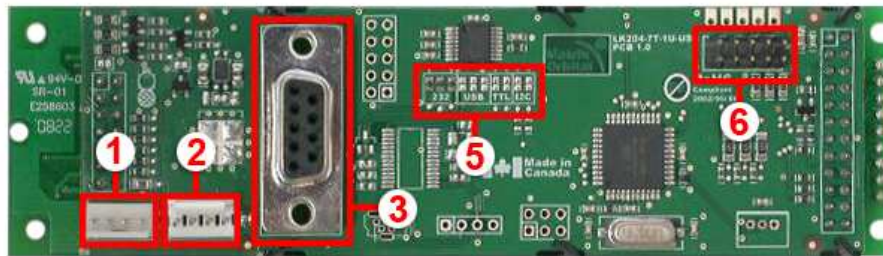

- 1** Standard Power Cable Connector
- 2** Power/Data Connector
- 3** DB9 Connector
- 4** Location for optional Serial Header
- 5** Protocol Select Jumpers
- 6** GPOs

Figure 11: LK204-7T-1U Non-USB

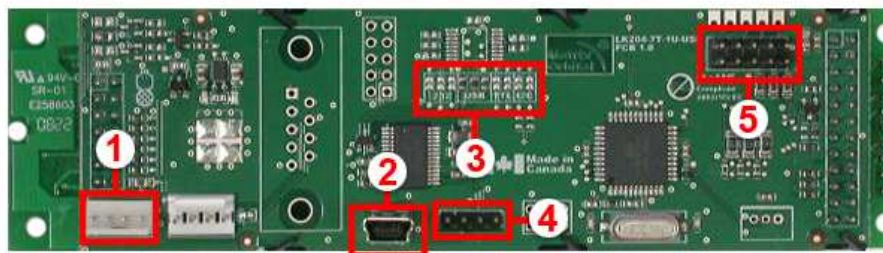

- 1** Standard Power Cable Connector
- 2** USB mini-B Connector
- 3** Protocol Select Jumpers
- 4** Location for optional internal USB cable header\*
- 5** GPOs

Figure 12: LK204-7T-1U USB

---

**NOTE** The USB module can have a header populated at your request to allow for an internal USB cable, talk to a Sales representative for details.

---

## 2.1 Standard Power Cable Connector

Power to the LK204-7T-1U can be supplied using the standard Power/Data or USB connectors on the non-USB and USB models respectively, or through the standard power cable connector. This alternate power header allows a standard floppy cable to be inserted and used to provide power to the device. The power requirements for both the non-USB and USB versions of the LK204-7T-1U are shown below.

Table 1: Power Requirements

	Standard	-LV
Supply Voltage	+5Vdc $\pm$ 0.25V	+3.3Vdc $\pm$ 0.25V
Supply Current	mA typical	
Supply Backlight Current	mA typical	

---

#### WARNINGS




- Do not apply any power with reversed polarization.
  - Do not apply any voltage other than the specified voltage.
  - Special care should be taken to ensure that a floppy style cable is not mistakenly plugged into the Power/Data Connector on the non-USB module as this will damaged the device.
- 

## 2.2 Communication Connectors

### 2.2.1 Power/Data Connector for Non-USB modules only

The *Power/Data Connector* provides a standard connector for powering and communicating to the non-USB display module. The LK204-7T-1U requires five volts for the standard display module. The voltage is applied through pins one and four of the four pin *Power/Data connector*. Pins two and three are reserved for serial transmission, using either the RS-232/TTL or the I<sup>2</sup>C protocol, depending on what has been selected by the *Protocol Select Jumpers*.

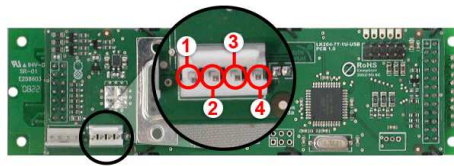

- Pin 1** PWR (*see table 1 on the preceding page*)
- Pin 2** RX/SCL (I2C clock)
- Pin 3** Tx/SDA (I2C data)
- Pin 4** GND

Figure 13: Power Connector and Pin-out for LK204-7T-1U Non-USB

## 2.2.2 USB Mini-B Connector for USB modules only

The *USB Mini-B Connector* provides a standard connector for powering and communicating to the USB display module. As with the non-USB version, the LK204-7T-1U-USB requires five volts for the standard display module.


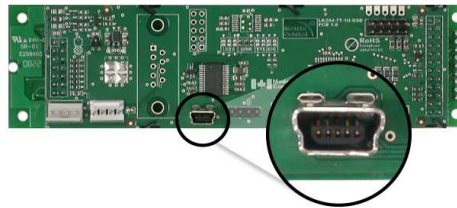


Figure 14: USB Mini-B Connector for LK204-7T-1U-USB

## 2.3 DB-9 Connector - For Non-USB modules only

The LK204-7T-1U provides a *DB-9 Connector* to readily interface with serial devices which use the EIA232 standard signal levels of  $\pm 30V$ . It is also possible to communicate at TTL levels of 0 to +5V by

setting the *Protocol Select Jumpers* to TTL. As an added feature it is also possible to apply power through pin 9 of the *DB-9 Connector* in order to reduce cable clutter. However, in order to accomplish this you must set the *Power Through DB-9 Jumper*.

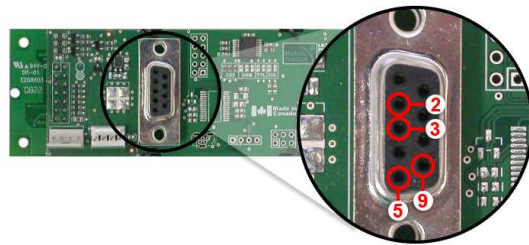

<b>Pin 2</b>	TX/SDA (I2C data)
<b>Pin 3</b>	RX/SCL (I2C clock)
<b>Pin 5</b>	GND
<b>Pin 9</b>	PWR (Must solder power through DB-9 jumper. See table 1 on page 8 for power requirements.)

Figure 15: RS-232 Pin-out

### 2.3.1 Power Through DB-9 Jumper - for Non-USB modules only

In order to provide power through pin 9 of the *DB-9 Connector* you must place a solder jumper on the *Power through DB-9 Jumper* pictured in Figure 16 below. The LK204-7T-1U allows all voltage models to use the power through DB-9 option, see table 1 for display module voltage requirements.



Figure 16: Power Through DB-9 Jumper

---

**NOTE** We do not recommend that you use pin 9 (Ring Indicator) of the PC to power the display module. You will have to make a special DB9 cable.

---



**WARNING** Do not apply voltage through pin 9 of the DB-9 connector AND through the Power/Data Connector at the same time.

---

## 2.4 Alternate Communication Headers

### 2.4.1 Serial Header for Non-USB modules only


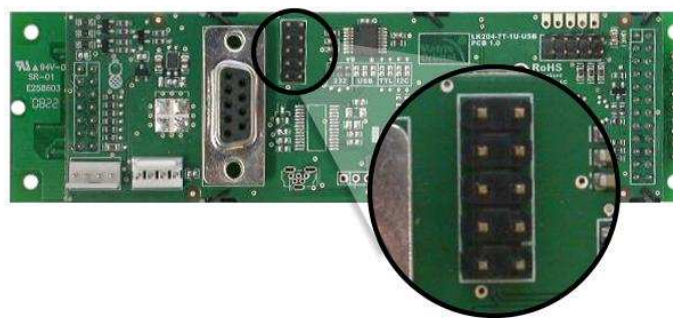


Figure 17: Serial Header



## 2.4.2 Optional Internal USB Header for USB modules only

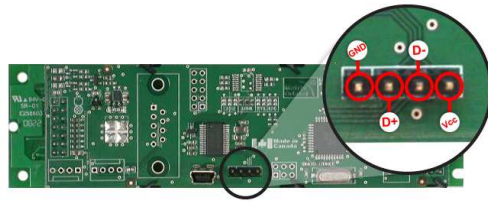

<b>Pin 1</b>	GND
<b>Pin 2</b>	D+
<b>Pin 3</b>	D-
<b>Pin 4</b>	Vcc

Figure 18: Optional Internal USB Header

## 2.5 Protocol Select Jumpers

The *Protocol Select Jumpers*, pictured below in Figure 19, provide the means necessary to toggle the display module between RS-232, TTL and I<sup>2</sup>C protocols. As a default for the Non-USB module, the jumpers are set to RS-232 mode with zero ohm resistors on the 232 jumpers. In order to place the display module in I<sup>2</sup>C mode you must first remove the zero ohm resistors from the 232 jumpers and then solder the resistors on to the I<sup>2</sup>C jumpers, or bridge solder across the pads. The display will now be in I<sup>2</sup>C mode and have a default slave address of 0x50 unless the I<sup>2</sup>C address has been changed. Similarly, in order to change the display to TTL mode, simply remove the zero ohm resistors from the 232 or I<sup>2</sup>C jumpers and solder them to the TTL jumpers. Although RS-232, USB, TTL and I<sup>2</sup>C are present, only 232/TTL/I<sup>2</sup>C are for use in the Non-USB module. For the USB module operation the USB jumpers must be in place. There are three, one is for power. If you wish to power it up from a non-USB source, you must remove one of the jumpers. The jumper to remove is the rightmost USB jumper as seen if Figure 20.

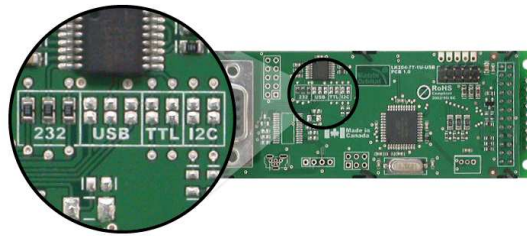


Figure 19: Protocol-Select-Jumpers for LK204-7T-1U Non-USB

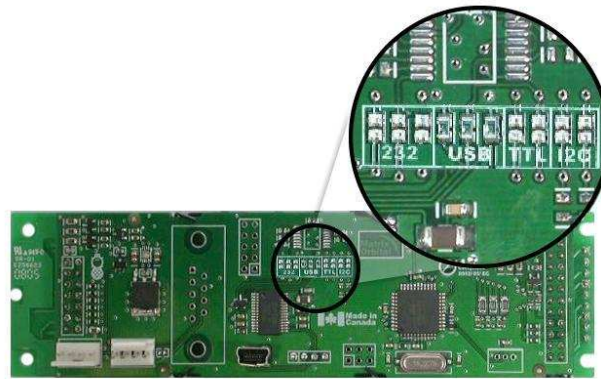


Figure 20: Protocol-Select-Jumpers for LK204-7T-1U USB

## 2.6 General Purpose Outputs

A unique feature of the LK204-7T-1U is the ability to control relays and other external devices using three General Purpose Outputs, which can provide up to 10 mA of current and +3.3Vdc from the positive side of each GPO. This is limited by a 240 ohm resistor which is located directly above the positive pin as pictured below in Figure [fig:General-Purpose-Output]. If the device, which is being driven by a GPO, requires a relatively high current (such as a relay) and has an internal resistance of its own greater than 250 ohms, then the 240 ohm resistor may be removed and replaced with a Jumper.

**Vcc** 3.3Vdc  
**GPO 7** 0Vdc, 10mA  
**GPO 8** 0Vdc, 10mA  
**GPO 9** 0Vdc, 10mA

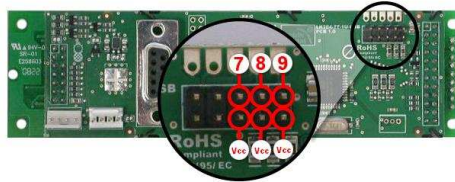


Figure 21: General Purpose Output



**WARNING** If connecting a relay, be sure that it is fully clamped using a diode and capacitor in order to absorb any electro-motive force (EMF) which will be generated.

---

## 2.7 Manual Override

The *Manual Override* is provided to allow the LK204-7T-1U to be reset to some of the factory defaults. This can be particularly helpful if the display module has been set to an unknown baud rate or I<sup>2</sup>C slave address and you are no longer able to communicate with it. If you wish to return the module to its default settings you must press the bottom left button at power up. Please see figure 22.

Table 2: Default Values

<b>Contrast</b>	128
<b>Backlight</b>	255
<b>Baud Rate</b>	19.2 kbps
<b>I<sup>2</sup>C Slave Address</b>	0x50
<b>Data Lock</b>	False
<b>RS232AutoTransmitData</b>	True

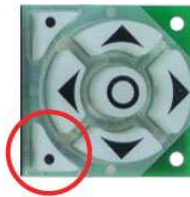


Figure 22: Manual Override Button

---

**NOTE** The display module will revert back to the old settings once turned off, unless the settings are saved.

---

## 3 Troubleshooting

### 3.1 The display does not turn on when power is applied.

- First, you will want to make sure that you are using the correct power connector. Standard floppy drive power cables from your PC power supply may fit on the Power/Data Connector however they do not have the correct pinout as can be seen in Figure ???. Matrix Orbital supplies power cable adapters for connecting to a PC, which can be found in the Accessories Section on page 2.
- The next step is to check the power cable which you are using for continuity. If you don't have an ohm meter, try using a different power cable, if this does not help try using a different power supply.
- The last step will be to check the *Power / Data Connector* on the LK204-7T-1U. If the *Power / Data Connector* has become loose, or you are unable to resolve the issue, please contact Matrix Orbital see 14.6 on page 62 for contact information.

## 3.2 The display module is not communicating.

- First, check the communication cable for continuity. If you don't have an ohm meter, try using a different communication cable. If you are using a PC try using a different Com port.
- Second, please ensure that the display module is set to communicate on the protocol that you are using, by checking the *Protocol Select Jumpers*. To change the protocol used by the display module see Section 2.5 on page 12.
- Third, ensure that the host system and display module are both communicating on the same baud rate. The default baud rate for the display module is 19200 bps.
- If you are communicating to the display via I<sup>2</sup>C please ensure that the data is being sent to the correct address. The default slave address for the display module is 0x50.

---

**NOTE** I<sup>2</sup>C communication will always require pull up resistors.

---

- Finally, you may reset the display to it's default settings using the Manual Override Key, see Section 2.7 on page 14.

## 3.3 The display module is communicating, however text cannot be displayed.

- A common cause may be that the contrast settings have been set to low. The solution to this problem is to adjust the contrast settings, the default setting that will work in most environments is 128

---

**NOTE** Optimal contrast settings may vary according to factors such as temperature, viewing angle and lighting conditions.  
If you are unable to resolve any issue please contact Matrix Orbital. See 14.6 on page 62 for contact information.

---

# 4 Communications

## 4.1 Introduction

The commands listed in this chapter describe how to configure data flow on the LK204-7T-1U.

### 4.1.1 I<sup>2</sup>C Communication Summary

The LK204-7T-1U is capable of communicating at 100 KHz in I<sup>2</sup>C mode, with 127 units addressable on a single I<sup>2</sup>C communication line. However, in order to communicate via I<sup>2</sup>C you must first ensure that pull up resistors, with a nominal value of 1K to 10K, are placed on the SCL and SDA communication lines coming from pins two and three of the Data / Power Connector respectively. Data responses by the module are automatically output via RS232, in case the host will be querying the module, it is necessary for the host

to inform the module that its responses are to be output via I<sup>2</sup>C. This can be done by sending command 254 / 160 / 0 to turn off auto transmission of data in RS232. This will keep the data in the buffer until the master clocks a read of the slave. The I<sup>2</sup>C data lines operate at 5V normally or 3.3V for -1U style units. The LK204-7T-1U uses 8-bit addressing, with the 8th or Least Significant Bit (LSB) bit designated as the read/write bit, a 0 designates a write address and a 1 designates a read address. The default read address of the display module will be 0x51, whereas the write address is 0x50 by default. This address may be changed by using cmd 254 / 51 / <address>. The LK204-7T-1U should only be sent addresses that are even (LSB is 0). When the I<sup>2</sup>C master wishes to write to the display, the effective address is \$50 (0101 0000) , since the LSB has to be 0 for an I<sup>2</sup>C master write. When the I<sup>2</sup>C master wishes to read the LK204-7T-1U, the effective address is \$51 (0101 0001), since the LSB has to be 1 for an I<sup>2</sup>C master read.

If we take a standard Phillips 7 bit address of \$45 (100 0101), Matrix Orbital's LK204-7T-1U would describe this Phillips I<sup>2</sup>C address as \$8A (1000 1010). The read address would be \$8B (1000 1011).

The unit does not respond to general call address (\$00).

When communicating in I<sup>2</sup>C the LK204-7T-1U will send an ACK on the 9th clock cycle when addressed. When writing to the display module, the display will respond with a ACK when the write has successfully been completed. However if the buffer has been filled, or the module is too busy processing data it will respond with a NAK. When performing a multiple byte read within one I<sup>2</sup>C transaction, each byte read from the slave should be followed by an ACK to indicate that the master still needs data, and a NAK to indicate that the transmission is over.

The LK204-7T-1U has some speed limitations, especially when run in I<sup>2</sup>C mode. Here are some considerations when writing I<sup>2</sup>C code:

- \* to be able to read the replies of query commands (eg. cmds 54, 55) the following command must be sent (only needs to be sent once, so this can be done somewhere in init): 254 / 160 / 0 this command puts the reply data in the I<sup>2</sup>C output buffer instead of the RS232 output buffer. Please note that due to a 16 byte output buffer, query commands that reply with more than 16 bytes cannot be read (eg cmd Get FileSystem Directory)

- \* 3ms delay between the read commands

- \* 625us delay in between data bytes within a transaction is necessary

- \* 375us between transactions is necessary

---

**NOTE** These delays are conservative, and may be decreased based on performance

---

## 4.1.2 I<sup>2</sup>C Transaction Example

The typical I<sup>2</sup>C transaction contains four parts: the start sequence, addressing, information, and stop sequence. To begin a transaction the data line, SDA, must toggle from high to low while the clock line, SCL, is high. Next, the display must be addressed using a one byte hexadecimal value, the default to write to the unit is 0x50, while read is 0x51. Then information can be sent to the unit; even when reading, a command must first be sent to let the unit know what type of information it is required to return. After each bit is sent, the display will issue an ACK or NACK as described above. Finally, when communication is complete, the transaction is ended by toggling the data line from low to high while the clock line is high. An example of the use of this algorithm to write a simple "HELLO" message can be seen in 3.

Table 3: I<sup>2</sup>C Transaction Algorithm

<b>START</b>	Toggle SDA high to low
<b>Address</b>	0x50
<b>Information</b>	0x48 0x45 0x4C 0x4C 0x4F
<b>STOP</b>	Toggle SDA low to high

### 4.1.3 Serial Communication

In addition to being able to communicate via I<sup>2</sup>C the LK204-7T-1U communicates natively through the RS-232 protocol at a default baud rate of 19,200 bps and is capable of standard baud rates from 9600 to 115,200 bps. Furthermore the LK204-7T-1U is also capable of reproducing any non-standard baud rate in between using values entered into our baud rate generation algorithm and set through command 164 (0xA4). The display module communicates at standard voltage levels of -30V to +30V or at TTL levels of 0 to +5V by setting the *Protocol Select Jumpers* to TTL.

### 4.1.4 USB Communication

The LK204-7T-1U is a USB device that offers identical communication protocol as the serial com port. capable of communicating via a USB interface. The USB communications are identical to the serial communications. Communication is via a virtual com port, which is created in the operating system by the drivers necessary to install the USB display. The LK204-7T-1U communicating via USB is capable of baud rates of 19,200 bps to 115,200 bps. Other baud rates are subject to the limitation of the virtual com port driver. For further information regarding supported operating systems, and driver limitations please contact technical support.

## 4.2 Changing the I<sup>2</sup>C Slave Address

Syntax	Hexadecimal	0xFE 0x33 [adr]	
	Decimal	254 51 [adr]	
	ASCII	254 "3" [adr]	
Parameters	<b>Parameter</b>	<b>Length</b>	<b>Description</b>
	adr	1	The new I <sup>2</sup> C write address (0x00 - 0xFF).

Description This command sets the I<sup>2</sup>C write address of the module between 0x00 and 0xFF. The I<sup>2</sup>C write address must be an even number and the read address is automatically set to one higher. For example if the I<sup>2</sup>C write address is set to 0x50, then the read address is 0x51.

---

**NOTE** The change in address is immediate.

---

Remembered Always  
 Default 0x50

### 4.3 Changing the Baud Rate

Syntax Hexadecimal 0xFE 0x39 [speed]  
 Decimal 254 57 [speed]  
 ASCII 254 “9” [speed]

Parameter	Length	Description
speed	1	Hex value corresponding to a baud rate.

Description This command sets the RS-232 port to the specified [speed]. The change takes place immediately. [speed] is a single byte specifying the desired port speed. Valid speeds are shown in the table below. The display module can be manually reset to 19,200 baud in the event of an error during transmission, including transmitting a value not listed below, by setting the manual override jumper during power up. However, it should be noted that this command will be ignored until the manual override jumper is removed again.

Hex Value	Baud Rate
53	1200
29	2400
CF	4800
67	9600
33	19200
22	28800
19	38400
10	57600
8	115200

Remembered Always  
 Default 19,200 bps

### 4.4 Setting a Non-Standard Baud Rate



Syntax	Hexadecimal	0xFE 0xA4 [speed]	
	Decimal	254 164 [speed]	
Parameters	Parameter	Length	Description
	speed	2	Inputed LSB MSB from baud rate formula (12-2047).
Description	<p>This command sets the RS-232 port to a non-standard baud rate. The command accepts a two byte parameter that goes directly into the modules baud generator. Use the formula, <math>speed = \frac{CrystalSpeed}{8 \times DesiredBaud} - 1</math> to calculate the [speed] for any baud rate setting. The speed can be anywhere from 12 to 2047 which corresponds to a baud range of 977 to 153,800 baud. Setting the baud rate out of this range could cause the display to stop working properly and require the Manual Override jumper to be set.</p>		
Remembered Examples	Always		

**Crystal Speed** 16 Mhz

**Desired BAUD** 13,500

**Crystal Speed** 8 Mhz

**Desired BAUD** 13,500

$$speed = \frac{crystalspeed}{8 * DesiredBaud} - 1 \quad speed = \frac{8,000,000}{8 * 13,500} - 1$$

$$speed = 74.07 - 1$$

$$speed = 73.07$$

- **LSB** = 0x4A (rounded)
- **MSB** = 0x00
- Inteded Baud Rate: 13,500 baud      Actual Baud Rate:  
 $\frac{8,000,000}{8(73+1)} = 13,675$       Percent Difference: 1.8%

---

## NOTES

- Results from the formula are rounded down to the nearest whole number (i.e 73.07 = 73).
  - This formula becomes less accurate as baud rates increase, due to rounding.
  - Place the speed result backwards into the formula to receive the actual baud rate.  
 $(Baud = \frac{CrystalSpeed}{8(speed+1)})$
  - The actual baud rate must be within 3% of the intended baud rate for the device to communicate.
-

# 5 Text

## 5.1 Introduction

The LK204-7T-1U is an intelligent display module, designed to reduce the amount of code necessary to begin displaying data. This means that it is able to display all ASCII formatted characters and strings that are sent to it, which are defined in the current character set. The display module will begin displaying text at the top left corner of the display area, known as home, and continue to print to the display as if it was a page on a typewriter. When the text reaches the bottom right row, it is able to automatically scroll all of the lines up and continue to display text, with the auto scroll option set to on.

### 5.1.1 Character Set

		Higher 4-bit (D4 to D7) of Character Code (Hexadecimal)																			
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F				
Lower 4-bit (D0 to D3) of Character Code (Hexadecimal)	0	CG RAM (1)			0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
	1	CG RAM (2)	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	:	;	<	>	?
	2	CG RAM (3)	"	#	\$	%	&	'	(	)	*	+	,	-	.	:	;	<	>	?	0
	3	CG RAM (4)	#	\$	%	&	'	(	)	*	+	,	-	.	:	;	<	>	?	0	1
	4	CG RAM (5)	\$	%	&	'	(	)	*	+	,	-	.	:	;	<	>	?	0	1	2
	5	CG RAM (6)	%	&	'	(	)	*	+	,	-	.	:	;	<	>	?	0	1	2	3
	6	CG RAM (7)	&	'	(	)	*	+	,	-	.	:	;	<	>	?	0	1	2	3	4
	7	CG RAM (8)	'	(	)	*	+	,	-	.	:	;	<	>	?	0	1	2	3	4	5
	8	CG RAM (1)	(	)	*	+	,	-	.	:	;	<	>	?	0	1	2	3	4	5	6
	9	CG RAM (2)	)	*	+	,	-	.	:	;	<	>	?	0	1	2	3	4	5	6	7
	A	CG RAM (3)	*	+	,	-	.	:	;	<	>	?	0	1	2	3	4	5	6	7	8
	B	CG RAM (4)	+	,	-	.	:	;	<	>	?	0	1	2	3	4	5	6	7	8	9
	C	CG RAM (5)	,	-	.	:	;	<	>	?	0	1	2	3	4	5	6	7	8	9	A
	D	CG RAM (6)	-	.	:	;	<	>	?	0	1	2	3	4	5	6	7	8	9	A	B
	E	CG RAM (7)	.	:	;	<	>	?	0	1	2	3	4	5	6	7	8	9	A	B	C
	F	CG RAM (8)	:	;	<	>	?	0	1	2	3	4	5	6	7	8	9	A	B	C	D

Figure 23: Character Set

## 5.1.2 Control Characters

In addition to a full text set, the LK204-7T-1U display supports the following ASCII Control characters:

**0x08** Backspace

**0x0C** Clear screen / New page

**0x0D** Carriage return

**0x0A** Line feed / New line

## 5.2 Auto Scroll On

Syntax	Hexadecimal	0xFE 0x51
	Decimal	254 81
	ASCII	254 “Q”
Description	When auto scrolling is on, it causes the display to shift the entire display’s contents up to make room for a new line of text when the text reaches the end of the last row.	
Remembered	Yes	
Default	On	

## 5.3 Auto Scroll Off

Syntax	Hexadecimal	0xFE 0x52
	Decimal	254 82
	ASCII	254 “R”
Description	When auto scrolling is disabled the text will wrap to the top left corner of the display area when the text reaches the end of last row.	
Remembered	Yes	

## 5.4 Clear Screen

Syntax	Hexadecimal	0xFE 0x58
	Decimal	254 88
	ASCII	254 “X”
Description	This command will immediately clear all of the contents of the display.	
Remembered	No	

## 5.5 Changing the Startup Screen

Syntax	Hexadecimal	0xFE 0x40
	Decimal	254 64
	ASCII	254 “@”
Description	In order to change the text that is displayed by the LK204-7T-1U when it starts up simply send the command bytes 254 64 followed by the characters that you wish to display, starting from the top left. This command will automatically line wrap the characters that are sent to it.	
Remembered	Yes	

## 5.6 Set Auto Line Wrap On

Syntax	Hexadecimal	0xFE 0x43
	Decimal	254 67
	ASCII	254 “C”
Description	Enabling Auto Line Wrap will allow the cursor to automatically wrap over to the next line when the current line is full.	

---

**NOTE** Line wraps may occur in the middle of a word.

---

Remembered	Yes
------------	-----

## 5.7 Set Auto Line Wrap Off

Syntax	Hexadecimal	0xFE 0x44
	Decimal	254 68
	ASCII	254 “D”
Description	Disabling Auto Line Wrap will allow you to change the line configuration. The normally sequential progression becomes an alternating pattern. Rather than moving from line 1 to 2 to 3, the display will write from line 1 to 3 to 2. For a two line display, this means that a row’s worth of characters written between the first and second lines or after the second will not be displayed on the screen or wrapped. The four line models will see only an alteration in line flow.	
Remembered	Yes	

## 5.8 Set Cursor Position

Syntax	Hexadecimal	0xFE 0x47 [col] [row]	
	Decimal	254 71 [col] [row]	
	ASCII	254 “G” [col] [row]	
Parameters	Parameter	Length	Description
	col	1	Column
	row	1	Row
Description	This command will allow you to manually set the cursor position, which controls the text insertion point, by specifying the [col] and [row] of the new proposed cursor position.		

---

**NOTE** If the cursor position is set past the end of a line it will wrap to the beginning of the next line.

---

Remembered No

## 5.9 Go Home

Syntax	Hexadecimal	0xFE 0x48
	Decimal	254 72
	ASCII	254 “H”
Description	This command will return the cursor to the top left corner of the display area, identified as row one, column one.	
Remembered	No	

## 5.10 Move Cursor Back

Syntax	Hexadecimal	0xFE 0x4C
	Decimal	254 76
	ASCII	254 “L”
Description	This command will move the cursor back one space. If this command is sent when the cursor is at the home position the cursor will wrap to the last row / column position if line wrap is on. Sending this command will not effect the text displayed on the module, however any characters that are sent will over write the current characters that are being displayed.	
Remembered	No	

## 5.11 Move Cursor Forward

Syntax	Hexadecimal	0xFE 0x4D
	Decimal	254 77
	ASCII	254 "M"
Description	This command will move the cursor forward one space. If this command is sent when the cursor is at the bottom right position the cursor will wrap back to the home position if line wrap is on. Sending this command will not effect the text displayed on the module, however any characters that are sent will over write the current characters that are being displayed.	
Remembered	No	

## 5.12 Underline Cursor On

Syntax	Hexadecimal	0xFE 0x4A
	Decimal	254 74
	ASCII	254 "J"
Description	This command will cause the LK204-7T-1U to display an underline cursor at the current text insertion point.	
Remembered	Yes	

## 5.13 Underline Cursor Off

Syntax	Hexadecimal	0xFE 0x4B
	Decimal	254 75
	ASCII	254 "K"
Description	This command will turn the the underline cursor off.	
Remembered	Yes	

## 5.14 Blinking Block Cursor On

Syntax	Hexadecimal	0xFE 0x53
	Decimal	254 83
	ASCII	254 "S"
Description	This command will cause the LK204-7T-1U to display a block cursor at the current text insertion point.	

Remembered      Yes

## 5.15 Blinking Block Cursor Off

Syntax	Hexadecimal	0xFE 0x54
	Decimal	254 84
	ASCII	254 "T"
Description	This command will turn the block cursor off.	
Remembered	Yes	

# 6 Special Characters

## 6.1 Introduction

The LK204-7T-1U has the ability to create four different sets of eight custom characters and save them to internal banks of memory. Each set of eight can be recalled from memory at any time, and selected characters can be written to the display screen. Characters and sets can be created at any time, saved for later use, and displayed to the screen through the intuitive command structure described below.

## 6.2 Creating a Custom Character

Syntax	Hexadecimal	0xFE 0x4E [refID] [data]	
	Decimal	254 78 [refID] [data]	
	ASCII	254 "N" [refID] [data]	
Parameters	Parameter	Length	Description
	refID	1	Character reference ID (0-7).
	data	8	Character data.

Description

The LK204-7T-1U allows for up to eight custom defined characters to be added onto the character set. A custom character is a five by eight pixel matrix with each row represented by a byte value. For example:

Custom Character 'h'					Decimal	Hex
<b>1</b>	0	0	0	0	16	0x10
<b>1</b>	0	0	0	0	16	0x10
<b>1</b>	0	0	0	0	16	0x10
<b>1</b>	0	0	0	0	16	0x10
<b>1</b>	0	<b>1</b>	<b>1</b>	0	22	0x16
<b>1</b>	<b>1</b>	0	0	<b>1</b>	25	0x19
<b>1</b>	0	0	0	<b>1</b>	17	0x11
<b>1</b>	0	0	0	<b>1</b>	17	0x11

Each bit value of one, in the table, represents an on pixel, whereas a value of zero represents a pixel that is turned off. Therefore in order to define custom character 'h' you would send the command byte prefix 254 followed by the command 78. Next, you will have to select the memory location in which you wish to save the character in. The available memory locations for this command are zero through to seven. After sending the memory location, or [refID], you may then send the eight byte custom character data in sequence from the top to the bottom.

Once you have defined a custom character you may display it by sending the display module the [refID]. For example if a custom character was saved in position one, the command to display the custom character, at the current cursor position, would be simply to send the number one to the display module without quotes.

Remembered

No

### 6.3 Saving Custom Characters

Syntax

Hexadecimal 0xFE 0xC1 [Bank] [ID] [Data]

Decimal 254 193 [Bank] [ID] [Data]

Parameters

Parameter	Length	Description
Bank	1	Memory bank to save to (0-4).
ID	1	Character ID (0-7)
Data	8	Character Definition



Description New to the LK204-7T-1U has added five non-volatile memory banks for custom character storage. This is intended to allow you to create your own custom bar graphs, medium/large numbers and startup screen. However, each memory bank may be used to store a set of any eight custom characters; with the only provision being that memory bank zero contains the characters that will be used in the startup screen. By default the memory banks will be loaded as follows:

[Bank]	Description
0	Startup screen characters.
1	Horizontal bars
2	Vertical bars
3	Medium numbers
4	Large numbers

In order to save new custom characters into a memory bank, follow the same process as you would for creating a custom character, see Section 6.2 on page 26, only use 254 193 [Bank Number] before sending the [ID] and character [Data].

Remembered Yes

## 6.4 Loading Custom Characters

Syntax Hexadecimal 0xFE 0xC0 [Bank]  
 Decimal 254 192 [Bank]

Parameter	Length	Description
Bank	1	Memory bank to save to (0-4).

Description This command is used to load the custom characters into the volatile memory so that they may be used. If custom bar graph or number characters are stored in the memory banks, this command may be used instead of initializing the bar graph / number. To use this command send the command bytes followed by the [Bank] that contains the custom character data that you want to retrieve.

Remembered No

## 6.5 Save Startup Screen Custom Characters

Syntax Hexadecimal 0xFE 0xC2 [refID] [data]  
 Decimal 254 194 [refID] [data]

Parameter	Length	Description
refID	1	Character reference ID (0-7).
data	8	Character data.

Description Using this command you may create the custom characters. that will be stored in memory bank zero, which will be used in the startup screen. For more information about creating custom characters see **Section 6.2 on page 26**.

---

#### NOTES

- Changes only take place once the power has been cycled.
- This command is the same as sending CMD 254 / 193 / 0 / [ID] / [DATA]

---

Remembered Yes

## 6.6 Initialize Medium Number

Syntax Hexadecimal 0xFE 0x6D  
Decimal 254 109  
ASCII 254 "m"

Description This command will load the default medium number characters into the volatile memory. If you have stored your own custom medium numbers, use the 'Load Custom Characters' command to load your custom character data into the volatile memory. This command will allow you to use the 'Place Medium Numbers' command.

Remembered No

## 6.7 Place Medium Numbers

Syntax Hexadecimal 0xFE 0x6F [Row] [Col] [Digit]  
Decimal 254 111 [Row] [Col] [Digit]  
ASCII 254 "o" [Row] [Col] [Digit]

Parameter	Length	Description
Row	1	The row number.
Col	1	The column number.
Digit	1	Medium number to place (0-9).

Description This command will place a medium number (two columns high) at the [row] and [col] specified.

---

**NOTE** Medium Numbers must be initialized before this command is executed.

---

Remembered No

## 6.8 Initialize Large Numbers

Syntax	Hexadecimal	0xFE 0x6E
	Decimal	254 110
	ASCII	254 "n"
Description	This command will load the default large number characters into the volatile memory. If you have stored your own custom large numbers, use the 'Load Custom Characters' command instead to load your custom character data into the volatile memory. This command will allow you to use the 'Place Large Numbers' command.	
Remembered	No	

## 6.9 Place Large Number

Syntax	Hexadecimal	0xFE 0x23 [Col] [Digit]	
	Decimal	254 35 [Col] [Digit]	
	ASCII	254 "#" [Col] [Digit]	
Parameters	Parameter	Length	Description
	Col	1	The column number.
	Digit	1	Large number to place (0-9).
Description	This command will place a large number (four columns high) at the [row] and [col] specified.		

---

**NOTE** Large Numbers must be initialized before this command is executed.

---

Remembered	No
------------	----

## 6.10 Initialize Horizontal Bar

Syntax	Hexadecimal	0xFE 0x68
	Decimal	254 104
	ASCII	254 "h"
Description	This command will load the default horizontal bar characters into the volatile memory. If you have stored your own custom horizontal bar data, use the 'Load Custom Characters' command instead to load your custom bar data into the volatile memory. This command will allow you to use the 'Place Horizontal Bar' command.	
Remembered	No	

## 6.11 Place Horizontal Bar Graph

Syntax	Hexadecimal	0xFE 0x7C [Col] [Row] [Dir] [Length]	
	Decimal	254 124 [Col] [Row] [Dir] [Length]	
	ASCII	254 “ ” [Col] [Row] [Dir] [Length]	
Parameters	Parameter	Length	Description
	Col	1	The column number.
	Row	1	The row number.
	Dir	1	The direction of the bar data (0 or 1).
	Length	1	The length of the bar data.
Description	This command will place a bar graph at [row], [column]. A [Dir] value of zero will cause the bar to go right, and one will cause the bar to go left. The [Length] is the size in pixels of the bar graph.		

---

### NOTES

- Horizontal Bars must be initialized before this command is executed.
  - Bar graphs may be one directional only.
- 

Remembered No

## 6.12 Initialize Narrow Vertical Bar

Syntax	Hexadecimal	0xFE 0x73
	Decimal	254 115
	ASCII	254 “s”
Description	This command will load the narrow vertical bar characters into the volatile memory. If you have stored your own custom vertical bar data, use the 'Load Custom Characters' command instead to load your custom bar data into the volatile memory. This command will allow you to use the 'Place Vertical Bar' command.	

---

**NOTE** Narrow bars have a width of two pixels.

---

Remembered No

## 6.13 Initialize Wide Vertical Bar

Syntax	Hexadecimal	0xFE 0x76
	Decimal	254 118
	ASCII	254 “v”
Description	This command will load the wide vertical bar characters into the volatile memory. If you have stored your own custom vertical bar data, use the 'Load Custom Characters' command instead to load your custom bar data into the volatile memory. This command will allow you to use the 'Place Vertical Bar' command.	

---

**NOTE** Wide bars have a width of five pixels.

---

Remembered No

## 6.14 Place Vertical Bar

Syntax	Hexadecimal	0xFE 0x3D [Column] [Length]	
	Decimal	254 61 [Column] [Length]	
	ASCII	254 “=” [Column] [Length]	
Parameters	Parameter	Length	Description
	Column	1	The column number.
	Length	1	The length of the bar data.
Description	This command will place a bar graph at the specified [Column] with the specified [Length]. The [Length] is the size in pixels of the bar graph.		

---

### NOTES

- A Vertical Bar style must be initialized before this command is executed.
  - Bar graphs may be one directional only.
- 

Remembered No

## 7 General Purpose Output

### 7.1 Introduction

The LK204-7T-1U has 6 General purpose outputs which are connected to 3 tri-colour LEDs. The LEDs consist of red, green and orange-yellow colours. The LEDs are hence software controlled with functions to turn them on/off. A pair of GPOs control one LED. GPO1 and GPO2 control LED1, GPO3 and GPO4 control LED2 and GPO5 and GPO6 control LED3. The tables below illustrate the relation. “0” is off, “1” is on. For example to turn the LED 1 to green GPO1 must be turned on and GPO2 must be turned off.



Figure 24: GLK19264-7T-1U LEDs

Table 34: LED 1 - top

	GPO2	GPO1
Yellow	0	0
Green	0	1
Red	1	0
Off	1	1

Table 35: LED 2 - middle

	GPO4	GPO3
Yellow	0	0
Green	0	1
Red	1	0
Off	1	1

Table 36: LED 3 - bottom

	GPO6	GPO5
Yellow	0	0
Green	0	1
Red	1	0
Off	1	1

## 7.2 General Purpose Output Off

Syntax	Hexadecimal	0xFE 0x56 [Num]	
	Decimal	254 86 [Num]	
	ASCII	254 “V” [Num]	
Parameters	Parameter	Length	Description
	Num	1	GPO number.
Description	This command turns OFF general purpose output [num].		

---

**NOTE** OFF means that the output is pulled HIGH.

---

Remembered Yes

## 7.3 General Purpose Output On

Syntax	Hexadecimal	0xFE 0x57 [Num]	
	Decimal	254 87 [Num]	
	ASCII	254 “W” [Num]	
Parameters	Parameter	Length	Description
	Num	1	GPO number.
Description	This command turns ON general purpose output [num]. The standard GPO's on the LK204-7T-1U output 20mA of current at 5V.		

---

**NOTE** ON means the output is pulled LOW.

---

Remembered Yes

## 7.4 Set Startup GPO state

Syntax	Hexadecimal	0xFE 0xC3 [Num] [state]	
	Decimal	254 195 [Num] [state]	
Parameters	Parameter	Length	Description
	Num	1	GPO number.
	state	1	Startup state (0: Off, 1: On)

Description This command will set the startup state for the GPO on the next power up. A value of one will cause the GPO to be off on the next startup while a value of one will cause the GPO to be on.

---

**NOTE** This command does not affect the current state of the GPO.

---

Remembered Always

## 8 Dallas 1-Wire

### 8.1 Introduction

Another convenient feature of the LK204-7T-1U is that it provides a Dallas 1-wire interface in order to readily communicate with up to thirty two 1-wire devices on a single bus. 1-wire communication is begun by discovering the address of the device that you wish to communicate with. To do this you must send the “Search for a 1-Wire Device” command. After you have established the address of the device that you wish to communicate with, you may begin a transaction with the device

### 8.2 Search for a 1-Wire Device

Syntax Hexadecimal 0xFE 0xC8 0x2  
Decimal 254 200 2



Description

This command will allow you to begin communicating with the devices on the 1-wire bus by returning a packet containing device information for each 1-wire device on the bus in the form of:

#### Search Return Packet

Offset (Bytes)	Offset (Bytes)	Description
0	2	<b>0x232A</b> Preamble
2	1	<b>0x8A</b> Packet is 10 bytes long, another address will follow <b>0x0A</b> Packet is 10 bytes long, this is the last address
3	1	0x31 - 1-Wire Packet Type
4	1	Error Code (0x00 for success)
5	8	1-Wire Address
13	1	<b>CRC8</b> 0x00 means the last address was valid

Remembered

No

### 8.3 Dallas 1-Wire Transaction

Syntax

Hexadecimal 0xFE 0xC8 0x1 [flags] [SndBits] [RcvBits] [Data]  
Decimal 254 200 1 [flags] [SndBits] [RcvBits] [Data]

Parameters

Parameter	Length	Description
flags	1	Flags to control optional components of the transaction.
SndBits	1	The number of bits you will be transmitting on the bus.
RcvBits	1	The number of bits you will be reading on the bus.
Data	variable	Data to be transmitted, LSB to MSB.

Description This command will perform a single transaction on the 1-wire bus in this order:

1. Bus Reset.
2. Transmit data onto the bus.
3. Receive data from the bus.

The number of bits to be transmitted and read must be specified for this command to be successful.

---

**NOTE** To determine what functions the device will respond to, consult the devices' data sheet.

---

#### 1-Wire Flags

Bit	Description
7	
6	Unused
5	(0 for future compatibility)
4	
3	Add a CRC8 to the end of the transmitted data
2	(0 for future compatibility)
1	Assume last received byte is a CRC8 and validate it
0	Reset bus before transaction

#### 1-Wire Error Codes

Code	Description
0x00	Success
0x01	Unknown 1-Wire Command
0x02	No devices on the bus
0x03	Fatal search error

Remembered No

## 9 Keypad

### 9.1 Introduction

The LK204-7T-1U supports up to a 7 Key, matrix style, embedded keypad and may be configured to allow key presses to be automatically transmitted via RS-232 or polled through I<sup>2</sup>C. The LK204-7T-1U also allows for auto-repeating key presses. The keypad is scanned whenever a key is pressed; there is no continuous key scan. This means that key presses are dealt with immediately without any appreciable latency. This also prevents electrical noise which is often caused by continuous key scans.

The keypad is tactile with seven keys. The value of each key is listed in the table below.

Table 42: Keypad Values

up arrow	0x42
down arrow	0x48
left arrow	0x44
right arrow	0x43
center	0x45
top left	0x41
bottom left	0x47

---

**NOTE** Please note that keypads may be laid out in a different pattern. If this is the case, the user will need to interpret the key codes differently. Also included are two extra pins on each end of the connector to be used for ground strapping. This can be used in conjunction with your keypad if a ground strap connection is required or if a common ground connection is needed.

---

## 9.2 Auto Transmit Key Presses On

Syntax	Hexadecimal	0xFE 0x41
	Decimal	254 65
	ASCII	254 "A"
Description	In this mode, all key presses are sent immediately to the host system without the use of the poll keypad command. This is the default mode on power up.	
Remembered	Yes	
Default	On	

## 9.3 Auto Transmit Key Presses Off

Syntax	Hexadecimal	0xFE 0x4F
	Decimal	254 79
	ASCII	254 "O"
Description	In this mode, up to 10 key presses are buffered until the unit is polled by the host system, via the poll keypad command 254 38. Issuing this command places the unit in polled mode.	
Remembered	Yes	

## 9.4 Poll Key Press

Syntax	Hexadecimal	0xFE 0x26
	Decimal	254 38
	ASCII	254 “&”
Description	This command returns any buffered key presses via the serial interface. The host system must be set up to receive key codes. When the display receives this command, it will immediately return any buffered key presses which may have not been read already. If there is more than one key press buffered, then the high order bit (MSB) of the returned key code will be set (1). If this is the only buffered key press, then the MSB will be cleared (0). If there are no buffered key presses, then the returned code will be 0x00. Please note that to make use of this command, the “Auto Transmit Key Presses” mode should be off.	
Remembered	No	

## 9.5 Clear Key Buffer

Syntax	Hexadecimal	0xFE 0x45
	Decimal	254 69
	ASCII	254 “E”
Description	This command clears any unread key presses. In a menu application, if the user presses a key which changes the menu context, any following key presses may be inaccurate and can be cleared out of the buffer between menu changes to prevent jumping around the menu tree. It may also be used, in effect, to reset the keypad in case the host application resets for whatever reason.	
Remembered	No	

## 9.6 Set Debounce Time

Syntax	Hexadecimal	0xFE 0x55 [time]	
	Decimal	254 85 [time]	
	ASCII	254 “U” [time]	
Parameters	<hr/>		
	Parameter	Length	Description
	time	1	Debounce time in increments of 6.554ms (0 - 255).

Description	This command sets the time between key press and key read. All key types with the exception of latched piezo switches will 'bounce' for a varying time, depending on their physical characteristics. The [time] value is in increments of 6.554ms. The default debounce time for the module is 8 (about 52ms), which is adequate for most membrane keypads.
Remembered	Yes
Default	8

## 9.7 Set Auto Repeat Mode

Syntax	Hexadecimal	0xFE 0x7E [mode]	
	Decimal	254 126 [mode]	
	ASCII	254 “~” [mode]	
Parameters	Parameter	Length	Description
	mode	1	Auto Repeat Mode (0: Resend Key , 1: Key Up/Down)
Description	Two auto repeat modes are available and are set via the same command:		

- **Resend Key Mode:** 0x00
- **Key Up/Down Mode:** 0x01

**Resend Key Mode** This mode is similar to the action of a keyboard on a PC. In this mode, when a key is held down, the key code is transmitted immediately followed by a 1/2 second delay. After this delay, key codes will be sent via the RS-232 interface at a rate of about 5 codes per second. This mode has no effect if polling or if using the I<sup>2</sup>C interface.

**Key Up/Down Mode** This mode may be used when the typematic parameters of the “Resend Key Code” mode are unacceptable or if the unit is being operated in polled mode. The host system detects the press of a key and simulates an auto repeat inside the host system until the key release is detected. In this mode, when a key is held down, the key code is transmitted immediately and no other codes will be sent until the key is released. On the release of the key, the key release code transmitted will be a value equal to the key down code plus 20 hex.

Remembered	Yes
------------	-----

Examples            When the key code associated with key 'P' (0x50) is pressed, the release code is 'p' (0x70). In RS-232 polled mode or via the I<sup>2</sup>C, the “Key Down / Key Up” codes are used; however, the user should be careful of timing details. If the poll rate is slower than the simulated auto-repeat it is possible that polling for a key up code will be delayed long enough for an unwanted key repeat to be generated.

## 9.8 Auto Repeat Mode Off















Syntax	Hexadecimal	0xFE 0x60
	Decimal	254 96
	ASCII	254 “”
Description	This command turns auto repeat mode off. See Set Auto Repeat Mode.	
Remembered	No	

## 9.9 Assign Keypad Codes

Syntax	Hexadecimal	0xFE 0xD5 [KDown] [KUp]	
	Decimal	254 213 [KDown] [KUp]	
Parameters	Parameter	Length	Description
	KDown	9	Key down codes
	KUp	9	Key up codes

Description

This command will allow you to reassign the key codes that correspond to the key presses on the matrix style key pad. The first 9 bytes that are transmitted will be used for the key down codes and the next 9 bytes that are transmitted will be used for the key up codes.

		Key Down					Key Up		
		Columns					Columns		
		1	2	3			1	2	3
R o w s	1				R o w s	1			
	2			N/A*		2			N/A*
	3			N/A*		3			N/A*

For the above diagrams the mapping is as follows:

Row 1, Column 1 = byte 1

R1, C2 = byte 2

R1, C3 = byte 3

R2, C1 = byte 4

R2, C2 = byte 5

R2, C3 = byte 6

R3, C1 = byte 7

R3, C2 = byte 8

R3, C3 = byte 9

---

**NOTE** \* not mapped to a physical key on the attached keypad.

---

Remembered

Always

## 9.10 Keypad Backlight Off

Syntax                   Hexadecimal   0xFE 0x9B  
                              Decimal        254 155

Description            This command turns the keypad backlight OFF.

Remembered           Yes

## 9.11 Set Keypad Brightness

Syntax	Hexadecimal	0xFE 0x9C [brightness]	
	Decimal	254 156 [brightness]	
Parameters	Parameter	Length	Description
	brightness	1	Keypad brightness setting (0 to 255).
Description	This command sets the keypad [brightness]. If the remember function is on, this command acts the same as 'Set and Save Keypad Brightness'.		
Remembered	Yes		
Default	255		

## 9.12 Set and Save Keypad Brightness

Syntax	Hexadecimal	0xFE 0x9D [brightness]	
	Decimal	254 157 [brightness]	
Parameters	Parameter	Length	Description
	brightness	1	Keypad brightness setting (0 to 255).
Description	This command sets and saves the keypad [brightness] as default.		
Remembered	Always		
Default	255		

# 10 Display Functions

## 10.1 Introduction

The LK204-7T-1U employs software controlled display settings, which allow for control over, clearing the screen, changing the brightness and contrast or setting timers for turning it on or off. The combination of these allow you complete software control over your display's appearance.

## 10.2 Display On

Syntax	Hexadecimal	0xFE 0x42 [min]	
	Decimal	254 66 [min]	
	ASCII	254 "B" [min]	
Parameters	Parameter	Length	Description
	min	1	Minutes before turning the display on (0 to 90).



Description	This command turns the backlight on after the [minutes] timer has expired, with a ninety minute maximum timer. A time of 0 specifies that the backlight should turn on immediately and stay on. When this command is sent while the remember function is on, the timer will reset and begin after power up.
Remembered	Yes
Default	0

### 10.3 Display Off

Syntax	Hexadecimal 0xFE 0x46 Decimal 254 70 ASCII 254 "F"
Description	This command turns the backlight off immediately. The backlight will remain off until a 'Display On' command has been received.
Remembered	Yes

### 10.4 Set Brightness

Syntax	Hexadecimal 0xFE 0x99 [brightness] Decimal 254 153 [brightness]						
Parameters	<table border="1"> <thead> <tr> <th>Parameter</th> <th>Length</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>brightness</td> <td>1</td> <td>Display brightness setting (0 to 255).</td> </tr> </tbody> </table>	Parameter	Length	Description	brightness	1	Display brightness setting (0 to 255).
Parameter	Length	Description					
brightness	1	Display brightness setting (0 to 255).					
Description	This command sets the display [brightness]. If the remember function is on, this command acts the same as 'Set and Save Brightness'.						
Remembered	Yes						
Default	255						

### 10.5 Set and Save Brightness

Syntax	Hexadecimal 0xFE 0x98 [brightness] Decimal 254 152 [brightness]						
Parameters	<table border="1"> <thead> <tr> <th>Parameter</th> <th>Length</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>brightness</td> <td>1</td> <td>Backlight setting (0 to 255).</td> </tr> </tbody> </table>	Parameter	Length	Description	brightness	1	Backlight setting (0 to 255).
Parameter	Length	Description					
brightness	1	Backlight setting (0 to 255).					
Description	This command sets and saves the display [brightness] as default.						
Remembered	Always						

## 10.6 Set Backlight Base Colour

Syntax	Hexadecimal	0xFE 0x82 [Red] [Green] [Blue]	
	Decimal	254 130 [Red] [Green] [Blue]	
Parameters	Parameter	Length	Description
	Red	1	Red brightness (0 to 255).
	Green	1	Green brightness (0 to 255).
	Blue	1	Blue brightness (0 to 255).
Description	This command sets the colour of the backlight. After this command is set the set brightness commands will vary the intensity of this colour.		

---

**NOTE** This command is only valid on displays with Tri-Colour backlights.

---

Remembered	Always
Default	255, 255, 255 (white)

## 10.7 Set Contrast

Syntax	Hexadecimal	0xFE 0x50 [contrast]	
	Decimal	254 80 [contrast]	
	ASCII	254 "P" [contrast]	
Parameters	Parameter	Length	Description
	contrast	1	Contrast value (0 to 255).
Description	<p>This command sets the display's contrast to [contrast], where [contrast] is a value between 0x00 and 0xFF (between 0 to 255). Lower values cause 'on' elements in the display area to appear lighter, while higher values cause 'on' elements to appear darker. Lighting and temperature conditions will affect the actual value used for optimal viewing. Individual display modules will also differ slightly from each other in appearance. In addition, values for optimal viewing while the display backlight is on may differ from values used when backlight is off. This command does not save the [contrast] value, and is lost after power down; but this command has the option of remembering the settings when issued with the Remember function 'on'. When this is the case, this command is the same as the Set and Save Contrast command.</p>		

---

**NOTE** This command has only 32 levels for X-Board based displays, meaning eight contrast settings will have the same single effect. Effectively, values 0 through 7, 8 through 15, and so on will result in the same setting.

---

Remembered	Yes
Default	128

## 10.8 Set and Save Contrast

Syntax	Hexadecimal	0xFE 0x91 [contrast]	
	Decimal	254 145 [contrast]	
Parameters	Parameter	Length	Description
	contrast	1	Contrast value (0 to 255).
Description	This command sets the display's contrast to [contrast], where [contrast] is a value between 0x00 and 0xFF (between 0 to 255). Lower values cause 'on' elements in the display area to appear lighter, while higher values cause 'on' elements to appear darker. Lighting conditions will affect the actual value used for optimal viewing. Individual display modules will also differ slightly from each other in appearance. In addition, values for optimal viewing while the display backlight is on may differ from values used when backlight is off.		

---

**NOTE** This command saves the [contrast] value so that it is not lost after power down.

---

Remembered	Yes
Default	128

## 11 Data Security

### 11.1 Introduction

Ensuring that your LK204-7T-1U display's exactly what you want it to can be the difference between a projects success and failure. This is why we incorporate features such as Data Lock into the LK204-7T-1U With this new feature you now are in control over of how and when settings will be changed so there is no need to worry about the module acting exactly like you expected it to because all the settings may be locked and remembered for the next power up.

### 11.2 Set Remember

Syntax	Hexadecimal	0xFE 0x93 [switch]	
	Decimal	254 147 [switch]	
Parameters	Parameter	Length	Description
	switch	1	0: Do not remember, 1: Remember

Description This command allows you to switch the remember function on and off. To use the remember function, set remember to on, then set all of the settings that you wish to save, settings that are listed as 'Remember: Yes' support being saved into the non-volatile memory. After you have set all of the commands that you wish to save, you may then cycle the power and check the display settings to ensure that all the settings have been saved. If you wish to use remember again after cycling the power, you must set it to on again.

---

#### NOTES

- Writing to non-volatile memory is time consuming and slows down the operation of the display.
  - Non-volatile memory has a 'write limit' and may only be changed approximately 100,000 times.
- 

Remembered No  
 Default Do not remember

### 11.3 Data Lock

Syntax	Hexadecimal	0xFE 0xCA 0xF5 0xA0 [level]	
	Decimal	254 202 245 160 [level]	
Parameters	Parameter	Length	Description
	level	1	Sets the data lock level

## Description

Paranoia allows you to lock the module from displaying information, as well as enables the protection of the filesystem and module settings.

Each bit corresponds corresponds to a different lock level, while sending a zero will unlock your display as the following tables explains:

Bit	Data Lock Level	Description
0-2	Reserved	Should be left 0
3	Communication Speed Lock	When this bit is set (1) the Baud Rate and I <sup>2</sup> C Slave address are locked
4	Setting Lock	When this bit is set (1) the display settings such as backlight, contrast and GPO settings are locked. (Internal EEPROM)
5	Reserved	Should be left 0
6	Command Lock	When this bit is set (1) all commands but commands 202/203 are locked. (cmd lock)
7	Display Lock	When this bit is set (1) the module is locked from displaying any new information. (text lock)

---

## NOTES

- Sending a new data lock level will override the previous data lock level.
  - Data lock levels may be combined.
- 

Remembered Always  
Default 0  
Examples

Hex	Dec	Binary	Description
0x00	0	0	Unlock
0x50	80	01010000	Setting and Command Lock

## 11.4 Set and Save Data Lock

Syntax                      Hexadecimal    0xFE 0xCB 0xF5 0xA0 [level]  
                                  Decimal            254 203 245 160 [level]

Parameters	Parameter	Length	Description
	level	1	Sets the data lock level
Description	This command will set and save the data lock level. See the Data Lock section for more information.		
Remembered Default	Always 0		

## 11.5 Write Customer Data

Syntax	Hexadecimal	0xFE 0x34 [data]	
	Decimal	254 52 [data]	
	ASCII	254 "4" [data]	
Parameters	Parameter	Length	Description
	data	16	Writes the customer data
Description	Writes the customer Data. 16 Bytes of data can be saved in non-volatile memory.		
Remembered	No		

## 11.6 Read Customer Data

Syntax	Hexadecimal	0xFE 0x35
	Decimal	254 53
	ASCII	254 "5"
Description	Reads whatever was written by Write Customer Data.	
Remembered	No	

# 12 Miscellaneous

## 12.1 Introduction

This chapter covers the 'Report Version Number' and 'Read Module Type' commands. These commands can be particularly useful to find out more information about the display module before contacting technical support.

## 12.2 Read Version Number

Syntax           Hexadecimal   0xFE 0x36  
                  Decimal       254 54  
                  ASCII        254 "6"

Description      This command will return a byte representing the version of the module, see the following table as an example:

Hex Value	Version Number
0x19	Version 1.9
0x57	Version 5.7

Remembered      No

### 12.3 Read Module Type

Syntax           Hexadecimal   0xFE 0x37  
                  Decimal       254 55  
                  ASCII        254 "7"

Description

This command will return a hex value corresponding to the the model number of the module see the following table:

Hex	Product ID	Hex	Product ID
1	LCD0821	2	LCD2021
5	LCD2041	6	LCD4021
7	LCD4041	8	LK202-25
9	LK204-25	A	LK404-55
B	VFD2021	C	VFD2041
D	VFD4021	E	VK202-25
F	VK204-25	10	GLC12232
13	GLC24064	14	Unused
15	GLK24064-25	16	Unused
21	Unused	22	GLK12232-25
23	Unused	24	GLK12232-25-SM
25	GLK24064-16-1U-USB	26	GLK24064-16-1U
27	GLK19264-7T-1U-USB	28	GLK12232-16
29	GLK12232-16-SM	2A	GLK19264-7T-1U
2B	LK204-7T-1U	2C	LK204-7T-1U-USB
31	LK404-AT	32	MOS-AV-162A
33	LK402-12	34	LK162-12
35	LK204-25PC	36	LK202-24-USB
37	VK202-24-USB	38	LK204-24-USB
39	VK204-24-USB	3A	PK162-12
3B	VK162-12	3C	MOS-AP-162A
3D	PK202-25	3E	MOS-AL-162A
3F	MOS-AL-202A	40	MOS-AV-202A
41	MOS-AP-202A	42	PK202-24-USB
43	MOS-AL-082	44	MOS-AL-204
45	MOS-AV-204	46	MOS-AL-402
47	MOS-AV-402	48	LK082-12
49	VK402-12	4A	VK404-55
4B	LK402-25	4C	VK402-25
4D	PK204-25	4E	Unused
4F	MOS	50	MOI
51	XBoard-S	52	XBoard-I
53	MOU	54	XBoard-U
55	LK202-25-USB	56	VK202-25-USB
57	LK204-25-USB	58	VK204-25-USB
5B	LK162-12-TC	5C	Unused
71	Unused	72	GLK240128-25
73	LK404-25	74	VK404-25
77	Unused	78	GLT320240
79	GLT480282	7A	GLT240128

Remembered

No



## 13 Command Summary

### 13.1 Communications

Description	Syntax	Page	
Changing the I <sup>2</sup> C Slave Address	Hexadecimal	0xFE 0x33 [adr]	18
	Decimal	254 51 [adr]	
	ASCII	254 “3” [adr]	
Changing the Baud Rate	Hexadecimal	0xFE 0x39 [speed]	19
	Decimal	254 57 [speed]	
	ASCII	254 “9” [speed]	
Setting a Non-Standard Baud Rate	Hexadecimal	0xFE 0xA4 [speed]	19
	Decimal	254 164 [speed]	

### 13.2 Text

Description	Syntax	Page	
Auto Scroll On	Hexadecimal	0xFE 0x51	22
	Decimal	254 81	
	ASCII	254 “Q”	
Auto Scroll Off	Hexadecimal	0xFE 0x52	22
	Decimal	254 82	
	ASCII	254 “R”	
Clear Screen	Hexadecimal	0xFE 0x58	22
	Decimal	254 88	
	ASCII	254 “X”	
Changing the Startup Screen	Hexadecimal	0xFE 0x40	23
	Decimal	254 64	
	ASCII	254 “@”	
Set Auto Line Wrap On	Hexadecimal	0xFE 0x43	23
	Decimal	254 67	
	ASCII	254 “C”	
Set Auto Line Wrap Off	Hexadecimal	0xFE 0x44	23
	Decimal	254 68	
	ASCII	254 “D”	
Set Cursor Position	Hexadecimal	0xFE 0x47 [col] [row]	24
	Decimal	254 71 [col] [row]	
	ASCII	254 “G” [col] [row]	
Go Home	Hexadecimal	0xFE 0x48	24
	Decimal	254 72	
	ASCII	254 “H”	

Description	Syntax	Page
Move Cursor Back	Hexadecimal	0xFE 0x4C
	Decimal	254 76
	ASCII	254 “L”
Move Cursor Forward	Hexadecimal	0xFE 0x4D
	Decimal	254 77
	ASCII	254 “M”
Underline Cursor On	Hexadecimal	0xFE 0x4A
	Decimal	254 74
	ASCII	254 “J”
Underline Cursor Off	Hexadecimal	0xFE 0x4B
	Decimal	254 75
	ASCII	254 “K”
Blinking Block Cursor On	Hexadecimal	0xFE 0x53
	Decimal	254 83
	ASCII	254 “S”
Blinking Block Cursor Off	Hexadecimal	0xFE 0x54
	Decimal	254 84
	ASCII	254 “T”

### 13.3 Special Characters

Description	Syntax	Page
Creating a Custom Character	Hexadecimal	0xFE 0x4E [refID] [data]
	Decimal	254 78 [refID] [data]
	ASCII	254 “N” [refID] [data]
Saving Custom Characters	Hexadecimal	0xFE 0xC1 [Bank] [ID] [Data]
	Decimal	254 193 [Bank] [ID] [Data]
Loading Custom Characters	Hexadecimal	0xFE 0xC0 [Bank]
	Decimal	254 192 [Bank]
Save Startup Screen Custom Characters	Hexadecimal	0xFE 0xC2 [refID] [data]
	Decimal	254 194 [refID] [data]
Initialize Medium Number	Hexadecimal	0xFE 0x6D
	Decimal	254 109
	ASCII	254 “m”
Place Medium Numbers	Hexadecimal	0xFE 0x6F [Row] [Col] [Digit]
	Decimal	254 111 [Row] [Col] [Digit]
	ASCII	254 “o” [Row] [Col] [Digit]
Initialize Large Numbers	Hexadecimal	0xFE 0x6E
	Decimal	254 110
	ASCII	254 “n”
Place Large Number	Hexadecimal	0xFE 0x23 [Col] [Digit]
	Decimal	254 35 [Col] [Digit]
	ASCII	254 “#” [Col] [Digit]

Description	Syntax	Page
Initialize Horizontal Bar	Hexadecimal	0xFE 0x68
	Decimal	254 104
	ASCII	254 "h"
Place Horizontal Bar Graph	Hexadecimal	0xFE 0x7C [Col] [Row] [Dir] [Length]
	Decimal	254 124 [Col] [Row] [Dir] [Length]
	ASCII	254 " " [Col] [Row] [Dir] [Length]
Initialize Narrow Vertical Bar	Hexadecimal	0xFE 0x73
	Decimal	254 115
	ASCII	254 "s"
Initialize Wide Vertical Bar	Hexadecimal	0xFE 0x76
	Decimal	254 118
	ASCII	254 "v"
Place Vertical Bar	Hexadecimal	0xFE 0x3D [Column] [Length]
	Decimal	254 61 [Column] [Length]
	ASCII	254 "=" [Column] [Length]

## 13.4 General Purpose Output

Description	Syntax	Page
General Purpose Output Off	Hexadecimal	0xFE 0x56 [Num]
	Decimal	254 86 [Num]
	ASCII	254 "V" [Num]
General Purpose Output On	Hexadecimal	0xFE 0x57 [Num]
	Decimal	254 87 [Num]
	ASCII	254 "W" [Num]
Set Startup GPO state	Hexadecimal	0xFE 0xC3 [Num] [state]
	Decimal	254 195 [Num] [state]

## 13.5 Dallas 1-Wire

Description	Syntax	Page
Search for a 1-Wire Device	Hexadecimal	0xFE 0xC8 0x2
	Decimal	254 200 2
Dallas 1-Wire Transaction	Hexadecimal	0xFE 0xC8 0x1 [flags] [SndBits] [RcvBits] [Data]
	Decimal	254 200 1 [flags] [SndBits] [RcvBits] [Data]

## 13.6 Keypad

Description	Syntax	Page
Auto Transmit Key Presses On	Hexadecimal	0xFE 0x41
	Decimal	254 65
	ASCII	254 "A"
Auto Transmit Key Presses Off	Hexadecimal	0xFE 0x4F
	Decimal	254 79
	ASCII	254 "O"
Poll Key Press	Hexadecimal	0xFE 0x26
	Decimal	254 38
	ASCII	254 "&"
Clear Key Buffer	Hexadecimal	0xFE 0x45
	Decimal	254 69
	ASCII	254 "E"
Set Debounce Time	Hexadecimal	0xFE 0x55 [time]
	Decimal	254 85 [time]
	ASCII	254 "U" [time]
Set Auto Repeat Mode	Hexadecimal	0xFE 0x7E [mode]
	Decimal	254 126 [mode]
	ASCII	254 "~" [mode]
Auto Repeat Mode Off	Hexadecimal	0xFE 0x60
	Decimal	254 96
	ASCII	254 ""
Assign Keypad Codes	Hexadecimal	0xFE 0xD5 [KDown] [KUp]
	Decimal	254 213 [KDown] [KUp]
Keypad Backlight Off	Hexadecimal	0xFE 0x9B
	Decimal	254 155
Set Keypad Brightness	Hexadecimal	0xFE 0x9C [brightness]
	Decimal	254 156 [brightness]
Set and Save Keypad Brightness	Hexadecimal	0xFE 0x9D [brightness]
	Decimal	254 157 [brightness]

## 13.7 Display Functions

Description	Syntax	Page
Display On	Hexadecimal	0xFE 0x42 [min]
	Decimal	254 66 [min]
	ASCII	254 "B" [min]
Display Off	Hexadecimal	0xFE 0x46
	Decimal	254 70
	ASCII	254 "F"
Set Brightness	Hexadecimal	0xFE 0x99 [brightness]
	Decimal	254 153 [brightness]
Set and Save Brightness	Hexadecimal	0xFE 0x98 [brightness]
	Decimal	254 152 [brightness]
Set Backlight Base Colour	Hexadecimal	0xFE 0x82 [Red] [Green] [Blue]
	Decimal	254 130 [Red] [Green] [Blue]

Description	Syntax	Page
Set Contrast	Hexadecimal	0xFE 0x50 [contrast]
	Decimal	254 80 [contrast]
	ASCII	254 "P" [contrast]
Set and Save Contrast	Hexadecimal	0xFE 0x91 [contrast]
	Decimal	254 145 [contrast]

## 13.8 Data Security

Description	Syntax	Page
Set Remember	Hexadecimal	0xFE 0x93 [switch]
	Decimal	254 147 [switch]
Data Lock	Hexadecimal	0xFE 0xCA 0xF5 0xA0 [level]
	Decimal	254 202 245 160 [level]
Set and Save Data Lock	Hexadecimal	0xFE 0xCB 0xF5 0xA0 [level]
	Decimal	254 203 245 160 [level]
Write Customer Data	Hexadecimal	0xFE 0x34 [data]
	Decimal	254 52 [data]
Read Customer Data	ASCII	254 "4" [data]
	Hexadecimal	0xFE 0x35
	Decimal	254 53
	ASCII	254 "5"

## 13.9 Miscellaneous

Description	Syntax	Page
Read Version Number	Hexadecimal	0xFE 0x36
	Decimal	254 54
	ASCII	254 "6"
Read Module Type	Hexadecimal	0xFE 0x37
	Decimal	254 55
	ASCII	254 "7"

## 13.10 Command By Number

Command	Description	Page
Hex	Dec	ASCII
0x23	35	"#"
0x26	38	"&"
0x33	51	"3"
0x34	52	"4"
0x35	53	"5"

Command	Description	Page		
Hex	Dec	ASCII		
0x36	54	“6”	Read Version Number	49
0x37	55	“7”	Read Module Type	50
0x39	57	“9”	Changing the Baud Rate	19
0x3D	61	“=”	Place Vertical Bar	32
0x40	64	“@”	Changing the Startup Screen	23
0x41	65	“A”	Auto Transmit Key Presses On	38
0x42	66	“B”	Display On	43
0x43	67	“C”	Set Auto Line Wrap On	23
0x44	68	“D”	Set Auto Line Wrap Off	23
0x45	69	“E”	Clear Key Buffer	39
0x46	70	“F”	Display Off	44
0x47	71	“G”	Set Cursor Position	24
0x48	72	“H”	Go Home	24
0x4A	74	“J”	Underline Cursor On	25
0x4B	75	“K”	Underline Cursor Off	25
0x4C	76	“L”	Move Cursor Back	24
0x4D	77	“M”	Move Cursor Forward	25
0x4E	78	“N”	Creating a Custom Character	26
0x4F	79	“O”	Auto Transmit Key Presses Off	38
0x50	80	“P”	Set Contrast	45
0x51	81	“Q”	Auto Scroll On	22
0x52	82	“R”	Auto Scroll Off	22
0x53	83	“S”	Blinking Block Cursor On	25
0x54	84	“T”	Blinking Block Cursor Off	26
0x55	85	“U”	Set Debounce Time	39
0x56	86	“V”	General Purpose Output Off	34
0x57	87	“W”	General Purpose Output On	34
0x58	88	“X”	Clear Screen	22
0x60	96	“”	Auto Repeat Mode Off	41
0x68	104	“h”	Initialize Horizontal Bar	30
0x6D	109	“m”	Initialize Medium Number	29
0x6E	110	“n”	Initialize Large Numbers	30
0x6F	111	“o”	Place Medium Numbers	29
0x73	115	“s”	Initialize Narrow Vertical Bar	31
0x76	118	“v”	Initialize Wide Vertical Bar	31
0x7C	124	“ ”	Place Horizontal Bar Graph	31
0x7E	126	“~”	Set Auto Repeat Mode	40
0x82	130		Set Backlight Base Colour	45
0x91	145		Set and Save Contrast	46
0x93	147		Set Remember	46
0x98	152		Set and Save Brightness	44
0x99	153		Set Brightness	44
0x9B	155		Keypad Backlight Off	42
0x9C	156		Set Keypad Brightness	42

Command Hex	Description		Page
	Dec	ASCII	
0x9D	157	Set and Save Keypad Brightness	43
0xA4	164	Setting a Non-Standard Baud Rate	19
0xC0	192	Loading Custom Characters	28
0xC1	193	Saving Custom Characters	27
0xC2	194	Save Startup Screen Custom Characters	28
0xC3	195	Set Startup GPO state	34
0xC8	200	Dallas 1-Wire Transaction	36
0xCA	202	Data Lock	47

## 14 Appendix

### 14.1 Specifications

#### 14.1.1 Environmental

Table 78: Environmental Specifications

	Standard Temperature	Extended Temperature
<b>Operating Temperature</b>	0°C to +50°C	-20°C to +70°C
<b>Storage Temperature</b>	-20°C to +70°C	-30°C to +80°C
<b>Operating Relative Humidity</b>	90% max non-condensing	
<b>Vibration (Operating)</b>	4.9 m/s <sup>2</sup> XYZ directions	
<b>Vibration (Non-Operating)</b>	19.6 m/s <sup>2</sup> XYZ directions	
<b>Shock (Operating)</b>	29.4 m/s <sup>2</sup> XYZ directions	
<b>Shock (Non-Operating)</b>	490 m/s <sup>2</sup> XYZ directions	

#### 14.1.2 Electrical

Table 79: Electrical Specifications

	Standard	-LV
<b>Supply Voltage</b>	+5Vdc ±0.25V	+3.3Vdc ±0.25V
<b>Non-USB Minimum Current</b>	60mA typical	
<b>USB Minimum Current</b>	65mA typical	
<b>Backlight On (YG)</b>	add 100 mA (160/165mA) typical	
<b>Backlight On (TCI)</b>	add 200mA (260/265mA) typical	
<b>Backlight On (GW &amp; WB)</b>	add 50mA (110/115mA) typical	

## 14.2 Optical Characteristics

Table 80: Optical Characteristics

<b>Character x Lines</b>	20 columns x 4 rows
<b>Module Size</b>	142.0 mm x 38.0 mm x 29.0 mm
<b>Character Size</b>	5.2 mm x 3.9 mm
<b>Display Size</b>	82.00 mm x 28.40 mm
<b>LED Backlight Half-Life (YG)</b>	50,000 hours
<b>LED Backlight Half-Life (TCI Red and Green)</b>	20,000 hours
<b>LED Backlight Half-Life (GW, WB &amp; TCI Blue)</b>	10,000 hours

---

**NOTE** To prolong life, it is recommended that the backlight be turned off when the display is not in use.

---

## 14.3 Physical Layout



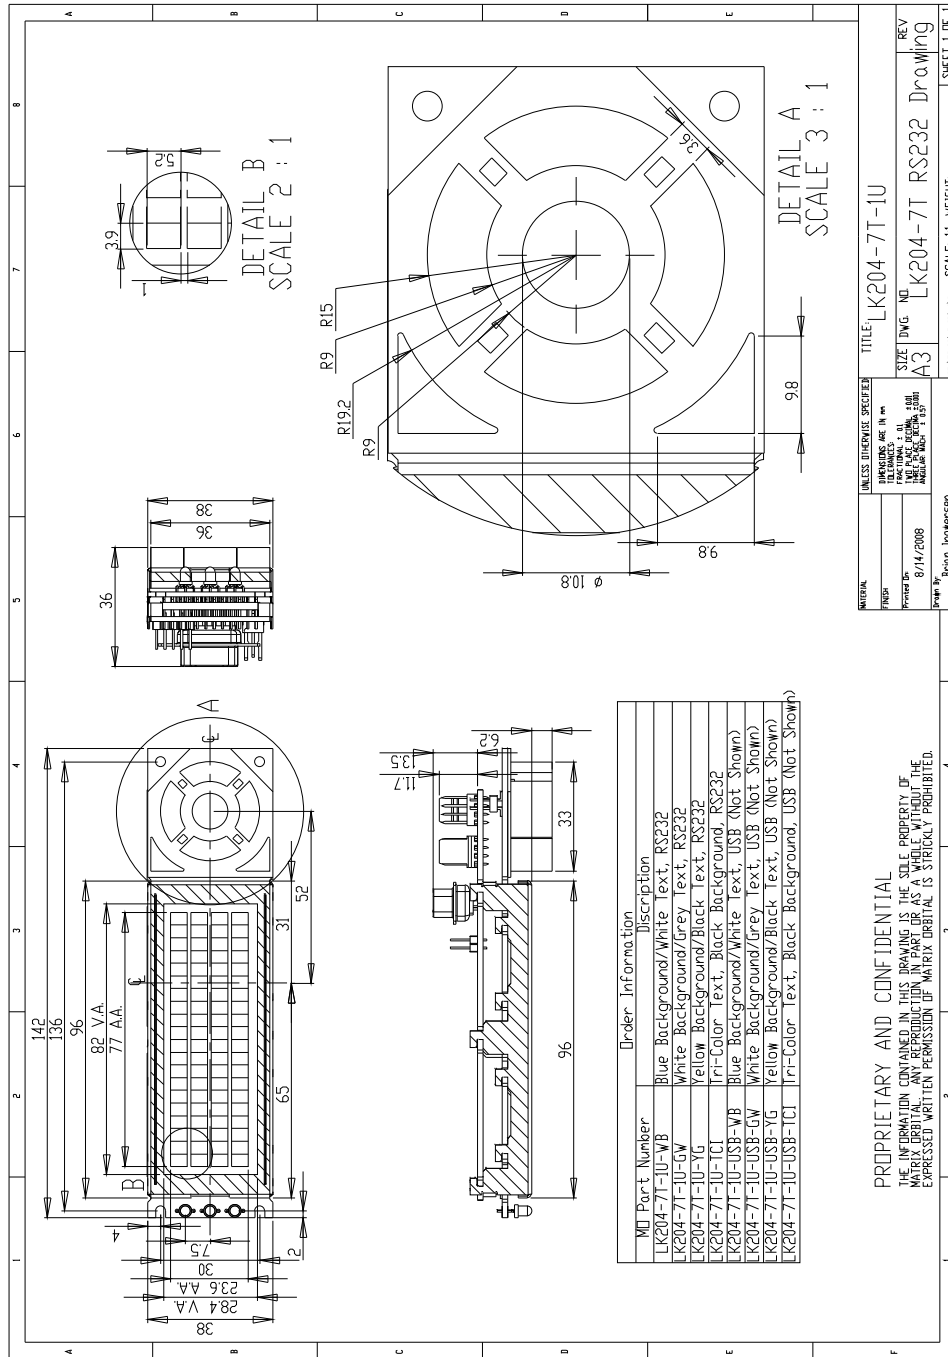


Figure 25: Physical Diagram

---

**NOTE** Autocad version is downloadable from the Matrix Orbital Manual download location.

---

## 14.4 Ordering Information

<b>L</b>	<b>K</b>	<b>20</b>	<b>4</b>	<b>-7T</b>	<b>-1U</b>	<b>-USB</b>	<b>-TCI</b>		<b>-E</b>
<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>

Table 81: Part Numbering Scheme

#	Description	Options
<b>1</b>	Screen Type	L: Liquid Crystal Display
<b>2</b>	Input Interface	K: Tactile Keypad
<b>3</b>	Width	20: Twenty Character Columns
<b>4</b>	Height	4: Four Character Rows
<b>5</b>	Keypad Buttons	-7T: Seven Integrated Tactile Keys
<b>6</b>	Form Factor	-1U: Fits a 1U Opening
<b>7</b>	Protocol	NP: Standard RS232/TTL/I <sup>2</sup> C -USB: Universal Serial Bus Only
<b>8</b>	Color (Text/Background)	-YG: Grey/Yellow-Green -GW: Grey/White -WB: White/Blue -TCI: Tricolor/Black
<b>9</b>	Input Voltage	NP: Standard (4.75-5.25V) -LV: Low Voltage (3.30V)
<b>10</b>	Temperature	NP: Standard (0°C to +50°C) -E: Extended Temperature (-20°C to +70°C)

Table 82: Part Options

## 14.5 Definitions

**E** Extended Temperature (-20C to 70C)

**LV** Low Voltage (+3.3V DC)

**YG** Yellow-Green backlight

**TCI** Inverse Tricolor backlight

**GW** White backlight with grey text

**WB** Blue background with white text

**MSB** Most Significant Byte

**LSB** Least Significant Byte

## 14.6 Contacting Matrix Orbital

### Telephone

Sales: 1(403)229-2737

Support: 1(403)204-3750

### On The Web

Sales: <http://www.MatrixOrbital.com>

Support: <http://www.MatrixOrbital.ca>

Forums: <http://www.lcdforums.com>

## 14.7 Revision History

Table 83: Revision History

Revision Number	Description	Author
1.0	Initial Manual	Clark
1.1	Updated Font Set and GPO Image	Clark
1.2	Updated Backlight Life	Clark