
EMC 1500

Single Hole Mounting Elapsed Hour Meter

EMC 1500 is an easy to mount LCD digital elapsed hour meter. The module features 9999.9 and 99999 hour ranges, resulting in 1/10 hour and 1 hour resolution respectively. A leading zero blanking input is provided allowing the user to switch off unwanted leading zeros. The module incorporates an output that pulses high after every hour counted. This is particularly useful in applications where maintenance or inspection is required at regular time intervals. The timer features Trip and Total ranges. The Trip range can be reset to zero. The meter's readings are stored in the module's internal memory and are retained even when the unit is not powered. To mount the module, drill a single $5.5 \text{ mm}/^{7}/_{32}$ " hole, locate its screw threaded stud through the hole and secure with the washer and nut provided. The module's 8 connection wires pass through the hollow stud into the target application. A rubber seal is included, providing splashproof protection for the unit when fitted to the meter during installation.

- **()** Single Hole Mounting
- (9999.9 and 99999 Hour Ranges
- **9**mm / 0.35" LCD Digit Height
- Reset and Trip/Total Inputs
- Leading Zero Blanking Input
- Pulse Output Every Hour
- Splashproof



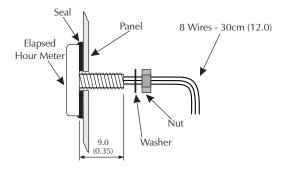

Stock Number						
Easy Mounting	Elapsed Hour Mete	r	_		EMC 1500	
Specification		Min.	Тур.	Max.	Unit	
Resolution	Range 9999.9		0.1		Hour	
	Range 99999		1		Hour	
Accuracy*			±2	±6	Sec./24Hrs.	
Operating temperature range		0		50	°C	
Supply voltage (V+)		5		27	V d.c.	
Supply current			1.5		mA	
Input Low Voltage (VIL)**		0		0.5	V	
Input High Voltage (VIH)***		2		V+	V	


* Based upon constant running. There is potential for ±2 seconds error each time the module is powered down and then up again. Over time, the accumulated error approximates to zero.

** Applies to the inputs: Range, V-Sense, LZB, Reset and Trip/Total

*** Applies to V-Sense input only.

SAFETY

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's wires must not exceed 60Vd.c. The user must ensure that the incorporation of the meter into equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).

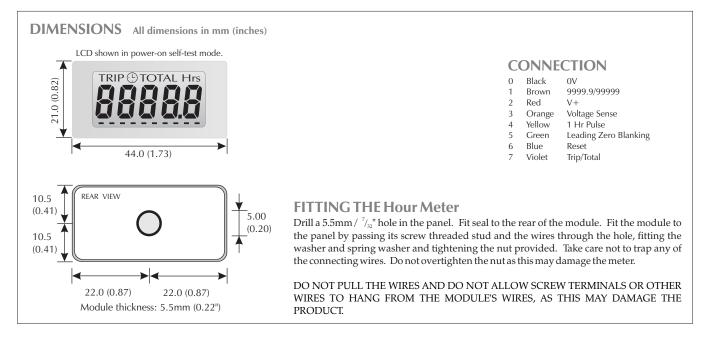


LASCAR

WIRE FUNCTIONS

0.	Black	0V	Negative power supply connection.	
1.	Brown	RANGE	Do not connect for 99999 Hour range.	
			Connect to 0V for 9999.9 Hour range.	
2.	Red	V+	Positive power supply connection.	
3.	Orange	V-SENSE	Connect to V + to start/continue counting elapsed hours.	
			Connect to 0V or do not connect to read TRIP or TOTAL value without counting elapsed hours.	
4.	Yellow	PULSE	Normally at $0V$, this output goes High $(+3.3V)$ every hour in the selected mode.	
5.	Green	LZB	Do not connect to display leading zeros.	
			Connect to 0V to blank all leading zeros.	
			When reading is 0000.0 or 00000, leading zeros are not blanked.	
6.	Blue	RESET	Connect momentarily to $0V$ to reset the display to zero (internally connected to V + via pull-up resistor).	
7.	Violet	TRIP/TOTAL	Do not connect for TOTAL mode operation. In TOTAL mode, the elapsed hour meter cannot be reset to zero.	
			Connect to 0V for TRIP mode operation. In TRIP mode, the elapsed hour meter can be reset to zero.	
			connection vior risk mode operation. In risk mode, the elapsed four meter carbereset to zero.	

- <u>Warning</u>: Do not connect the following wires to V+: RANGE, PULSE, LZB, RESET, TRIP/TOTAL, as this may damage the meter. The user must incorporate suitable protection circuitry in applications where the voltage to any of the meter's wires can exceed 27V d.c., including transient conditions, else damage to the meter may occur. In particular, for applications in harsh electrical environments, e.g. automotive, suitable external protection must be provided to protect against "load dump" conditions, transients, etc.
- **DISPLAY FUNCTIONS**
- 8888.8 The 5 digit readout displays elapsed time in hours.
- TRIP This symbol is displayed when trip mode is selected (see Wire Functions above)
- TOTAL This symbol is displayed when total mode is selected (see Wire Functions above)
- The 10-segment incrementing bar indicates that the module is working correctly and counting hours.

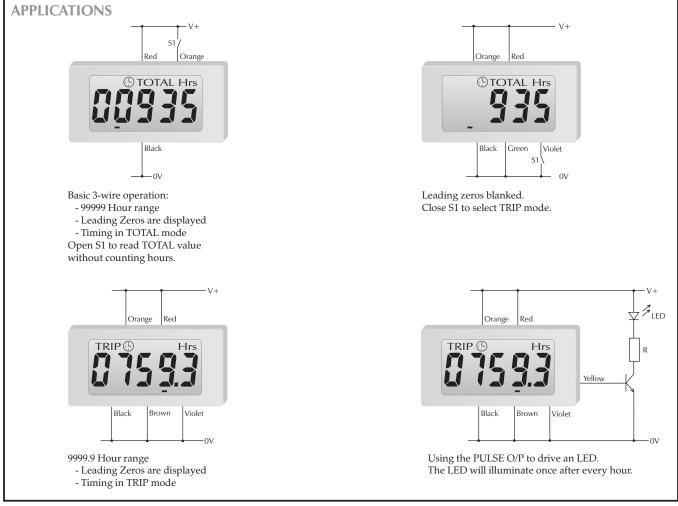

Specifications liable to change without prior warning EMC 1500 Iss

Issue 10