

3A Voltage Mode Synchronous Buck PWM DC-DC Converter with Integrated Inductor External Output Voltage Programming

Description

This Enpirion solution is a Power System on Silicon DC-DC converter. It is specifically designed to meet the precise voltage and fast transient requirements of present and future high-performance, low-power processor, DSP, FPGA, memory boards and system level applications in a distributed power architecture. Advanced circuit techniques, ultra high switching frequency, and very advanced, high-density, integrated circuit and proprietary inductor technology deliver high-quality, ultra compact, non-isolated DC-DC conversion. This device requires only an input, output, and small softstart programming capacitor and a resistor divider.

The Enpirion solution significantly helps in system design and productivity by offering greatly simplified board design, layout and manufacturing requirements. In addition, a reduction in the number of vendors required for the complete power solution helps to enable an overall system cost savings.

All Enpirion products are RoHS compliant and lead-free manufacturing environment compatible.

Typical Application Circuit

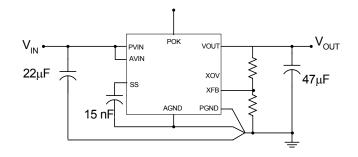


Figure 1. Simple Layout.

Features

- Integrated INDUCTOR, MOSFETS, Controller
- Footprint 1/3rd that of competing solutions.
- Minimal external components.
- Up to 10W continuous output power.
- 5MHz operating frequency.
- High efficiency, up to 93%.
- V_{OUT} accuracy 2% over line, load and temp.
- Wide input voltage range of 2.375V to 5.5V.
- External resistor divider output voltage select.
- · Output enable pin and Power OK signal.
- Programmable soft-start time.
- Programmable over-current protection.
- Programmable over-voltage protection.
- Thermal shutdown, short circuit, and UVLO.
- RoHS compliant, MSL level 3, 260C reflow.

Applications

- Point of load regulation for low-power processors, network processors, DSPs, FPGAs, and ASICs
- Notebook computers, servers, workstations
- Broadband, networking, LAN/WAN, optical
- Low voltage, distributed power architectures with 2.5V, 3.3V or 5V rails
- DSL, STB, DVR, DTV, iPC
- Ripple sensitive applications

Ordering Information

Part Num		Temp Rating (°C)	Package
EN5336QI	-T	-40 to +85	44-pin QFN T&R
EN5336QI-	-E	QFN Evaluation Board	

Pin Configuration

Below is a top view diagram of the EN5336QI package.

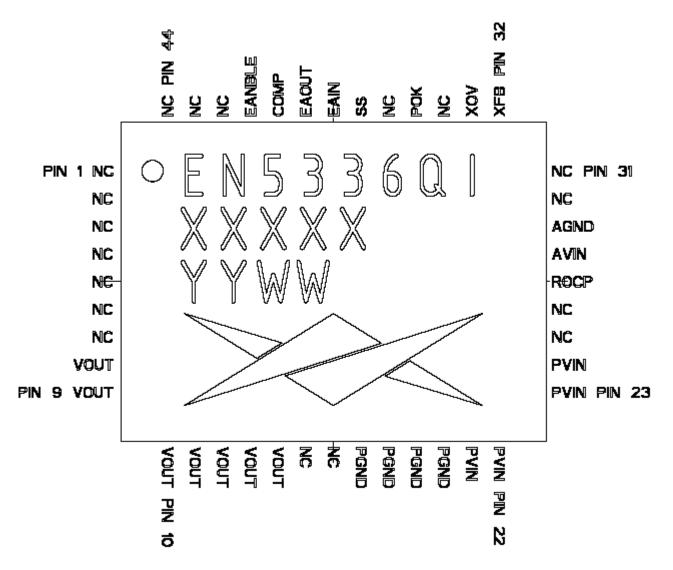


Figure 2. Pin-out diagram, top view.

NOTE: NC pins are not to be electrically connected to each other or to any external signal, ground, or voltage. Failure to follow this guideline may result in part malfunction or damage.

NOTE: All perimeter pins must be soldered to PCB.

Pin Descriptions

PIN NAME 1-7 NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. 8-14 VOUT Regulated converter output. Connect these pins to the load and place output capacitor from these pins the PGND pins 17-18 NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: Internally connected to switching node. Take care to route signals away from these pins. PGND Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. PROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. Analog voltage input for the controller circuits. Connect this pin to the input power supply. Analog voltage input for the controller circuits. Connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. **REGENCAL TOWN CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. **REGENCAL TOWN CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. **REGENCAL TOWN CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. **REGENCAL TOWN CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. **REGENCAL TOWN CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. **REGENCAL TOWN CONNECT – Do not electrically connect this pin to any electrical s	BINI	NIA BAIT	FUNCTION
8-14 VOUT Regulated converter output. Connect these pins to the load and place output capacitor from these pins the PGND pins 17-18 NC CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: Internally connected to switching node. Take care to route signals away from these pins. Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. 21-24 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. NC CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. PROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. Analog voltage input for the controller circuits. Connect this pin to the input power supply. Analog ground for the controller circuits. Connect this pin to the input power supply. NC AND Analog ground for the controller circuits. NC ONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. XFB Feedback pin for external voltage divider network. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. POWER VOLTAGE POWER OF A DOWNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor of customization of the control loop response. Optional Error Amplifier output. Allows for customization of the control loop response. Input Enable. Ap	PIN	NAME	
Signal. CAUTIONI: May be internally connected.	1-7	NC	
these pins the PGND pins 17-18 NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: Internally connected to switching node. Take care to route signals away from these pins. Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. PROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. Analog voltage input for the controller circuits. Connect this pin to the input power supply. AGND Analog ground for the controller circuits. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. POWER OF As an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin	. ,		
15-16 NC NC CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: Internally connected to switching node. Take care to route signals away from these pins. 17-20 PGND Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. NC CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. PROCP Qptional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. Analog voltage input for the controller circuits. Connect this pin to the input power supply. AGND Analog ground for the controller circuits. Connect this pin to the input power supply. NC CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacito	8-14 VOLIT		
15-16 NC Signal. CAUTION!: Internally connected to switching node. Take care to route signals away from these pins. 17-20 PGND Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. 21-24 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. PROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. ANIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. ANIN NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-St	0 14	VOO1	
CÄUTIONI: Internally connected to switching node. Take care to route signals away from these pins. 17-20 PGND Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. 17-24 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. 18-25-26 NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. 27 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. 28 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. 29 AGND Analog ground for the controller circuits. 30-31 NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. 32 XFB Feedback pin for external voltage divider network. 33 XOV Over voltage programming feedback pin. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. 36 POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. 38 EAIN Optional Error Amplifier input. Allows for customization of the control loop response. 40 COMP Optional Error Amplifier input. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical			· ·
17-20 PGND Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. 17-20 PGND Input/Output power ground. Connect these pins to the ground electrode of the Input and output filter capacitors. Refer to layout guideline section for details. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. PORD Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. Analog voltage input for the controller circuits. Connect this pin to the input power supply. Analog voltage input for the controller circuits. NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. XFB Feedback pin for external voltage divider network. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. POWER OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SOft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SOft-Start node. The soft-start capacitor of the control loop response. Optional Error Amplifier input. Allows for customization of the control loop	15-16	NC.	
17-20	10.10	110	
21-24 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. 25-26 NC Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. NC NNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. 27 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. 28 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. 29 AGND Analog ground for the controller circuits. Connect this pin to the input power supply. NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. 32 XFB Feedback pin for external voltage divider network. 33 XOV Over voltage programming feedback pin. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC CONNECT – Do not electrically connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Soft-Start node. The soft-start capacitor of the control loop response. ADD Optional Error Amplifier output. Allows for customization of the control loop response. POWED Optional Error Amplifier output. Allows for customization of the control loop response. Input Enable. Applying a logic high,			
21-24 PVIN Input power supply. Connect to input power supply. Decouple with input capacitor to PGND. 25-26 NC NC OCONNECT – Do not electrically connected. 27 ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. 28 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. 29 AGND Analog ground for the controller circuits. Connect this pin to the input power supply. 30-31 NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. 32 XFB Feedback pin for external voltage divider network. 33 XOV Over voltage programming feedback pin. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. POK NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. POK NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. POK NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SOMP Optional Error Amplifier input. Allows for customization of the control loop response. COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other elec	17-20	PGND	
NC			
Signal CAUTION!: May be internally connected.	21-24	PVIN	
ROCP Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND (pin 40) to adjust the over current trip point. AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. AGND Analog ground for the controller circuits. NC NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. XFB Feedback pin for external voltage divider network. XOV Over voltage programming feedback pin. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. BAOUT Optional Error Amplifier input. Allows for customization of the control loop response. COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	25-26	NC	
27 ROCP (pin 40) to adjust the over current trip point. 28 AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. 29 AGND Analog ground for the controller circuits. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTIONI: May be internally connected. 32 XFB Feedback pin for external voltage divider network. 33 XOV Over voltage programming feedback pin. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTIONI: May be internally connected. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SS EAOUT Optional Error Amplifier input. Allows for customization of the control loop response. Optional Error Amplifier output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	25-20	NC	
AVIN Analog voltage input for the controller circuits. Connect this pin to the input power supply. AGND Analog ground for the controller circuits. NC CONNECT – Do not electrically connect these pins to each other or to any other electrical signal. CAUTION!: May be internally connected. XFB Feedback pin for external voltage divider network. NC CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SS Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. EANU Optional Error Amplifier input. Allows for customization of the control loop response. COMP Optional Error Amplifier output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	27	POCP	Optional Over Current Protection adjust pin. Place ROCP resistor between this pin and AGND
AGND	21	ROCF	
NC		AVIN	Analog voltage input for the controller circuits. Connect this pin to the input power supply.
Signal CAUTION!: May be internally connected.	29	AGND	Analog ground for the controller circuits.
Signal. CAUTION!: May be internally connected.	20.21	NC	NO CONNECT – Do not electrically connect these pins to each other or to any other electrical
33	30-31	NC	signal. CAUTION!: May be internally connected.
NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. SE SOFT-START NODE THE NODE	32	XFB	Feedback pin for external voltage divider network.
CAUTION!: May be internally connected. Pok Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. EAIN Optional Error Amplifier input. Allows for customization of the control loop response. Optional Error Amplifier output. Allows for customization of the control loop response. COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	33	XOV	Over voltage programming feedback pin.
POK Power OK is an open drain transistor for power system state indication. POK is a logic high when VOUT is with -10% to +20% of VOUT nominal. NC NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. EAIN Optional Error Amplifier input. Allows for customization of the control loop response. Optional Error Amplifier output. Allows for customization of the control loop response. COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	2.4	NC	NO CONNECT – Do not electrically connect this pin to any electrical signal.
when VOUT is with -10% to +20% of VOUT nominal. NO CONNECT – Do not electrically connect this pin to any electrical signal. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. BEAIN Optional Error Amplifier input. Allows for customization of the control loop response. Determines the startup time. Determines the startup tim	34 INC		CAUTION!: May be internally connected.
NC NC CONNECT – Do not electrically connect this pin to any electrical signal. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. Sequence of this capacitor determines the startup time. Se	25	DOK	Power OK is an open drain transistor for power system state indication. POK is a logic high
CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. CAUTION!: May be internally connected. Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. CAUTION!: May be internally connected.	35	PUK	
Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value of this capacitor determines the startup time. 38 EAIN Optional Error Amplifier input. Allows for customization of the control loop response. 39 EAOUT Optional Error Amplifier output. Allows for customization of the control loop response. 40 COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. 41 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	26	NC	NO CONNECT – Do not electrically connect this pin to any electrical signal.
of this capacitor determines the startup time. Optional Error Amplifier input. Allows for customization of the control loop response. Optional Error Amplifier output. Allows for customization of the control loop response. COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. Optional Error Amplifier Buffer output. Allows for customization of the control loop response. Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	36	NC	CAUTION!: May be internally connected.
Section determines the startup time. 38 EAIN Optional Error Amplifier input. Allows for customization of the control loop response. 39 EAOUT Optional Error Amplifier output. Allows for customization of the control loop response. 40 COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. 41 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	27	CC	Soft-Start node. The soft-start capacitor is connected between this pin and AGND. The value
39 EAOUT Optional Error Amplifier output. Allows for customization of the control loop response. 40 COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. 41 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	37	55	of this capacitor determines the startup time.
39 EAOUT Optional Error Amplifier output. Allows for customization of the control loop response. 40 COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. 41 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	38	EAIN	Optional Error Amplifier input. Allows for customization of the control loop response.
40 COMP Optional Error Amplifier Buffer output. Allows for customization of the control loop response. 41 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	39	EAOUT	Optional Error Amplifier output. Allows for customization of the control loop response.
41 ENABLE Input Enable. Applying a logic high, enables the output and initiates a soft-start. Applying a logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	40	COMP	
logic low disables the output. NO CONNECT – Do not electrically connect these pins to each other or to any other electrical			
NO CONNECT – Do not electrically connect these pins to each other or to any other electrical	41	ENABLE	
	40.44	10.11	
	42-44 NC		

Block Diagram

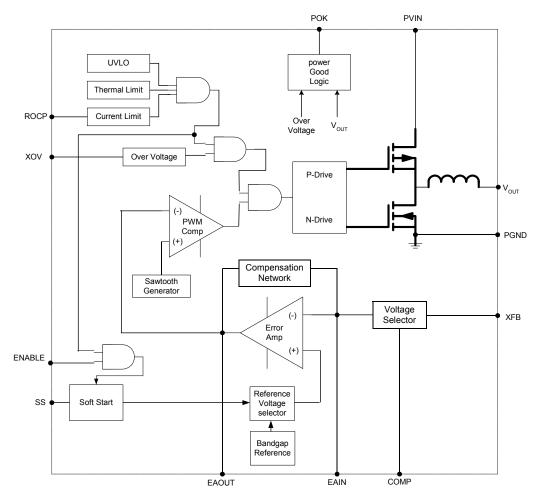


Figure 3. System block diagram.

Absolute Maximum Ratings

CAUTION: Absolute Maximum ratings are stress ratings only. Functional operation beyond recommended operating conditions is not implied. Stress beyond Absolute maximum ratings may cause permanent damage to the device. Exposure to absolute maximum rated conditions for extended periods may affect device reliability.

PARAMETER	SYMBOL	MIN	MAX	UNITS
Input Supply Voltage	V _{IN}	-0.5	7.0	V
Input Voltage – Enable		-0.5	V_{IN}	V
Input Voltage – XFB, XOV		-0.5	V_{IN}	V
Voltages on: EAIN, EAOUT, COMP		-0.5	2.5	V
Storage Temperature Range	T _{STG}	-65	150	°C
Maximum Operating Junction Temperature	T _{J-ABS Max}		150	°C
Reflow Temp, 10 Sec, MSL3 JEDEC J-STD-020A			260	°C
ESD Rating (based on Human Body Model)			2000	V

Thermal Characteristics


PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS
Operating Junction Temp	TJ	-40		+125	°C
Thermal Shutdown	T _{SD}		150		°C
Thermal Shutdown Hysteresis	T _{SDH}		25		°C
Thermal Resistance: Junction to Case	$\theta_{\sf JC}$		3		°C/W
Thermal Resistance: Junction to Ambient	$\theta_{\sf JA}$		25		°C/W


Electrical Characteristics

NOTE: V_{IN} =5.5V over operating temperature range unless otherwise noted. Typical values are at T_A = 25°C.


PARAMETER	SYMBOL	TEST CONDITIONS	MIN	TYP	MAX	UNITS
Operating Input Voltage	V _{IN}		2.375		5.5	V
Regulated Feedback Voltage	V_{XFB}			0.75		V
Shut-Down Supply Current	Is	ENABLE=0V		100		μΑ
Switching Frequency	Fosc			5		MHz
Thermal Overload Trip Point	T_J			150		°C
V _{OUT}						
Output Voltage Regulation	V _{OUT}	Over line, load and temperature	-2.0		2.0	%
Maximum Continuous	Output Curre	ent				
Maximum Continuous Output Current	I _{OUT_Max_Cont}		3			Α
Over Current Trip Piont	I _{OCP}		4.5			Α
Enable Operation						
Disable Threshold	V _{DISABLE}	Max voltage to ensure the converter is disabled			0.8	V
Enable Threshold	V _{ENABLE}	$2.375V \le V_{IN} \le 5.5V$ $5.5V < V_{IN}$	1.8 2.0			V
Voltage Select Operation						
Power OK Operation						
POK low voltage	V_{POK}				0.4	V
Max POK Voltage	V_{POK}				5.5	V

Typical Performance Characteristics

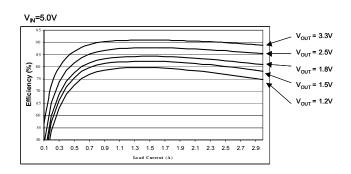


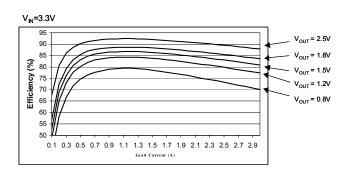


Efficiency versus Load, V_{IN} = 5.0V

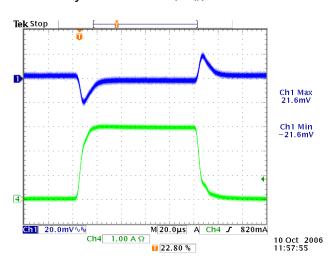


Efficiency versus Load, V_{IN} = 3.3V

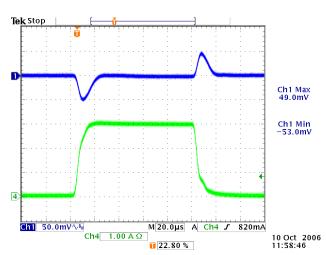

Load transient, 0 - 3A, $V_{IN}/V_{OUT} = 5.5V/1.2V$

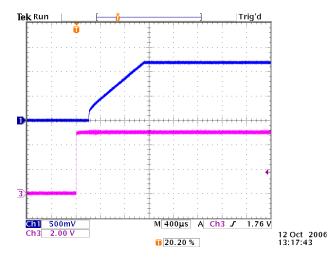

Load transient, 0 - 3A, $V_{IN}/V_{OUT} = 5.5V/3.3V$

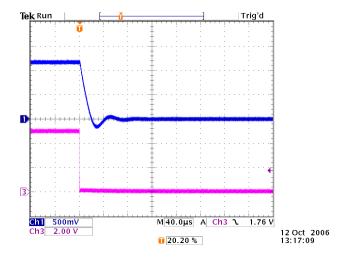

Start-up waveform, $V_{IN}/V_{OUT} = 5.5V/1.2V$

Shut-down waveform, $V_{IN}/V_{OUT} = 5.5V/1.2V$

Theory of Operation

Synchronous Buck Converter

The EN5336QI is a synchronous, programmable power supply with integrated power MOSFET switches and integrated inductor. The nominal input voltage range is 2.4-5.5V. The output voltage is programmed using an external resistor divider network. The feedback control loop is a voltage-mode controller with a type III compensation network. The part uses a lownoise PWM topology. Up to 3A of continuous output current can be drawn from this converter. The 5MHz operating frequency enables the use of small-size input and output capacitors, and a wide controller bandwidth.

The power supply has the following protection features:

- Programmable over-current protection (to protect the IC from excessive load current)
- Thermal shutdown with hysteresis.
- Over-voltage protection
- Under-voltage lockout circuit to disable the converter output when the input voltage is less than approximately 2.2V

Additional features include:

 Soft-start circuit, limiting the in-rush current when the converter is powered up.
 Power good circuit indicating whether the output voltage is within 90% and the programmed OVP trip-point percentage of the programmed voltage.

Device Programming Options

The EN5336QI output voltage is programmed using a simple resistor divider network. Figure 4 shows the resistor divider configuration.

The EN5336QI output voltage and over voltage thresholds are determined by the voltages presented at the XFB and XOV pins respectively. These voltages are set by way of resistor dividers between V_{OUT} and AGND with the midpoint going to XFB and XOV.

It is recommended that Rb1 and Rb2 resistor values be $\sim 2k\Omega$. Use the following equation to set the resistor Ra1 for the desired output voltage:

$$Ra1 = \frac{(Vout - 0.75V) * Rb1}{0.75V}$$

If over-voltage protection is desired, use the following equation to set the resistor Ra2 for the desired OVP trip-point:

$$Ra2 = \frac{(OVPtrip - 0.90V) * Rb2}{0.90V}$$

By design, if both resistor dividers are the same, the OV trip-point will be 20% above the nominal output voltage.

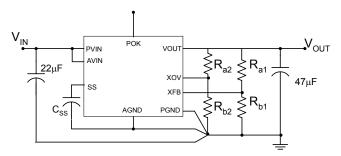


Figure 4. V_{OUT} and OVP resistor divider networks.

NOTE: if no OVP divider is present, there will be no over-voltage protection and POK will remain "high" as long as V_{OUT} remains above 90% of the nominal V_{OUT} setting.

Input Capacitor Selection

The EN5336QI requires between 10uF and 20uF of input capacitance. Low-cost, low-ESR ceramic capacitors should be used as input capacitors for this converter. The dielectric must be X5R or X7R rated. In some applications, lower value capacitors are needed in parallel with the larger, capacitors in order to provide high frequency decoupling. It is recommended to use 10V rated 1210 MLCC capacitors.

Rev 1.0 November 2006

Table 2. Recommended input capacitors.

Description	MFG	P/N
22uF, 10V, X7R, 1210	Murata	GRM32ER71A226KE20L
	Taiyo Yuden	LMK325BJ226KM-T
47uF, 10V, X5R, 1210	Murata	GRM32ER71A476KE20L
	Taiyo Yuden	LMK325BJ476KM-T

Output Capacitor Selection

The EN5336QI has been optimized for use with approximately $47\mu F$ of output capacitance. Low ESR ceramic capacitors are required with X5R or X7R rated dielectric formulation. Y5V or equivalent dielectric formulations must not be used as these loose capacitance with frequency, temperature and bias voltage.

Output ripple voltage is determined by the aggregate output capacitor impedance. Output impedance, denoted as Z, is comprised of effective series resistance, ESR, and effective series inductance, ESL:

$$Z = ESR + ESL$$
.

Placing output capacitors in parallel reduces the impedance and will hence result in lower ripple voltage.

$$\frac{1}{Z_{Total}} = \frac{1}{Z_1} + \frac{1}{Z_2} + \dots + \frac{1}{Z_n}$$

Typical ripple versus capacitance is given below:

Output Capacitor Configuration	Typical Output Ripple (mVp-p) (as measured on EN5336QI Evaluation Board)
1 x 47uF	20
5 x 10 uF	10

Table 3. Recommended output capacitors.

Description	MFG	P/N
10uF, 6.3V, X7R, 1206	Murata	GRM319R60J106KE19D
	Taiyo Yuden	LMK316BJ106KD-T
22uF, 6.3V, X5R, 1206	Murata	GRM31CR60J226KE19L
	Taiyo Yuden	LMK316BJ226KL-T
47uF, 6.3V, X5R, 1206	Murata	GRM31CR71A476ME19L
	Taiyo Yuden	LMK316BJ476KL-T

Enable Operation

The ENABLE pin provides a means to shut down the device, or enable normal operation. A logic low will disable the converter and cause it to shut down. A logic high will enable the converter into normal operation. When the ENABLE pin is asserted high, the device will undergo a normal soft start.

Soft-Start Operation

Soft start is a method to reduce in-rush current when the device is enabled. The output voltage is ramped up slowly upon start-up. The output rise time is controlled by choice of a soft-start capacitor, which is placed between the SS pin (pin 37) and the AGND pin (pin 29).

Rise Time: $T_R = C_{ss}^* 80 \text{K}\Omega$

During start-up of the converter, the reference voltage to the error amplifier is gradually increased to its final level by an internal current source of typically 10uA. Typical soft-start rise time is 1mS to 3mS. Typical SS capacitor values are in the range of 15nF to 30 nF.

POK Operation

The POK signal is an open drain signal from the converter indicating the output voltage is within the specified range. The POK signal will be a logic high when the output voltage is above 90% of V_{OUT} and below the user programmed OVP trip-point. If the output voltage goes outside of this range, the POK signal will be a logic low until the output voltage has returned to within this range. In the event of an over-voltage condition the POK signal will go low and will remain in this condition until the output voltage has dropped to 95% of the programmed output voltage before returning to the high state.

NOTE: If no over voltage protection is used, POK will remain "high" as long as V_{OUT} remains above 90% of the nominal V_{OUT} setting.

Over-Current Protection

The current limit function is achieved by sensing the current flowing through the sense P-MOSFET. When the sensed current exceeds the current limit, both NFET and PFET switches are turned off. If the over-current condition is removed, the over-current protection circuit will enable the PWM operation. If the over-current condition persists, the soft start capacitor will eventually discharge and cause the converter to go through a full soft-start cycle. This circuit is designed to provide high noise immunity.

It is possible to adjust the over-current set point by connecting a resistor between ROCP (pin 27) and GND (increase the trip point) or PVIN (decrease the trip point). The nominal over current trip point is set to 4.5A. The voltage at the ROCP pin is designed to be 0.8V.

In some cases, such as the start-up of FPGA devices, it is desirable to blank the over-current protection feature. In order to disable over-current protection, the ROCP pin should be tied to PVIN.

Over-Voltage Protection

When the output voltage exceeds 120% of the programmed output voltage, the PWM operation stops, the lower N-MOSFET is turned on and the POK signal goes low. When the output voltage drops below 95% of the programmed output voltage, normal PWM operation resumes and POK returns to its high state.

Thermal Overload Protection

Thermal shutdown will disable operation once the Junction temperature exceeds approximately 150°C. Once the junction temperature drops by approx 25°C, the converter will re-start with a normal soft-start.

Input Under-voltage Lock-out

Circuitry is provided to ensure that when the input voltage is below the specified voltage range, the converter will not start-up. Circuits for hysteresis, input de-glitch and output leading edge blanking are included to ensure high noise immunity and prevent false tripping.

Compensation

The EN5336QI is internally compensated through the use of a type 3 compensation network and is optimized for use with about 47µF of output capacitance and will provide excellent loop bandwidth and transient performance for most applications. (See the section on Capacitor Selection for details on recommended capacitor types.) Voltage mode operation provides high noise immunity at light load.

In some cases modifications to the compensation may be required. For more information, contact Enpirion Applications Engineering support.

Design Considerations for Lead-Frame Based Modules

Exposed Metal on Bottom Of Package

Lead frame offers many advantages in thermal performance, in reduced electrical lead resistance, and in overall foot print. However, they do require some special considerations.

In the assembly process lead frame construction requires that, for mechanical support, some of the lead-frame cantilevers be exposed at the point where wire-bond or internal passives are attached. This results in several small pads being exposed on the bottom of the package.

Only the large thermal pad and the perimeter pads are to be mechanically or electrically connected to the PC board. The PCB top layer under the EN5336QI should be clear of any metal except for the large thermal pad. The "grayed-out" area in Figure 4 represents the area that should be clear of any metal (traces, vias, or planes), on the top layer of the PCB.

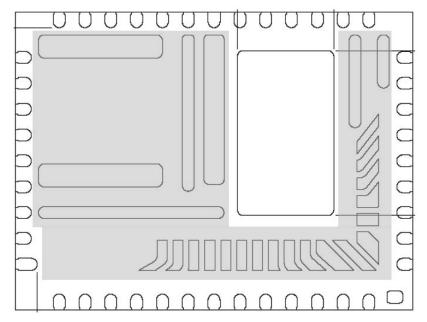


Figure 4. Lead-Frame exposed metal. Grey area highlights exposed metal that is not to be mechanically or electrically connected to the PWB.

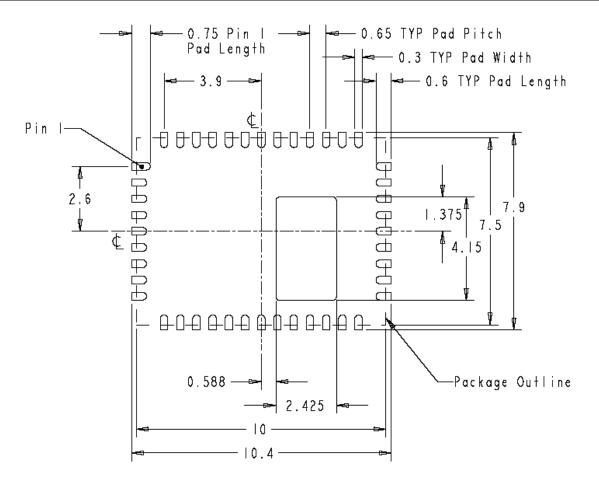


Figure 5. Recommended solder mask opening for PWB.

Package Dimensions

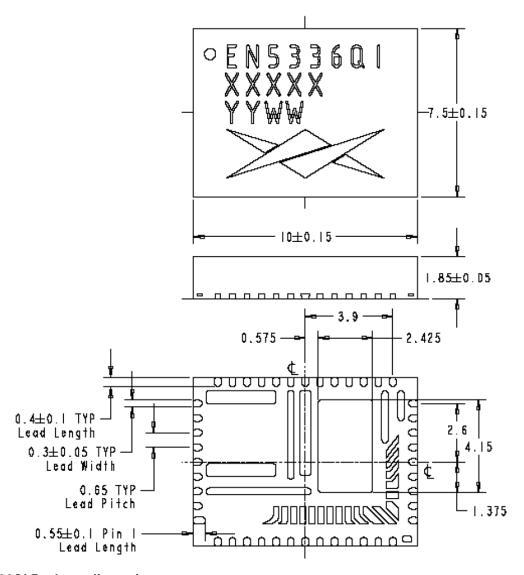


Figure 6. EN5336QI Package dimensions.

Contact Information

Enpirion, Inc. 685 Route 202/206 Suite 305

Bridgewater, NJ 08807 Phone: 908-575-7550 Fax: 908-575-0775

Enpirion reserves the right to make changes in circuit design and/or specifications at any time without notice. Information furnished by Enpirion is believed to be accurate and reliable. Enpirion assumes no responsibility for its use or for infringement of patents or other third party rights, which may result from its use. Enpirion products are not authorized for use in nuclear control systems, as critical components in life support systems or equipment used in hazardous environment without the express written authority from Enpirion.