Web Site: www.parallax.com Forums: forums.parallax.com Sales: sales@parallax.com Technical: support@parallax.com Office: (916) 624-8333 Fax: (916) 624-8003 Sales: (888) 512-1024 Tech Support: (888) 997-8267

# IS23SC4442 Smart Card (#32321)

The IS23SC4442 Smart Card provides 256 bytes of serial EEPROM accessible by Parallax's Smart Card Reader (#32320). This smart card also provides a 3-bit error counter and 3-byte programmable security code to prevent unauthorized write/erase operations to the card.

Smart cards are used in a variety of applications ranging from telecommunications to personal finance. The IS23SC4442 Smart Card is 256 x 8 bits of EEPROM main memory embedded in a plastic card, the size of a standard credit card. The pins of the IS23SC4442 are accessible through the gold plated contact pads embedded in the card, and when paired with the Smart Card Reader (#32320) can be connected to the I/O pins of a microcontroller.

#### Features

- Memory Organization: 256 x 8-bit
- 2.5 ms write time

PARALLAX 7

- 3-byte Programmable Security Code for memory write/erase protection
- 1,000,000 erase/write cycles guaranteed with 10 year data retention
- Compatible with BASIC Stamp & Propeller microcontrollers

## **Key Specifications**

- Power Requirements: 2.7–5 VDC; 3 mA typical active current
- Communication: I<sup>2</sup>C (CMOS)
- Operating temperature: -22 to +167 °F (-30 to +75 °C)
- Dimensions: 2.5 x 3 in (6.35 x 7.62 cm)

#### **Application Ideas**

- Security systems
- Data storage
- Tracking systems
- Identity authentication

## Caution!


The IS23SC4442 smart card does have a programmable security code (PSC) to prevent unauthorized erase/write operations to the card. By default, this code is set to \$FFFFFF. A 3-bit error counter (EC) is used to track the number of unsuccessful verifications of the PSC. After three unsuccessful attempts, the EC will lock the chip from further access, and data can only be read and never written or erased from the card again. Please refer to the manufacturer's datasheet for the complete communication protocol.

Copyright © Parallax Inc.



| Card Contact                                     | Name | Туре | Function               |
|--|------|------|------------------------|
| C1   | VCC  | Р    | Supply Voltage         |
| C2   | RST  | I    | Reset                  |
| C3   | CLK  | I    | Clock Input            |
| C4   | NC   |      | No Connect             |
| C5   | GND  | G    | Ground                 |
| C6   | NC   |      | No Connect             |
| C7   | I/O  | IO   | Bidirectional Data I/O |
| C8   | NC   |      | No Connect             |
| Dia Tura D. Davian C. Craurad L. Janut O. Outrut |      |      |                        |




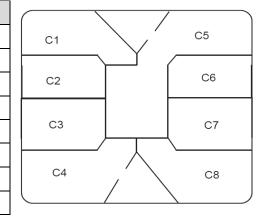

Pin Type: P = Power, G = Ground, I = Input, O = Output

#### **Connection Diagram**

In order to interface with the smart card, a smart card reader must be used. The diagram below demonstrates how to connect the Smart Card Reader (#32320) from Parallax to your microcontroller for use with the example programs included on the IS23SC4442 product page. When inserting the smart card into the reader, be sure the gold contact pads are facing down.

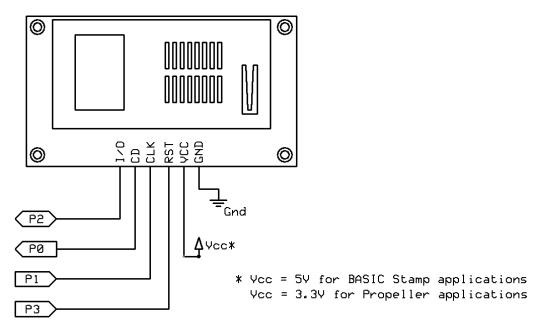

#### **Resources and Downloads**

Check for the latest version of this document, manufacturer's datasheet, and example programs from the IS23SC4442 Smart Card product page. Go to www.parallax.com and search 32321.

### **BASIC Stamp<sup>®</sup> Example Code**

Example code for the BASIC Stamp 2 can be found on the IS23SC4442 product page. This code demonstrates how to read and write data to the smart card, as well as how to verify the PSC.

This program also uses the Debug Terminal, which is built into the BASIC Stamp Editor software. The software is a free download from <u>www.parallax.com/basicstampsoftware</u>.

## Propeller<sup>™</sup> P8X32A Example Code

Example code for the Propeller can be found on the IS234442 product page. This code demonstrates how to read and write data to the smart card, as well as how to verify the PSC.

This program also uses the Parallax Serial Terminal to display the device output. The object and the Parallax Serial Terminal itself are included with the with the Propeller Tool v1.2.7 or higher, which is available from the Downloads link at www.parallax.com/Propeller.