

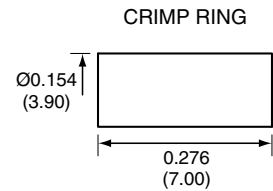
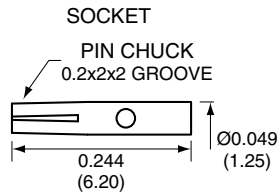


1		
Description	Material	Finish
Body	Brass	Nickel
Socket	Brass	Gold
Insulation	Teflon	Teflon
Crimp Ring	Brass	Nickel

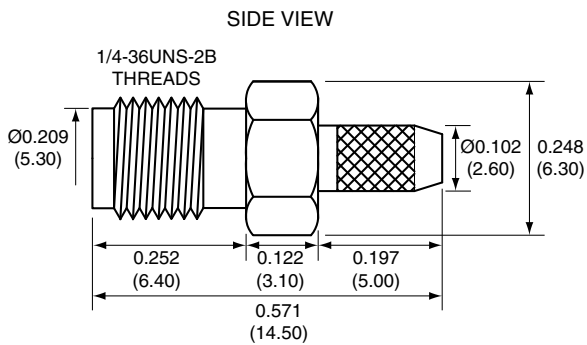

**RECOMMENDED CABLE STRIPPING DIMENSIONS**

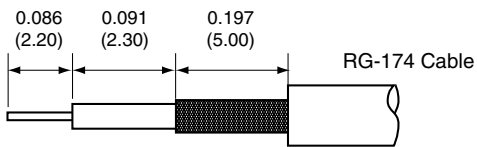

**CONSMSA011 ASSEMBLY INSTRUCTIONS**

1. Solder the socket to the center conductor.
2. Insert the socket, center conductor, and insulator into the body.
3. Wrap the braid around the tail of the body and crimp the ring with a 0.137" hex crimp tool (or one labeled for use with RG-174 cable)

Title	SMA FEMALE CABLE END CRIMP FOR RG174 CABLE		CONNECTOR CITY 159 ORT LANE MERLIN, OR 97532 PH (541)-471-6256 FAX (541)-471-6251
Part No.	CONMSA011	Revision:	1.0
Dimensions:	INCHES (mm)	Date:	6/2/2006
			Sheet 1 of 1

**CONNECTOR CITY**  
THE VALUE OF CONNECTIONS