



1			2		3		4	
Description	Material	Finish						
Body	Brass	Nickel						
Socket	BE CU	Gold						
Insulation	Teflon	Teflon						
Washer	PH Bronze	Gold						
Gasket	SI Rubber	Rubber						
Crimp Ring	Brass	Nickel						
Spacer	Teflon	Teflon						
Support	Brass	Gold						

SIDE VIEW

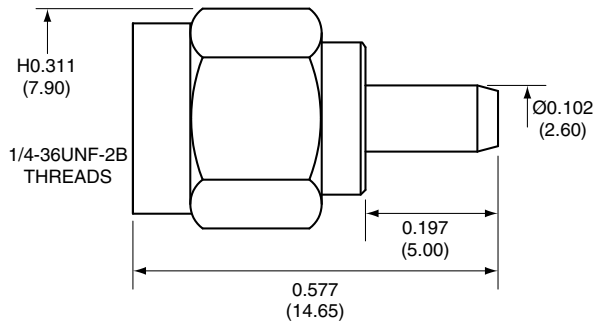


SOCKET

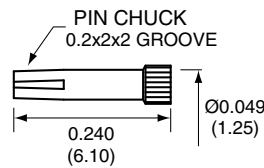


SPACER



SUPPORT



RECOMMENDED CABLE STRIPPING DIMENSIONS

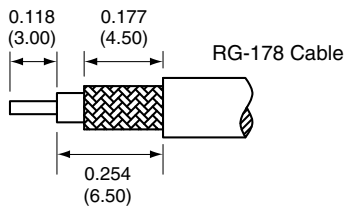

CONREVSMA007-R178 ASSEMBLY INSTRUCTIONS

1. Strip the cable to the recommended dimensions.
2. Solder the support onto the braid.
3. Place the spacer onto the center conductor.
4. Solder or crimp the socket onto the center conductor.
5. Insert the socket, center conductor, spacer, and support into the body until the top of the socket is even with the white insulation in the body.
6. Crimp the tail of the body onto the support with a hex crimp tool.

Title RP-SMA MALE CABLE END CRIMP FOR RG178 CABLE		CONNECTOR CITY 159 ORT LANE MERLIN, OR 97532	
Part No. CONREVSMA007-R178	Revision: 1.0	PH (541)-471-6256 FAX (541)-471-6251	
Dimensions: INCHES (mm)	Date: 5/31/2006	Sheet 1 of 1	

CONNECTOR CITY
THE VALUE OF CONNECTIONS