
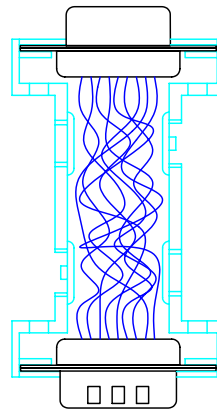
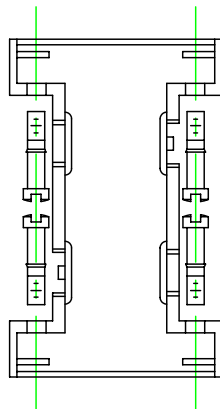


DESCRIPTION: **BACKSHELL ASSEMBLY INSTRUCTIONS - GENDER CHANGER**


ASSEMBLY INSTRUCTIONS:

1. PREPARE THE CONNECTORS, PLACE INTO ONE HALF OF THE HOOD
2. PLACE THE JACKSCREWS INTO THE HOOD WITH THE CONNECTORS
3. PLACE THE OTHER HALF OF THE HOOD ON TOP OF THE FIRST HALF, MAKING SURE NO WIRES ARE PINCHED, SNAP THE TWO HALVES TOGETHER MAKING SURE THEY ARE FULLY SEATED
4. MALE OR FEMALE CONNECTORS CAN BE INSERTED INTO EITHER END OF THE HOOD

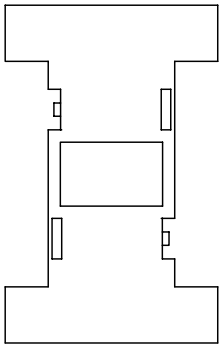

**9-PIN TO 9-PIN
15-PIN TO 15-PIN
25-PIN TO 25-PIN
GENDER CHANGER**

PLASTIC & METALIZED PLASTIC


	<small>THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.</small>		<small>DRAWN:</small> C. SMITH	<small>DATE:</small> 05-10-07
			<small>CHECKED:</small>	<small>DATE:</small>
<h1>NorComp</h1>		<small>SCALE:</small> N.T.S.	<small>SHEET</small> 1 <small>OF</small> 2	<small>REV</small> 0
		<small>DWG NO.</small> BACKSHELL - 957 SERIES		

RoHS COMPLIANT

DESCRIPTION: **BACKSHELL ASSEMBLY INSTRUCTIONS - GENDER CHANGER**


ASSEMBLY INSTRUCTIONS:

1. PREPARE THE CONNECTORS, PLACE INTO ONE HALF OF THE HOOD
2. PLACE THE JACKSCREWS INTO THE HOOD WITH THE CONNECTORS
3. PLACE THE OTHER HALF OF THE HOOD ON TOP OF THE FIRST HALF, MAKING SURE NO WIRES ARE PINCHED, SNAP THE TWO HALVES TOGETHER MAKING SURE THEY ARE FULLY SEATED
4. MALE OR FEMALE CONNECTORS CAN BE INSERTED INTO EITHER END OF THE HOOD

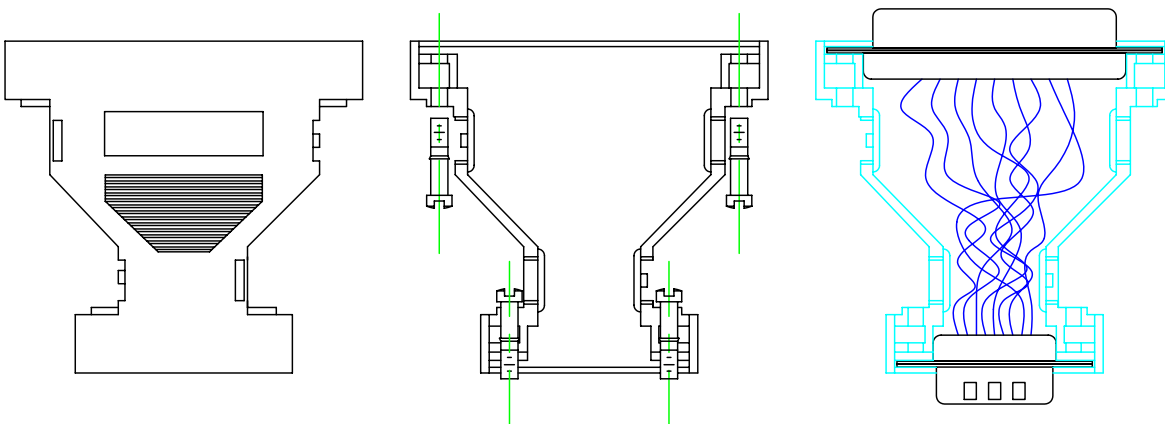

9-PIN TO 25-PIN GENDER CHANGER

PLASTIC & METALIZED PLASTIC

	<small>THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.</small>		<small>DRAWN:</small> C. SMITH	<small>DATE:</small> 05-10-07
			<small>CHECKED:</small>	<small>DATE:</small>
<h1>NorComp</h1>	<small>SCALE:</small> N.T.S.	<small>SHEET</small> 2	<small>OF</small> 2	<small>REV</small> 0
	<small>DWG NO.</small> BACKSHELL - 957 SERIES			

RoHS COMPLIANT