DALLAS JUIX


DS1402D-0XX iButton Probe Component Parts

www.maxim-ic.com

Features

- Spring-Mounted <u>i</u>Button[®] Reader
- Momentary Contact for Both F3 and F5 Style iButtons or Dwelled Contact for F5 Only
- Convenient Tactile Feedback System for Dwelled iButton Contact

Mounting Pad Layout

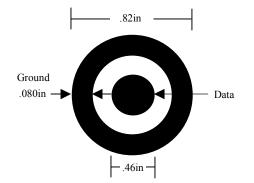

General Description

The four component parts that are used to construct the Blue-Dot[™] <u>i</u>Button reader found in the DS1402D-DR8 and DS1402D-DB8 are described here. Diagrams 1 through 4 show the individual part dimensions. This document also describes how to assemble the Blue-Dot given the sub-parts listed in Table 1. The Blue-Dot can be assembled in the three easy steps described in the *Assembly Instructions* section.


Table 1. DS1402D Parts Listing

Reference	Part	Description	Ordering Information
A	DS1402D-011	Small Blue Insert	DS1402D-11
В	DS1402D-010	Small Data Contact Spring	DS1402D-10
С	DS1402D-003	Large Blue Support	DS1402D-3
D	DS1402D-017	Large Ground Contact	DS1402D-17
	DS1402D-041	Subassembly of A-D	DS1402D-41

<u>i</u>Button is a registered trademark of Dallas Semiconductor. Blue-Dot is a trademark of Dallas Semiconductor.


Diagram 1. DS1402D-003 .618 Dia .040 .238 .042 Ref. 1 .196±.003 30° R.040 around .187 3PIs R.04 .825 Dia А ±.002 R.05 .865 Dia ±.003 .745 Dia 120 120 .100 Ref R.08 .20**6005**2PIs 30° Offsets on the dia's in this area are permissible .314 .656 Dia .02,R .03 R **()**.162 (B .200 3pls 1 .540 Dia 🛛 🖚

Diagram 2. DS1402D-010

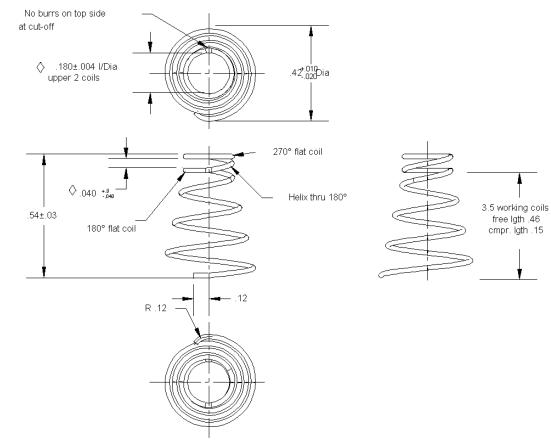

2 of 6


Diagram 3. DS1402D-011

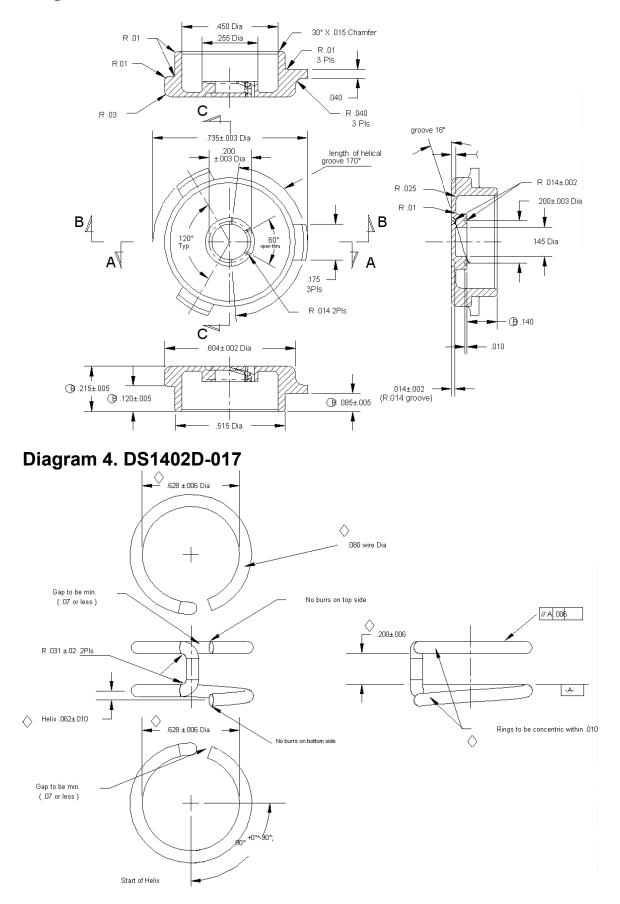


3 of 6


Assembly Instructions

1. Insert the end of the Data Spring (B) wire at the large coil end, into the slot at the top of the Data Button (A). Twist the spring clockwise into the slot until the end of the wire at the small coil end lines up with the edge of the slot in the Button.

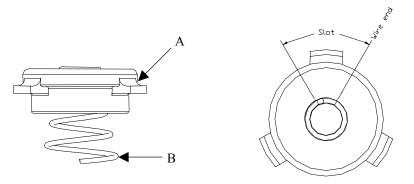


2. Place the Data Button (A) with the Data Spring (B), assembled, into the Contact Support (C).

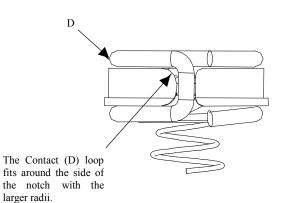

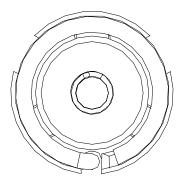

3. Compress the Data Spring (B) into the center of the Data Button (A) and slide the Contact (D) onto the Contact Support (C). Check that the Data Button (A) is free to move up and down through the Contact (D).

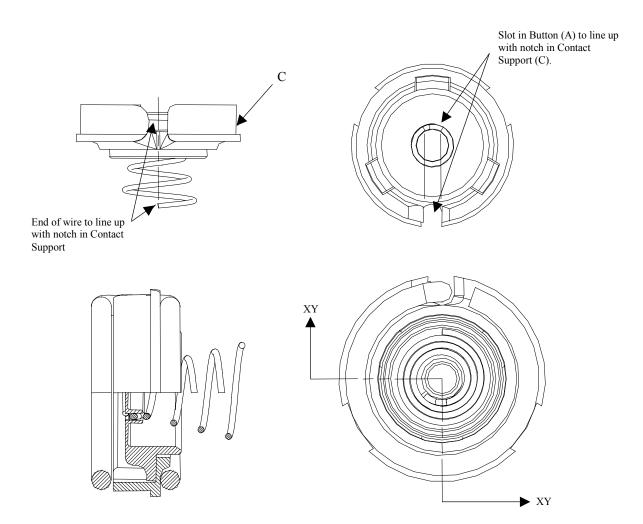

Overview

Here is an assembly picture of the overview of steps listed above.

