


Discover the simple Network Installation with toolfree Keystone Jacks from DIGITUS®


1

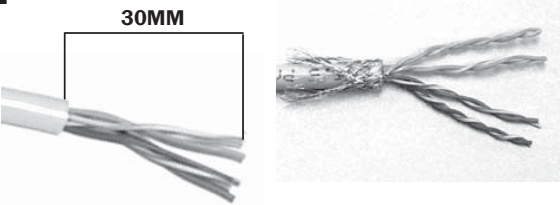

Strip approximately 30MM of the cable jacket, and separate to 4 pair each.

Attn: Suitable for 23~24 AWG Solid Wire

2

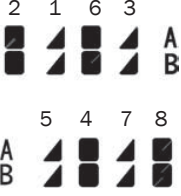


T568A		T568B	
Pin 1 White / Green	Pin 1 White / Orange	Pin 1 White / Orange	Pin 1 White / Green
Pin 4 Green	Pin 4 Orange	Pin 2 Blue	Pin 2 Blue
Pin 2 Blue	Pin 3 White / Blue	Pin 3 White / Blue	Pin 3 White / Blue
Pin 3 White / Blue	Pin 6 Green	Pin 6 Green	Pin 6 Green
Pin 6 Orange	Pin 7 White / Brown	Pin 7 White / Brown	Pin 7 White / Brown
Pin 7 White / Brown	Pin 8 Brown	Pin 8 Brown	Pin 8 Brown

Colored Sticker


Unshielded type

3

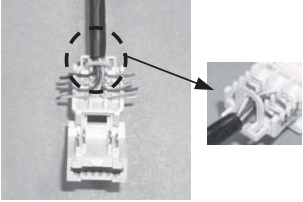


Follow the direction on the plastic lid color-coding to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.

4

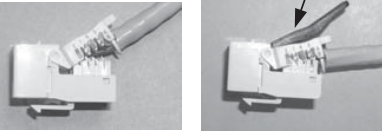

Plug the easy tool into upper hole, then press down to close plastic lid to connect the wires.


5

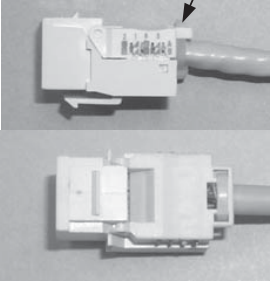

Complete the installation.


Shielded type

3

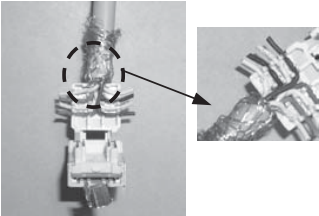


Follow the direction on the plastic lid color-coding to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.

4



Plug the easy tool into upper hole, then press down to close plastic lid to connect the wires.

5

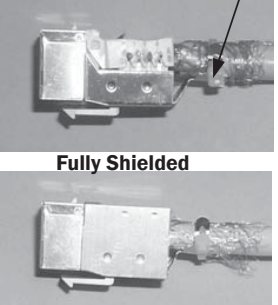

Insert the cable tie to tight up the cable jacket. Then complete the installation