



| 1 | | |
|-------------|-----------|--------|
| Description | Material | Finish |
| Body | Brass | Nickel |
| Pin | BE CU | Gold |
| Insulation | Teflon | Teflon |
| Washer | PH Bronze | Gold |
| Gasket | SI Rubber | Rubber |
| Crimp Ring | Brass | Nickel |
| Spacer | Teflon | Teflon |
| Support | Brass | Gold |

SIDE VIEW

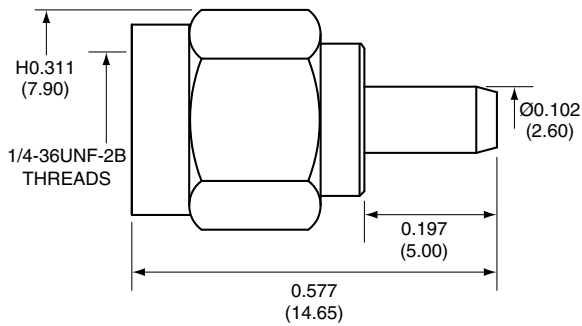


PIN

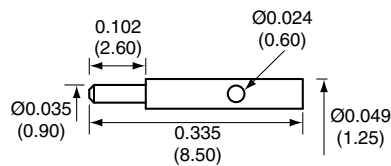


SPACER



SUPPORT

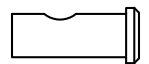

RECOMMENDED CABLE STRIPPING DIMENSIONS

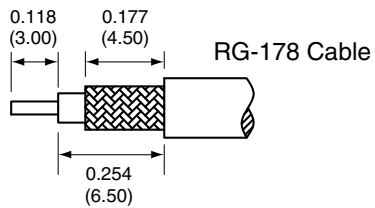

CONSMSA007-R178 ASSEMBLY INSTRUCTIONS

1. Strip the cable to the recommended dimensions.
2. Solder the support onto the braid.
3. Place the spacer onto the center conductor.
4. Solder or crimp the pin onto the center conductor.
5. Insert the pin, center conductor, spacer, and support into the body until the top of the pin is even with the body.
6. Crimp the tail of the body onto the support with a hex crimp tool.

| | | | | | |
|-------------|-----------------|---|----------|--|--------------------|
| Title | | SMA MALE CABLE END CRIMP FOR RG178 CABLE | | CONNECTOR CITY 159 ORT LANE MERLIN, OR 97532 | |
| Part No. | CONSMSA007-R178 | Revision: | 1.0 | PH (541)-471-6256 | FAX (541)-471-6251 |
| Dimensions: | INCHES (mm) | Date: | 6/2/2006 | Sheet 1 of 1 | |

CONNECTOR CITY
THE VALUE OF CONNECTIONS