


## rectangular solids - for flat ribbon cables

WITH OPTIONAL SHOCK-MOUNT ADHESIVE FOAM BASE. Solid ferrite suppressors configured to accept flat ribbon cables. Must be installed prior to termination of the cable. High tack adhesive mounting pad secures the cable routing to a fixed point on almost any surface. Can be stacked one on top of another. A variety of designs accommodate special installation and insertion loss requirements.

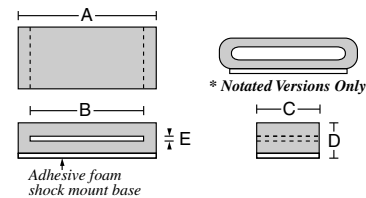

PART No.	w/Adhesive	A	B	C	D	E	IMPEDANCE IN OHMS
28B0785	SM28B0785	.785	19,9	.515	13,1	1.100	27,9 .445 11,3 .145 3,7 170 @ 100MHz
28R1531*	SM28R1531*	1.530	38,9	1.045	26,5	1.125	28,6 1.055 26,8 .510 13,0 196 @ 100MHz
28B1775	SM28B1775	1.775	45,1	1.355	34,4	1.125	28,6 .520 13,2 .060 1,52 293 @ 100MHz
28B1779	SM28B1779	2.500	63,5	2.050	52,1	1.125	28,6 .530 13,5 .066 1,68 295 @ 100MHz
28B1101	SM28B1101	1.101	28,0	.902	22,9	.577	14,7 .335 8,5 .059 1,5 133 @ 100MHz
28B1775-1	SM28B1775-1	1.775	45,1	1.355	34,4	.500	12,7 .520 13,2 .060 1,5 151 @ 100MHz
28B2170-1	SM28B2170-1	2.170	55,1	1.720	43,7	.500	12,7 .530 13,5 .050 1,3 176 @ 100MHz
28B2002	SM28B2002	2.394	60,8	2.000	50,8	.610	15,5 .724 18,4 .300 7,6 109 @ 100MHz
28B3149	SM28B3149	3.149	80,0	2.700	68,6	.500	12,7 .502 12,8 .075 1,9 93 @ 100MHz

## performance by part number:

