


AMP-BARREL Wire Insertion Tool

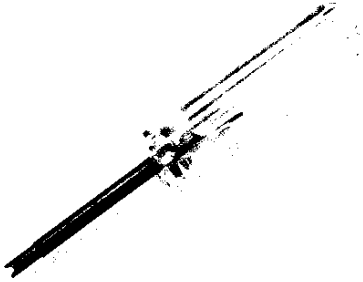


For:	Part Number
Wire Insertion Tool for UC Transition Blocks	231890-1

Product Facts

- Wire Insertion Tools for Undercarpet Transition Blocks may be used to insert and terminate wires into AMP-BARREL connectors used in Undercarpet Cabling System Transition Blocks
- Wire Insertion Tools for Undercarpet Transition Blocks cuts off conductor when it is inserted

Tap/Splice Hand Tool PART NUMBER 91384-1

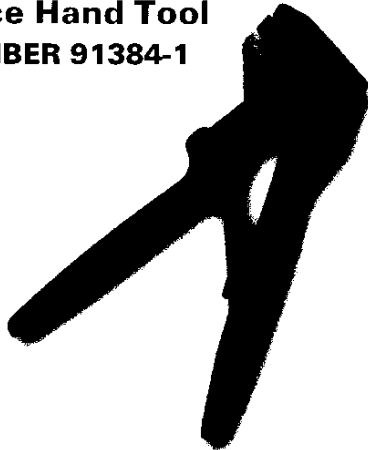

Notching Tool for Undercarpet Communications Cable PART NUMBER 1725698-1

