



CONNECTOR TYPE	CABLE TYPE	TOOLS REQUIRED:
OSM STRAIGHT CABLE PLUG COMPRESSION CRIMP ATTACHMENT	RG402/U .141 S.R COAXIAL CABLE	CRIMP TOOL KIT: 2598-5200-54 OPTIONAL TOOLING- HAND TRIM & POINT TOOL: 2598-5116-54 PRODUCTION TOOLING AVAILABLE UPON REQUEST

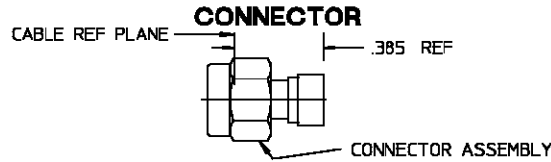


### ASSEMBLY OPERATIONS


- 1.0 PREPARATION OF CABLE  
1.1 TRIM CABLE TO DIMENSION SHOWN.

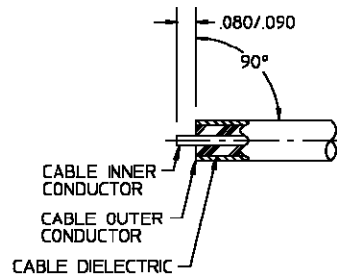

- 2.0 SHAPE INNER CONDUCTOR OF CABLE  
2.1 SHAPE BLUNT END OF INNER CONDUCTOR TO AN 85°-90° CONE.

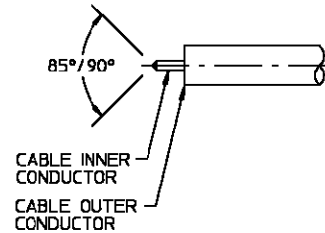

- 3.0 INSTALL CABLE INTO CONNECTOR ASSEMBLY  
3.1 INSTALL LOWER CABLE SUPPORT (FOR .141 CABLE) AND ANVIL (SMA/M) INTO CRIMP TOOL.  
3.2 SET CRIMP LENGTH ON CRIMP TOOL TO .270  
3.3 CAREFULLY INSERT CABLE INTO CONNECTOR ASSEMBLY UNTIL CABLE BOTTOMS ON SHOULDER IN CONNECTOR ASSEMBLY.  
3.4 PLACE ASSEMBLY INTO CRIMP TOOL, BOTTOMING THE CONNECTOR REFERENCE PLANE AGAINST ANVIL AND ALLOWING THE CABLE TO SETTLE IN THE LOWER CABLE SUPPORT.  
3.5 SQUEEZE HANDLES OF CRIMP TOOL UNTIL RATCHET RELEASES.  
3.6 ASSEMBLY IS NOW COMPLETE.

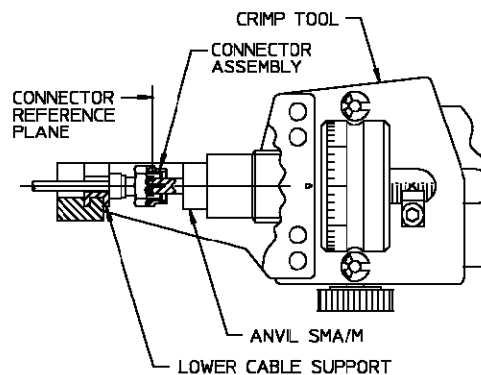

NOTES:  
INTERFACE DIMENSIONS PER MIL-STD-384A-310-1

NOTE: CABLE TRIM INFORMATION  
1. WHEN ASSEMBLED DIMENSIONS FROM REFERENCE TO END OF REAR BUSHING-.270 ± .010