#### FEATURES

- Wide Supply Voltage Range: 6...35V
- Wide Operating Temperature Range: -40°C ...+85°C
- Adjustable Voltage Reference: 4.5 to 10V
- Operational Amplifier Input: 0.5...4.5V, 0...5V, other
- Adjustable Offset Current
- Available as Three- (0/4...20mA) or Two–Wire Version (4...20mA)
- Adjustable Output Current Range
- Protection Against Reverse Polarity
- Protected Current Output

#### **APPLICATIONS**


- Sensor Interface
- Industrial Process Control
- Programmable Current Source
- Current Source Reference

#### GENERAL DESCRIPTION

The AM422 is a low cost monolithic voltageto-current converter specially designed for analog signal transmission. The AM422 is available in a 3- or 2-wire version, which allows applications with flexible input voltage ranges to be used for a standard output current. Output current range and current offset level are freely adjustable by external resistors. The IC consists of three basic sections: an operational amplifier input stage for single ended input signals (0.5-4.5V, 0-10V, or other), a programmable 4.5 to 10V reference for transducer excitation, and a current output, freely adjustable in a wide current range (4-20mA, 0-20mA, other). With the broad spectrum of possible input signals the AM422 is a flexible and multipurpose voltage-to-current converter for single ended transducers or voltage transmission.

#### DELIVERY

- DIL8 packages (samples)
- **SOP8** packages
- Dice on 5" blue foil

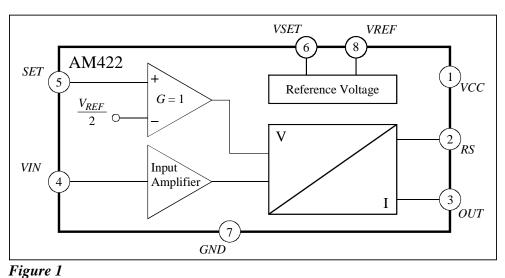

### analog microelectronics

Analog Microelectronics GmbH An der Fahrt 13, D – 55124 Mainz Internet: www.analogmicro.de

Phone: Fax:

+49 (0)6131/91 073 - 0 +49 (0)6131/91 073 - 30 E-Mail: info@analogmicro.de

April 99 1/10 Rev. 2.1

#### **BLOCK DIAGRAM**

### **ELECTRICAL SPECIFICATIONS**

 $T_{amb} = 25^{\circ}$ C,  $V_{CC} = 24$ V,  $V_{REF} = 5$ V,  $I_{REF} = 1$ mA (unless otherwise noted)

Parameter	Symbol	Conditions	Min.	Typ.	Max.	Unit
Voltage Range	V <sub>CC</sub>		6		35	v
Quiescent Current	$I_{CC}$	$T_{amb} = -40+85^{\circ}$ C, $I_{REF} = 0$ mA			1.5	mA
Temperature Specifications	"			•	•	"
Operating	$T_{amb}$		-40		85	°C
Storage	$T_{st}$		-55		125	°C
Junction	$T_J$				150	°C
Thermal Resistance	$\Theta_{ja}$	DIL8 plastic package		110		°C/W
	$\Theta_{ja}$	SO8 plastic package		180		°C/W
Voltage Reference	n n			•	•	"
Voltage	$V_{REF}$	VSET not connected	4.75	5.00	5.25	v
	$V_{REF}$	$VSET = GND, V_{CC} \ge 11V$	9.5	10.0	10.5	v
Trim Range	$V_{R10}$		4.5		$V_{R10}$	v
Current	$I_{REF}^*$		0		10	mA
V <sub>REF</sub> vs. Temperature	$\mathrm{d}V_{REF}/\mathrm{d}T$	$T_{amb} = -40+85^{\circ}C$		±90	±140	ppm/°C
Line Regulation	$\mathrm{d}V_{REF}/\mathrm{d}V$	$V_{CC} = 6V35V$		30	80	ppm/V
	$\mathrm{d}V_{REF}/\mathrm{d}V$	$V_{CC} = 6V35V, I_{REF} \approx 5mA$		60	150	ppm/V
Load Regulation	$\mathrm{d}V_{REF}/\mathrm{d}I$			0.05	0.10	%/mA
	$\mathrm{d}V_{REF}/\mathrm{d}I$	$I_{REF} \approx 5 \mathrm{mA}$		0.06	0.15	%/mA
Load Capacitance	$C_L$		1.9	2.2	5.0	μF
Set Stage	'n	·				
Internal Gain	$G_{I\!A}$			1		
Input Voltage	$V_{SET}$	$I_{SET} = 4$ mA, $R_0 = 25\Omega$		2.6		v
Offset Voltage	$V_{OS}$			±1	±3	mV
Vos vs. Temperature	$dV_{OS}/dT$			±5		µV/°C
Input Bias Current	$I_B$			8	20	nA
$I_B$ vs. Temperature	$\mathrm{d}I_B/\mathrm{d}T$			6	15	pA/°C
Input Stage						
Internal Gain	$G_{IN}$			0.5		
Input Voltage	$V_{IN}$		0		1.15	v
Offset Voltage	$V_{OS}$			±0.5	±2.5	mV
Vos vs. Temperature	$\mathrm{d}V_{OS}/\mathrm{d}T$			±1.6	±5	$\mu V/^{\circ}C$
Input Bias Current	$I_B$			8	20	nA
$I_B$ vs. Temperature	$\mathrm{d}I_B/\mathrm{d}T$			7	18	pA/°C

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit
V/I Converter		•			•	
Internal Gain	$G_{VI}$			1.00		
Trim Range		adjustable by $R_0$	0.75	1.00	1.25	
Voltage Range at $R_0$ FS	$V_{R0}FS$		400	500	580	mV
Offset Voltage	$V_{OS}$	$\beta_F \ge 100$		±2	±6	mV
$V_{OS}$ vs. Temperature	$\mathrm{d}V_{OS}/\mathrm{d}T$	$\beta_F \ge 100$		±7	±20	µV/°C
Output Offset Current	IOUTOS	3-wire operation		-35	-50	μΑ
<i>I</i> <sub>OUTOS</sub> vs. Temperature	dIoutos/dT	3-wire operation		55	80	nA/°C
Output Offset Current	IOUTOS	2-wire operation		14	22	μΑ
<i>I</i> <sub>OUTOS</sub> vs. Temperature	dIoutos/dT	2-wire operation		22	35	nA/°C
Output Control Current	IOUTC	2-wire operation, $V_{R0}/100$ mV		5		μΑ
<i>I</i> <sub>OUTC</sub> vs. Temperature	$dI_{OUTC}/dT$	2-wire operation		-9		nA/°C
Output Voltage Range	V <sub>OUT</sub>	$V_{OUT} = R_L I_{OUT}, V_{CC} < 16 V$	0		$V_{CC}-6$	v
	VOUT	$V_{OUT} = R_L I_{OUT}, V_{CC} \ge 16 V$	0		10	v
Output Current Range FS	IOUTFS	$I_{OUT} = V_{R0}/R_0$ , 3-wire operation		20		mA
Output Resistance	R <sub>OUT</sub>		0.5	1.0		MΩ
Load Capacitance	$C_L$		0		500	nF
Protection Functions						
Voltage Limitation at $R_0$	V <sub>LIMR0</sub>	$V_{R0} = V_{IN}/2, SET = V_{REF}/2$	580	635	690	mV
	$V_{LIMR0}$	$V_{IN} = 0, V_{R0} = V_{SET}/2 - V_{REF}/2$	580	640	700	mV
Temperature Limitation	$T_{LIMIT}$		110	130	150	°C
Protection against reverse polarity		Ground vs. Vs vs. IOUT			35	v
Current in case of reverse polarity		<i>Ground</i> = 35V, $V_S = I_{OUT} = 0$		3.8		mA
System Parameters				•	·	
Nonlinearity		ideal input		0.05	0.15	%FS

\* In 2–wire operation a maximum current of  $I_{OUTmin} - I_{CC}$  is valid

Currents flowing into the IC are negative

### **BOUNDARY CONDITIONS**

Parameter	Symbol	Conditions	Min.	Тур.	Max.	Unit
Sense Resistor	$R_0$	$I_{OUTFS} = 20 \text{mA}$	20	25	29	Ω
	$R_0$	$c = 20 \text{mA}/I_{OUTFS}$	$c \cdot 20$	$c \cdot 25$	$c \cdot 29$	Ω
Stabilisation Resistor	$R_5$	$I_{OUTFS} = 20 \text{mA}$	35	40	45	Ω
	$R_5$	$c = 20 \text{mA}/I_{OUTFS}$	$c \cdot 35$	$c \cdot 40$	$c \cdot 45$	Ω
Load Resistance	$R_L$	limitation only for 3-wire operation	0		500	Ω
Sum Offset Resistors	$R_{3} + R_{4}$		20		200	kΩ
V <sub>REF</sub> Capacitance	$C_1$		1.9	2.2	5.0	μF
Output Capacitance	$C_2$	only for 2-wire operation	90	100	250	nF
D1 Breakdown Voltage	$V_{BR}$		35	50		v
T <sub>1</sub> Forward Current Gain	$\beta_F$		50	150		

#### FUNCTIONAL DIAGRAMS

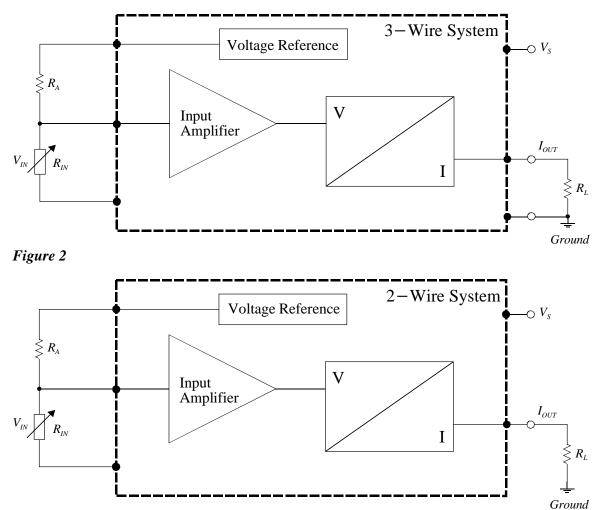


Figure 3

### FUNCTIONAL DESCRIPTION

The IC AM422 is an integrated voltage-to-current converter for a broad spectrum of possible single ended input signals. With variations of a few external components the output current can be adjusted over a wide range. In addition to the resistors  $R_0 - R_5$  and the capacitor  $C_1$  ( $C_2$ ), the circuitry needs only an output transistor  $T_1$  and a diode  $D_1$ . The external transistor decreases the power dissipation of the IC and the diode is protecting the transistor against reverse polarity. Typical values for the external components are listed in the *Application Notes*.

In principle the AM422 can be used as a two-wire or as a three-wire voltage-to-current interface. The schematic of the entire system for the three-wire output is demonstrated on Figure 2. The external reference point *Ground* has to be identical to the ground pin 7 (*GND*) and the IC supply voltage becomes  $V_{CC} = V_S$ . Opposed to this, the ground pin 7 in the two-wire mode (Figure 3) (*GND*)

has to be connected between the resistors  $R_5$  and  $R_L$ . In this case the IC supply voltage  $V_{CC}$  depends on the voltage  $V_S$  and the load resistor  $R_L$  and can be calculated:

$$V_{CC} = V_S - I_{OUT} \cdot R_L \tag{1}$$

Basically the IC AM422 is composed of 3 functional sections as they shown in Figure 1:

- 1. An *operational amplifier input* which allows the adjustment of the output current range with the two external resistors  $R_1$  and  $R_2$ . With the variation of the resistors the input voltage range and the output current range can be set.
- 2. A voltage controlled current output, with a wide current range is adjustable with external resistors  $R_{SET}$ ,  $R_3$  and  $R_4$ . The resistors fix the output offset current, which depends on the reference voltage and corresponds to a minimal output current. The output current  $I_{OUT}$  is supplied by the external transistor  $T_1$ , driven by the output of the IC pin 3 (*OUT*).
- 3. A *programmable voltage reference* (VSET = N.C. or VSET = GND) can be used as an excitation for constant voltage sensors or as supply for other external devices.

The output current is based on two partial currents: an adjustable offset current and a current relying on the input signal  $V_{IN}$ . The transfer function of the AM422 is then

$$I_{OUT}(V_{SET}, V_{IN}) = I_{SET}(V_{SET}) + I_{IN}(V_{IN})$$
<sup>(2)</sup>

For the adjustment of the AM422 two cases have to be differentiated. For input voltage ranges without an offset voltage (0...5V, 0...10V) the adjustment of the output current range is as follows: The minimum output current has to be set with an input voltage  $V_{IN} = 0$ V. The output offset current becomes

$$I_{SET}(V_{IN} = 0) = \frac{1}{R_0} \cdot \left( V_{SET} - \frac{V_{REF}}{2} \right) = \frac{V_{REF}}{R_0} \cdot \frac{(R_4 + R_{SET}) - R_3}{2(R_3 + R_4 + R_{SET})}$$
(3)

With  $R_3 = R_4$  and simplifications the set resistor  $R_{SET}$  is

$$R_{SET} \approx \frac{4R_0 R_4 I_{SET}}{V_{REF}} \tag{4}$$

The output current range has to be set with the transfer function of the IC and can be calculated by

$$\Delta I_{OUT} = I_{OUTmax} - I_{SET} = \frac{V_{INmax}}{2R_0} \left(\frac{R_2}{R_1 + R_2}\right)$$
(5)

The relationship of  $R_1/R_2$  becomes

$$\frac{R_1}{R_2} = \frac{V_{INmax}}{2R_0 \left(I_{OUTmax} - I_{SET}\right)} - 1$$
(6)

The adjustment of the IC using an input offset voltage (for example 0.5...4.5V) can be described as follows. For a desired change of the output current of  $\Delta I_{OUT}$ 

$$\Delta I_{OUT} = \frac{\Delta V_{PIN4}}{2R_0} \qquad \Rightarrow \quad \Delta V_{PIN4} = 2R_0 \,\Delta I_{OUT} \tag{7}$$

### analog microelectronics

April 99 5/10

the input voltage  $V_{IN}$  has to change to

$$\Delta V_{PIN4} = \Delta V_{IN} \left( \frac{R_2}{R_1 + R_2} \right) \tag{8}$$

With the value of the relationship of the resistors  $R_1$  and  $R_2$ 

$$\frac{R_1}{R_2} = \frac{\Delta V_{IN} - \Delta V_{PIN4}}{\Delta V_{PIN4}} \tag{9}$$

the additional offset current can be calculated as

$$I_{SET} = I_{OUTmin} - I_{INmin} = I_{OUTmin} - \frac{V_{INmin}}{2R_0} \left(\frac{R_2}{R_1 + R_2}\right)$$
(10)

The value of the set resistor can then be found using equation 4

In respect to the load resistor  $R_L$ , the value of the supply voltage  $V_S$  has to be considered with care. The following relation is generally valid (see equation 1):

$$V_S \ge I_{OUTmax} R_L + V_{CCmin} \,. \tag{11}$$

The resulting operating range is indicated in Figure 4. Sample calculations and typical values for the external components are listed in the *Application Notes* (beginning page 8).

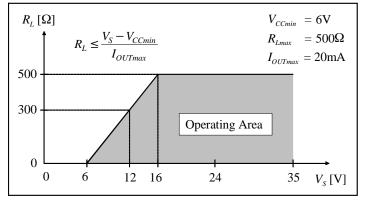


Figure 4

#### **PINOUT**

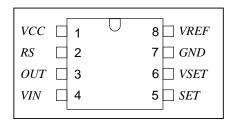


Figure 5

PIN	NAME	DESIGNATION
1	VCC	Supply Voltage
2	RS	Sense Resistor
3	OUT	Output
4	VIN	Voltage Input
5	SET	Set Voltage
6	VSET	Reference Voltage Select
7	GND	IC Ground
8	VREF	Reference Voltage Output

#### DELIVERY

The AM422 is available in 2– (AM422–2) or 3–wire version (AM422–1). The different versions are pin compatible. The AM422 is available as:

- 8 pin DIL packages (samples)
- SO 8 packages
- Dice on 5" blue foil

### PACKAGE DIMENSIONS SOP8

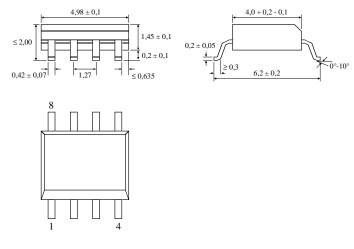


Figure 6

AM422

#### **TYPICAL THREE–WIRE APPLICATION (0 – 5/10V)**

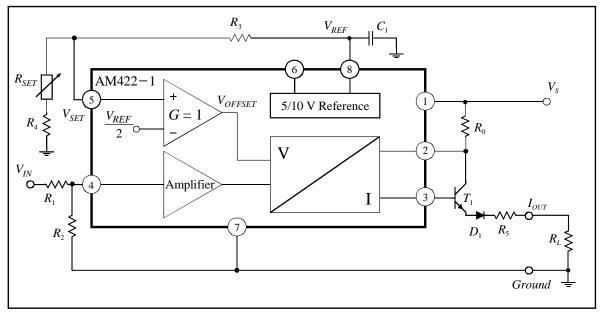


Figure 7

Used in a three–wire circuit (AM422–1) ground pin 7 (*GND*) is connected to *Ground* (Figure 7). The relationship of  $R_1/R_2$ , using equation 2, becomes

$$\frac{R_1}{R_2} = \frac{V_{INmax}}{2R_0 \left(I_{OUTmax} - I_{SET}\right)} - 1$$

The current  $I_{SET}$  is used to set the output current offset and can be calculated by using equation 3

$$I_{SET}(V_{IN} = 0) = \frac{V_{REF}}{R_0} \cdot \frac{(R_4 + R_{SET}) - R_3}{2(R_3 + R_4 + R_{SET})}$$

With  $R_3 = R_4$  the set resistor  $R_{SET}$  becomes (equation 4)

$$R_{SET} \approx \frac{4 R_0 R_4 I_{SET}}{V_{REF}}$$

Example 1: Output current range 4...20mA

In this case the values of the external devices ( $V_{IN} = 0...5V$ ,  $V_{REF} = 5V$ ) are as follows

 $\begin{array}{ll} R_0 = 25\Omega & R_3 = R_4 = 33 \mathrm{k}\Omega & R_{SET} \approx 2.64 \mathrm{k}\Omega & R_5 = 40\Omega \\ R_1/R_2 \approx 5.25 & R_L = 0...500\Omega & C_1 = 2.2 \mathrm{\mu}\mathrm{F} \end{array}$ 


Example 2: Output current range 0...20mA

In this case the values of the external devices ( $V_{IN} = 0...10$ V,  $V_{REF} = 5$ V) are as follows

 $\begin{array}{ll} R_0 = 25\Omega & R_3 = R_4 = 33k\Omega & R_{SET} = 0\Omega & R_5 = 40\Omega \\ R_1/R_2 \approx 9 & R_L = 0...500\Omega & C_1 = 2.2\mu F \end{array}$ 

AM422

#### **TYPICAL THREE–WIRE APPLICATION (0.5 – 4.5V)**

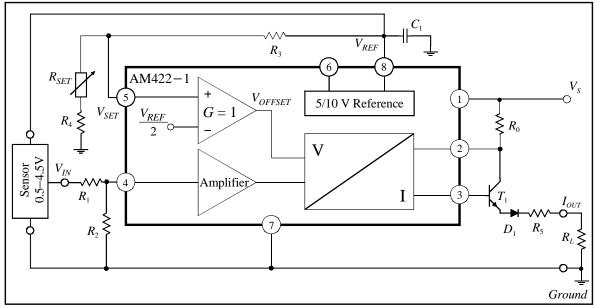



**Example 3:** Output current range  $I_{OUT} = 4...20$ mA, input voltage range  $V_{IN} = 0.5...4.5$ V

The transfer function of the output current  $I_{OUT}$  is (equation 2)

$$I_{OUT} = I_{SET} + I_{IN} = I_{SET} + \frac{V_{IN}}{2R_0} \left(\frac{R_2}{R_1 + R_2}\right)$$

For the 0.5 to 4.5V application (Figure 8) a change of the input voltage from  $\Delta V_{IN} = 4$ V should be displayed over a change of the output current  $\Delta I_{OUT} = 16$ mA.

With the voltage change at pin 4 ( $\Delta V_{PIN4} = 800$ mV, equation 7) the relationship of  $R_1/R_2$ , using equation 8, becomes then

$$\frac{\Delta V_{PIN4}}{\Delta V_{IN}} = \frac{R_2}{R_1 + R_2} = \frac{800 \text{mV}}{4 \text{V}} \implies \qquad \frac{R_1}{R_2} = \frac{\Delta V_{IN} - \Delta V_{PIN4}}{\Delta V_{PIN4}} = 4$$

With that relation an offset current  $I_{SET}$  from

$$I_{SET} = I_{OUTmin} - I_{INmin} = I_{OUTmin} - 2mA = 2mA$$

has to be adjusted (equation 10). With  $R_3 = R_4$  the set resistor  $R_{SET}$  can be calculated (equation 4)

$$R_{SET} \approx \frac{4 R_0 R_4 I_{SET}}{V_{REF}}$$

The values of the external devices than can be calculated as follows ( $V_{REF} = 5V$ )

 $\begin{array}{ll} R_0 = 25\Omega & R_3 = R_4 = 33 \mathrm{k}\Omega & R_{SET} \approx 1.32 \mathrm{k}\Omega & R_5 = 40\Omega \\ R_1/R_2 \approx 4 & R_1 \approx 68 \mathrm{k}\Omega & R_2 \approx 18 \mathrm{k}\Omega & R_L = 0...500\Omega \\ C_1 = 2.2 \mu \mathrm{F} & \end{array}$ 

AM422

#### TYPICAL TWO–WIRE APPLICATION (0 – 1V)

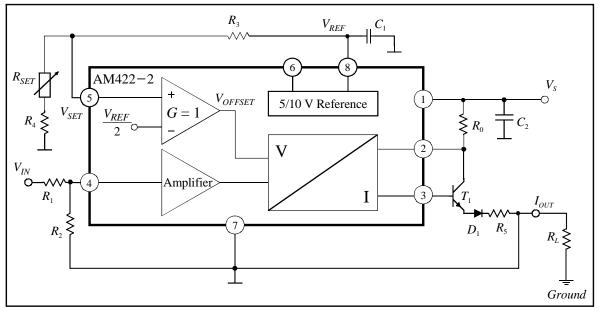


Figure 9

Used in a two-wire circuit (AM422–2) ground pin 7 (*GND*,  $\perp$ ) is connected between  $R_5$  and the load resistor (Figure 9). The relationship  $R_1/R_2$ , using equation 2, becomes

$$\frac{R_1}{R_2} = \frac{V_{INmax}}{2R_0 \left(I_{OUTmax} - I_{SET}\right)} - 1$$

The current  $I_{SET}$  is used to set the output current offset and can be calculated by using equation 3

$$I_{SET}(V_{IN} = 0) = \frac{V_{REF}}{R_0} \cdot \frac{(R_4 + R_{SET}) - R_3}{2(R_3 + R_4 + R_{SET})}$$

With  $R_3 = R_4$  the set resistor  $R_{SET}$  becomes (equation 4)

$$R_{SET} \approx \frac{4 R_0 R_4 I_{SET}}{V_{REF}}$$

Example 4: Output current range 4...20mA

In this case the values of the external devices ( $V_{IN} = 0...1V$ ) are as follows

$R_0 = 25\Omega$	$R_3 = R_4 = 33 \mathrm{k}\Omega$	$R_{SET} \approx 2.64 \mathrm{k}\Omega$	$R_5 = 40\Omega$
$R_1/R_2 \approx 0.25$	$R_L = 0500\Omega$	$C_1 = 2.2 \mu F$	$C_2 = 100 nF$

The information provided herein is believed to be reliable; however, Analog Microelectronics assumes no responsibility for inaccuracies or omissions. Analog Microelectronics assumes no responsibility for the use of this information, and all use of such information shall be entirely at the user's own risk. Prices and specifications are subject to change without notice. No patent rights or licences to any of the circuits described herein are implied or granted to any third party. Analog Microelectronics does not authorise or warrant any Analog Microelectronics product use in life support devices and/or systems.