




**NPN Silicon Digital Transistor**

- Switching circuit, inverter, interface circuit, driver circuit
- Built in bias resistor ( $R_1=22k\Omega$ ,  $R_2=22k\Omega$ )
- For 6-PIN packages: two (galvanic) internal isolated transistors with good matching in one package

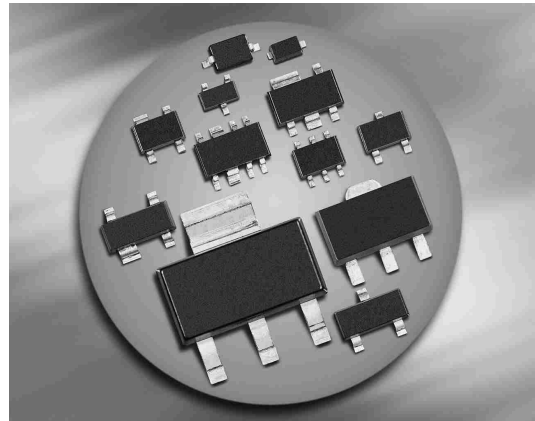

**BCR141/F/L3  
BCR141T/W**

**BCR141S/U  
SEMh1**

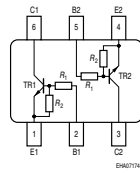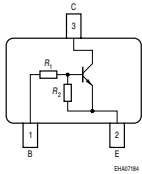

Type	Marking	Pin Configuration						Package
BCR141	WDs	1=B	2=E	3=C	-	-	-	SOT23
BCR141F	WDs	1=B	2=E	3=C	-	-	-	TSFP-3
BCR141L3	WD	1=B	2=E	3=C	-	-	-	TSLP-3-4
BCR141S	WDs	1=E1	2=B1	3=C2	4=E2	5=B2	6=C1	SOT363
BCR141T	WDs	1=B	2=E	3=C	-	-	-	SC75
BCR141U	WDs	1=E1	2=B1	3=C2	4=E2	5=B2	6=C1	SC74
BCR141W	WDs	1=B	2=E	3=C	-	-	-	SOT323
SEMh1	WD	1=E1	2=B1	3=C2	4=E2	5=B2	6=C1	SOT666

**Maximum Ratings**

Parameter	Symbol	Value	Unit
Collector-emitter voltage	$V_{CEO}$	50	V
Collector-base voltage	$V_{CBO}$	50	
Emitter-base voltage	$V_{EBO}$	10	
Input on voltage	$V_{i(on)}$	30	
Collector current	$I_C$	100	mA
Total power dissipation- BCR141, $T_S \leq 102^\circ\text{C}$ BCR141F, $T_S \leq 128^\circ\text{C}$ BCR141L3, $T_S \leq 135^\circ\text{C}$ BCR141S, $T_S \leq 115^\circ\text{C}$ BCR141T, $T_S \leq 109^\circ\text{C}$ BCR141U, $T_S \leq 118^\circ\text{C}$ BCR141W, $T_S \leq 124^\circ\text{C}$ SEMH1, $T_S \leq 75^\circ\text{C}$	$P_{tot}$	200 250 250 250 250 250 250 250	mW
Junction temperature	$T_j$	150	°C
Storage temperature	$T_{stg}$	-65 ... 150	

**Thermal Resistance**

Parameter	Symbol	Value	Unit
Junction - soldering point <sup>1)</sup>	$R_{thJS}$		K/W
BCR141		≤ 240	
BCR141F		≤ 90	
BCR141L3		≤ 60	
BCR141S		≤ 140	
BCR141T		≤ 165	
BCR141U		≤ 133	
BCR141W		≤ 105	
SEMH1		≤ 300	

<sup>1</sup>For calculation of  $R_{thJA}$  please refer to Application Note Thermal Resistance


**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
<b>DC Characteristics</b>					
Collector-emitter breakdown voltage $I_C = 100 \mu\text{A}, I_B = 0$	$V_{(BR)CEO}$	50	-	-	V
Collector-base breakdown voltage $I_C = 100 \mu\text{A}, I_E = 0$	$V_{(BR)CBO}$	50	-	-	
Collector-base cutoff current $V_{CB} = 40 \text{ V}, I_E = 0$	$I_{CBO}$	-	-	100	nA
Emitter-base cutoff current $V_{EB} = 10 \text{ V}, I_C = 0$	$I_{EBO}$	-	-	350	$\mu\text{A}$
DC current gain <sup>1)</sup> $I_C = 5 \text{ mA}, V_{CE} = 5 \text{ V}$	$h_{FE}$	50	-	-	-
Collector-emitter saturation voltage <sup>1)</sup> $I_C = 10 \text{ mA}, I_B = 0.5 \text{ mA}$	$V_{CEsat}$	-	-	0.3	V
Input off voltage $I_C = 100 \mu\text{A}, V_{CE} = 5 \text{ V}$	$V_{i(off)}$	0.8	-	1.5	
Input on voltage $I_C = 2 \text{ mA}, V_{CE} = 0.3 \text{ V}$	$V_{i(on)}$	1	-	2.5	
Input resistor	$R_1$	15	22	29	$\text{k}\Omega$
Resistor ratio	$R_1/R_2$	0.9	1	1.1	-
<b>AC Characteristics</b>					
Transition frequency $I_C = 10 \text{ mA}, V_{CE} = 5 \text{ V}, f = 100 \text{ MHz}$	$f_T$	-	130	-	MHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{cb}$	-	3	-	pF

<sup>1</sup>Pulse test:  $t < 300\mu\text{s}$ ;  $D < 2\%$


**DC current gain  $h_{FE} = f(I_C)$**

$V_{CE} = 5\text{ V}$  (common emitter configuration)

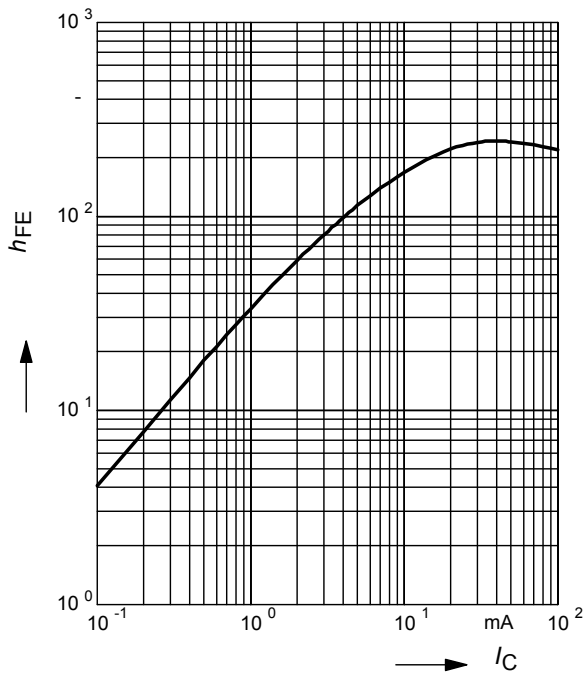


**Collector-emitter saturation voltage**

$V_{CEsat} = f(I_C), h_{FE} = 20$

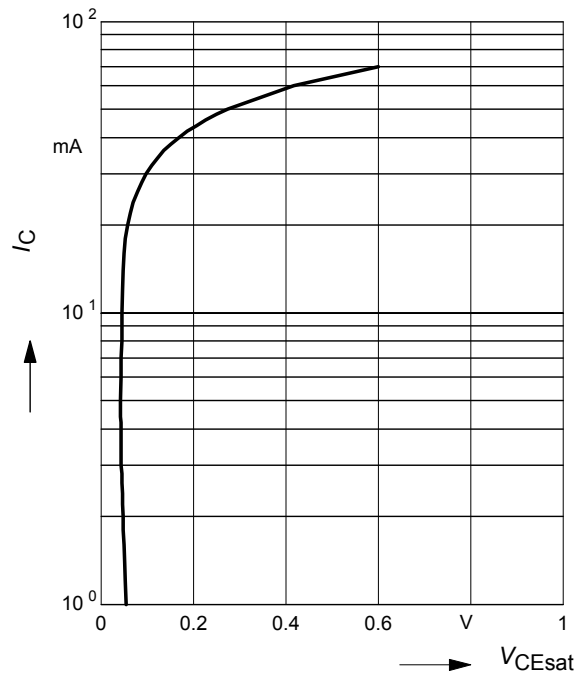


**Input on Voltage  $V_{i(on)} = f(I_C)$**

$V_{CE} = 0.3\text{ V}$  (common emitter voltage)

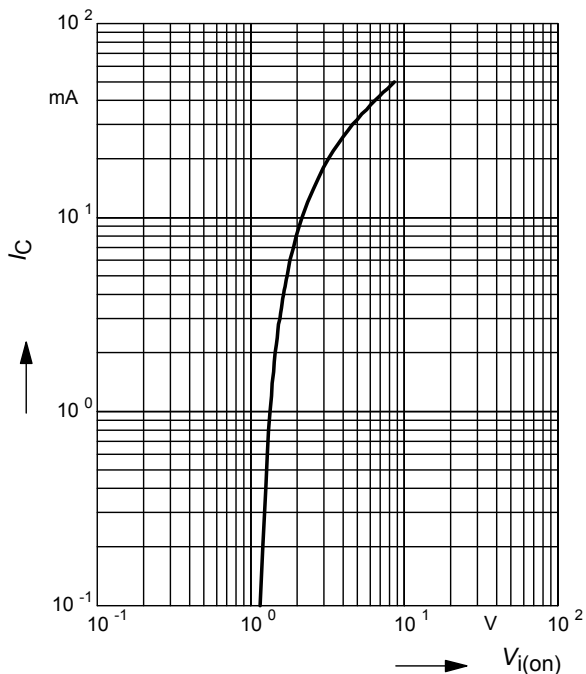


**Input off voltage  $V_{i(off)} = f(I_C)$**

$V_{CE} = 5\text{ V}$  (common emitter voltage)

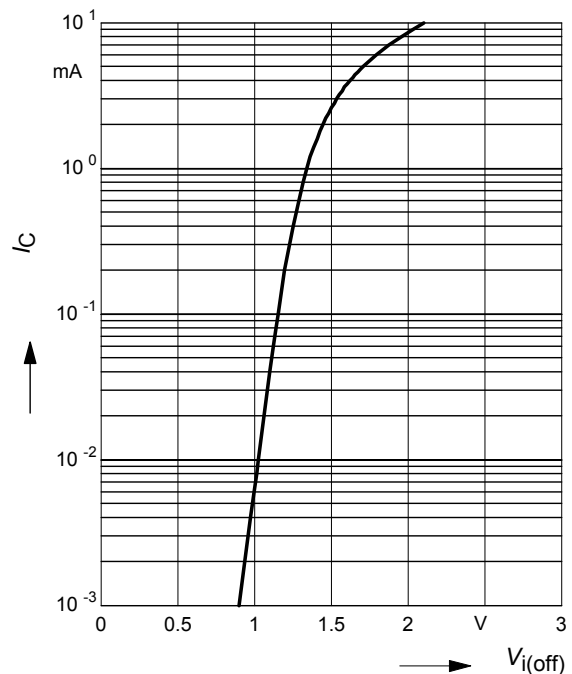


Total power dissipation  $P_{tot} = f(T_S)$

BCR141

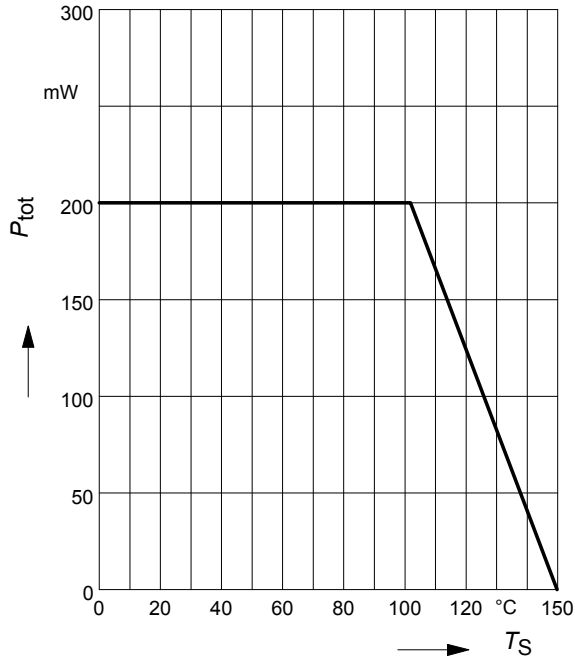


Total power dissipation  $P_{tot} = f(T_S)$

BCR141F

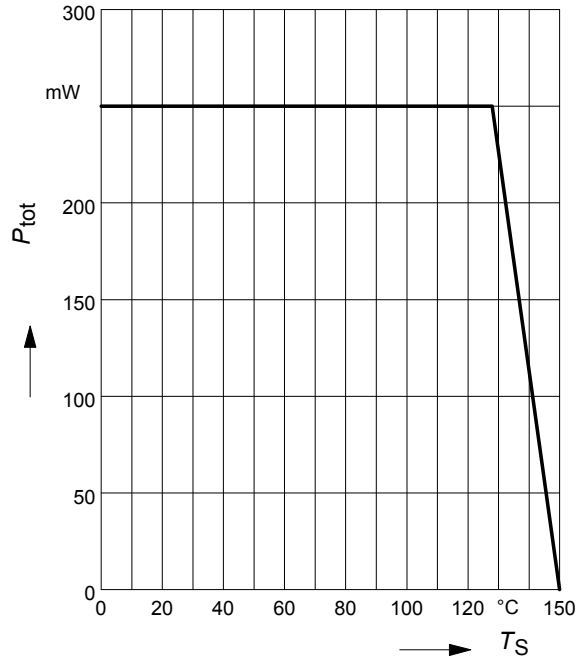


Total power dissipation  $P_{tot} = f(T_S)$

BCR141L3

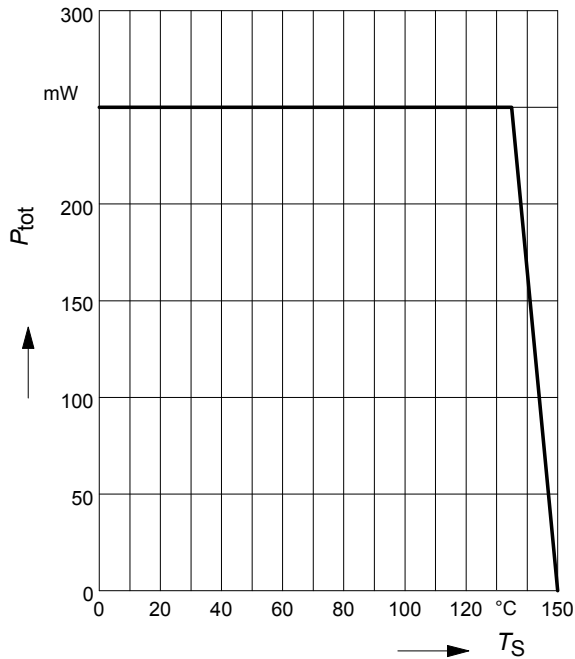


Total power dissipation  $P_{tot} = f(T_S)$

BCR141S

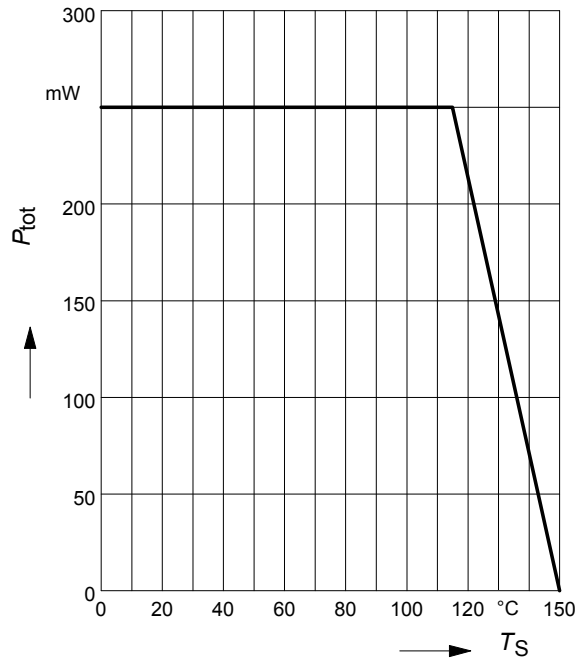


Total power dissipation  $P_{tot} = f(T_S)$

BCR141T

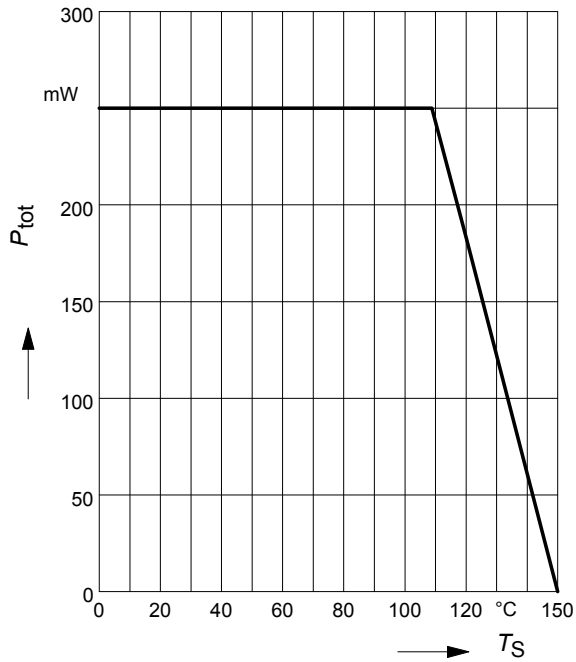


Total power dissipation  $P_{tot} = f(T_S)$

BCR141U

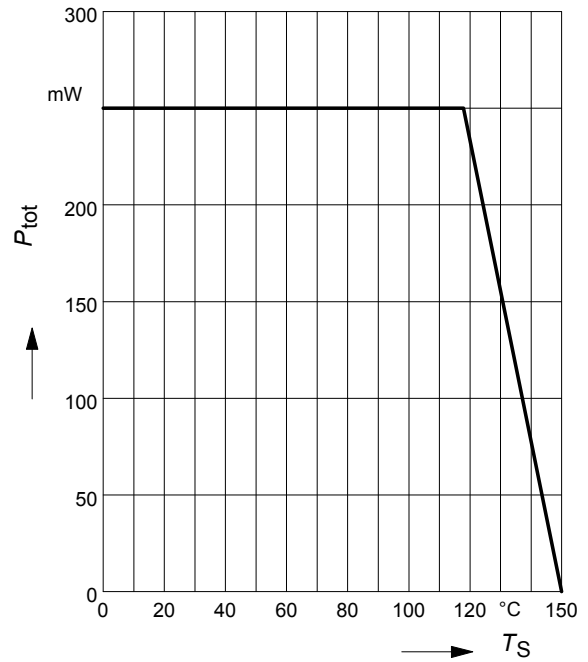


Total power dissipation  $P_{tot} = f(T_S)$

BCR141W

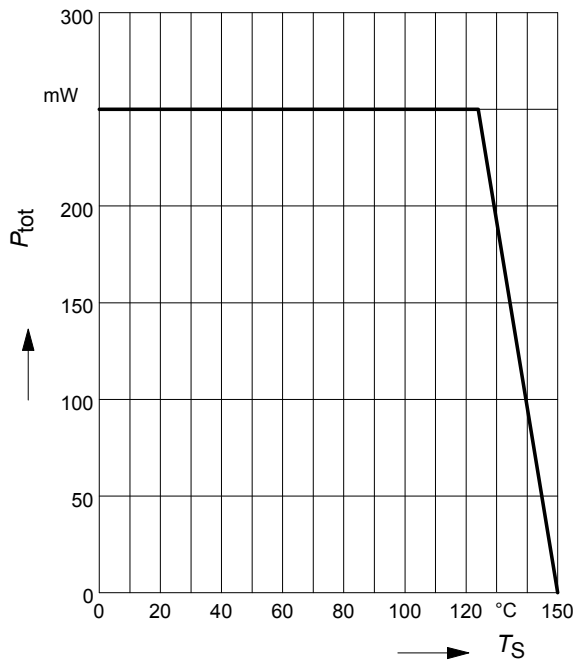


Total power dissipation  $P_{tot} = f(T_S)$

SEMH1

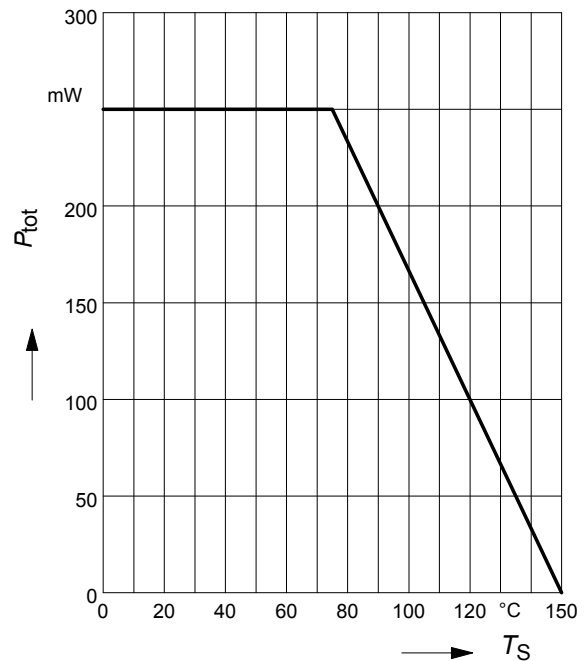

Permissible Pulse Load  $R_{thJS} = f(t_p)$


BCR141

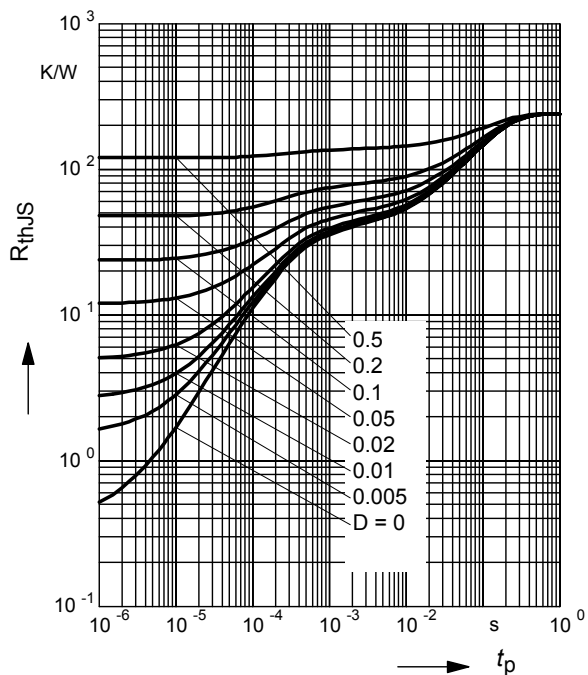

Permissible Pulse Load


$P_{totmax}/P_{totDC} = f(t_p)$

BCR141

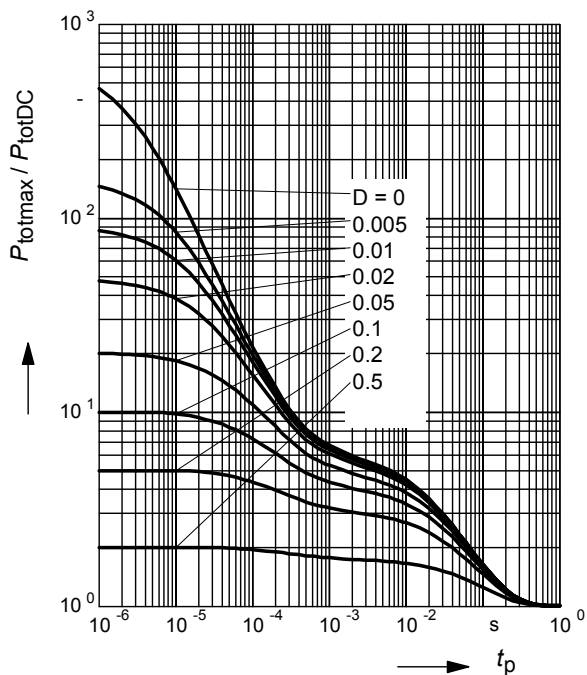

Permissible Puls Load  $R_{thJS} = f(t_p)$


BCR141F

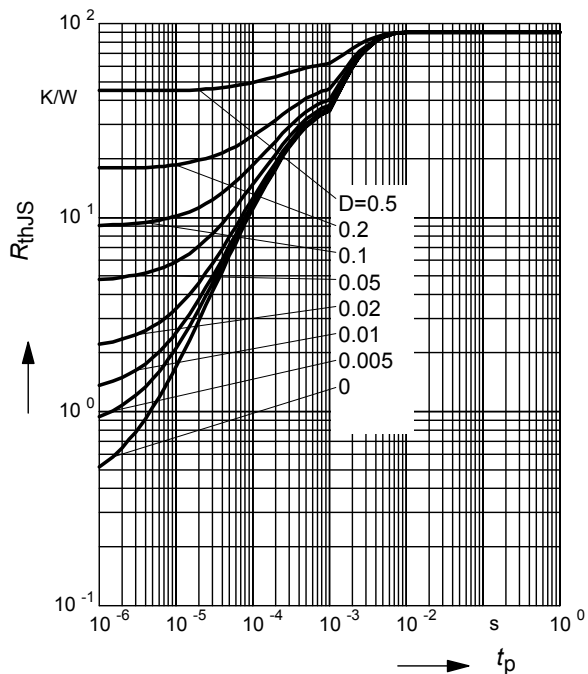

Permissible Pulse Load


$P_{totmax}/P_{totDC} = f(t_p)$

BCR141F

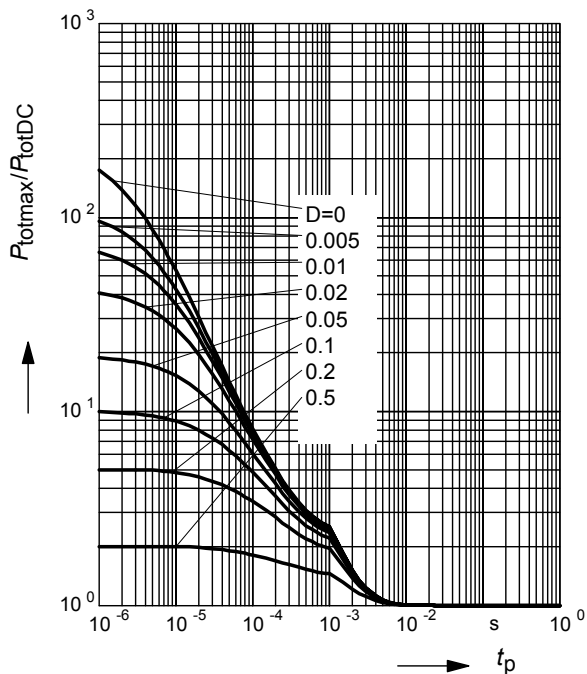

Permissible Puls Load  $R_{thJS} = f(t_p)$


BCR141L3

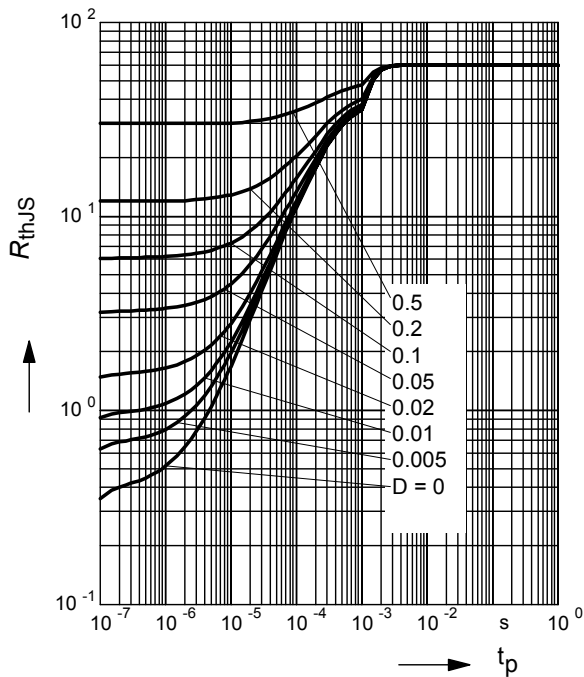

Permissible Pulse Load


$P_{totmax}/P_{totDC} = f(t_p)$

BCR141L3

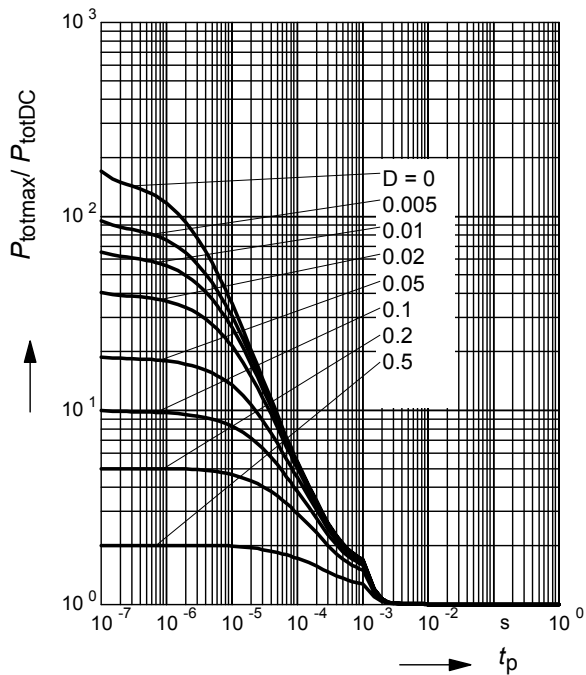

Permissible Puls Load  $R_{thJS} = f(t_p)$


BCR141S

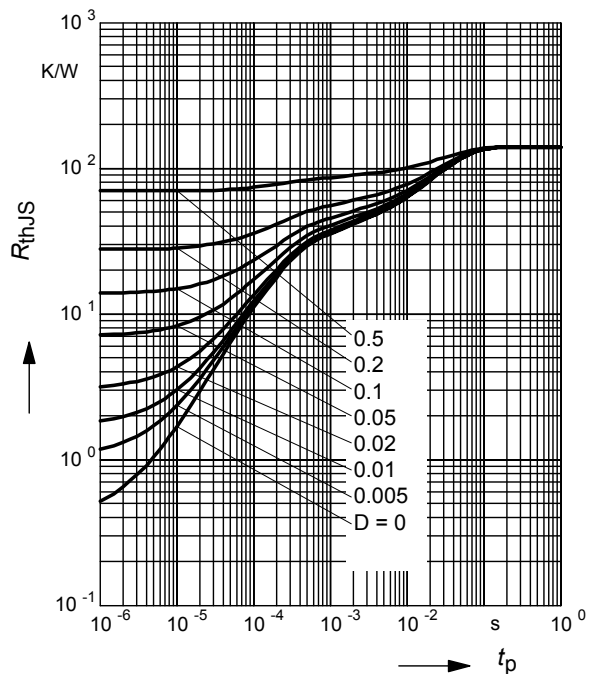

Permissible Pulse Load

$P_{totmax}/P_{totDC} = f(t_p)$


BCR141S

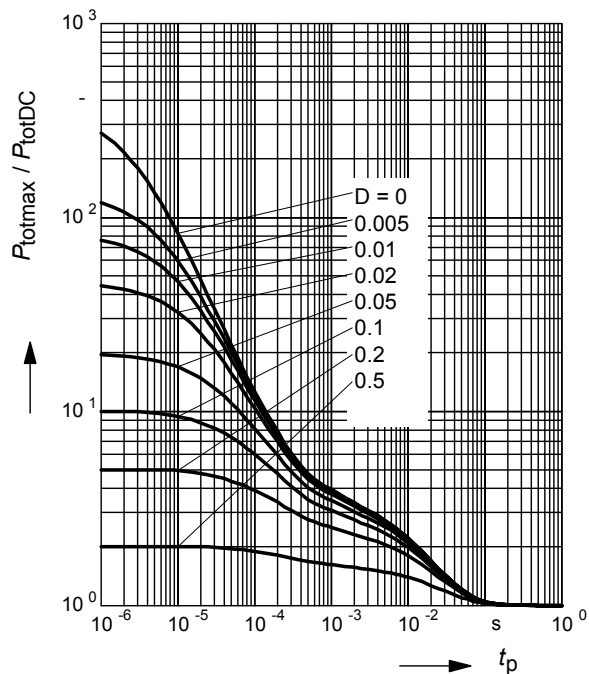



Permissible Puls Load  $R_{thJS} = f(t_p)$


BCR141T

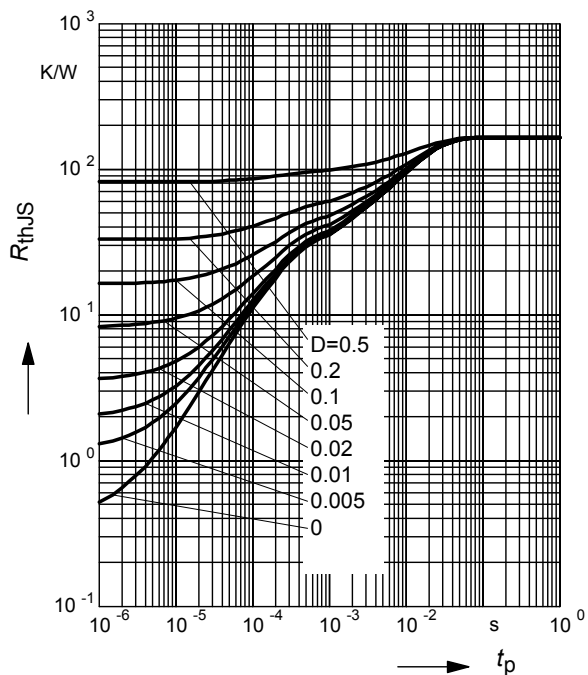

Permissible Pulse Load


$P_{totmax}/P_{totDC} = f(t_p)$

BCR141T

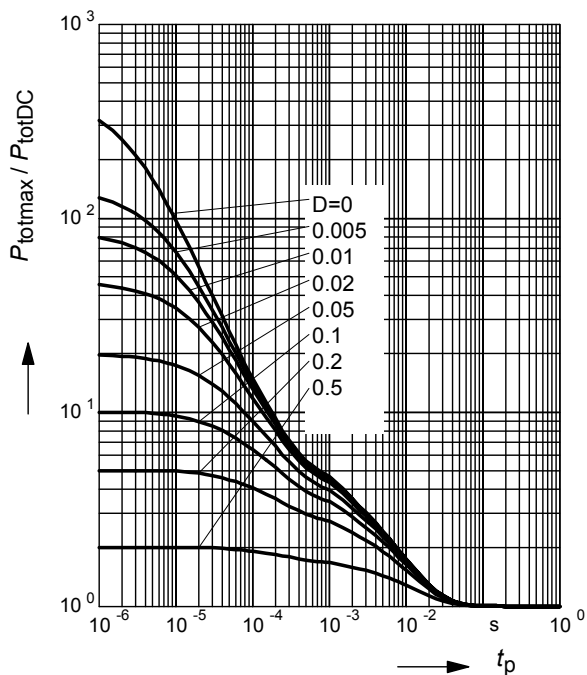

Permissible Puls Load  $R_{thJS} = f(t_p)$


BCR141U

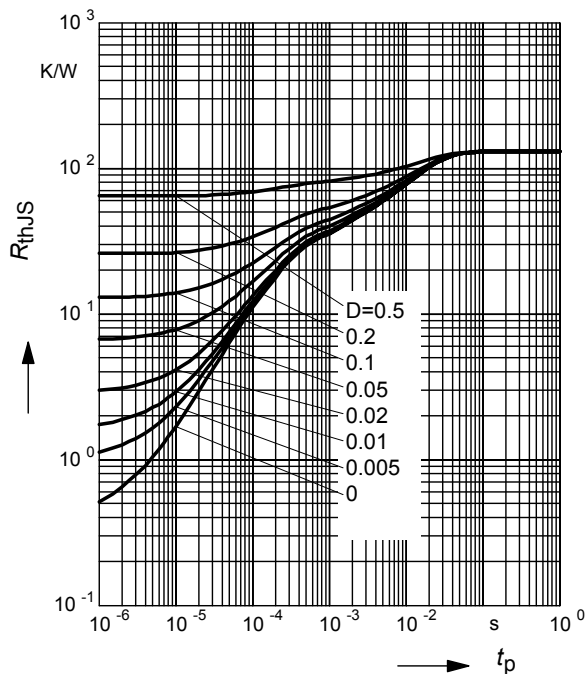

Permissible Pulse Load


$P_{totmax}/P_{totDC} = f(t_p)$

BCR141U

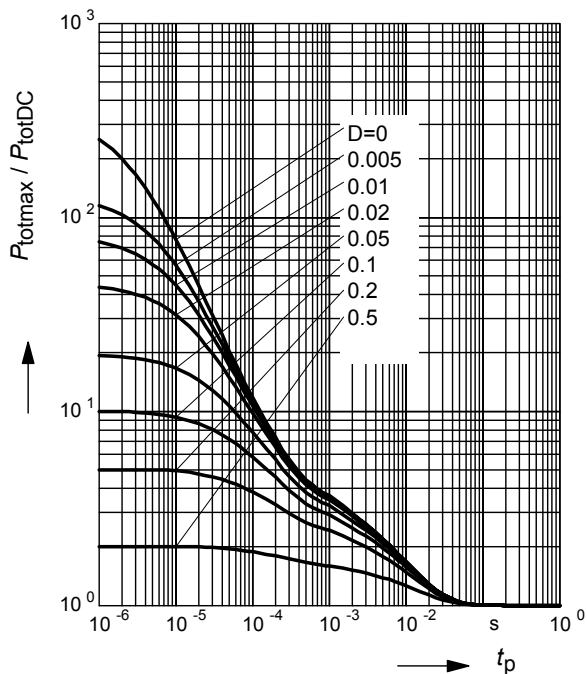

Permissible Puls Load  $R_{thJS} = f(t_p)$


BCR141W

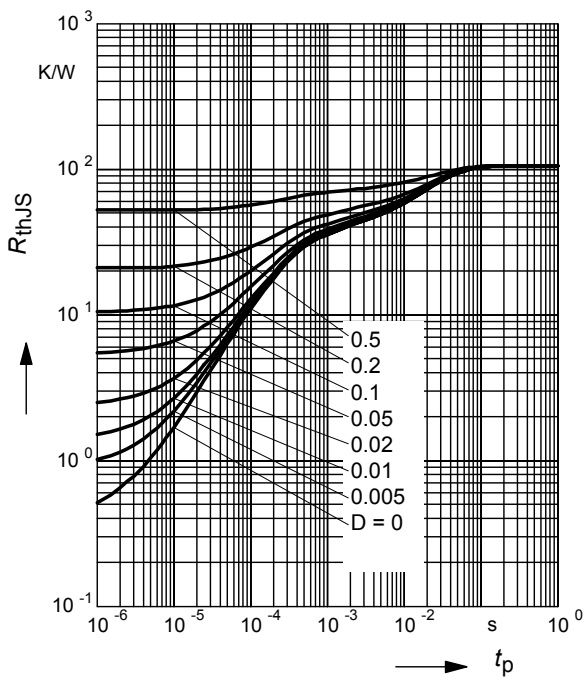

Permissible Pulse Load


$P_{totmax}/P_{totDC} = f(t_p)$

BCR141W

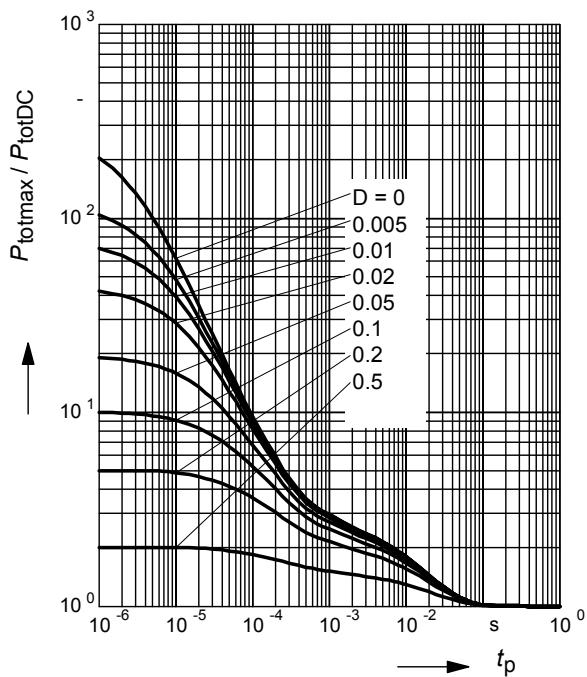

Permissible Puls Load  $R_{thJS} = f(t_p)$

SEM1

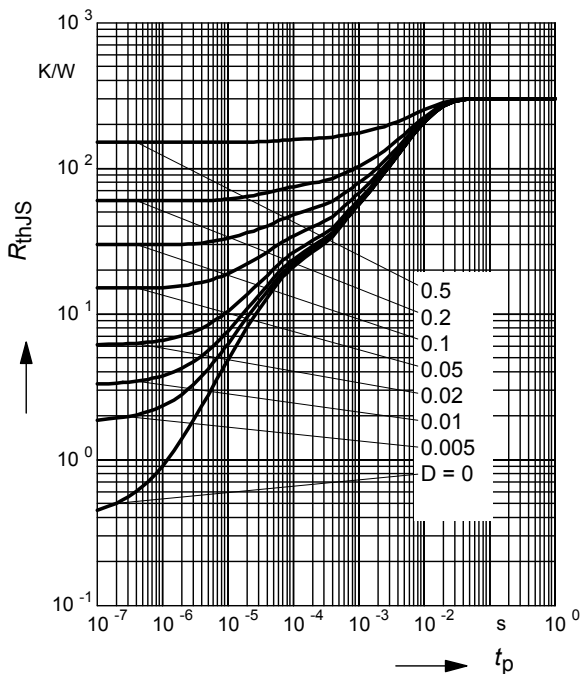

Permissible Pulse Load

$P_{totmax}/P_{totDC} = f(t_p)$

SEM1

