
# **B**BULGIN


## BUCCANEER

### 400 Series Buccaneer®



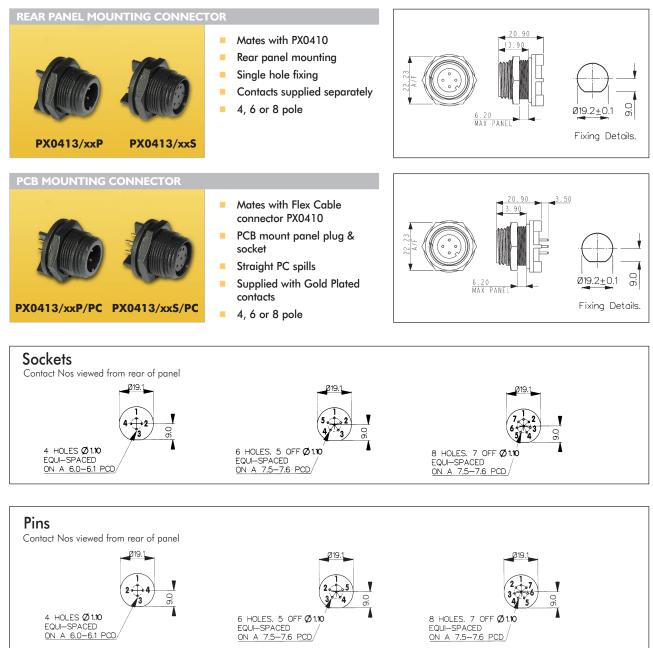

#### 400 Series Buccaneer®

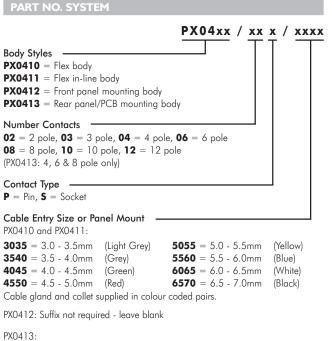

PC = Pre-loaded PC pins Blank = no pins supplied

#### Examples:

 $\label{eq:px0413/04P/PC} \begin{array}{l} \mathsf{PX0413/04P/PC} = \mathsf{Rear panel/PCB} \ \mathsf{connector}, \ 4 \ \mathsf{pin \ contacts}, \ \mathsf{PCB} \ \mathsf{mounting} \\ \mathsf{PX0413/06P} = \mathsf{Rear \ panel \ mounting \ connector}, \ \mathsf{for \ 6 \ pin \ contacts} \ (\mathsf{supplied \ less \ contacts}) \end{array}$