Aromat Corporation

(Matsushita Electric Works, America)



PC-001 March 3, 2003



Notification of Product Discontinuation

Please be informed that Aromat Corporation will discontinue production of the SF4 Relay. This change will have no impact on SF2 Relays and SF3 Relays.

1. Reasons:

Improve contact reliability.

- 2. Type:
 - (1) All SF4 Relays.
 - (2) SF2 Relays and SF3 Relays will not be effected.
- 3. Part Numbers/Recommended Replacement:

Discontinued	Recommended
Part Number	Replacement
SF4-DC5V	SF4D-DC5V
SF4-DC12V	SF4D-DC12V
SF4-DC24V	SF4D-DC24V
SF4-DC48V	SF4D-DC48V
SF4-DC60V	SF4D-DC60V

4. Schedule:

From April 2003 onwards.

Aromat Corporation

■ Head Office: 629 Central avenue, New Providence, NJ 07974


Telephone: (908) 464-3550Facsimile: (908) 464-5719






POLARISED, MONOSTABLE SAFETY RELAY

SF-RELAYS **Double contact**



2 Form A 2 Form B



mm inch

FEATURES

High contact reliability

High contact reliability is achieved through the use of a double contact.

Forced operation contacts (2 Form A 2 Form B)

N.O. and N.C. side contacts are connected through a card so that one interacts with the other in movement. In case of a contact welding, the other keeps a min. 0.5mm .020inch contact gap.

• Independent operation contacts (4 Form A 4 Form B)

There are 4 points of forced operation contacts.

Each pair of contacts is free from the main armature and is independent from each other. So if a N.O. pair of contacts are welded, the other 3 N.O. contacts are not effected (operate properly) That enables to plan a circuit to detect welding or go back to the beginning condition.

• Separated chamber structure (2 Form A 2 Form B, 4 Form A 4 Form B)

N.O. and N.C. side contacts are put in each own space surrounded with a card and a body-separater. That prevents short circuit between contacts, which is caused by their springs welding or damaged.

• High breakdown voltage 2,500 Vrms between contacts and coil

· High sensitivity

Realizes thin shape and high sensitivity (500 mW nominal operating power) by utilizing high-efficiency polarized magnetic circuit with 4-gap balanced armature.

· Complies with safety standards Standard products are UL, CSA, TÜV and SEV certified. Comform to European standards. TÜV certified (945/EL, 178/ 88). Complies with SUVA European standard.

SPECIFICATIONS

Contact

Contact arra	ngement	2 Form A 4 Form A 2 Form B 4 Form B		
	t resistance, max. drop 6 V DC 1 A)	30 mΩ		
Contact mate	erial	Gold-flashed	d silver alloy	
	Nominal switching capacity	6 A 250 V AC, 6 A 30 V DC		
Rating	Max. switching power	1,500 VA, 180 W		
(resistive)	Max. switching voltage	440 V AC, 30 V DC		
	Max. carrying current	6 A		
Expected	Mechanical (at 180 cpm)	107		
life (min. operations)	Electrical (at 20 cpm)	10) 5	

Coil

Nominal operating power	500 mW

Remarks

- Specifications will vary with foreign standards certification ratings. *1 Measurement at same location as "Initial breakdown voltage" section
- *2 Detection current: 10mA
- *3 Excluding contact bounce time
- *4 Half-wave pulse of sine wave: 11ms; detection time: 10μs
- *5 Half-wave pulse of sine wave: 6ms
- *6 Detection time: 10µs
- *7 Refer to 6. Usage, transport and storage mentioned in NOTES

Characteristics

Contact arrangement				2 Form A 4 Form A 4 Form B		
Max. operating speed				180 cpm (at nominal voltage)		
Initial insula	tion resista	nce*1		Min. 1,000 Mg	2 at 500 V DC	
Initial	Between open contacts			1,300 Vrms		
breakdown	Between o	contac	ct sets	2,500	Vrms	
voltage*2	Between o	contac	t and coil	2,500	Vrms	
Operate tim	e*3 (at nom	inal v	oltage)	Approx. 17 ms	Approx. 18 ms	
Release time (without diode)*3 (at nominal voltage)			Approx. 7 ms	Approx. 6 ms		
Temperature rise (at nominal voltage) (at 20°C)			Max. 45°C with nominal coil voltage and at 6 A carry current			
Charle rasia	4	Fund	ctional*4	Min. 294 m/s ² {30 G}		
Shock resis	tance	Destructive*5		Min. 980 m/s ² {100 G}		
Vibration re	oiotonoo	Fund	ctional*6	10 to 55 Hz at double amplitude of 2 mm		
Vibration re	sisiance	Dest	tructive		z at double e of 2 mm	
Conditions for operation, transport and storage*7 (Not temp.				-40°C to +70°C -40°F to +158°F		
freezing and condensing at low temperature)				5 to 85% R.H.		
Unit weight			Approx. 38 g 1.34 oz	Approx. 47 g 1.66 oz		



ORDERING INFORMATION

TYPICAL APPLICATIONS

• Industrial equipment such as presses and machine tools

Ex. SF	2 -	D —	DC 5 V

Contact ar	rangement	Coil vo	oltage
2: 2 Form A 4: 4 Form A	-	DC 5, 12, 2	4, 48, 60 V


UL/CSA, TÜV, SEV approved type is standard


TYPES AND COIL DATA (at 20°C 68°F)

Contact arrangement	Part No.	Nominal voltage, V DC	Pick-up voltage, VDC (max.)	Drop-out voltage, V DC (min.)	Coil resistance Ω (±10%)	Nominal operating current, mA (±10%)	Nominal operating power, mW	Max. allowable voltage, V DC
	SF2D-DC5V	5	3.75	0.5	50	100	500	6
	SF2D-DC12V	12	9	1.2	288	41.7	500	14.4
2 Form A 2 Form B	SF2D-DC24V	24	18	2.4	1.152	20.8	500	28.8
21011111	SF2D-DC48V	48	36	4.8	4.608	10.4	500	57.6
	SF2D-DC60V	60	45	6.0	7.200	8.3	500	72
	SF4D-DC5V	5	3.75	0.75	50	100	500	6
	SF4D-DC12V	12	9	1.8	288	41.7	500	14.4
4 Form A 4 Form B	SF4D-DC24V	24	18	3.6	1.152	20.8	500	28.8
4 FUIIII D	SF4D-DC48V	48	36	7.2	4.608	10.4	500	57.6
	SF4D-DC60V	60	45	9.0	7.200	8.3	500	72

DIMENSIONS

1. 2 Form A 2 Form B







General tolerance: ±0.3 ±.012

Schematic (Bottom view)

mm inch




PC board pattern (Bottom view)

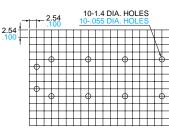

Tolerance: ±0.1 ±.004


2. 4 Form A 4 Form B



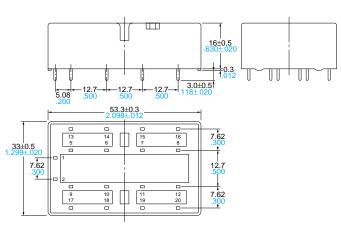


General tolerance: ±0.3 ±.012

Schematic (Bottom view)




PC board pattern (Bottom view)

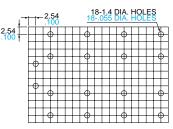


Tolerance: ±0.1 ±.004




1. Operate/release time (without diode) Tested sample: SF2D-DC24V Quantity: n=20

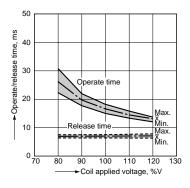

2. Temperature rise Tested sample: SF4D-DC24V Quantity: n = 6 Coil applied voltage: 100%V, 120%V Contact carry current: 6A

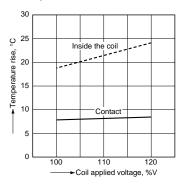

3. Ambient temperature characteristics Tested sample: SF4D-DC12V Quantity: n=6

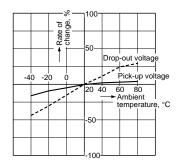





SF relays work to maintain a normal operating state even when the contact welding occur by overloading or short-circuit currents. It is easy to make weld detection circuits and safety circuits in the design to ensure safety even if contacts weld.

Internal Contacts Weld

If the internal contacts (No. 2, 3, 6, and 7) weld of 4a4b type, the armature becomes non-operational and the contact gaps of each of the four form "a" contacts are maintained at greater than 0.5 mm .020 inch. Reliable isolation is thus ensured. The 2a2b type operates in the same way.

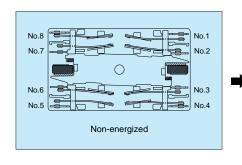

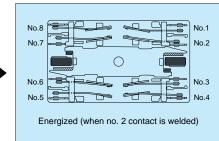



If the No. 2 contact welds. Each of the four form "a" contacts (No. 1, 3, 5, and 7) maintains a gap of greater than 0.5 mm .020 inch.

External Contacts Weld


If the external contacts (No. 1, 4, 5, and 8) weld of 4a4b type, gaps of greater than 0.5 mm .020 inch are maintained between adjacent contacts and the other contacts return by an non-energized.

 \bigcirc

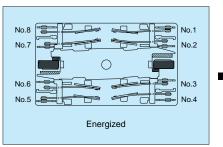



If the No. 1 contact welds.
The adjacent No. 2 contact maintains a gap of greater than 0.5 mm .020 inch. The other contacts, because the coil is not energized, return to their normal return state; each of form "a" contacts (No. 3, 5, and 7) maintains a contact gap of greater than 0.5 mm .020 inch; each of the form "b" contacts (No. 4, 6, and 8) return to a closed state.



No.2

No.3

Contact Operation Table


operate independently and the contact gaps are

maintained at greater than 0.5 mm .020 inch.

The table below shows the state of the other contacts. In case of form "a" contact weld the coil applied voltage is 0 V. In case of form "b" contact weld the coil applied voltage is nominal.

No.7

No.6

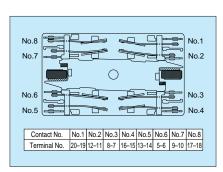

Contact No.			State of other contacts							
Contact No.		1	2	3	4	5	6	7	8	
	1		>0.5	>0.5	≠	>0.5	≠	>0.5	≠	
	2	>0.5		>0.5		>0.5		>0.5		
	3		>0.5		>0.5		>0.5		>0.5	
Welded contact	4	≠	>0.5	>0.5		≠	>0.5	≠	>0.5	
No.	5	>0.5	≠	>0.5	≠		>0.5	>0.5	≠	
	6	>0.5		>0.5		>0.5		>0.5		
	7		>0.5		>0.5		>0.5		>0.5	
	8	≠	>0.5	≠	>0.5	≠	>0.5	>0.5		

>0.5: contact gap is kept at min. 0.5 mm.020 inch ≠: contact closed Empty cells: either closed or open

Note: Contact gaps are shown at the initial state.

If the contact transfer is caused by load switching, it is necessary to check the actual loading.

NOTES

1. Coil operating power

Pure DC current should be applied to the coil. The wave form should be rectangular. If it includes ripple, the ripple factor should be less than 5%. However, check it with the actual circuit since the characteristics may be slightly different.

2. Coil connection

When connecting coils, refer to the wiring diagram to prevent mis-operation or malfunction.

3. Cleaning

For automatic cleaning, the boiling method is recommended. Avoid ultrasonic cleaning which subjects the relays to high frequency vibrations, which may cause the contacts to stick.

It is recommended that a fluorinated hydrocarbon or other alcoholic solvents be used.

4. Soldering

We recommend the following soldering conditions

- 1) Automatic soldering
- 1) Preheating: 100°C 212°F, max. 60 s
- 2) Soldering: 250°C 482°F, max. 5 s

5. Others

- 1) If the relay has been dropped, the appearance and characteristics should always be checked before use.
- 2) The cycle lifetime is defined under the standard test condition specified in the JIS* C 5442-1986 standard (temperature 15 to 35°C 59 to 95°F, humidity 25 to 85%). Check this with the real device as it is affected by coil driving circuit, load type, activation frequency, activation phase, ambient conditions and other factors.

Also, be especially careful of loads such as those listed below.

(1) When used for AC load-operating and the operating phase is synchronous. Rocking and fusing can easily occur due to contact shifting. (2) High-frequency load-operating When high-frequency opening and closing of the relay is performed with a load that causes arcs at the contacts, nitrogen and oxygen in the air is fused by the arc energy and HNO₃ is formed. This can corrode metal materials.


Three countermeasures for these are listed here.

- Incorporate an arc-extinguishing circuit.
- 2. Lower the operating frequency
- 3. Lower the ambient humidity
- 3) For secure operations, the voltage applied to the coil should be nominal voltage. In addition, please note that pick-up and drop-out voltage will vary according to the ambient temperature and operation conditions.
- 4) Heat, smoke, and even a fire may occur if the relay is used in conditions outside of the allowable ranges for the coil ratings, contact ratings, operating cycle lifetime, and other specifications. Therefore, do not use the relay if these ratings are exceeded. Also, make sure that the relay is wired correctly.
- 5) Incorrect wiring may cause unexpected events or the generation of heat or flames. 6) Check the ambient conditions when storing or transporting the relays and devices containing the relays. Freezing or condensation may occur in the relay, causing functional damage. Avoid subjecting the relays to heavy loads, or strong vibration and shocks.

6. Usage, transport and storage conditions

- 1) Ambient temperature, humidity, and atmospheric pressure during usage, transport, and storage of the relay:
- (1) Temperature:
- -40 to +70°C -40 to +158°F
- (2) Humidity: 5 to 85% RH (Avoid freezing and condensation.)

The humidity range varies with the temperature. Use within the range indicated in the graph below.

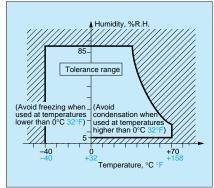

- (3) Atmospheric pressure: 86 to 106 kPa Temperature and humidity range for usage, transport, and storage:
- 2) Condensation

Condensation forms when there is a sudden change in temperature under high temperature and high humidity conditions. Condensation will cause deterioration of the relay insulation.

3) Freezing

Condensation or other moisture may freeze on the relay when the temperatures is lower than 0°C 32°F. This causes problems such as sticking of movable parts or operational time lags.
4) Low temperature, low humidity environments

The plastic becomes brittle if the relay is exposed to a low temperature, low humidity environment for long periods of time.

These materials are printed on ECF pulp.
These materials are printed with earth-friendly vegetable-based (soybean oil) ink.



Please contact

Matsushita Electric Works, Ltd.

Automation Controls Company

- Head Office: 1048, Kadoma, Kadoma-shi, Osaka 571-8686, Japan
- Telephone: Japan (81) Osaka (06) 6908-1050
- Facsimile: Japan (81) Osaka (06) 6908-5781

http://www.nais-e.com/

COPYRIGHT © 2002 All Rights Reserved