


Datamate Connectors

Female Crimp

- ❖ Part numbers are for housings and the equivalent number of contacts.
- ❖ Contacts are rear insertable.
- ❖ For British Standard versions see pages 14 to 15.
- ❖ Hoods & cable assembly service available – contact datamate@harwin.com.
- ❖ Spare contacts are available – see page 16.

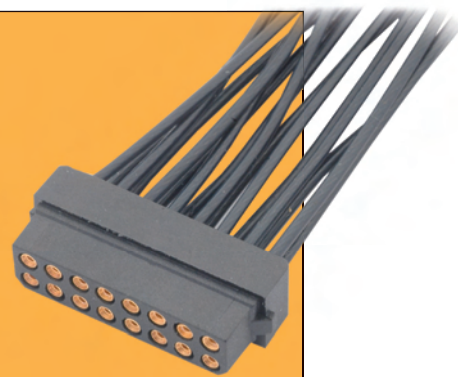

SINGLE ROW		CALCULATION		DOUBLE ROW		CALCULATION	
		A	B + 5.15			A	B + 5.15
		B	(Total No. of contacts – 1) x 2			B	Total No. of contacts – 2
<div><div></div><div></div></div>							
TOOLS		WIRE STRIPPING DETAILS					
<p>Recommended Crimp Tool – M22520/2-01</p> <p>Positioner – T5747</p> <p>Contact Insertion/Removal Tool – Z80-280</p> <p>See pages 77 to 79</p> <p>❖ Instruction sheets available at www.harwin.com/downloads/instructions</p>							
HOW TO ORDER							
		M80 – XXX XX 05					
SERIES CODE						FINISH	
TYPE							
888	Small Bore, Double Row					01	Gold + Tin
889	Large Bore, Double Row					05	Gold
898	Small Bore, Single Row						
899	Large Bore, Single Row						
						TOTAL NO. OF CONTACTS	
						Single Row	02 to 07, 17
						Double Row	04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34

All dimensions in mm.

www.harwin.com

